4008 E / 4008 B / 4008 H / 4008 S

Hemodialysis system

Technical Manual

Edition: 5/03.09
Part no.: M40 618 1
Software 4.5/5.3 and higher

Caution!
These Operating Instructions in pdf-format are for information only.
They are not a replacement for the Operating Instructions supplied with the machine/device and options.

Fresenius Medical Care

Important information on the Technical Manual

How to use the Technical Manual

Identification

The document can be identified by the following information on the title page and on the labels, if any:
– Edition of the technical document
– Part number of the technical document

Page identification

The page identification 1-3, for example, refers to: chapter 1, page 3.

Editorial information

The editorial information 1/01.05, for example, refers to the 1st edition, January 2005.

Changes

Changes to the Technical Manual will be released as new editions or supplements. In general: This manual is subject to change without notice.

Significance of the safety precautions

Explanation of the Caution and Note symbols used:

Caution
Advises the operator against certain procedures or actions that could cause damage to the equipment or may have adverse effects on operators and patients.

Note
Informs the operator that if the steps are not followed as described, a specific function will be executed incorrectly or will not be executed at all, or will not produce the desired effect.

Important information on the system

Technician's qualification

Purpose

This Technical Manual is intended for service technicians and is to be used for first studies (to acquire a basic knowledge) and for reference purposes (for TSC, Maintenance and repair). The Technical Manual, however, does not replace the training courses offered by the manufacturer.

Requirements

Knowledge of the current Operating Instructions for the respective system. Background experience in mechanics, electrical and medical engineering.

Precautions for working on the system

Authorized persons

Assembly, extensions, adjustments, modifications or repairs may only be carried out by the manufacturer or persons authorized by him.

Test equipment and accessories

The activities described in this technical document require the availability of the necessary technical test equipment and accessories.

Specifications

For the specifications of the respective system, refer to the current Operating Instructions. Observe the information on the specifications.

Precautions

Before turning power on, repair any visible damage.
Prior to opening the system and when working on the open system, the following precautions have to be observed:

– Protect the components against ingress of fluids.
– Do not touch live parts (e.g. connectors of the power cable or heater).
– Disconnect and connect all jacks, connectors and components only when the system is turned off.

ESD precautions

When repairing the system and replacing spare parts, observe the applicable ESD precautions.

Hygienic measures

The system and the consumables are generally considered to be contaminated and must therefore be sufficiently disinfected by the responsible organization as specified by the manufacturer.

Addresses

Please address any inquiries to:

Manufacturer

Fresenius Medical Care AG & Co. KGaA
D-61346 Bad Homburg
+49 (0)6172-609-0
www.fmc-ag.com

Service Central Europe

Fresenius Medical Care
Deutschland GmbH
Geschäftsbereich Zentraleuropa
Kundendienst / Servicecenter
Steinmühlstraße 24
61352 Bad Homburg
Germany
Phone: +49 (0)6172-609-7100
Fax: +49 (0)6172-609-7102
E-mail: ServicecenterD@fmc-ag.com

International service

Fresenius Medical Care
Deutschland GmbH
Service Support International
Hafenstraße 9
D-97424 Schweinfurt
Germany
Phone: +49 (0)9721-678-333 (hotline)
Fax: +49 (0)9721-678-130

Local service

Table of contents

Section		Page
1	**Description of system functions and malfunctions**	1-
1.1	Description of the T1 test	1-3
1.2	Functional description of the modules	1-78
1.3	Functional description of the hydraulic unit	1-83
2	**Technical Safety Checks / Maintenance**	2-
2.1	Technical Safety Checks and Maintenance for 4008 hemodialysis systems and options	2-3
2.2	TSC report	2-25
3	**Adjustment instructions**	3-
3.1	Overview of the DIP switches in the 4008	3-9
3.2	Calibration mode	3-13
3.3	Hydraulics	3-15
3.4	Air detector	3-31
4	**Calibration program**	4-
5	**Diagnostics program**	5-
5.1	General notes	5-3
5.2	Menu structure	5-5
5.3	Reading the analog inputs of CPU I	5-7
5.4	Reading the analog inputs of CPU II	5-9
5.5	Reading the digital inputs of CPU I	5-10
5.6	Reading the digital inputs of CPU II	5-15
5.7	Writing the analog outputs of CPU I	5-19
5.8	Writing the analog outputs of CPU II	5-20
5.9	Writing the digital outputs of CPU I	5-21
5.10	Writing the digital outputs of CPU II	5-27
5.11	Writing/Reading the digital outputs of CPU I	5-30
5.12	ONLINE*plus*™ module	5-31
5.13	HPU	5-32
6	**Setup menu**	6-
6.1	Overview Setup menu settings	6-3
6.2	Overview	6-7
6.3	Main menu 4008 E/B	6-9
6.4	Main menu 4008 H/S	6-37
7	**Miscellaneous**	7-

Section		Page
8	**Circuit diagrams and circuit descriptions**	8-
8.1	Block diagram 4008	8-3
8.2	Block diagram of voltage supply	8-4
8.3	Block diagram of screen 4008 H/S	8-5
8.4	Connection layout diagram	8-6
8.5	P.C.B. LP 450-2 Level detector control (LD)	8-9
8.6	P.C.B. LP 493 Blood leak detector	8-11
8.7	P.C.B. LP 624 Control board (BP)	8-12
8.8	P.C.B. LP 630 Motherboard	8-13
8.9	P.C.B. LP 631 CPU 1	8-14
8.10	P.C.B. LP 632 CPU 2	8-16
8.11	P.C.B. LP 633 Input board	8-18
8.12	P.C.B. LP 634 Output board	8-20
8.13	P.C.B. LP 635 Display board	8-22
8.14	P.C.B. LP 636 External connectors	8-24
8.15	P.C.B. LP 950 Control board (HEP)	8-25
8.16	P.C.B. LP 644-4 Display board (HEP)	8-26
8.17	P.C.B. LP 645 Position sensor membrane pump	8-27
8.18	P.C.B. LP 649-2 Display board (4008 B/S)	8-28
8.19	P.C.B. LP 742 Interference filter	8-30
8.20	P.C.B. LP 748 Display board (BP)	8-31
8.21	P.C.B. LP 763 Multi interface board (COMMCO III)	8-32
8.22	P.C.B. LP 922 Display board (4008 S)	8-33
8.23	P.C.B. LP 923 Traffic light (4008 H/S)	8-34
8.24	P.C.B. LP 924 Display board (4008 H)	8-35
8.25	P.C.B. LP 941 Hydraulics processor	8-36
8.26	Heater board (power supply unit 4008)	8-37
8.27	Power board (power supply unit 4008)	8-38

Table of contents
1 Description of system functions and malfunctions

Section		Page
1.1	**Description of the T1 test**	1-3
1.1.1	T1 test flow diagram, serial program steps	1-3
1.1.2	T1 test flow diagram, parallel program steps	1-5
1.1.3	Description of the T1 test incl. error messages	1-7
1.1.4	Description of system errors during the cleaning programs	1-53
1.1.5	Error messages after turning power on	1-70
1.1.6	Error messages during dialysis	1-71
1.2	**Functional description of the modules**	1-78
1.2.1	Blood pump (arterial)	1-78
1.2.2	Blood pump (Single-Needle), optional	1-79
1.2.3	Heparin pump	1-80
1.2.4	Air detector	1-82
1.3	**Functional description of the hydraulic unit**	1-83
	Fig.: Flow diagram	1-83
1.3.1	Description of the hydraulic unit	1-85
1.3.2	Theory of operation of the balancing chamber	1-87
1.3.3	Central delivery system option	1-91
1.3.4	Program sequences during the cleaning programs	1-92
	Fig.: Flow chart of cleaning programs – overview	1-92

1.1 Description of the T1 test

1.1.1 T1 test flow diagram, serial program steps

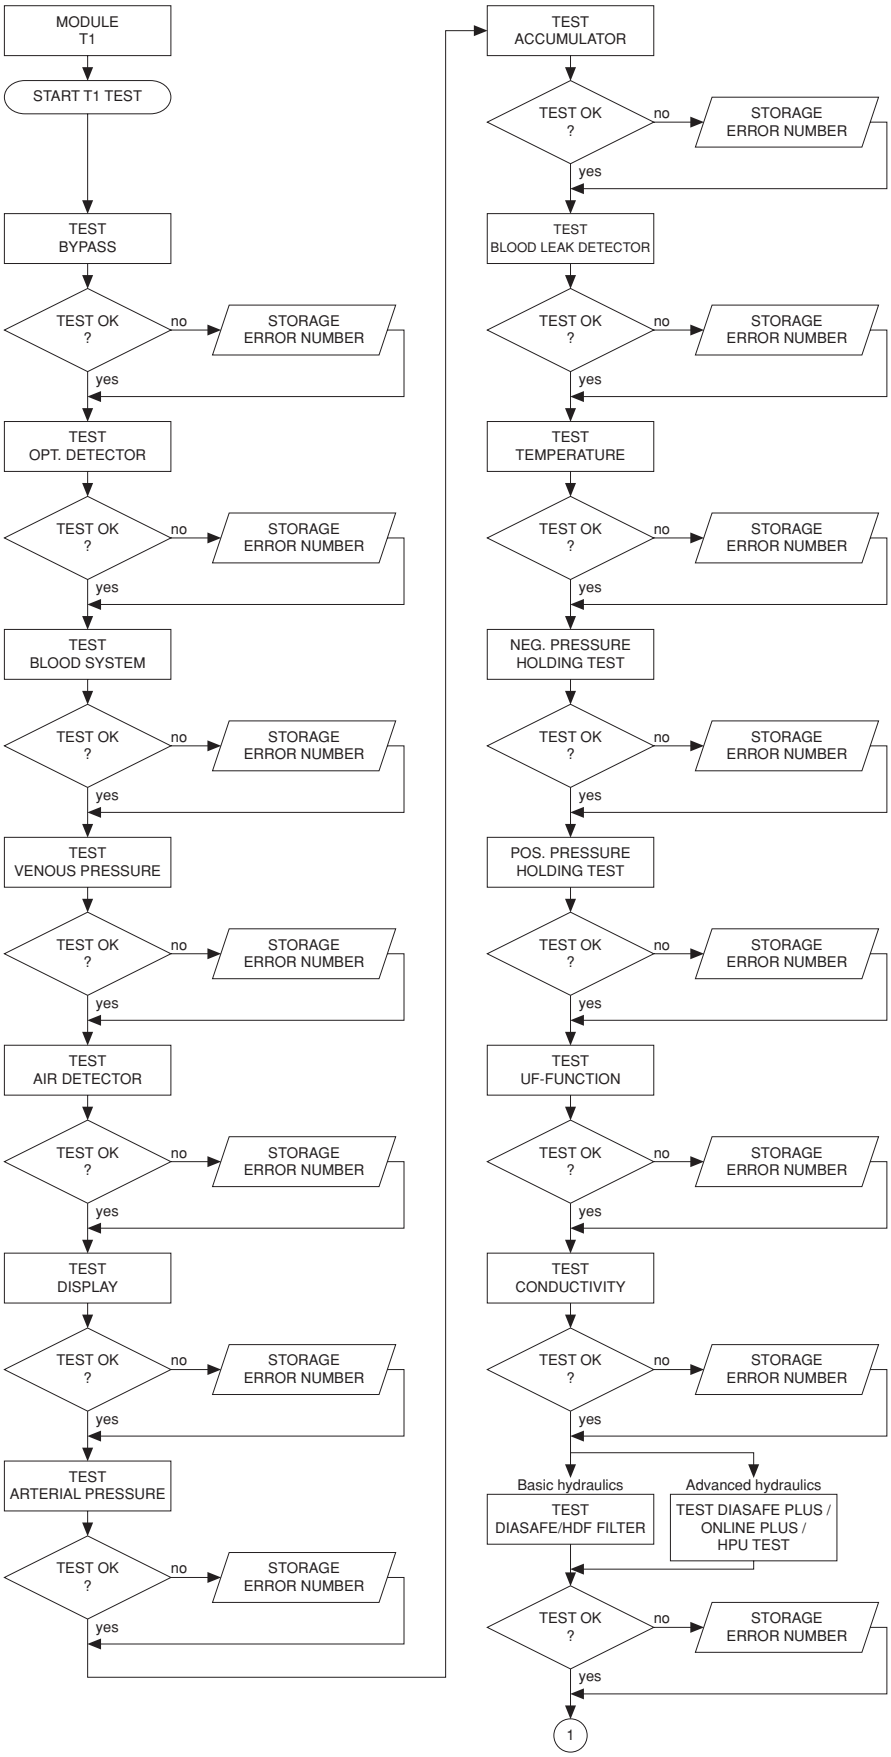

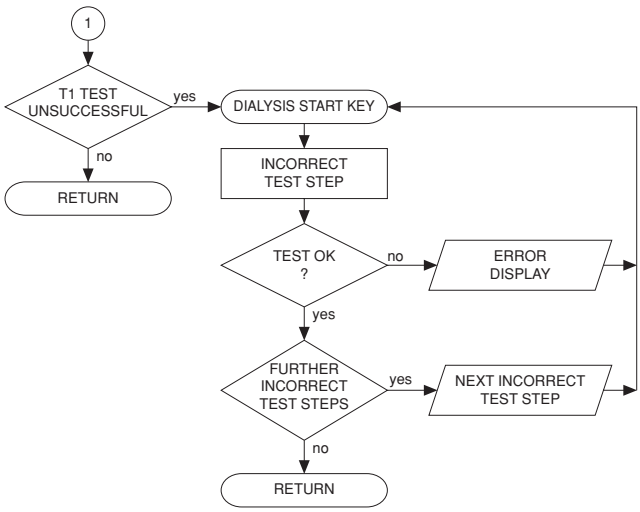
1
T1 TEST UNSUCCESSFUL
yes
no
RETURN
DIALYSIS START KEY
INCORRECT TEST STEP
TEST OK ?
no
ERROR DISPLAY
yes
FURTHER INCORRECT TEST STEPS
yes
NEXT INCORRECT TEST STEP
no
RETURN

1.1.2 T1 test flow diagram, parallel program steps

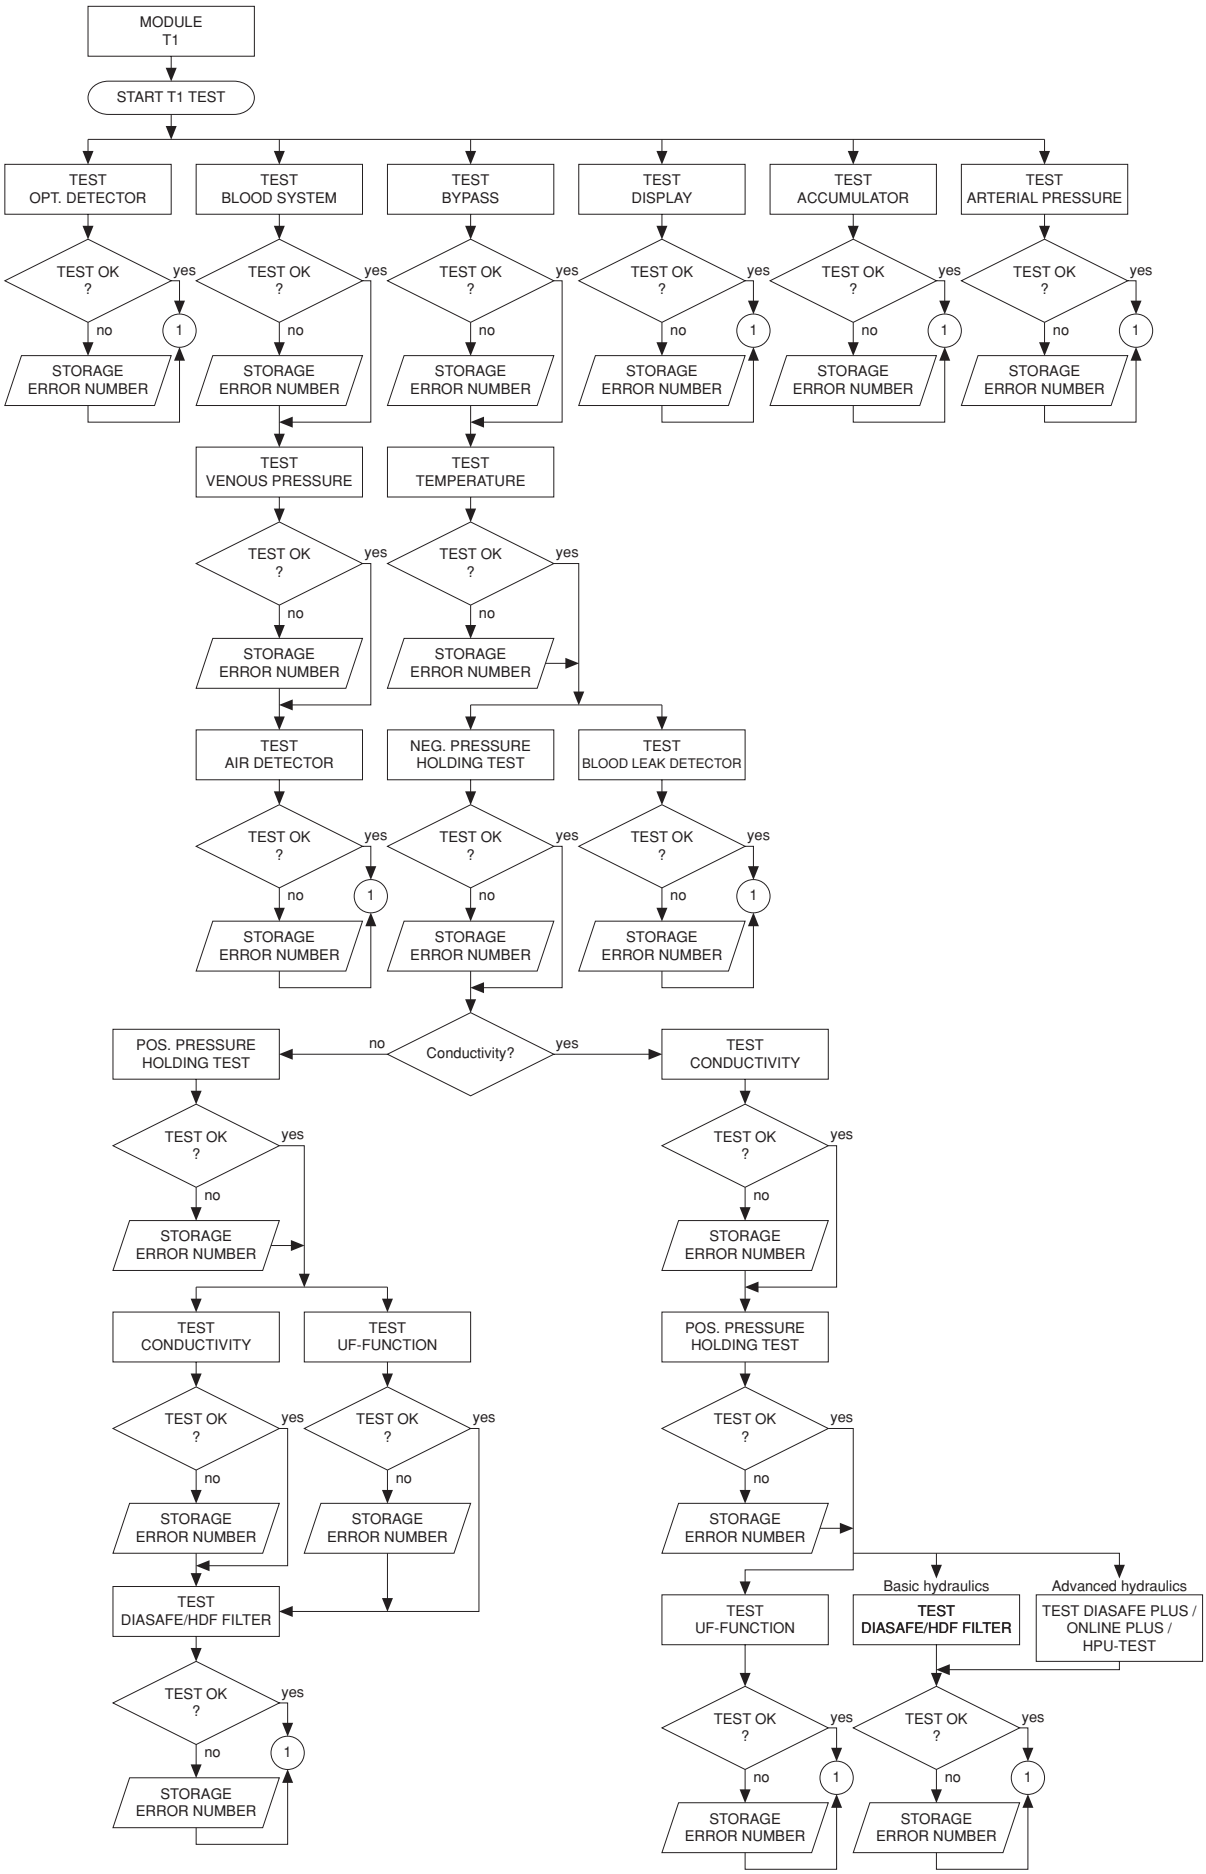

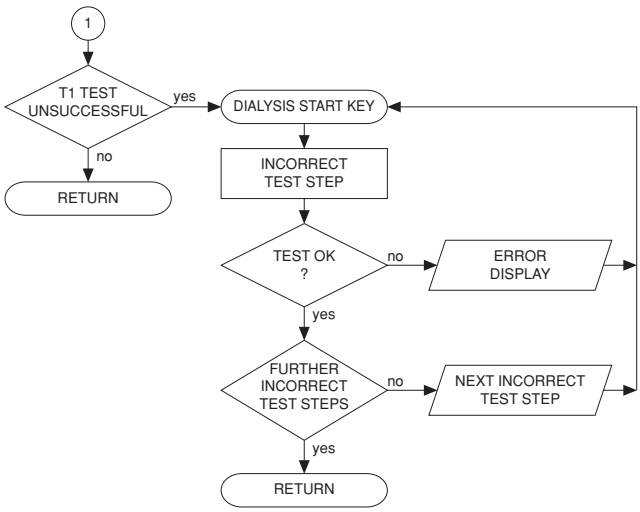
1
T1 TEST UNSUCCESSFUL
yes
no
RETURN
DIALYSIS START KEY
INCORRECT TEST STEP
TEST OK ?
no
ERROR DISPLAY
yes
FURTHER INCORRECT TEST STEPS
no
NEXT INCORRECT TEST STEP
yes
RETURN

1.1.3 Description of the T1 test incl. error messages

- **Prerequisites for starting and running the test**

Error message	*Description*
Power failure	Power failure while the test is in progress
Dialines not conn	The dialysate lines are not in the interlock shunt.
Shunt Cover open	The interlock shunt is open.
Connect Conc.Line **Wrong conc. supply**	The concentrate connector is in the rinse chamber, or concentrate is not connected at all. The error message depends on the central delivery system preselected in the setup menu.
Blood Sensed by OD	The optical detector senses blood in the system.
Flow alarm	Line to or from the dialyzer kinked, malfunctions in the hydraulics.
Water alarm	Water supply interrupted.
XXX not calibrated	A valid calibration value is missing in the NOVRAM.

- **Overview of the individual test steps**

Bypass test 1-8
Optical detector test 1-10
Blood system test 1-12
Venous pressure system test 1-16
Air detector test 1-18
Display test 1-22
Arterial pressure system test 1-24
Battery test 1-26
Blood leak test 1-28
Temperature test 1-30
Negative pressure holding test 1-32
Positive pressure holding test 1-34
UF function test 1-39
Conductivity test 1-42
Diasafe/HDF filter test 1-44
Online plus / Diasafe plus filter / HPU test 1-48

- **Bypass test**

  Test description:

  Check of the following functions:
  – Heater relay
  – Bypass (electric)
  – Check of the temperature range changeover

  Illustration:

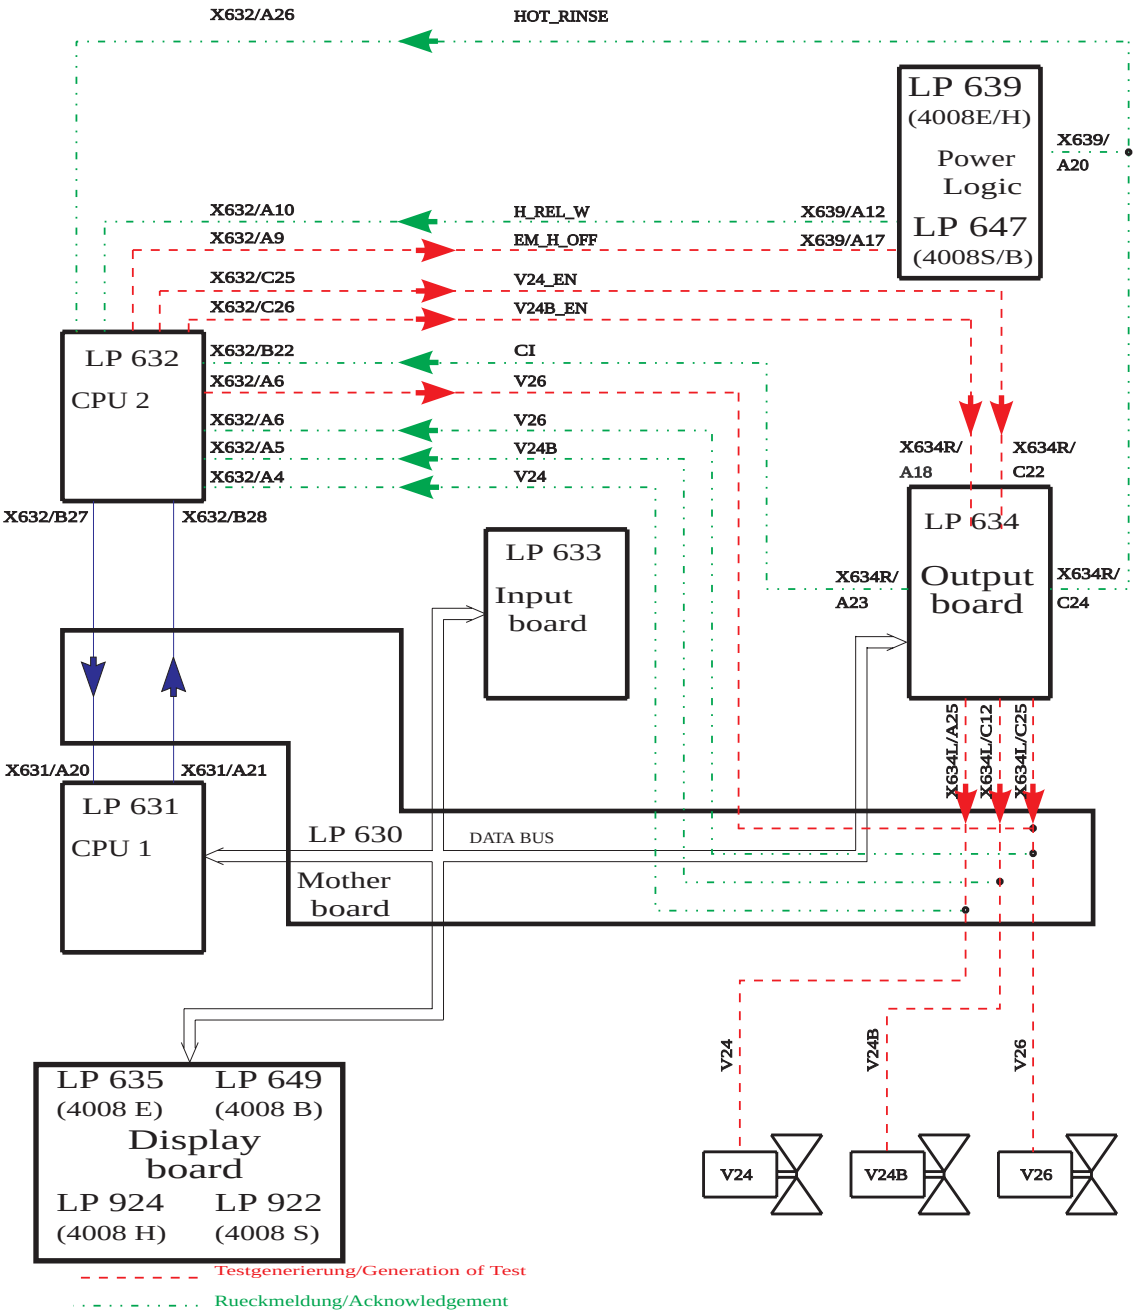

Error description:

Error message	*Description*
F 01 Bypass	The heater relay is switched off. – Acknowledgement (H_REL_W, X639/A12) → X632/A10, 0 V are missing.
F 02 Bypass	The heater relay cannot be switched off by CPU2. – Acknowledgement (H_REL_W, X639/Y12) → X632/A10, 12 V are missing. – Control line (EM_H_OFF, X632/A9) → X639/A17, 12 V are missing.
F 03 Bypass	The temperature measurement range is set to hot rinse. – Control line (HOTRINSE, X634R/C24) → X639/A20, 0 V are missing. – Acknowledgement (HOTRINSE, X634R/C24) → X632/A26, 0 V are missing.
F 04 Bypass	The extended bypass cannot be correctly switched by CPU2 (V24 = off, V26 = on, V24B = off). – Acknowledgement (V24, X637/C1) → X632/A4, 24 V are missing. – Acknowledgement (V26, X637/C2) → X632/A6, 0 V are missing. – Acknowledgement (V24B, X637/C23) → X632/A5, 24 V are missing.
F 05 Bypass	The extended bypass cannot be correctly switched off by CPU2 (V24 = on, V26 = off, V24B = on). – Acknowledgement (V24, X637/C1) → X632/A4, 0 V are missing. – Acknowledgement (V26, X637/C2) → X632/A6, 24 V are missing. – Acknowledgement (V24B, X637/C23) → X632/A5, 0 V are missing.
F06 Bypass	CPU1 fails to set the temperature control to hot rinse. – Control line (HOTRINSE, X634R/C24) → X639/A20, 12 V are missing. – Acknowledgement (HOTRINSE, X634R/C24) → X632/A26, 12 V are missing.
F 07 Bypass	The extended bypass cannot be correctly switched by CPU1 (V24 = off, V26 = on, V24B = off). – Acknowledgement (V24, X637/C1) → X632/A4, 24 V are missing. – Acknowledgement (V26, X637/C2) → X632/A6, 0 V are missing. – Acknowledgement (V24B, X637/C23) → X632/A5, 24 V are missing.
F08 Bypass	CPU1 fails to reset the temperature control to dialysis. – Control line (HOTRINSE, X634R/C24) → X639/A20, 0 V are missing. – Acknowledgement (HOTRINSE, X634R/C24) → X632/A26, 0 V are missing.
F09 Bypass	The extended bypass cannot be correctly switched off by CPU1 (V24 = on, V26 = off, V24B = on). – Acknowledgement (V24, X637/C1) → X632/A4, 0 V are missing. – Acknowledgement (V26, X637/C2) → X632/A6, 24 V are missing. – Acknowledgement (V24B, X637/C23) → X632/A5, 0 V are missing.
F95 Bypass	System error

- **Optical detector test**

  Test description:

  Attenuation of the optical detector.
  Check of the acknowledgement of the optical detector.

  Illustration:

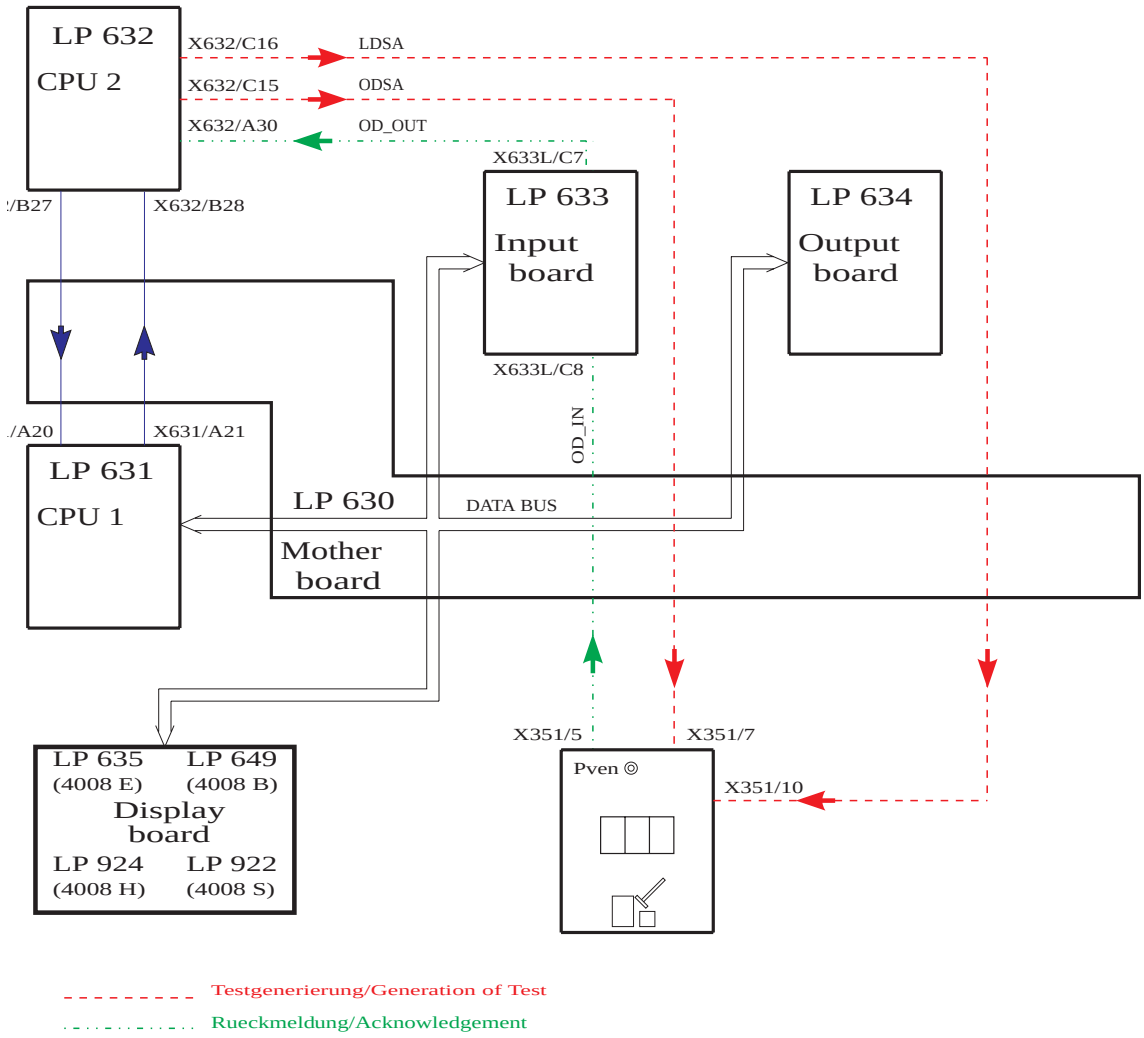

Error description:

Error message	*Description*
F01 opt. Detector	CPU1 interprets the optical detector in a different way than does CPU2. – Acknowledgement (OD_OUT, X633L/C7) → X632/A30 and the digital input of P.C.B. LP 633 measure different levels.
F02 opt. Detector	CPU2 fails to recognize blood in the system. – Acknowledgement (OD_OUT, X633L/C7) → X632/A30, 0 V are missing. – Detuning (ODSA, X632/C15) → X351/7 not 12V.
F03 opt. Detector	CPU1 fails to recognize blood in the system. – Acknowledgement (OD_OUT, X633L/C7) → digital input on P.C.B. LP 633. – Detuning (ODSA, X632/C15) → X351/7 not 12V.
F04 opt. Detector	CPU2 recognizes that the optical detector senses opaque fluid (required because of the test in the cleaning program). – Acknowledgement X632/A30 not 12V. – AD28 defective.
F96 opt. Detector	System error.

- **Blood system test**

  Test description:

  Check of the following functions:
  – Blood alarm acknowledgement
  – Blood pump switch-off

  Illustration:

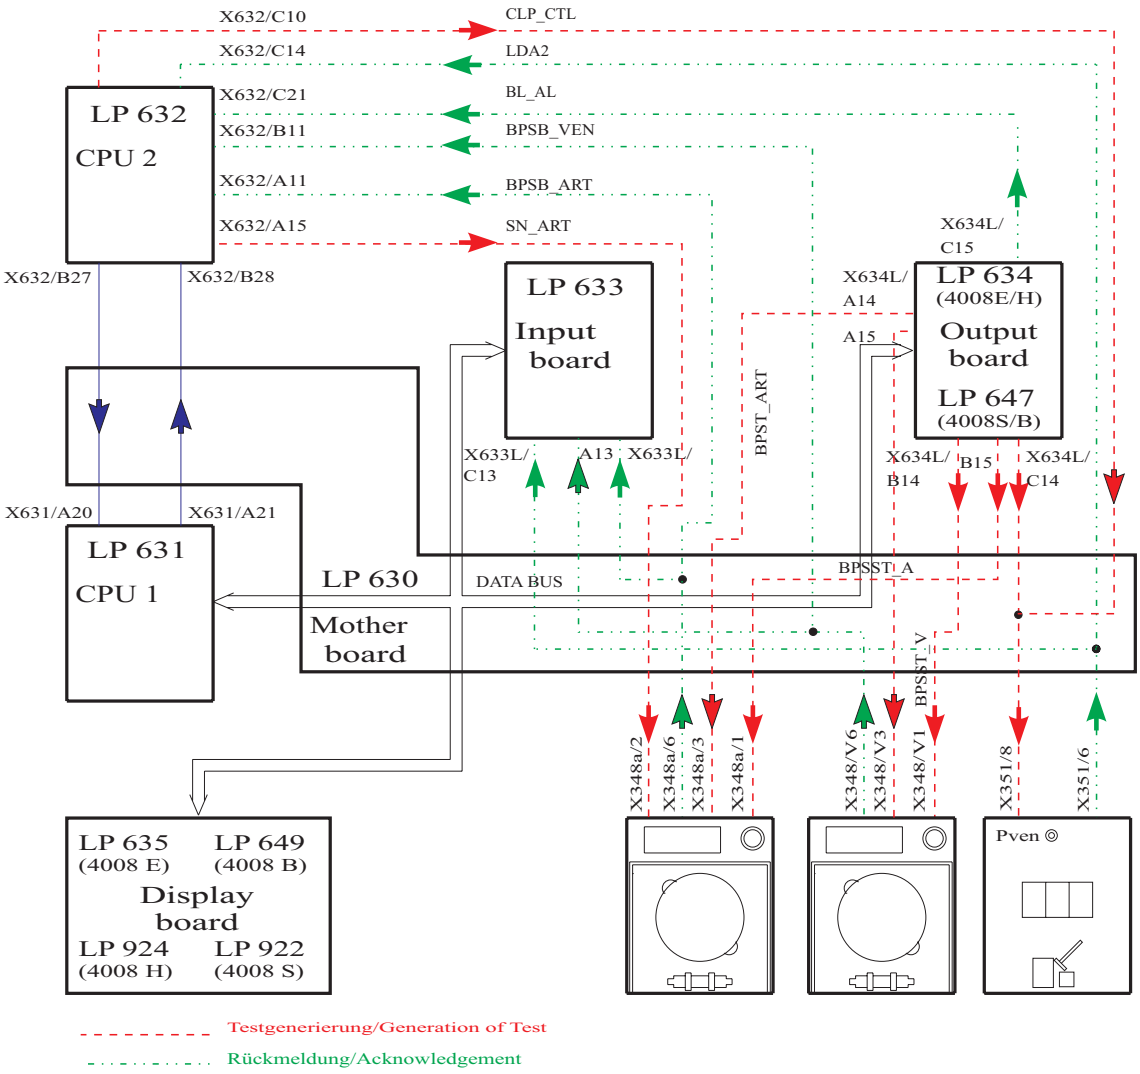

Error description:

Error message	*Description*
F09 Bloodsystem	Acknowledgement that CPU2 recognizes that the arterial blood pump is inactive (BP not running). – Acknowledgement (BPSB_ART, X348a/6) → X632/A11, 12 V missing. – Control line (BPSST_ART, X634L/B14) → X348a/1, 12 V missing or (BPST_ART, X634L/A14) → X348a/3, 12 V are missing.
F10 Bloodsystem	Acknowledgement that CPU1 recognizes that the arterial blood pump is inactive (BP not running). – Acknowledgement (BPSB_ART, X348a/6) → X633L/A11, 12 V are missing. – Control line (BPSTT_ART, X634L/B14) → X348a/1, 12 V missing or (BPST_ART, X634L/A14) → X348a/3, 12 V missing. – Level is raised during the T1 test.
F11 Bloodsystem	The arterial blood pump cannot be stopped by CPU1. CPU2 recognizes that the arterial blood pump remains active. – Control line (BPSST_ART, X634L/B14) → X348a/1, 0 V missing, as well as (BPST_ART, X634L/A14) → X348a/3, 0 V missing. – Acknowledgement (BPSB_ART, X348a/6) → X632/A11, 0 V are missing. – The level is raised during the T1 test, or the up/down key on the air detector is blocked and the level is constantly raised.
F12 Bloodsystem	The arterial blood pump cannot be stopped by CPU1. CPU1 recognizes that the arterial blood pump remains active. – Control line (BPSST_A, X634L/B14) → X348a/1, 0 V missing, as well as (BPST_ART, X634L/A14) → X348a/3, 0 V missing. – Acknowledgement (BPSB_ART, X348a/6) → X633L/A11, 0 V are missing.
F13 Bloodsystem	*Applicable for SW 4.91/2.91 and higher if SN, ONLINE-HDF or 4008 HDF pump is connected (= ADKS active)* Acknowledgement that CPU2 detects that the pump is inactive (pump is not running). – Acknowledgement (BPSB_VEN, X348V/6) → X632/ B11, 12V missing – Control line (BPSST_VEN, X634L/B15) → X348V/1, 12V missing or (BPST_VEN, X634L/A15) → X348V/3, 12V missing – Transistor T9 on P.C.B. LP 754 defective – IC5 on P.C.B. LP 632 defective – In 4008 HDF an HDF treatment was performed, followed by a cleaning program with the substituate pump running, then the T1 test has been re-started. The substituate pump must be switched off because otherwise the test step will fail to be passed (problem was corrected with SW 3.20 in 4008 H/S systems: the substituate pump will be switched off automatically on starting a cleaning program).

F14 Bloodsystem

Applicable for SW 4.91/2.91 and higher if SN, ONLINE-HDF or 4008 HDF pump is connected (= ADKS active)

Acknowledgement that CPU1 detects that the pump is inactive (pump is not running).

- Acknowledgement (BPSB_VEN,X348V/6) → X633L/A13, 12V missing
- Control line (BPSST_VEN, X634L/B15) → X348V/1 not 12V or (BPST_VEN, X634L/A15) → X348V/3 not 12V
- IC16 on P.C.B. LP 633 defective
- P.C.B. LP 633 recognizes Single-Needle pump although it is not connected.

F15 Bloodsystem

Applicable for SW 4.91/2.91 and higher if SN, ONLINE-HDF or 4008 HDF pump is connected (= ADKS active)

CPU1 fails to stop the corresponding blood pump.

CPU2 detects that the pump remains active.

- Control line (BPSST_VEN, X634L/B15) → X348V/1, 0V missing as well as (BPST_VEN, X634L/A15) → X348V/3 not 0V
- Acknowledgement (BPSB_VEN, X348V/6) → X632/B11, 0V missing
- Transistor T9 on P.C.B. LP 754 defective
- IC5 on P.C.B. LP 632 defective
- During the test the lines are inserted on the corresponding pump using the Start/Stop key.
- P.C.B. LP 633 recognizes Single-Needle pump although it is not connected.

F16 Bloodsystem

Applicable for SW 4.91/2.91 and higher if SN, ONLINE-HDF or 4008 HDF pump is connected (= ADKS active)

CPU1 fails to stop the corresponding blood pump.

CPU1 detects that the pump remains active.

- Control line (BPSST_VEN, X634L/B15) → X348V/1 not 0V as well as (BPST_VEN, X634L/A15) → X348V/3 not 0V
- Acknowledgement (BPSB_VEN, X348V/6) → X633L/A13 not 0V
- IC16 on P.C.B. LP 633 defective
- P.C.B. LP 633 recognizes Single-Needle pump although it is not connected.

F17 Bloodsystem

Applicable for SW 4.91/2.91 and higher if SN, ONLINE-HDF or 4008 HDF pump is connected (= ADKS active)

Although the recognition of the venous blood pump (ADKS) is not acknowledged, the 24-V supply voltage of the pump can be switched off.

- Acknowledgement line (ADKS, X348V/7) → X633L/A10 not 12V
- Acknowledgement (BPSB_VEN, X348V/6) → X633L/A13 not 12V
- Acknowledgement (BPSB_VEN, X348V/6) → X632/B11 not 12V
- Online-HDF has already been switched on during the T1 test.
- IC16 on P.C.B. LP 633 defective.

F18 Bloodsystem

Applicable for SW 5.00/4.10 and higher, check of the BPUS signal (CPU, P.C.B. LP 632)

At the beginning of the test step a maximum of 40s may pass until rotation has stopped.If the blood pump is being activated, the rotation stop alarm must have been cleared.

– Acknowledgement line (BPUS, X348A/8) → X632/A13 not 0V
– Acknowledgement line (BPUS, X348A/8) → X632/A13 not 12V
– Blood pump speed is set to “0”: preset speed during the T1 test.

F19 Bloodsystem

Applicable for SW 5.00/4.10 and higher, check of the BPUS signal (CPU, P.C.B. LP 631 via LP 633)

At the beginning of the test step a maximum of 40s may pass until rotation has stopped. If the blood pump is being activated, the rotation stop alarm must have been cleared.

1. Acknowledgement line (BPUS, X348A/8) → X633L/A12 not 0V
2. Acknowledgement line (BPUS, X348A/8) → X633L/A12 not 12V

F20 Bloodsystem

Check of the actual arterial BP rate.

The actual rate of the arterial BP is not zero. The actual rate of the arterial BP does not increase.

If SN is installed: The actual rate of the venous BP is not zero. The actual rate of the venous BP does not increase.

– Acknowledgement line (BPR_ART, X348A/10) → X633L/B3 not 0V or acknowledgement line (BPR_ART, X348A/10) → X632/A14 not 0V
– Acknowledgement line (BPR_ART, X348A/10) → X633L/B3 no increase or acknowledgement line (BPR_ART, X348A/10) → X632/A14 no increase

If SN is installed:

– Acknowledgement line (BPR_VHDF, X348V/10) → X633L/B4 not 0V
– Acknowledgement line (BPR_VHDF, X348V/10) → X633L/B4 no increase

F95 Bloodsystem

System error.

- **Venous pressure system test**

  Test description:

  Verification of the lower limit by checking the venous zero point.
  The upper limit is tested by detuning the venous pressure unit in positive direction.
  (The venous line clamp is closed during the test.)

  Illustration:

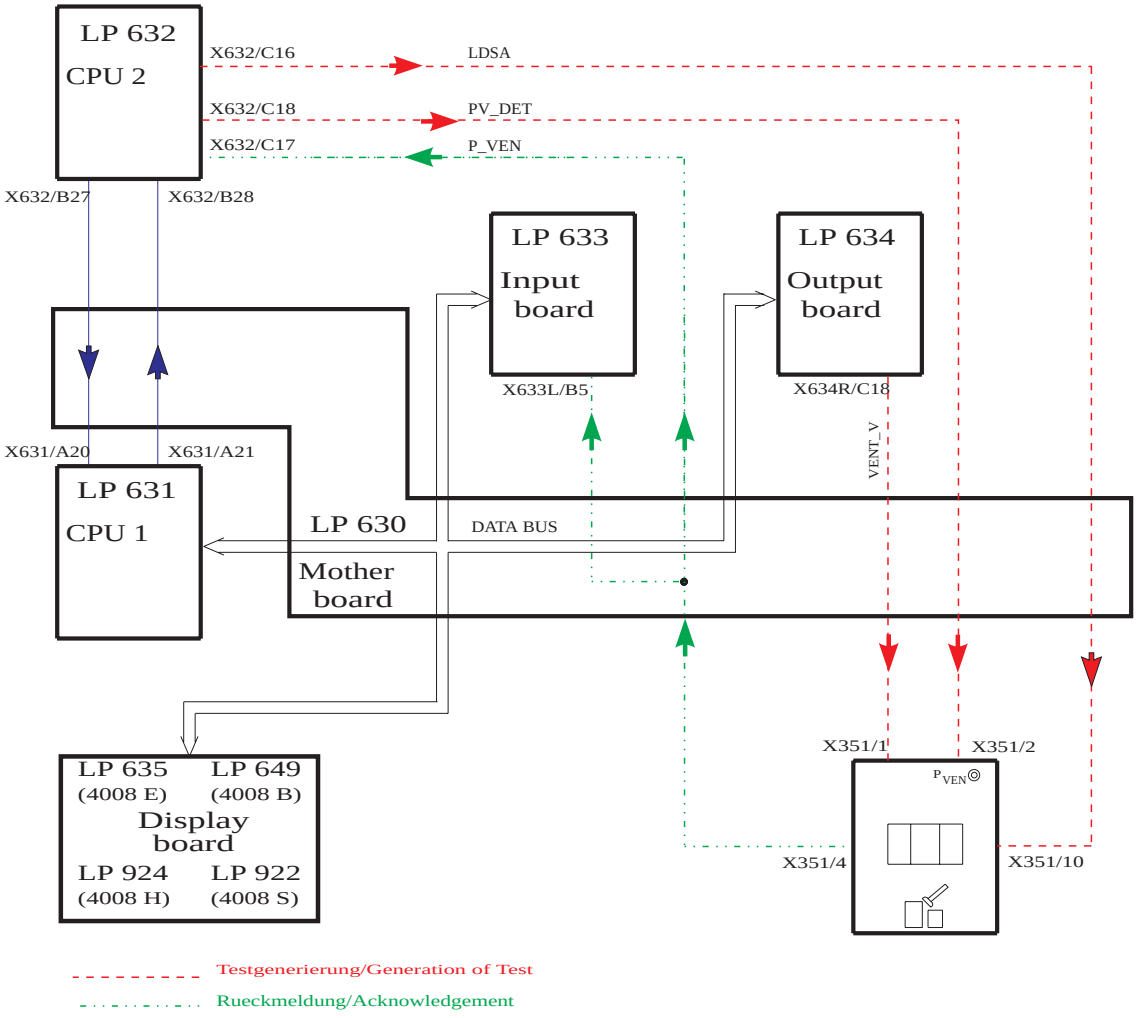

Error description

Error message	*Description*
F01 Venous	CPU1 (input board) shows a venous zero point deviation of more than ±12 mmHg (60 s). – Control (VENT_VALVE, X634R/C18) → X351/1 of the vent valve in the LD is defective. – Acknowledgement (P_VEN, X351/4) → X633L/B5 that the voltage value is outside the zero point tolerance. – P-venous has not been calibrated.
F02 Venous	CPU2 shows a venous zero point deviation of more than ±12 mmHg (60 s). – Control (VENT_VALVE, X634R/C18) → X351/1 of the vent valve in the LD is defective. – Acknowledgement (P_VEN, X351/4) → X632/C17, the voltage value is outside the zero point tolerance. – P-venous has not been calibrated.
F03 Venous	With detuning in positive direction, the achieved change in the venous display is less than 100 mmHg (7 s). – The test detuning is defective (PV_DET, X632/C18) → X351/2. – Acknowledgement (P_VEN, X351/4) → X633L/B5, the change in voltage is too low. – P-venous has not been calibrated.
F04 Venous	The deviation in the measured value between CPU1 and CPU2 is higher than ±12 mmHg (if Pven > 100 mmHg). – Acknowledgement (P_VEN, X351/4) → X633L/B5 and X632/C17 measure different voltage values. – P-venous has not been calibrated.
F95 Venous	System error.

- **Air detector test**

  Test description:

  – Test of the air detector by checking the alarm state.
  – Switch-off of the venous line clamp in the air detector module.

  Illustration:

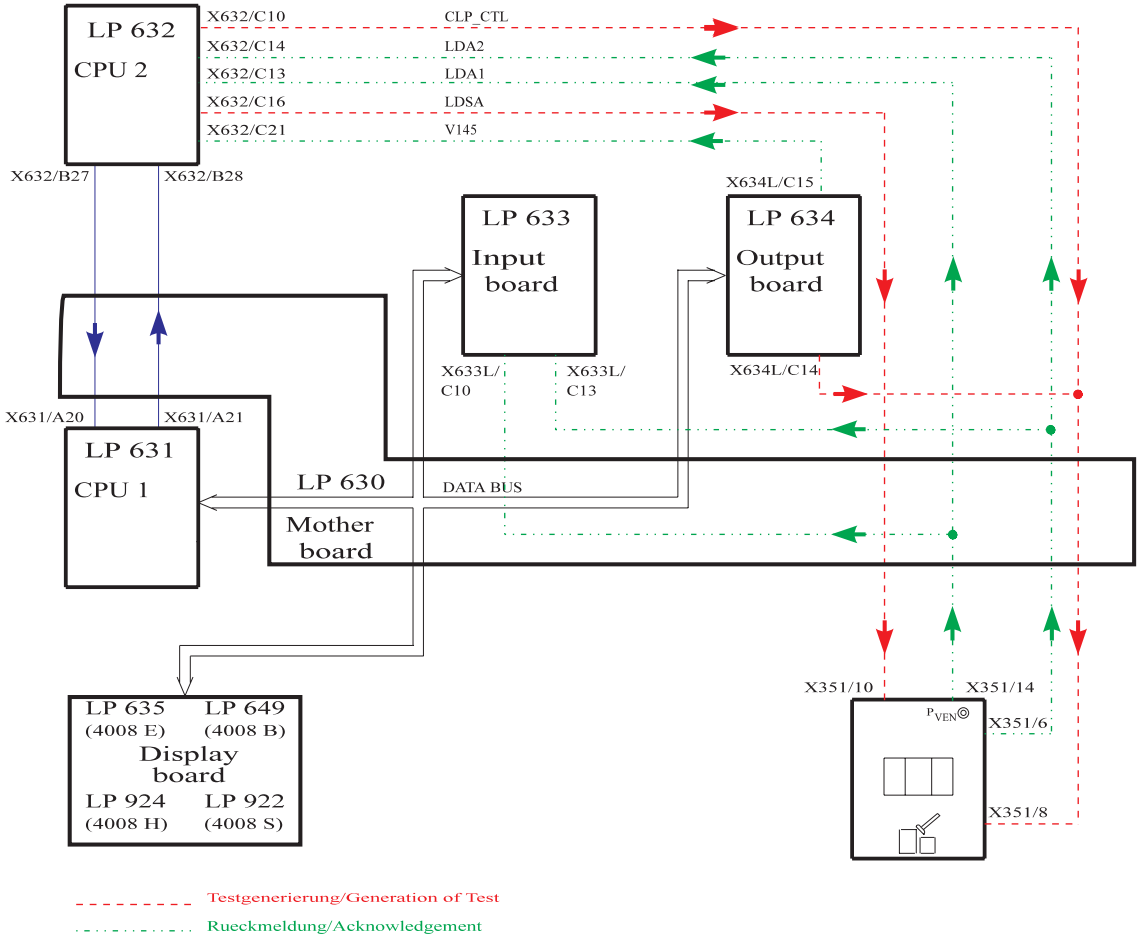

Error description:

Error message	*Description*
F01 Airdetector	CPU1 interprets the air detector signal in a different way than does CPU2. – Acknowledgements (LDA1, X351/14) → X632/C13 and X633L/C10 recognize different signal levels.
F02 Airdetector	The air detector alarm is not recognized by CPU2. – Acknowledgement (LDA1, X351/14) → X632/C13, 0 V are missing. – Transmission weakening (LDSA, X632/C16) → X351/10, 12 V are missing.
F03 Airdetector	Air detector clamps acknowledgement (CPU2) activated (clamp closed). – Acknowledgement (LDA2, X351/6) → X632/C14, 24 V are missing. – Clamp control (CLP_CTL, X634L/C14) → X351/8, 12 V are missing. – Clamp control (CLP_CTL, X632/C10) → X351/8, 12 V are missing.
F04 Airdetector	Air detector clamps acknowledgement (CPU1) activated (clamp closed). – Acknowledgement (LDA2, X351/6) → X633L/C13, 24 V are missing. – Clamp control (CLP_CTL, X634L/C14) → X351/8, 12 V are missing. – Clamp control (CLP_CTL, X632/C10) → X351/8, 12 V are missing.
F05 Airdetector	The blood alarm signal has not been cleared (indicates an alarm). – Acknowledgement (BL_AL, X634L/C15) → X632/C21, 12 V are missing. If the HDF option is used, this signal is not tested (special function).
F06 Airdetector	Closing of the air detector clamp via the CPU2 control line was not possible. – Clamp control (CLP_CTL, X632/C10) → X351/8, 0 V are missing. – Acknowledgement (LDA2, X351/6) → X632/C14, 0 V are missing.
F07 Airdetector	Opening of the air detector clamp via the CPU2 control line was not possible. – Clamp control (CLP_CTL, X632/C10) → X351/8, 12 V are missing. – Acknowledgement (LDA2, X351/6) → X632/C14, 24 V are missing.
F08 Airdetector	Closing of the air detector clamp via the CPU1 control line was not possible, or CPU2 acknowledgement is incorrect. – Clamp control (CLP_CTL, X634L/C14) → X351/8, 0 V are missing. – Acknowledgement (LDA2, X351/6) → X632/C14, 0 V are missing.

F09 Airdetector

Closing of the air detector clamp via the CPU1 control line was not possible, or CPU1 acknowledgement is incorrect.
- Clamp control (CLP_CTL, X634L/C14) → X351/8, 0 V are missing.
- Acknowledgement (LDA2, X351/6) → X633L/C13, 0 V are missing.

F10 Airdetector

The blood alarm message is missing.
- Acknowledgement (BL_AL, X634R/C15) → X632/C21, 0 V are missing.

  If the HDF option is used, this signal is not tested (special function).

F11 Airdetector

Air detector clamps acknowledgement (CPU2) activated (clamp closed).
- Acknowledgement (LDA2, X351/6) → X632/C14, 24 V are missing.
- Clamp control (CLP_CTL, X634L/C14) → X351/8, 12 V are missing.
- Clamp control (CLP_CTL, X632/C10) → X351/8, 12 V are missing.

F12 Airdetector

Air detector clamps acknowledgement (CPU1) activated (clamp closed).
- Acknowledgement (LDA2, X351/6) → X633L/C13, 24 V are missing.
- Clamp control (CLP_CTL, X634L/C14) → X351/8, 12 V are missing.
- Clamp control (CLP_CTL, X632/C10) → X351/8, 12 V are missing.

F13 Airdetector

The blood alarm signal has not been cleared (indicates alarm).
- Acknowledgement (BL_AL, X634L/C15) → X632/C21, 12 V are missing.

  If the HDF option is used, this signal is not tested (special function).

F14 Airdetector

Raise level key on the air detector is constantly active.
- Acknowledgement (LEVEL_UP, X351/3) → X632/C11 not 0V.

F15 Airdetector

Acknowledgement of the supply voltage for the ultrasonic output stage not between 6.5 and 13.5 V after 3 seconds.
- Adapter board AD28 not connected
- Acknowledgement (X351/11 → X633L/25A jumper to X633L/B7) not 12V.
- Relay on AD28 failed to drop.

F16 Airdetector

Acknowledgement of the supply voltage for the ultrasound output stage not >14.5V after 3 seconds.
- Adapter board AD28 not connected.
- Acknowledgement (X351/11 → X633L/25A jumper to X633L/B7) not 16V/24V.
- Relay on AD28 is not controlled.
- No 10-Hz signal at ALARM_REST (X351/12)

F17 Airdetector

Acknowledgement of the supply voltage for the ultrasound output stage not between 6.5 and 13.5 V after 3 seconds.
- Adapter board AD28 not connected
- Acknowledgement (X351/11 → X633L/25A jumper to X633L/B7) not 12V
- Relay on AD28 failed to drop

F95 Airdetector

System error.

- **Display test**

  Test description:

  Check of all displays and indicators on the monitor front
  – Display test
  – Status LED
  – Alarm LED
  – Seven-segment display, all dark
  – Seven-segment display, all 8888
  – Bar graph
  – CPU1/CPU2 alarm tone

  This display test must be monitored by the user!

  Illustration:

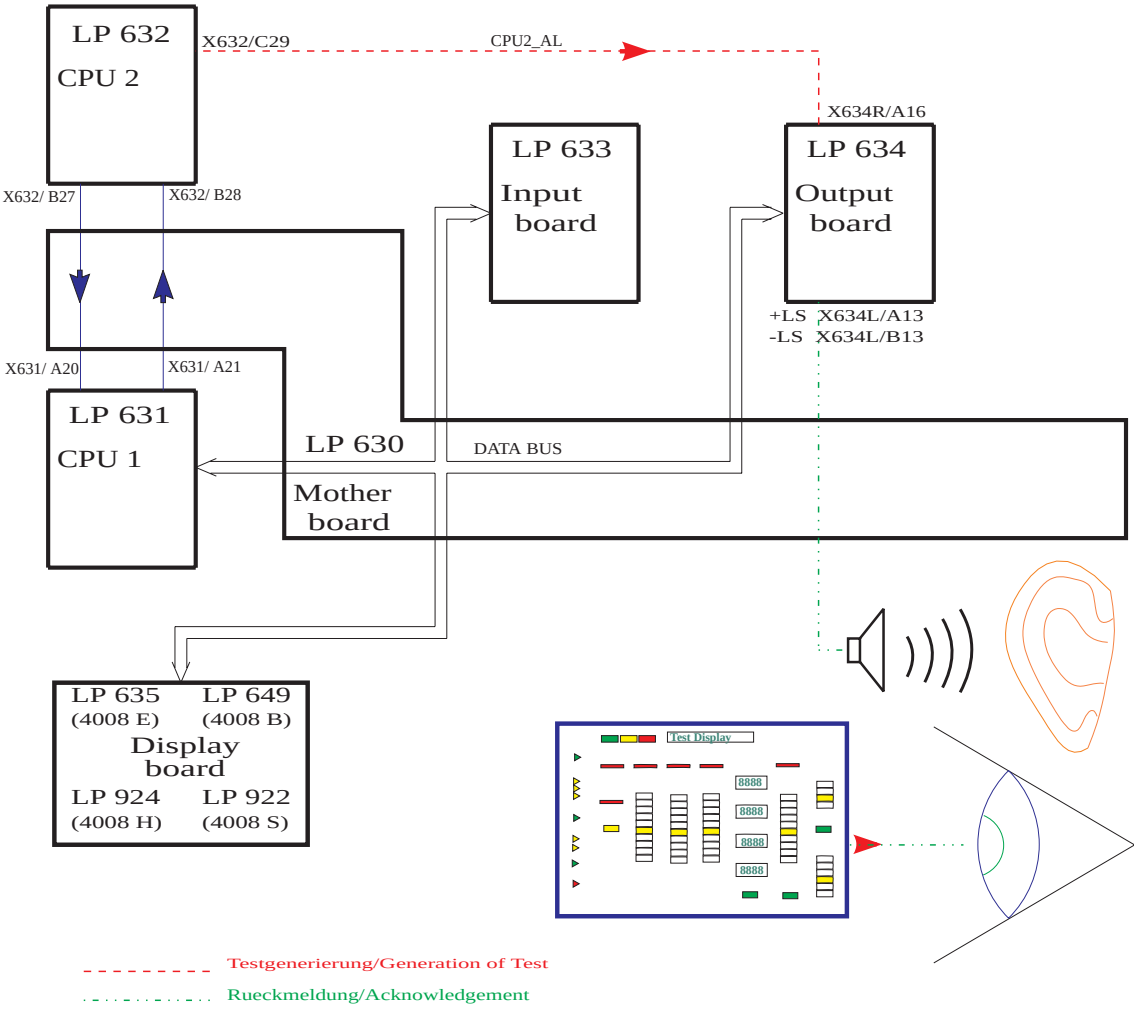

Error description:

Error message	*Description*
F01 Display	CPU1 failed to start the display test within 5 sec. – The “test started” information transmitted via the serial interface is missing.
F02 Display	CPU1 failed to complete the display test within 120 sec. – The “test completed” information transmitted via the serial interface is missing.
F95 Display	System error.

- **Arterial pressure system test**

  Test description:

  Test of the arterial pressure unit by electronic detuning in positive or negative direction.

  Illustration:

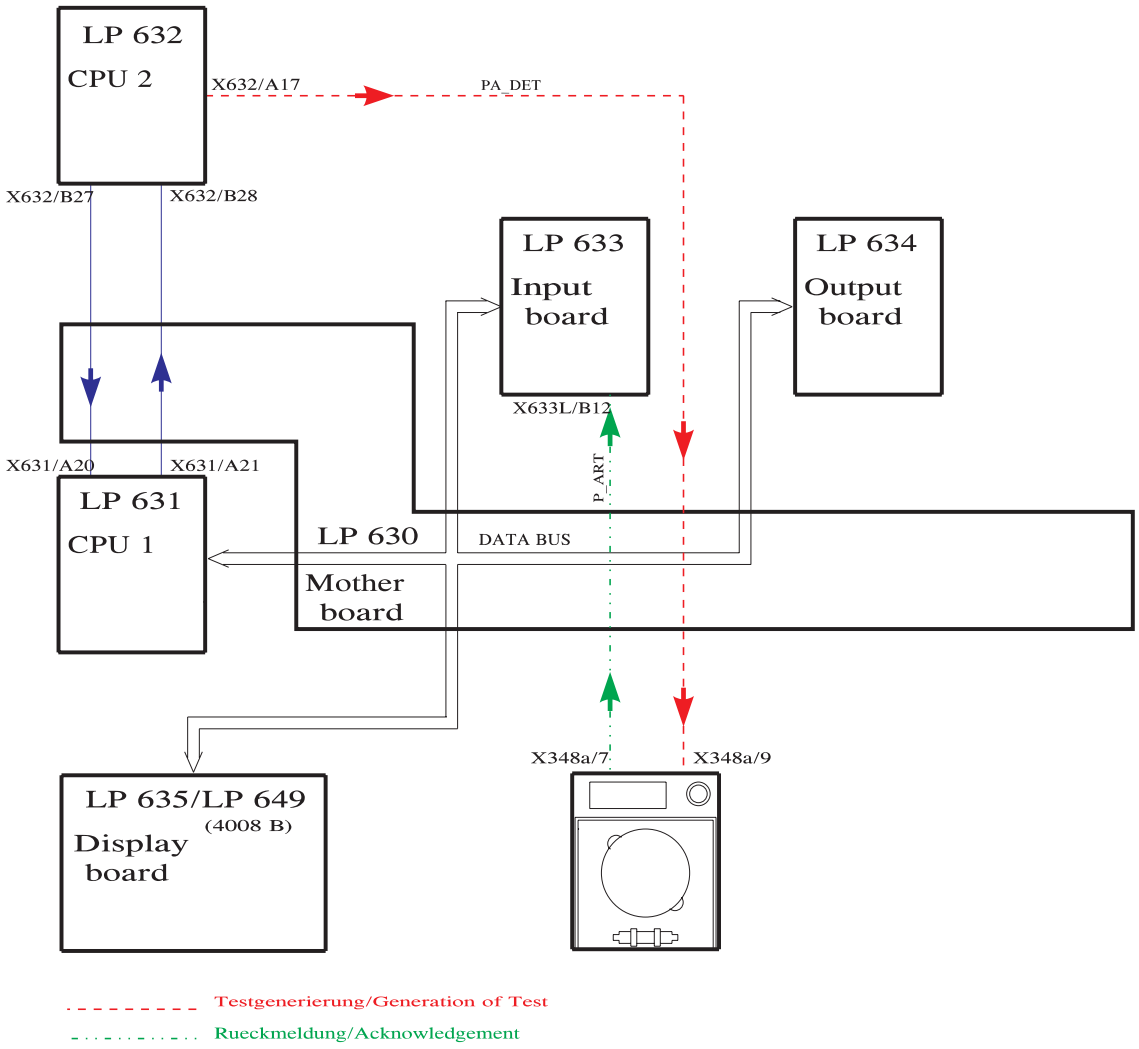

Error description:

Error message	*Description*
F01 Arterial	With detuning in negative direction, the change achieved on the arterial display is less than 100 mmHg (2 sec). – Acknowledgement (P_ART, X348A/7) → X633L/B12, insufficient voltage change. – Test detuning defective (PA_DET, X632/A17) → X348A/9.
F02 Arterial	With detuning in positive direction, the change achieved on the arterial display is less than 100 mmHg (2 sec). – Acknowledgement (P_ART, X348A/7) → X633L/B12, insufficient voltage change. – Test detuning defective (PA_DET, X632/A17) → X348A/9.
F95 Arterial	System error.

- **Battery test**

  Test description:

  Check of the battery voltage under load.

  Illustration:

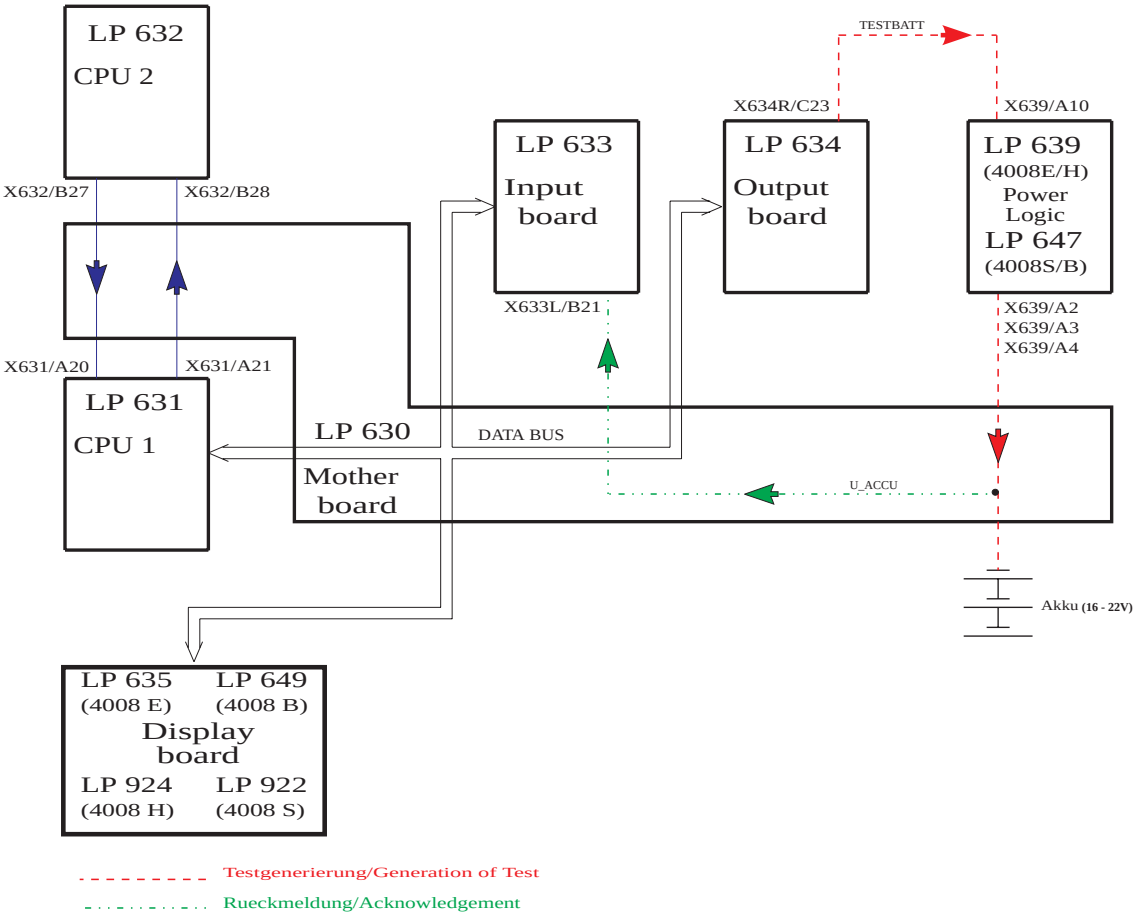

Error description:

Error message	*Description*
F01 Accumulator	CPU1 failed to complete the battery test within 5 sec. – The “test completed” information transmitted via the serial interface is missing.
F02 Accumulator	The battery charge is insufficient for 15 min emergency operation (maybe no battery connected). – The battery voltage (U_ACCU, ...) → X633L/B21 dropped below 17.6 V. – Acknowledgement (U_ACCU, ...) → X633L/B21 of the battery voltage defective.
F03 Accumulator	The test circuit on P.C.B. LP 639 defective. – The test level is incorrect (TESTBATT, X634R/C23) → X639/A10, the 12-V pulse is missing (100 ms). – Power supply unit LP 639 SI5 or in 4008B/S systems fuse in the base defective. – R39 on P.C.B. LP 639 (4008E/H) or P.C.B. LP 647 (4008B/S) defective, possibly caused by flickering power supply unit.
F95 Accumulator	System error.

- **Blood leak test**

  Test description:

  Test of the blood leak detector by lowering the capacity of the transmitting diode.

  Illustration:

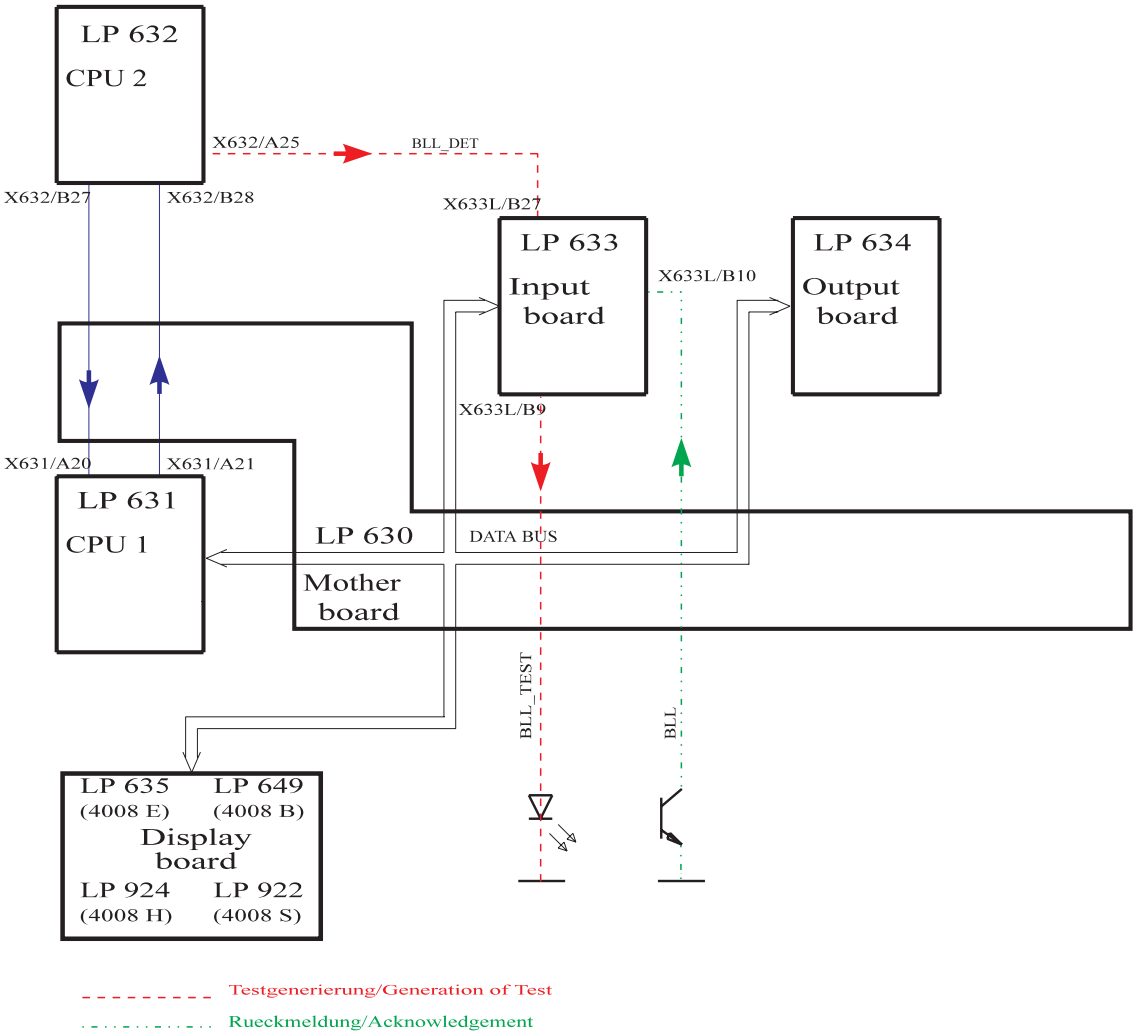

Error description:

Error message	*Description*
F01 Bloodleak	Blood leak channel and dimness not in alarm-free condition during the T1 test. – Dimness channel contaminated (calcium precipitate, etc.) – Acknowledgement (BLL, X637A/18) → X633L/B10 voltage value within the alarm tolerances (< 3V). – Acknowledgement (BLL_DIM, X637A/21) → X633L/B11 voltage value within the alarm tolerances (<1.5V/ >8V). – DAC_BLL or DAC_DIM not within the tolerances (check calibration)
F02 Bloodleak	The blood leak alarm/dimness alarm is not recognized during test detuning. – Acknowledgement (BLL, X637A/18) → X633L/B10 voltage value not within the alarm tolerances. – Acknowledgement (BLL_DIM, X637A/21 → X633L/B11 voltage value not within the alarm tolerances (<1.5V) – Test detuning (BLL_DET, X632/A25) → X633L/B27 not 5V – Calibration of DAC_BLL or DAC_DIM is too high – Detuning (DAC_DIM, X634R/A11) → X633L/C3 impossible – Dimness calibration is set to potentiometer calibration (BR6 from pos. 1/2 to 2/3).
F03 Bloodleak	After test detuning, the blood leak channel and dimness fail to enter the alarm-free state. – Dimness channel contaminated (calcium precipitate, etc.) – Acknowledgement (BLL, X637A/18) → X633L/B10 voltage value within the alarm tolerances – Test detuning (BLL_DET, X632/A25) → X633L/B27 not 0V. – Acknowledgement (BLL_DIM, X637A/21) → X633L/B11 voltage value within the alarm tolerances (<1.5V / >8V). – DAC_BLL or DAC_DIM not within the tolerances (check calibration)
F95 Bloodleak	System error.

- **Temperature test**

  Test description:

  Test of the upper alarm limit by electronically detuning the temperature display in positive direction.

  Illustration:

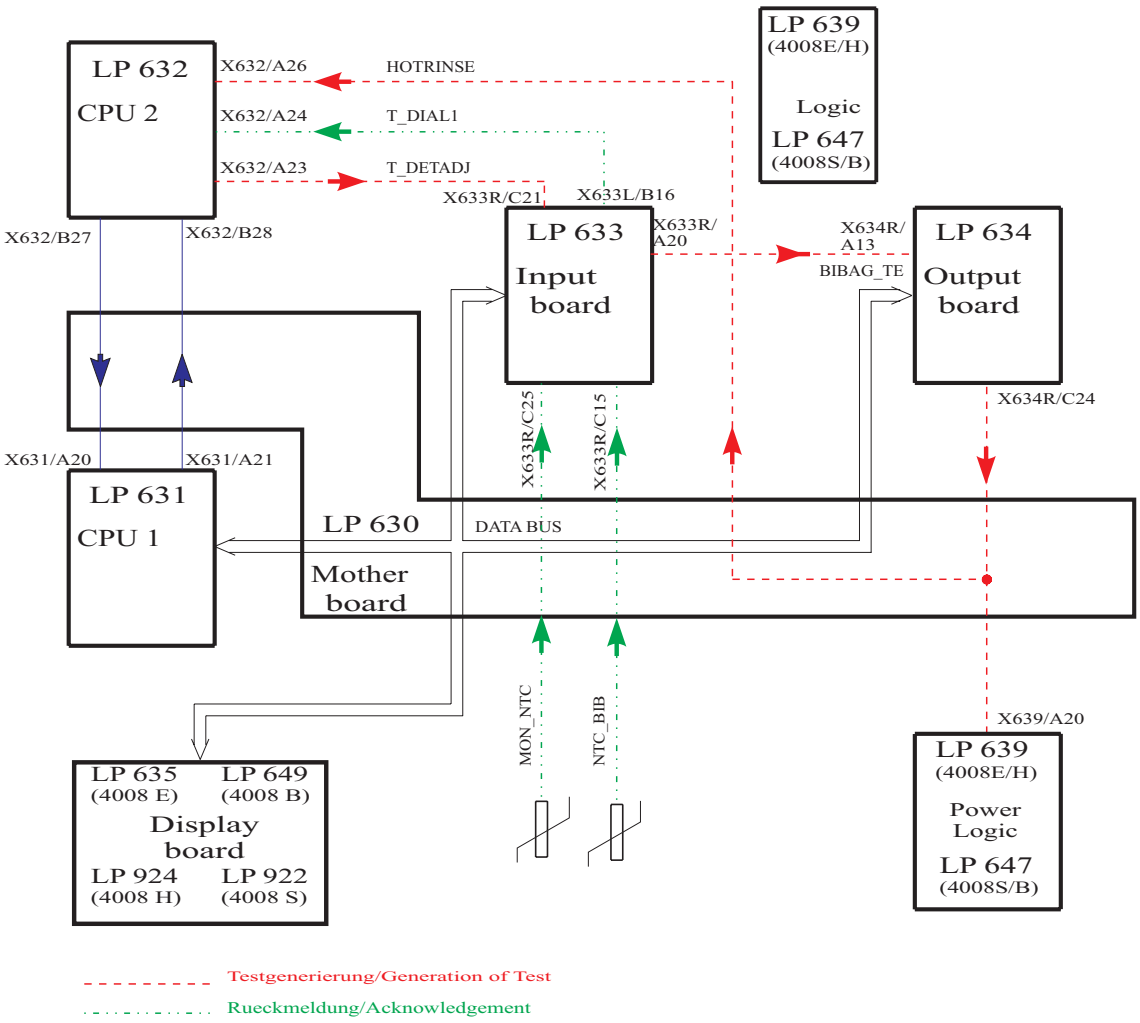

Error description:

Error message	*Description*
F01 Temperature	The temperature measuring range is not set to hemodialysis. – Control line (HOTRINSE, X634R/C24) → X639/A20, 0 V are missing. – Acknowledgement (HOTRINSE, X634R/C24) → X632/A26, 0 V are missing.
F02 Temperature	The actual temperature is less than 35.0 °C (test running time > 15 minutes). – Calibrate the temperature. – The heater rod failed. – Acknowledgement (T_DIAL1, X633L/B16) → X632/A24, voltage got stuck.
F03 Temperature	The actual temperature is higher than 39.0 °C (test running time > 15 minutes). – Calibrate the temperature. – The regulating sensor (NTC-2) is defective. – Acknowledgement (T_DIAL1, X633L/B16) → X632/A24, voltage got stuck.
F04 Temperature	The temperature failed to stabilize within 15 minutes. – Acknowledgement (T_DIAL1, X633L/B16) → X632/A24 is steadily changing (change > 0.3 °C/15 sec).
F05 Temperature	Detuning in positive direction not higher than 3 °C (10 sec). – Acknowledgement (T_DIAL1, X633L/B16) → X632/A24, change in voltage insufficient. – Detuning (T_DETADJ, X632/A23) → X633R/C21 insufficient.
F06 Temperature	The monitor sensor indicates a constant value. – NTC-3 defective.
F07 Temperature	The test release is missing (max. test running time is 10 minutes). – Run-time problem (software).
F08 Temperature	CPU1 failed to transmit a Bibag status message within 3 sec. – Run-time problem (software).
F09 Temperature	Bibag NTC_BIB detuning not higher than 1 °C. – Acknowledgement (NTC_BIB, X633R/C15) → ADW on P.C.B. LP 633, change in voltage insufficient. – Detuning (BIBAG_TE, X634R/A13) → X633R/A20 insufficient.
F10 Temperature	Bibag temperature display outside of measuring range (15 to 45 °C). – Acknowledgement (NTC_BIB, X633R/C15) → ADW on P.C.B. LP 633.
F95 Temperature	System error.

- **Negative pressure holding test**

  Test description:

  Within a specific time period, the actual value of the dialysate pressure transducer should change within certain limits only.

  Illustration:

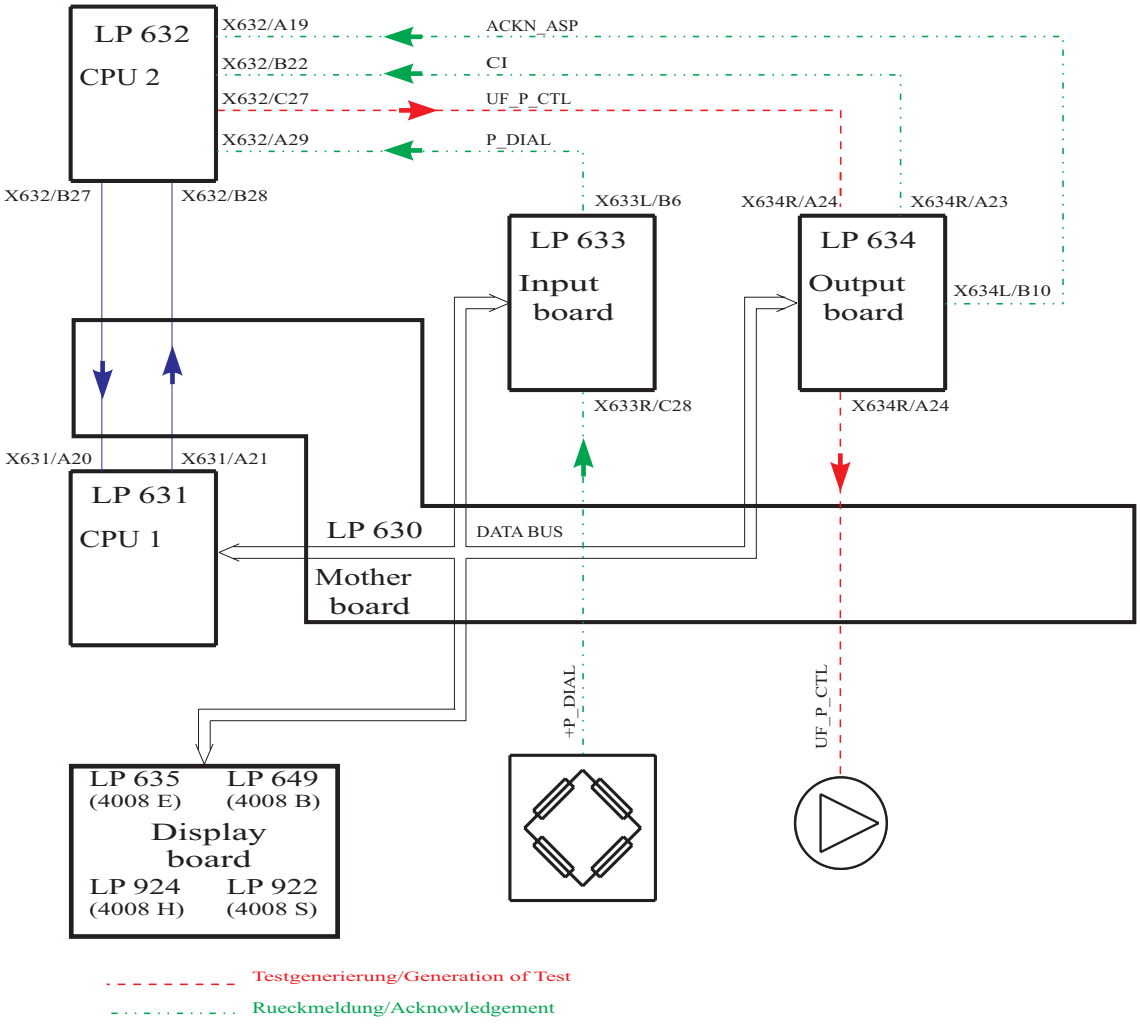

Error description:

Error message	*Description*
F01 neg. Pressure	During the start phase a negative pressure of more than 450 mmHg has developed (max. test running time 120 sec), – the hydraulic system is contaminated, – the air separation pump started running.
F02 neg. Pressure	Setting the dialysate pressure to the test pressure (–300 mmHg to –450 mmHg) was not possible (max. test running time 120 sec). Upon repetition of measurement, the range was extended from –260 mmHg to 490 mmHg. – Leakage in the hydraulic system. – The UF pump is defective. – If the HDF filter test was skipped: Clamp the HDF filter.
F03 neg. Pressure	The working point (116 digits) of the differential amplifier cannot be set correctly (max. test running time 120 sec). – Pressure variations are too large. – The D-A converter (IC11) on P.C.B. LP 632 is defective. – The operational amplifier (IC1/IC3) on P.C.B. LP 632 is defective. – The acknowledgement (P_DIAL, X633L/B6) → X632/A29 is defective. – The CI signal is missing (LP 632 → X632/B22).
F04 neg. Pressure	Completion of pressure measurement was not possible (max. test running time 120 sec). – The D-A converter (IC11) on P.C.B. LP 632 is defective. – The operational amplifier (IC1/IC3) on P.C.B. LP 632 is defective. – The acknowledgement (P_DIAL, X633L/B6) → X632/A29 is defetive.
F05 neg. Pressure	The air separation pump started running during the measurement phase. – Acknowledgement (ACKN_ASP, X634L/B10) → X632/A19, 0 V are missing. – ASP has been interrupted electrically.
F06 neg. Pressure	The negative pressure holding test failed to be passed. The dialysate pressure drop exceeds ±40 mmHg (related to ten balancing chamber switching). – Leakage in the hydraulic system.
F07 neg. Pressure	Current increasing pulses were not recognized (min. 2x). – 5-V balancing chamber pulses are missing (CI. X634R/A23) → X632/B22.
F95 neg. Pressure	System error.

In systems with HDF option, the negative pressure holding test is performed internally only; i.e. V24, V24B are closed and V26 is open.

- **Positive pressure holding test**

  Test description:

  Valves V24, V24B and V26 are checked for proper function (mechanical).
  Test of the TMP unit by detuning it electronically in positive direction.
  With the dialysate flow turned off, positive pressure is applied to the balancing system. The actual value of the dialysate pressure transducer is now monitored for a defined period of time.
  Test of the pump segment of P97.

  Illustration:

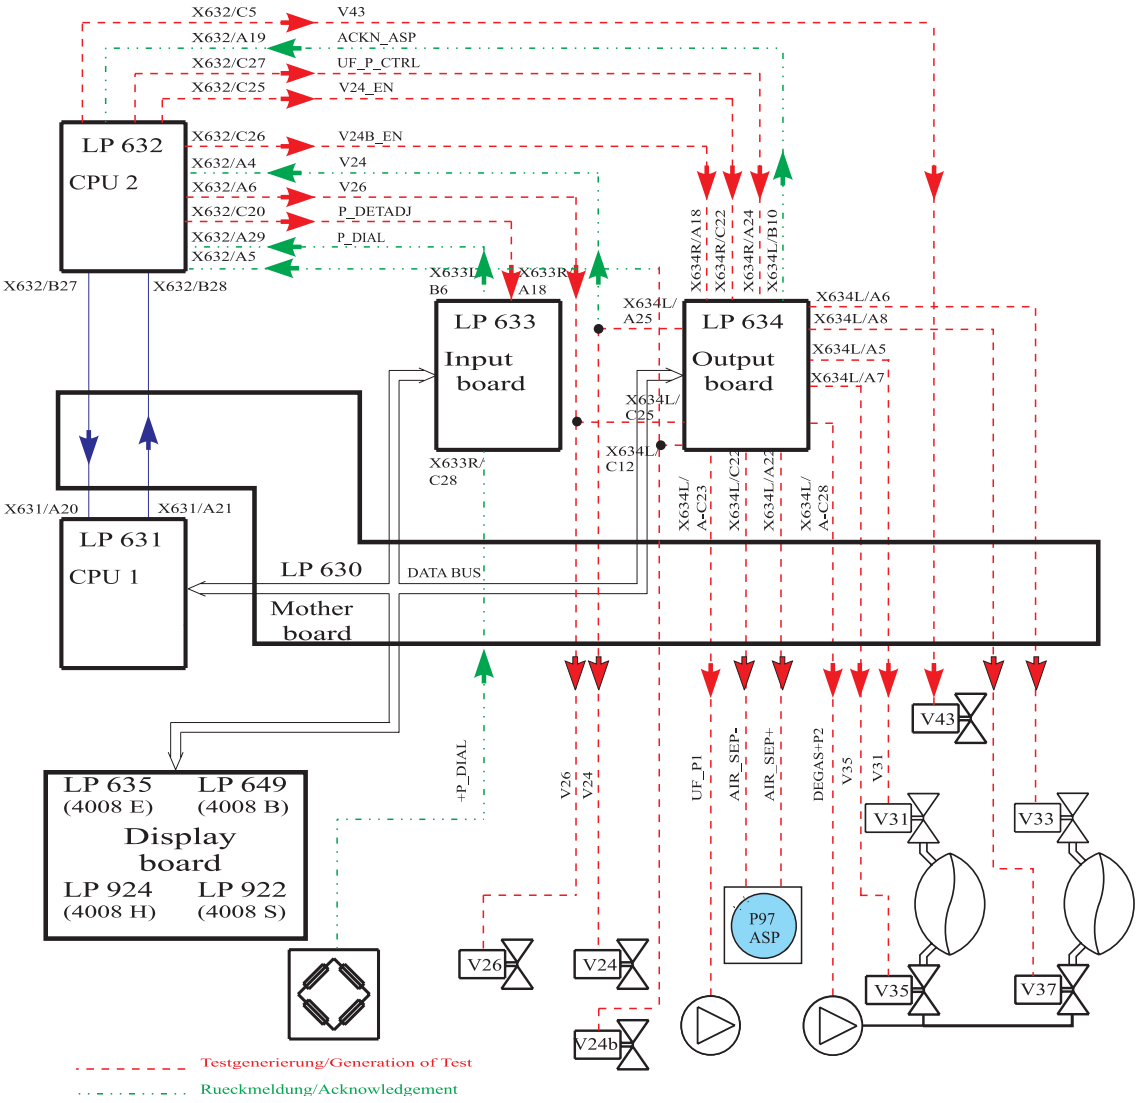

Error description:

Error message	*Description*
F01 pos. Pressure	The mandatory filling program of CPU1 has not been completed (10 sec). – The solenoid valve V43 is not closed.
F24 pos. Pressure	V24 valve error. – Acknowledgement (V24, X637/C1) → X632/A4, 24 V are missing.
F25 pos. Pressure	No pressure increase above 150 mmHg (change in pressure) after valve switching. – Control signals of V24 and V24B mistaken for each other. – Leakage in the external system (shunt interlock, dialysate lines, etc.). – If the HDF filter test was skipped: Clamp the HDF filter.
F26 pos. Pressure	No pressure compensation after opening of V43 (–125 mmHg to 55 mmHg). – V24 got stuck (mechanically open). – V43 not open. – V26 leaking.
F27 pos. Pressure	No pressure compensation after opening of V43 (–125 mmHg to 55 mmHg). – V24 got stuck (mechanically open). – V43 not open. – V189 (retentate valve) leaking.
F02 pos. Pressure	The loading pressure cannot be measured via the solenoid valve V26 in the hydraulic system (P-Dial. < 600 mmHg, 15 sec). – Solenoid valve V26 mechanically not open. – Solenoid valve V43 mechanically not closed. The balancing chamber is switched to passage during this test sequence. V24, V24B and V43 are closed; V26 is open.
F03 pos. Pressure	The hydraulic system cannot be deaerated via the solenoid valve V43; the zero point of –125 to 55 mmHg has not been reached (15 sec). – Solenoid valve V26 mechanically not closed. – Solenoid valve V43 mechanically not open. – Zero point outside the –125 to 55 mmHg range. The balancing chamber is switched to passage during this test sequence. V24, V24B and V26 are closed; V43 is open.
F04 pos. Pressure	The first working point (220 digits) of the differential amplifier cannot be set. – Pressure variations are too large. – The D-A converter (IC11) on P.C.B. LP 632 is defective. – The operational amplifier (IC1/IC3) on P.C.B. LP 632 is defective. – The acknowledgement (P_DIAL, X633L/B6) → X632/A29 is defective.

F05 pos. Pressure

Test detuning results in a change in the measuring range of more than 95 mmHg (60 sec).
- The operational amplifier (IC2) on P.C.B. LP 632 is defective.
- Acknowledgement (P_DIAL, X633L/B6) → X632/A29, change in voltage too large.
- Detuning defective (P_DETADJ, X632/C20) → X633R/C22.
- The balancing chamber valve V36 or V38 (waste water valve) is leaky.

F06 pos. Pressure

Test detuning results in a change in the measuring range of less than 85 mmHg (60 sec).
- The D-A converter (IC11) on P.C.B. LP 632 is defective.
- Acknowledgement (P_DIAL, X633L/B6) → X632/A29, change in voltage insufficient.
- Detuning defective (P_DETADJ, X632/C20) → X633R/C22.
- V26 is leaky.

F07 pos. Pressure

After detuning in the test there is a difference (P.diff > ±9 mmHg) between the display and the differential amplifier.
- The voltage divider R23/R9 or the operational amplifier IC2 is defective.
- The operational amplifier IC1/IC3 is defective.
- The balancing chamber valve V36 or V38 (waste water valve) is leaky.

F08 pos. Pressure

Test detuning results in a change in the measuring range of more than 400 mmHg (20 sec).
- The operational amplifier (IC2) on P.C.B. LP 632 is defective.
- Acknowledgement (P_DIAL, X633L/B6) → X632/A29, change in voltage too large.
- Detuning defective (P_DETADJ, X632/C20) → X633R/C22.

F09 pos. Pressure

Test detuning results in a change in the measuring range of less than 350 mmHg (20 sec).
- The D-A converter (IC11) on P.C.B. LP 632 is defective.
- Acknowledgement (P_DIAL, X633L/B6) → X632/A29, change in voltage insufficient.
- Detuning defective (DIAL_DET_ADJ, X632/C20) → X633R/C22.

F10 pos. Pressure

The second working point (116 digits) of the difference amplifier cannot be set correctly.
- The D-A converter (IC11) on P.C.B. LP 632 is defective.
- The operational amplifier (IC1/IC3) on P.C.B. LP 632 is defective.

F11 pos. Pressure

Change in the dialysate pressure after closing of the solenoid valve V43 (zero point change from –20 mmHg to +80 mmHg within 15 sec).
- The solenoid valve V24B is not closed.
- The balancing chamber valve V36 or V38 (waste water valve) is leaky.

The balancing chamber is switched to passage during this test sequence. V43, V24B and V26 are closed; V24 is open.

F12 pos. Pressure

The loading pressure cannot be measured via the solenoid valves V24 and V24B in the hydraulic system (P-Dial. < 600 mmHg, 15 sec).
– Solenoid valve V24 or V24B mechanically not open.

The balancing chamber is switched to passage during this test sequence. V43 and V26 are closed; V24 and V24B are open.

F13 pos. Pressure

The hydraulic system cannot be deaerated via the solenoid valve V43 (P-Dial. not equal to –125 to 55 mmHg, 20 sec).
– The solenoid valve V24 is not closed.
– V43 neither opens electrically nor mechanically.

The balancing chamber is switched to passage during this test sequence. V24 and V26 are closed; V24B and V43 are open.

F14 pos. Pressure

Zero point change after closing of solenoid valve V43 (20 sec).
Standard: P-Dial. not equal to –125 to 55 mmHg.
HDF option: P-Dial. not equal to –125 to 60 mmHg.
– The solenoid valve V24 is not closed.

The balancing chamber is switched to passage during this test sequence. V24, V26 and V43 are closed; V24B is open.

F15 pos. Pressure

The loading pressure is below 780 mmHg ±30 mmHg (10 sec).
– The loading pressure is too low.

F16 pos. Pressure

During the start phase, the pressure dropped below 620 mmHg (measuring tolerance: ±30 mmHg, max. test running time 120 sec).
– Major leakage in the hydraulic system.
– The UF pump spring is defective.
– The loading pressure is too low.
– The air separation pump fails to occlude.
– Relief valve (78) or V43 is leaky.

F17 pos. Pressure

During the start phase, it was not possible to reduce the dialysate pressure to a value below 760 mmHg (measuring tolerance: ±30 mmHg, test running time 120 sec).
– The loading pressure is too high.
– The UF pump is defective.

F18 pos. Pressure

The working point (116 digits) of the differential amplifier cannot be set correctly (test running time 120 sec).
– The pressure variations in the system are too large.

F19 pos. Pressure

Completion of the pressure measurement was not possible (max. test running time 120 sec).
– The D-A converter (IC11) on P.C.B. LP 632 is defective.
– The acknowledgement (P_DIAL, X633L/B6) → X632/A29 is defective.

F20 pos. Pressure

The positive pressure holding test failed to be passed. While the flow was off, a pressure drop of more than ±80 mmHg/min was detected in the hydraulic system.
- Leakage in the hydraulic system.
- The UF pump spring is defective.
- ASP fails to occlude.
- Relief valve leaking.
- V84 leaking.

F21 pos. Pressure

The dialysate pressure cannot be set to a value between 460 and 760 mmHg ±30 mmHg (10 sec).
- The heat exchanger is defective.
- Problem in the hydraulic system.

F22 pos. Pressure

The air separation pump is not running during the test phase (2 sec).
- Control line (AIR_SEP+, X634L/A22) → ASP/..., 24 V are missing.
- Control line (AIR_SEP–, X634L/C22) → ASP/..., 0 V are missing.
- Acknowledgement (ACKN_ASP, X634L/B10) → X632/A19, 12 V are missing.

F23 pos. Pressure

Pressure drop in the hydraulic system during the measurement phase (8 sec). Change more than +4 digits or more than –8 digits.
- Leakage in the pump segment of the air separation pump.
- Leakage in the heat exchanger.
- Acknowledgement (P_DIAL, X633L/B6) → X632/A29, change in voltage too large.

F24 – F27

See between F01 and F02

F28 pos. Pressure

ASP functional test (running and delivery test)
- ASP line segment is occluded
- ASP line segment has been incorrectly inserted (check direction of delivery)
- ASP is not running (electrically or mechanically)
- V87 electrically or mechanically closed

F95 pos. Pressure

System error.

- **UF function test**

Test description:

CPU1 activates the UF pump at a defined rate.
CPU2 checks the UF pump.
CPU2 blocks the control line of the UF pump and checks whether the UF pump stops.
Check of the UF counter.

The following is additionally applicable with built-in 4008 HDF option:
CPU1 activates the UF pump 2 at a defined rate.
CPU2 checks the hydraulic and the electric function of the UF pump 2.
CPU2 blocks the control line of the UF pump 2 and checks whether it stops.
Check of the UF2 counter.

Illustration:

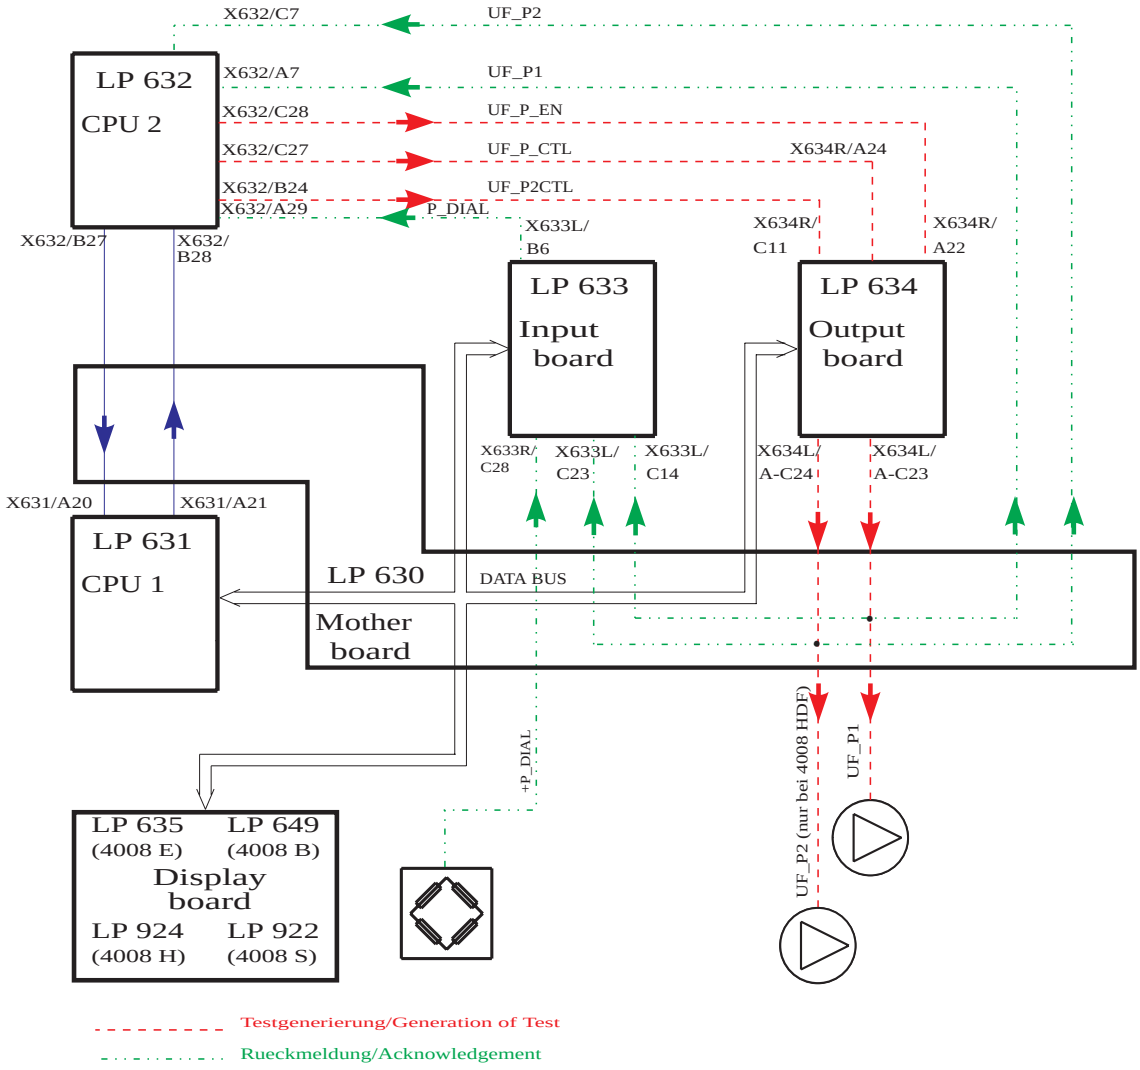

Error description:

Error message	*Description*
F01 UF-Function	The pause between the strokes of the UF pump 1 was shorter than 220 ms. Correct volume delivery is not ensured due to too short a return. – CPU1 issued too high a pump rate.
F02 UF-Function	The pulse time for the UF pump 1 is shorter than 180 ms. Correct volume delivery is not ensured due to too short an emission time. – The monoflop on P.C.B. LP 634 is defective (IC42/R82/C47).
F03 UF-Function	The pulse time for the UF pump 1 is longer than 500 ms. A maximum rate of 5000 ml/h is not possible. – The monoflop on P.C.B. LP 634 is defective (IC42/R82/C47).
F04 UF-Function	No activity of the UF pump 1 during the test (5 sec). – Acknowledgement (UF_P1, X637/B23) → X632/A7, no LOW pulses. – Control line (UF_P1, X634L/ABC23) → X637/B23, no LOW pulses.
F05 UF-Function	The UF pump 1 cannot be stopped by CPU2. – Control line (UF_P_EN, X632/C28) → X634R/A22, 5 V are missing. – The reset input at IC42/pin 3 on P.C.B. LP 634 is defective.
F06 UF-Function	The UF pump acknowledgement of CPU1 is defective. – Acknowledgement (UF_P1, X637/B23) → X622L/C14, no LOW pulses.
F07 UF-Function	The change in pressure after a stroke is less than 20 mmHg. – The UF pump 1 is mechanically defective. – Control line (UF_P1_CTL, X632/C27) → X634R/A24, no LOW pulse.
F09 UF-Function	Dialysate pressure is outside the measuring range (15s). – UF pressure transducer defective – D/A converter (IC11) on P.C.B. LP 632 defective – Operational amplifier (IC1/IC3) on P.C.B. LP 632 defective
F11 UF-Function	The pause between the strokes of the UF pump 2 was shorter than 220 ms. Correct volume delivery is not ensured due to too short a return. – CPU1 issued too high a pump rate.
F12 UF-Function	The pulse time for the UF pump 2 is shorter than 180 ms. Correct volume delivery is not ensured due to too short an emission time. – The monoflop on P.C.B. LP 634 is defective (IC42/R65/C45).

F13 UF-Function

The pulse time for the UF pump 2 is longer than 500 ms. A maximum rate of 5000 ml/h is not possible.
– The monoflop on P.C.B. LP 634 is defective (IC42/R65/C45).

F14 UF-Function

No activity of the UF pump 2 during the test (4 sec).
– Acknowledgement (UF_P2, X637/B26) → X632/C7, no LOW pulses.
– Control line (UF_P2, X634L/ABC24) → X637/B26, no LOW pulses.

F15 UF-Function

The UF pump 2 cannot be stopped by CPU2.
– Control line (UF_P_EN, X632/C28) → X634R/A22, 5 V are missing.
– The reset input at IC42/pin 13 on P.C.B. LP 634 is defective.

F16 UF-Function

The UF pump acknowledgement of CPU1 is defective.
– Acknowledgement (UF_P2, X637/B26) → X633L/C23, no LOW pulses.

F09 UF-Function

Dialysate pressure is outside the measuring range (15s).
– UF pressure transducer defective
– D/A converter (IC11) on P.C.B. LP 632 defective
– Operational amplifier (IC1/IC3) on P.C.B. LP 632 defective

F17 UF-Function

The change in pressure after a stroke of the UF pump 2 is less than 20 mmHg.
– The UF pump 2 is mechanically defective.
– Control line (UF_P2_CTL, X632/B24) → X634R/C11, no HIGH pulse.

F20 UF-Function

The difference in volume between UF pump 1 and UF pump 2 is higher than 25% (range of tolerance 15% to 35%).
– The stroke volume of UF pump 1 or UF pump 2 has been misadjusted.

F95 UF-Function

System error.

- **Conductivity test**

  Test description:

  Test of the alarm limits by electronically detuning the conductivity by +5% or by –5%.

  Illustration:

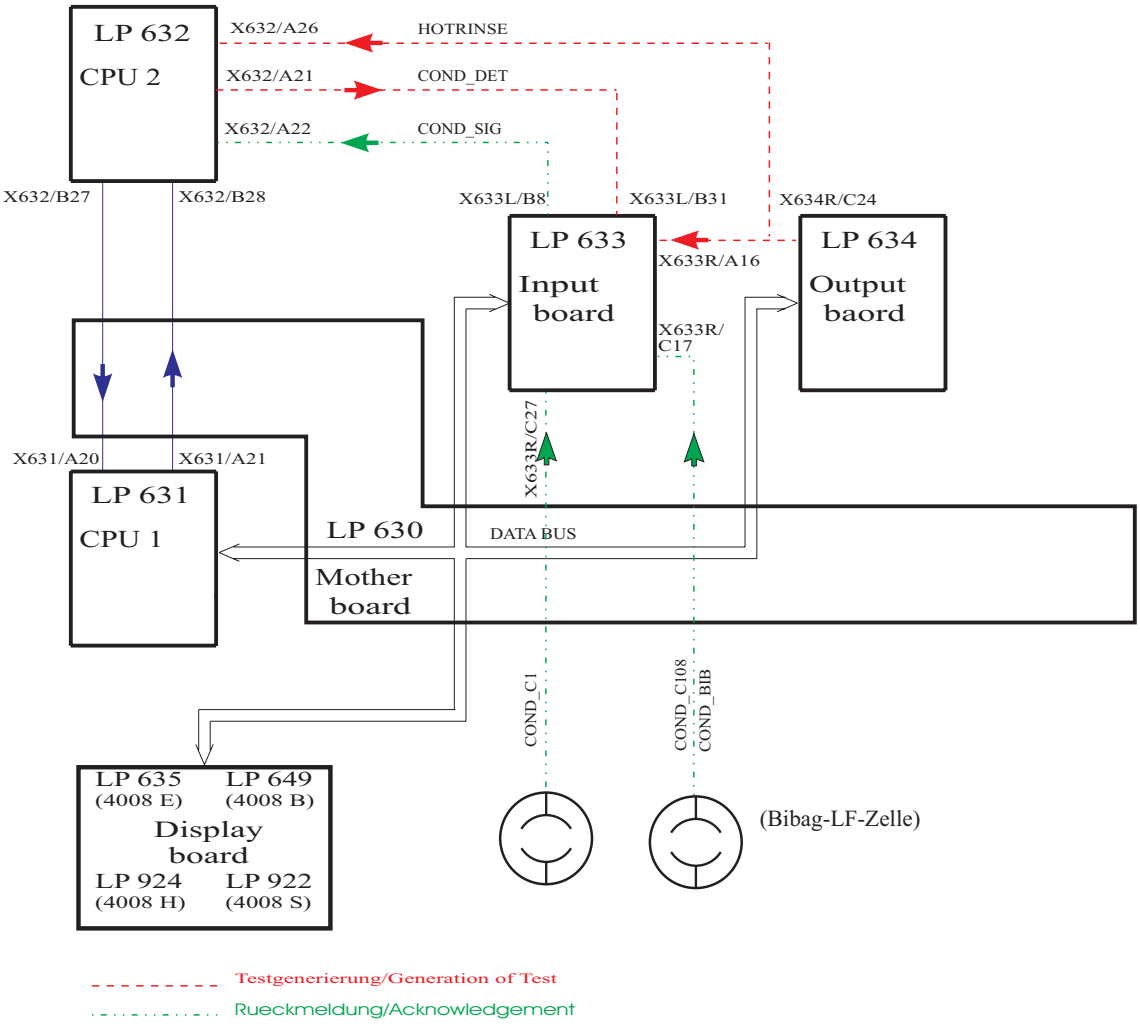

Error description:

Error message	*Description*
F01 Conductivity	The conductivity failed to be within the scale limits or to stabilize within 10 minutes (±0.1 mS/10 sec). – Concentrate is not connected. – Acknowledgement (COND_SIG, X633L/B8) → X632/A22, voltage outside the measuring range or unstable.
F02 Conductivity	Detuning in positive direction not more than 0.5 mS (10 sec). – Acknowledgement (COND_SIG, X633L/B8) → X632/A22 insufficient. – Detuning (COND_DET, X632/A21) → X633L/B31 insufficient.
F03 Conductivity	Detuning in negative direction not more than 0.5 mS (10 sec). – Acknowledgement (COND_SIG, X633L/B8) → X632/A22 insufficient. – Detuning (COND_DET, X632/A21) → X633L/B31 insufficient.
F04 Conductivity	The conductivity cell indicates a constant value. – The CD cell is defective.
F05 Conductivity	CPU1 failed to transmit a Bibag status message within 3 sec. – Run-time problem (software).
F08 Conductivity	CPU 1 fails to increase the working point (when the conductivity is <40mS/cm uncompensated) for the bibag conductivity by > 5 digits. – Detuning (HOT_RINSE, X634R/C24 → X633R/A16) not 12V – P.C.B. LP 633 T2 or IC26 defective
F06 Conductivity	The Bibag CD detuning is not more than 1 mS/cm. – Acknowledgement (COND_SIGNAL3, X633R/A12) → MP TP3 on P.C.B. LP 633, change in voltage insufficient. – Detuning (COND_DET, X632/A21) → X633L/B31 insufficient.
F07 Conductivity	The Bibag CD display is outside of the measuring range. – Acknowledgement (COND_SIGNAL3, X633R/A12) → MP TP3 on P.C.B. LP 633. – Conductivity outside the expected detuning range caused by wrong concentrate on the bicarbonate port or temperature too low.
F95 Conductivity	System error.

- **Diasafe/HDF filter test**

  Test description:

  Test of the filters by testing the volume of the internal capillary and pressure holding test.

  Illustration:

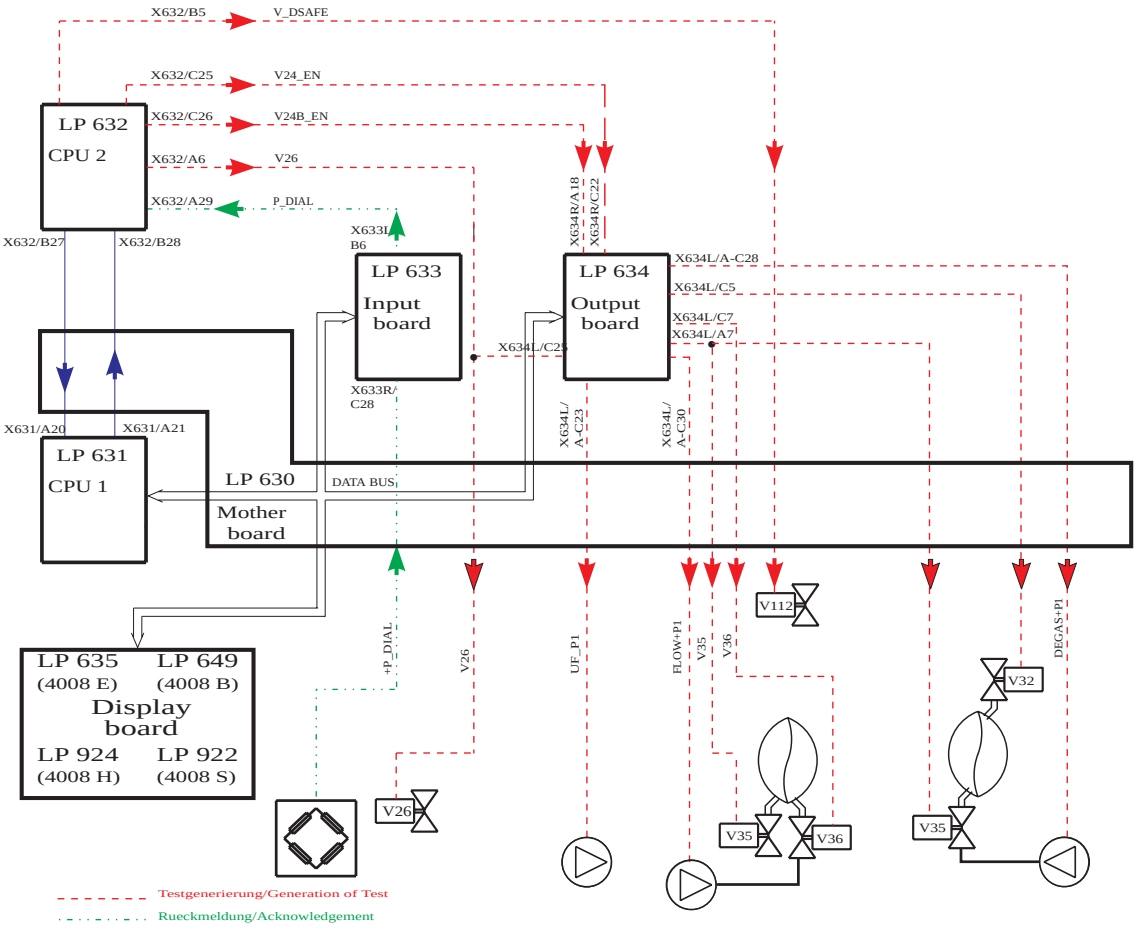

Error description:

Error message	*Description*
F02 Diasafe	The balancing chamber was not stopped by CPU1 (24 sec). – The message via the serial interface from CPU1 to CPU2 is missing. – The current rise pulse is missing (CI, X634R/A23) → X633L/C31, no 5-V pulse.
F04 Diasafe	CPU1 failed to complete one balancing chamber switching within 20 sec (30 ml fluid not removed?). – The message via the serial interface from CPU1 to CPU2 is missing. – The current rise pulse is missing (CI, 634R/A23) → 633L/C31, no 5-V pulse.
F06 Diasafe	During the pressure built-up phase, a negative pressure of less than –450 mHg has developed (24 sec). – Diasafe valve not open, control line (V_DSAFE, X632/B5) → X637/C16, 0 V are missing.
F07 Diasafe	After the maximum fluid volume of 145 ml + 30 ml has been removed, the expected negative pressure of –300 mmHg to –450 mm Hg failed to build up. – Major leakage in the Diasafe filter membrane and/or filter housing. – Major leakage in the O-rings on filter holder/couplings. – V26 electrically or mechanically not closed.
F08 Diasafe	The negative test pressure of more than –300 mmHg has developed before the minimum fluid removal of 145 ml –30 ml has been achieved. – The Diasafe filter is contaminated. – The Diasafe filter was not correctly deaerated upon start of the test. – V112 electrically or mechanically not open.
F09 Diasafe	The zero point for pressure measurement cannot be set. The maximum test time has been exceeded (max. test time 5 min). – Leakage in the Diasafe filter membrane and/or filter housing. – Leakage in the O-rings on filter holder/couplings. – P.C.B. LP 632, IC3/pin 12 not in socket or IC defective (differential amplifier).
F10 Diasafe	The negative pressure to be achieved in the test failed to stabilize within the maximum test time of 5 minutes (change > ±16.7 mmHg/min). – Leakage in the Diasafe filter membrane and/or filter housing. – Leakage in the O-rings on filter holder/couplings. – Leakage in the hydraulic system. – V 26 electrically or mechanically not closed.
F20 Diasafe	It was not possible to prime (deaerate) the dialysate filter within 2 minutes. – Flow problems. – The priming program is permanently active (level sensor, osmosis water, or P.C.B. LP 633, IC36 defective).
F95 Diasafe	System error.

Error message	*Description*
F01 HDF-Filter	The Diasafe option has not been set although ON-LINE HDF has been selected. – CPU 2: DIP switch array 2, switch 1 not set to ON.
F02 HDF-Filter	CPU1 failed to stop the balancing chamber (24 sec). – The message via the serial interface from CPU1 to CPU2 is missing. – The current rise pulse is missing (CI, X634/A23) → X633L/C31, no 5-V pulse.
F04 HDF-Filter	CPU1 failed to comlete one balancing chamber switching within 20 sec (30 ml fluid not removed?). – The message via the serial interface from CPU1 to CPU2 is missing. – Verify the current rise pulse.
F06 HDF-Filter	During the pressure-buildup phase, a negative pressure of less than –370 mmHg has developed (24 sec). – The HDF filter is clamped/clogged. – The Diasafe valve is not open, control line (V_DSAFE, X632/B5) → X637/C16, 0 V are missing.
F07 HDF-Filter	After the maximum fluid volume of 255 ml +60 ml has been removed the expected negative pressure of –220 mmHg up to 370 mmHg failed to build up. – Major leakage in the Diasafe/HDF filter membrane and/or filter housing. – Major leakage in the O-rings on filter holder/couplings. – V26 electrically or mechanically not closed.
F08 HDF-Filter	The negative test pressure of less than –220 mmHg has developed, before the minimum fluid removal of 255 ml –60 ml has been achieved. – The Diasafe/HDF filters are contaminated. – The Diasafe/HDF filters were not correctly deaerated upon start of the test. – V112 electrically or mechanically not open.
F09 HDF-Filter	The zero point for pressure measurement cannot be set. The max. test time has been exceeded (10 min). – Leakage in the Diasafe/HDF filter membrane and/or filter housing. – Leakage in the O-rings on filter holder/couplings.
F10 HDF-Filter	The negative pressure to be achieved in the test failed to stabilize within the maximum test time of 10 minutes (change > ±13.3 mmHg/min). – Leakage in the Diasafe/HDF filter membrane and/or filter housing. – Leakage in the O-rings on filter holder/couplings. – Leakage in the hydraulic system. – V26 electrically or mechanically not closed.

F20 HDF-Filter

It was not possible to prime (deaerate) the Diasafe filter within 2 minutes.
- Flow problems.
- The priming program is permanently active (level sensor, osmosis water, or P.C.B. LP 633, IC36 defective).

F21 HDF-Filter

It was not possible to correctly rinse/prime the HDF filter within 5 minutes (before the test).
- Flow problems.
- No conductivity.
- Conductivity at the upper or lower end of the scale range.
- The HDF pump is not running (e.g. open door).
- The delivery rate of the HDF pump is less than 380 ml/min.
- Line diameter not set to 8 mm.
- NTC6 permanently fails to detect fluid.
- Sieve on V43 clogged.

F22 HDF-Filter

It was not possible to correctly rinse/prime the HDF filter within 5 minutes (after the test).
- Flow problems.
- No conductivity.
- Conductivity at the upper or lower end of the scale range.
- Especially with biBag systems: check filter on V43
- The HDF pump is not running (e.g. open door).
- The delivery rate of the HDF pump is less than 380 ml/min.
- Line diameter not set to 8 mm.
- NTC6 permanently fails to detect fluid.
- Sieve on V43 clogged.

F95 HDF-Filter

System error.

- **Online plus / Diasafe plus filter / HPU test**

F01 ONLINE plus
F01 DIASAFE plus
F01 HPU

Present options and DIP switch settings do not match.
CPU1 system status (MST), HPU status and DIP switch/Array2 changed during the test running time.
– **ONLINE plus:**
  CPU 2: Array 2, DipSw2 not set to OFF
  CPU 2: Array 2, DipSw3 not set to ON
– **DIASAFE plus:**
  CPU 2: Array 2, DipSw2 not set to OFF
  CPU 2: Array 2, DipSw3 not set to OFF
– MST transmitted by CPU1 not matching with the set DIP switch of array 2.
– DIP switch/Array2 changed while the test was in progress.
– HPU logged off.

F34 ONLINE plus
F34 DIASAFE plus

Pressure holding test not passed. Max. number of treatments exceeded?
– Diasafe and HDF filter membranes leaking/worn.

F02 ONLINE plus
F02 DIASAFE plus
F02 HPU

Dialysate outlet pressure (DA1) outside the permissible range (10s).
DA1 test range: –125mmHg ≤ P_dial ≤ 55 mmHg
– Acknowledgement DA 1 (P_DIAL, X633L/B6) → X632/A29
– Acknowledgement line DA 2 (see HPU diagram)

F03 ONLINE plus
F03 DIASAFE plus
F03 HPU

Cross comparison of both pressure transducers (DA1 / DA2) is outside the acceptable tolerance (10s).
P(DA2) == P(DA1) ±20mmHg
– Acknowledgement DA 1 (P_DIAL, X633L/B6) → X632/A29
– Acknowledgement DA 2 (see HPU diagram)

F41 ONLINE plus
F41 DIASAFE plus
F41 HPU

The test valve V183 is leaking. Pressure increase in the system of ΔP(DA2) > 30 mmHg within 4s.
– V183 open, contaminated, or mechanically defective
– HPU, output stage etc. defective

F42 ONLINE plus
F42 DIASAFE plus
F42 HPU

No pressure increase of ΔP(DA2) > 200 mmHg within 4s after opening the test valve V183 in the system.
– V183 fails to open or mechanically defective.
– Air pump defective, is not running
– HPU, V183 and/or air pump output stage etc. defective

F43 ONLINE plus
F43 DIASAFE plus
F43 HPU

The lower pressure test range of ΔP(DA2) > 300 mmHg failed to be achieved within 1s after closing the test valve V183.
– HPU, output stage etc. defective
– ONLINE filter leaking

F44 ONLINE plus
F44 DIASAFE plus
F44 HPU

The upper pressure test range of ΔP(DA2) 750 mmHg was exceeded within 4s after closing of the test valve V183.
– HPU, output stage etc. defective

F04 ONLINE plus
F04 DIASAFE plus

The air pump is running although valve V43 is closed.
– HPU, output stage etc. defective

F05 ONLINE plus

The door on the Online Sys module is open during the rate test.
– Close module door.

F06 ONLINE plus

Port 1 is open during the first pressure build-up phase.
– Close port 1 (substituate port).

F07 ONLINE plus

Port 2 is open during the first pressure build-up phase.
– Close port 2 (rinse port).

F08 ONLINE plus

Failure to reach the test pressure PDIAL2 > 795 mmHg within 12s.
– Calibrate dialysate pressure.
– Replace DA 2 (re-calibration required)
– Air pump (185) or test valve (V183) defective
– Hydraulic system or valve ONL3 (191) leaking
– Air pump control (185) based on V43 status defective (HPU defective)

F09 ONLINE plus

The ONLINE system pump failed to comply with the first test rate of 100 ml/min ± 9 ml/min.
– ONLINE system pump control defective

F10 ONLINE plus

Monitoring unit (Hall sensor) of the pump rotor detects incorrect rotation of the rotor (desired rate 300 ml/min ± 25%).
– ONLINE system pump control defective (outside the tolerance of ±25%)
– Hall sensor /electronics defective

F11 ONLINE plus

The ONLINE system pump failed to comply with the second test rate of 300 ml/min ± 9 ml/min.
– ONLINE system pump control defective

F12 ONLINE plus

After the ONLINE system pump was switched off in the test, the monitoring unit (Hall sensor) detects that the rotor failed to stop correctly.
– Pump stop (output stage) defective
– Hall sensor /electronics defective

F13 ONLINE plus

After the ONLINE system pump was switched off in the test, the actual rate of the module is > 0 ml/min.
– Pump stop (output stage) defective
– Synchro-transmitter electronics defective

F14 ONLINE plus

After activation of the substituate pump the monitoring unit (Hall sensor) of the pump rotor detects incorrect rotation of the rotor (desired rate 300 ml/min).
– Pump control defective (outside the tolerance of ±25%)
– Hall sensor /electronics defective

F15 ONLINE plus

After activation of the substituate pump the system pump failed to comply with the test rate of 300 ml/min ±9ml/min.
– Pump control defective

F16 ONLINE plus

Port 1 open during ONL valve test sequence.
– Close port 1 (substituate port).

F17 ONLINE plus

Port 2 open during ONL valve test sequence.
– Close port 2 (rinse port).

F18 ONLINE plus

Acknowledgement of ONL1 (V193) differs from the desired state of the valve.
– Valve control in the ONLINE Sys module defective
– Valve acknowledgement in the ONLINE Sys module defective

F19 ONLINE plus

Acknowledgement of ONL2 (V192) differs from the desired state of the valve.
– Valve control in the ONLINE Sys module defective
– Valve acknowledgement in the ONLINE Sys module defective

F20 ONLINE plus

Acknowledgement of ONL3 (V191) differs from the desired state of the valve.
– Valve control in the ONLINE Sys module defective
– Valve acknowledgement in the ONLINE Sys module defective

F21 ONLINE plus

Leakage test ONL3 (V191) failed to be passed.
The permitted pressure drop of $\Delta P < -10$ mmHg has been exceeded or the test pressure is $P \leq 710$ mmHg.
– Valve ONL3 (V191) in the ONLINE Sys module leaking
– Leaking system / tubing connections
– Port 1 or 2 in the ONLINE Sys module leaking

F22 ONLINE plus

Leakage test ONL2 (V192) failed to be passed.
The permitted pressure drop of $\Delta P < -10$ mmHg has been exceeded or the test pressure is $P \leq 710$ mmHg.
– Valve ONL2 (V192) in the ONLINE Sys module leaking
– Leaky system /tubing connections
– Port 1 in the ONLINE Sys module leaking

F23 ONLINE plus

Leakage test ONL1 (V193) failed to be passed.
The permitted pressure drop of $\Delta P < -10$ mmHg has been exceeded or the test pressure is $P \leq 710$mmHg.
– Valve ONL1 (V193) in the ONLINE Sys module leaking
– Leaky system /tubing connections

F24 ONLINE plus

After the valves ONL1 to 3 opened, the pressure drop in the system was insufficient (ΔP < –100 mmHg).
- Valve ONL1/ONL2/ONL3 electrically or mechanically not open
- Kinked tubing
- HDF filter strongly contaminated

F25 ONLINE plus

No pressure change of ΔP > 40 mmHg within 15s.
- HDF filter membrane leaking (major leakage)
- No HDF filter installed

F26 ONLINE plus
F26 DIASAFE plus

Insufficient test pressure (P < 750mmHg) in the system.
- HDF filter membrane leaking (major leakage)
- No HDF filter installed
- Hydraulics system leaking

F27 ONLINE plus
F27 DIASAFE plus

After the valve V189 opened, the pressure drop in the system was insufficient (ΔP < –70 mmHg).
- Valve V189 electrically or mechanically not open
- Diasafe filter strongly contaminated
- Filter before/after V43 strongly contaminated

F28 ONLINE plus
F28 DIASAFE plus

Pressure increase in the system fails to exceed P > 760 mmHg.
- Diasafe filter membrane leaking (major leakage)
- No Diasafe filter installed

F29 ONLINE plus
F29 DIASAFE plus

Pressure holding test failed to be passed. Excess pressure drop within a measurement time of 30s (ΔP > –10 mmHg).
- Diasafe and/or HDF filter membrane leaking

F30 ONLINE plus
F30 DIASAFE plus

During the pressure holding test valve(s) ONL1, 2 or 3 and/or V189 was (were) closed (according to electronic acknowledgement).
- Valve control failed

F31 ONLINE plus
F31 DIASAFE plus
F31 HPU

Fill phase has been stopped.
Valve(s) V26 open and/or V24, V24b closed (according to electronic acknowledgement), or failure to perform 25 or 15 balancing chamber switchings within 120s.
- Valve control failed
- Balancing chamber switchings failed (e.g. only “Eigentakt”)

F32 ONLINE plus

Valve(s) ONL1, 2 or 3 closed and/or V24 open or port 1 or 2 open during the rinse phase (according to electronic acknowledgement).
- Valve control failed
- Operator opened ports too early.

F33 ONLINE plus

Rinse phase has been aborted.
Valve V189 open (according to electronic acknowledgement), or failure to perform 34 balancing chamber switchings within 240s.
- Valve control failed
- Failure to detect current rise pulse
- Conductivity not within the scale range
  Possible cause: Concentrate and/or bicarbonate level sensor do not recognize CD, although present.

F34 ONLINE plus
F34 DIASAFE plus

See error message between F01 and F02 ONLINE plus /DIASAFE plus

F41 ONLINE plus
F41 DIASAFE plus

See error message between F01 and F02 ONLINE plus /DIASAFE plus

F42 ONLINE plus
F42 DIASAFE plus

See error message between F03 and F04 ONLINE plus /DIASAFE plus

F43 ONLINE plus
F43 DIASAFE plus

See error message between F03 and F04 ONLINE plus /DIASAFE plus

F44 ONLINE plus
F44 DIASAFE plus

See error message between F03 and F04 ONLINE plus /DIASAFE plus

F95 ONLINE plus
F95 DIASAFE plus
F95 HPU

System error

1.1.4 Description of system errors during the cleaning programs

- **V84 monitoring**

Error message	*Description*
Rinse Failure F01	End of the rinse-free program in Dis I to V. Conductivity has been recognized via V84, although the valve is still closed. This error message can be acknowledged by pressing the Rinse key.
Rinse Failure F21	Disinfectant suction phase in Dis I – IV. Maximum permissible UF pump strokes (160) during the suction phase) exceeded. Error message cannot be acknowledged. Turn the system off and on again.
Rinse Failure F02	Disinfectant suction phase in Dis I to IV. Conductivity has not been recognized via V84, and the “Disinfectant empty ?” message has been acknowledged twice. This error message cannot be acknowledged. Switch the system off and on again. Program Dis V (only on systems with advanced hydraulics) No conductivity detected via concentrate level sensor, and “Disinfectant empty ?” message acknowledged twice. Error message cannot be acknowledged. Turn the system off and on again.
Rinse Failure F03	End of the suction phase in Dis I to IV. Conductivity has been recognized via V84, although the valve is already closed. This error message can be acknowledged by pressing the Disinfection key.
Rinse Failure F04	End of the suction phase in Dis I to IV. The float switch does not recognize any fluid after the disinfectant has been drawn in. Aeration of the disinfectant container! This error message cannot be acknowledged. Turn the system off and on again.

F01, F02 and F03 cause the V84 monitoring flag to be set. I.e. after one of these error messages has occurred, Bergström or ISO-UF dialysis is no longer possible, since it is not possible to switch the flow off. The V84 malfunction can be eliminated by correctly performing Dis I to IV. The problem can also be corrected using the calibration program (by a service technician only), menu item NOVRAM (Reset V84).

- **PSW (pressure switch) monitoring during free rinsing (only with systems with CDS)**

  The following requirements must be fulfilled to run the PSW test:
  – DIP switch 8 Dip array 2 on P.C.B. LP631 must be set to ON.
  – Rinse free followed by disinfection or heat disinfection (Dis. I–V)
    or
    Mandatory rinse as individual program

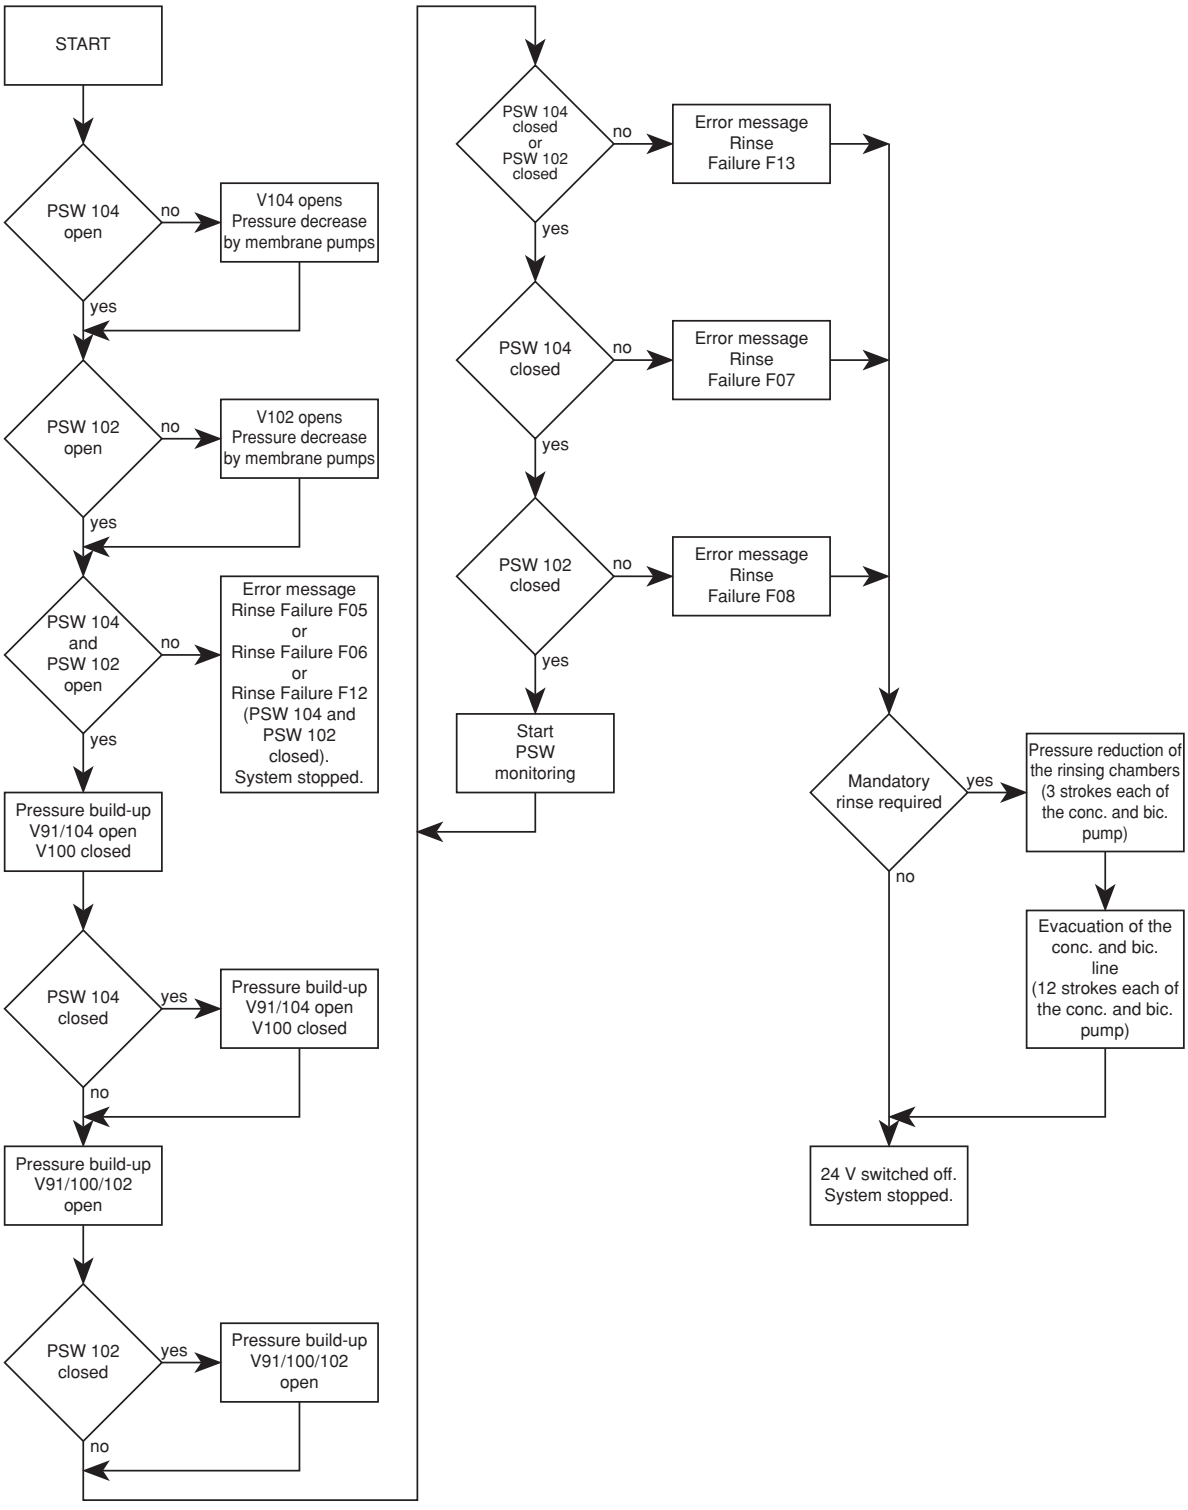

The pressure switches are designed as make contacts.
Specifications:

Delta pressure switch:	Switching point 700 mbar ±20 mbar
Alcatel-SEL-pressure switch:	Switching range 675 – 805 mbar
Envec pressure switch:	Switching range 700 mbar ±20 mbar

Error message	*Description*
Rinse Failure F05	Rinse-free program with following Dis or HDIS or mandatory rinse as individual program in Dis I to V. It was impossible to open the pressure switch for PSW_104 (S124) (bicarbonate). – Pressure on distribution piping > 500 mbar (according to specification, the permissible pressure is max. 500 mbar) pressure peaks on distribution piping: Frequently occurs in distribution pipings with user points if e.g. several patients are disconnected simultaneously and disinfection is started. – Switching point of pressure switch too low: Desired value = 700 mbar ± 20 mbar – Check acknowledgement of pressure switch on P.C.B. LP 633: Bicarbonate: X633L/ A19
Rinse Failure F06	Rinse-free program with following Dis or HDIS or mandatory rinse as individual program in Dis I to V. It was impossible to open the pressure switch for PSW_102 (S123) (concentrate). – Pressure on distribution piping > 500 mbar (according to specification, the permissible pressure is max. 500 mbar) pressure peaks on distribution piping: Frequently occurs in distribution pipings with user points if e.g. several patients are disconnected simultaneously and disinfection is started. – Switching point of pressure switch too low: Desired value = 700 mbar ± 20 mbar – Check acknowledgement of pressure switch on P.C.B. LP 633: Concentrate: X633L/ A20
Rinse Failure F07	Rinse-free program, Dis, HDIS, or mandatory rinse in Dis I to V. Pressure drop during the monitoring phase on PSW_104 (S124) (bicarbonate) or pressure build-up impossible. – Check switching point of pressure switch – Check loading pressure (possibly splinter or contamination in orifice 151, remove tube and purge tube from both ends). – Check negative pressure and test orifice (89). **(For this purpose, remove and purge the tubing from both ends)** – Check check valve (118) and filter (120). – Check CDS valve (104). – Verify tightness of CDS path. – Check acknowledgement of pressure switch on P.C.B. LP 633: Bicarbonate: X633L/ A19 – Cartridge filter upstream of degassing pump clogged or wrong filter (filter for disinfectant container) installed. Filters can be distinguished by different adapters.

Rinse Failure F08

Rinse-free program, Dis, HDIS, or mandatory rinse in Dis I to V.
Pressure drop during the monitoring phase on PSW_102 (S123) (concentrate) or pressure build-up impossible.

- Check switching point of pressure switch.
- Check loading pressure.
  (possibly splinter or contamination in orifice 151, remove tube and purge tube from both ends)
- Check negative pressure and orifice (89).
  (For this purpose, remove and purge the tubing from both ends)
- Check check valve (117) and filter (119).
- Check CDS valve (102).
- Verify tightness of CDS path.
- Check acknowledgement of pressure switch on P.C.B. LP 633:
  Concentrate: X633L/ A20
- Cartridge filter upstream of degassing pump clogged or wrong filter (filter for disinfectant container) installed. Filters can be distinguished by different adapters.

Rinse Failure F09

Five minutes before the end of the mandatory rinse in Dis I to V.
Pressure switch PSW_104 (S124) (bicarbonate) or PSW_102 (S123) (concentrate) did not open after pressure reduction.
See Rinse Failure F12.

Rinse Failure F12

Rinse-free program with following Dis or HDIS or mandatory rinse as individual program in Dis I to V.
The pressure switches for PSW_104 (S124) (bicarbonate) and for PSW_102 (S123) (concentrate) could not be opened.

- Membrane pumps fail to run.
- V 102 or 104 fails to open.
- Pressure on distribution piping > 500 mbar (according to specification, the permissible pressure is max. 500 mbar) pressure peaks on distribution piping: Frequently occurs in distribution pipings with user points if e.g. several patients are disconnected simultaneously and disinfection is started.
- Switching point of pressure switch too low:
  desired value = 700 mbar ± 20 mbar
- Check acknowledgement of pressure switch on P.C.B. LP 633:
  Bicarbonate: X633L/ A19

Rinse Failure F13

Rinse-free program with following Dis or HDIS or mandatory rinse as individual program in Dis I to V.
Pressure drop during the monitoring phase on PSW_104 (S124) (bicarbonate) or PSW_102 (S123) (concentrate) or pressure build-up impossible.

- Check switching point of pressure switch.
- Check loading pressure.
  (Possibly splinter or contamination in orifice 151; remove tube and blow through tube from both ends)
- Check negative pressure and orifice (89).
  (For this purpose, remove and purge the tubing from both ends)
- Check check valve (117/118) and filter (119/120).
- Check CDS valve (102/104).
- Verify tightness of CDS path.
- Check acknowledgement of pressure switch on P.C.B. LP 633:
  Bicarbonate: X633L/ A19
  Concentrate: X633L/ A20
- Cartridge filter upstream of degassing pump clogged or wrong filter (filter for disinfectant container) installed. Filters can be distinguished by different adapters.

In case of F07, F08 and F13, the “DO NOT SWITCH OFF !!” message can, in addition, be alternately displayed.
However, this message is displayed only if a mandatory rinse program is requested, since the concentrate and bicarbonate lines still have to be emptied before the system is switched off.

- **Hydraulics test (check of V91, V99, V100) in systems with central delivery system**

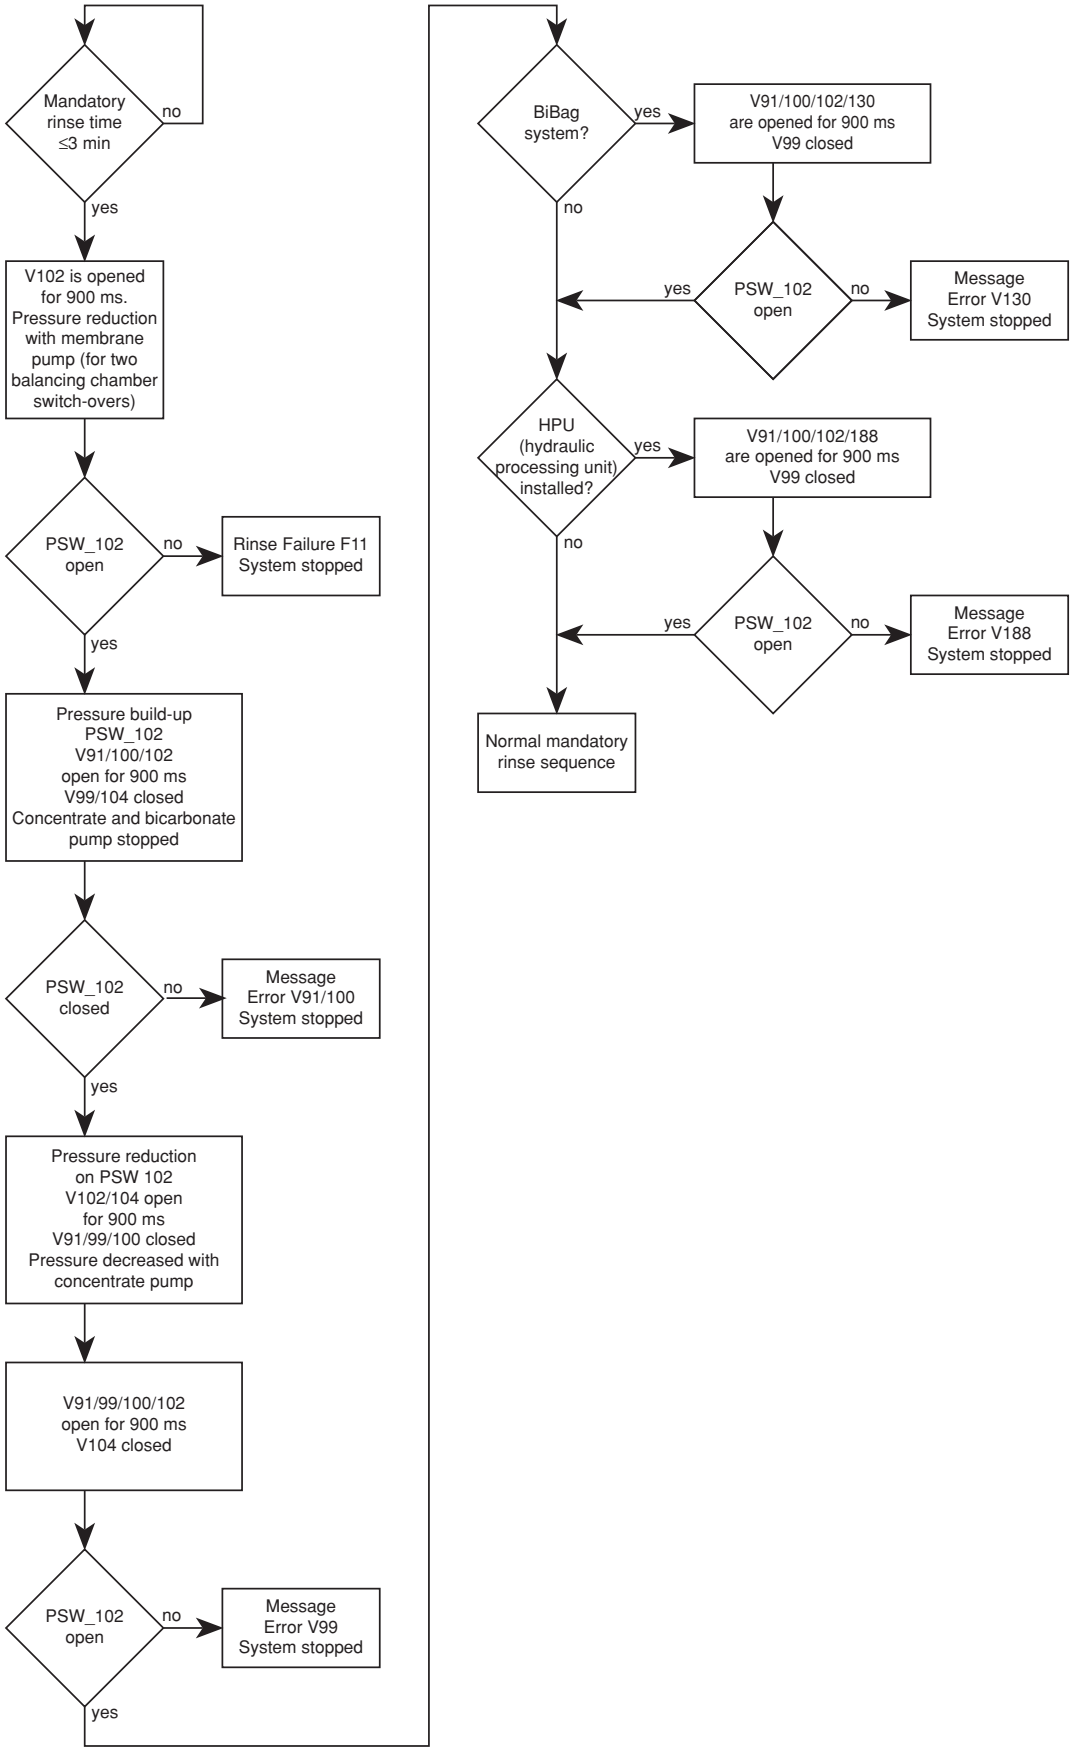

Error message	*Description*
Rinse Failure F11	Three minutes before the end of the mandatory rinse in Dis I to V. The pressure switch PSW_102 (S123) (concentrate) did not open after pressure reduction. – Pressure on distribution piping > 500 mbar (according to specification, the permissible pressure is max. 500 mbar). Pressure peaks on distribution piping: Frequently occurs in distribution pipings with user points if e.g. several patients are disconnected simultaneously and disinfection is started. – Switching point of pressure switch too low: desired value = 700 mbar ± 20 mbar – Membrane pumps fail to run – V102 fails to open electrically or mechanically – Check acknowledgement of pressure switch on P.C.B. LP 633: X633L/ A20
V91/V100 Failure	Three minutes before the end of the mandatory rinse in Dis I to V. V91 or V100 cannot be opened. – V91 or V 100 fail to open electrically: P.C.B. LP 634: V91 = X634L/A12; V100 = X634L/C13 – V 91 or V 100 mechanically not open: check sieve (148) upstream of V100, or valves clogged – V99 constantly open (electrically P.C.B. LP 634: X634L/B12 or mechanically) – V 102 not open – Pressure switch for PSW_102 (S 123) fails to switch
V99 Failure	Three minutes before the end of the mandatory rinse in Dis I to V. V99 cannot be opened. – V 99 fails to open electrically: P.C.B. LP 634: X634L/ B12. – V 99 fails to open mechanically: check sieve (149) before V99, or V99 clogged. – Pressure switch for PSW_102 (S 123) fails to open.
V130 Failure	Three minutes before the end of the mandatory rinse in Dis I to V. V130 cannot be opened (applicable to systems with BIBAG only). – V130 electrically defective: P.C.B. LP 634: X634L/ A4 – V130 mechanically defective or clogged – Pressure switch for PSW_102 (S 123) fails to open. – Check tubing for bicarbonate suction line and bibag block.
V188 Failure	V188 fails to open. – V188 electrically defective. – V188 mechanically defective or clogged – Pressure switch for PSW_102 (S123) fails to open.
F14	Shortly before the end of the mandatory rinse in Dis I to V (CDS: Dis I to IV). The hydraulics test has not been completed correctly, possibly caused by flow problems.

- **Hydraulics test (check of V91 and valve 98) in systems without central delivery system**

Error message	*Description*
F14	Three minutes before the end of the mandatory rinse in Dis I to V. It was not possible to readjust the flow to 750 ml/min ±50 ml/min. V91 defective.
V91 Failure	Three minutes before the end of the mandatory rinse in Dis I to V. After V91 has opened, a flow > 950 ml/min failed to develop. V91 or valve V98 defective.
F14	Shortly before the end of the mandatory rinse in Dis I to V. The hydraulics test has not been completed correctly, possibly caused by flow problems.

- **Hydraulics test (check of V91, V99, V100, V130) in systems with BIBAG and without central delivery system**

  The following requirements must be fulfilled to run the hydraulics test:

  1.The test is run during the last 3 minutes of the mandatory rinse program only.
  2.DIP switch 7 DIP array 2 on PCB LP 631 must be set to ON.

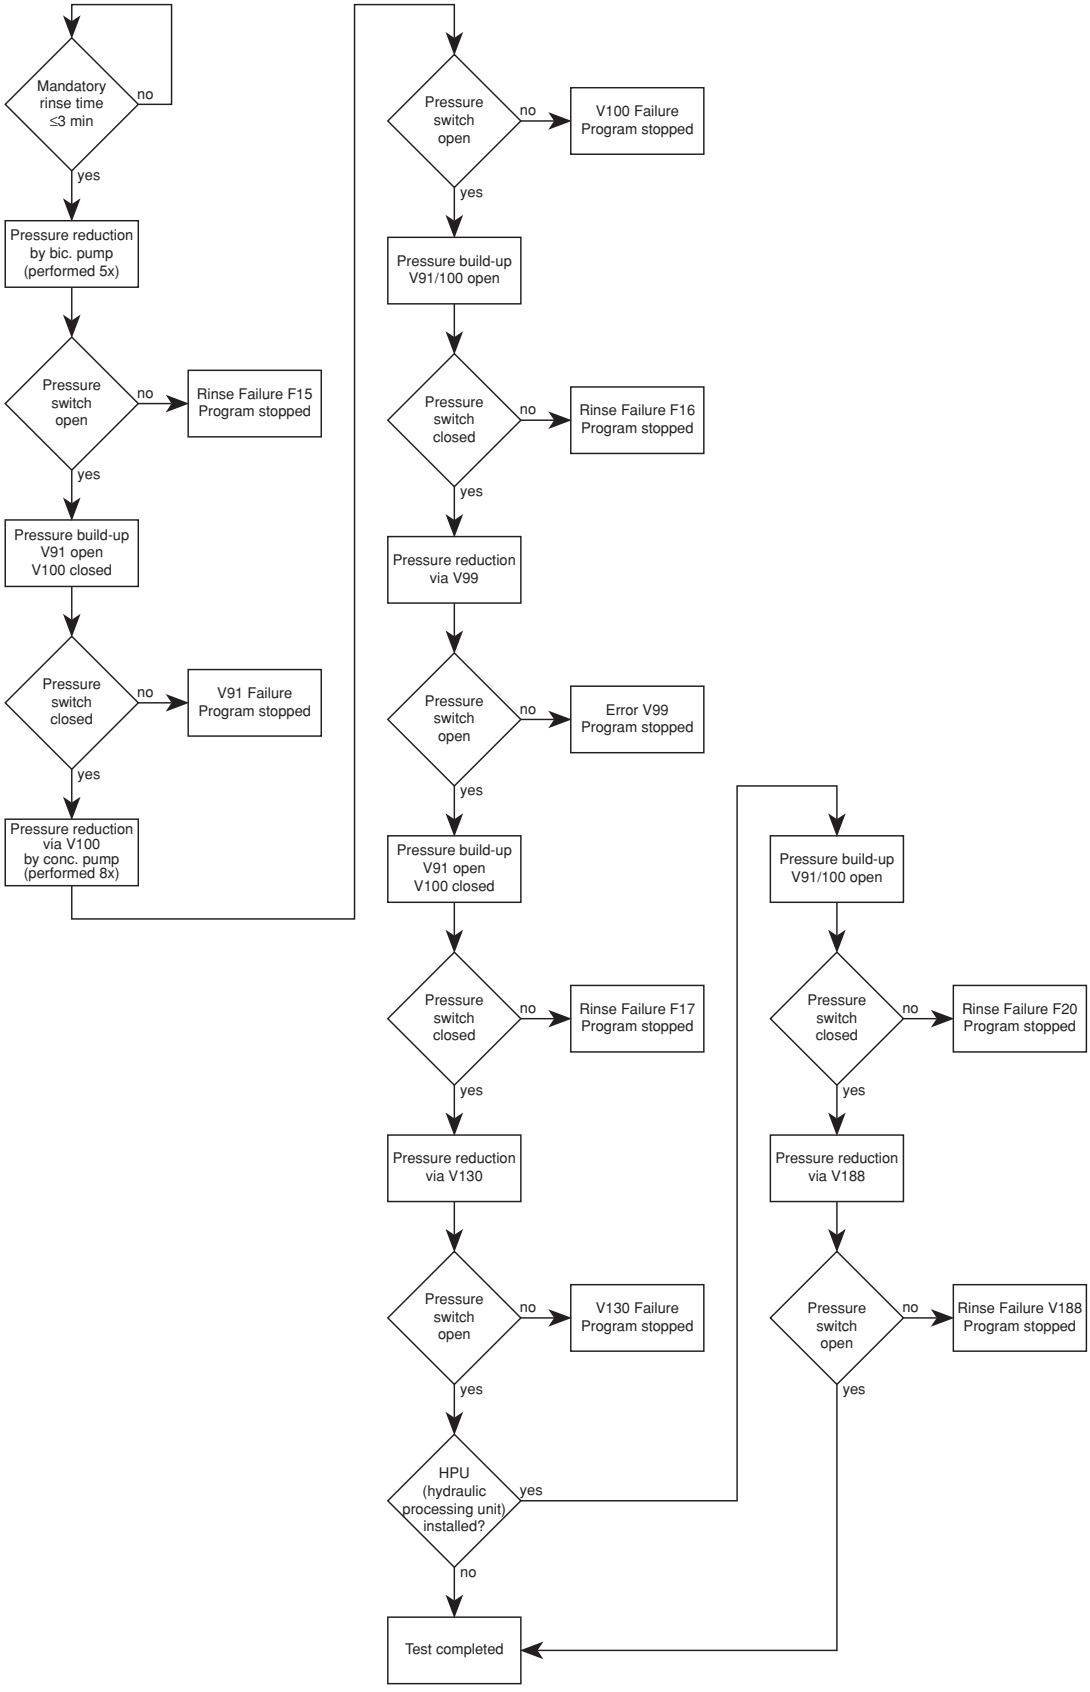

Error message	*Description*
Rinse Failure F15	Three minutes before the end of the mandatory rinse in Dis I to V. DS (BIBAG pressure switch 134) could not be opened at the beginning of the test. – Check pressure switch: Switching point: desired value: 130 mbar + 30 – Suction error of bicarbonate pump – V91 constantly electrically or mechanically open – V99/100 constantly electrically or mechanically closed
V91 Failure	Three minutes before the end of the mandatory rinse in Dis I to V. It is impossible to build up pressure on DS (BIBAG pressure switch 134) via V91. – Pressure switch fails to close mechanically: check switching point. – V91 fails to open electrically: P.C.B. LP 634: X634L/A12. – V91 fails to open mechanically (possibly clogged) – V130 electrically not closed: P.C.B. LP 634: X634L/ A4 – V130 fails to close mechanically (possibly clogged). – Bibag connector leaking (check O rings) – Sealing on the bicarbonate suction tube leaking. – Check acknowledgement of pressure switch on P.C.B. LP 633: X633L/A8. – V99 constantly electrically or mechanically open.
V100 Failure	Three minutes before the end of the mandatory rinse in Dis I to V. It is impossible to build up pressure on DS (BIBAG pressure switch 134) via V100. – V100 fails to open electrically: P.C.B. LP 634: X634L/C13. – V100 fails to open mechanically (possibly clogged). – V91 constantly electrically or mechanically open – Concentrate pump fails to pump. – Filter (148) clogged. – Pressure switch fails to open.
Rinse Failure F16	Three minutes before the end of the mandatory rinse in Dis I to V. DS (BIBAG pressure switch 134) cannot be closed. V99 or V130 is leaking. – V91 fails to open electrically or mechanically. – V99 constantly electrically or mechanically open – V130 constantly electrically or mechanically open – Sealing on the concentrate suction tube leaking. – Pressure switch fails to close.
V99 Failure	Three minutes before the end of the mandatory rinse in Dis I to V. DS (BIBAG pressure switch 134) cannot be opened. V99 does not open. – V99 fails to open electrically or mechanically. – V100 fails to open electrically or mechanically. – Pressure switch fails to open. – V91 electrically or mechanically open – Filter (149) upstream of V99 clogged

Rinse Failure F17

Three minutes before the end of the mandatory rinse in Dis I to V.
DS (BIBAG pressure switch 134) cannot be closed.
– V91 fails to open electrically or mechanically.
– V130 electrically or mechanically open
– V100 electrically or mechanically open
– Pressure switch fails to close.

V130 Failure

Three minutes before the end of the mandatory rinse in Dis I to V.
DS (BIBAG pressure switch 134) cannot be opened.
– V130 fails to open electrically or mechanically.
– Pressure switch fails to open.
– Check tubing for bicarbonate suction line and bibag block.
– Bicarbonate line squeezed at strain relief.
– Narrowing in the reducer on the bibag connector

Rinse Failure F 20

Impossible to close the pressure switch (134) via V91/100.
– V91 fails to open electrically or mechanically.
– V130/V188 electrically or mechanically open.
– Pressure switch fails to close.

V188 Failure

The pressure on pressure switch (134) cannot be reduced via V188.
– V188 fails to open electrically or mechanically
– Pressure switch fails to open
– Check tubing for carbonate suction line and air separator block.
– Concentrate line squeezed at strain relief.

Rinse Failure F14

Shortly before the end of the mandatory rinse in Dis I to V.
The hydraulics test has not been completed correctly, possibly caused by flow problems.

- **V39 test**

  The following requirements must be fulfilled to run the V39 test:

  1. The test is run during the last minute of the mandatory rinse program only.
  2. DIP switch 5 DIP array 2 on PCB LP 632 must be set to OFF.

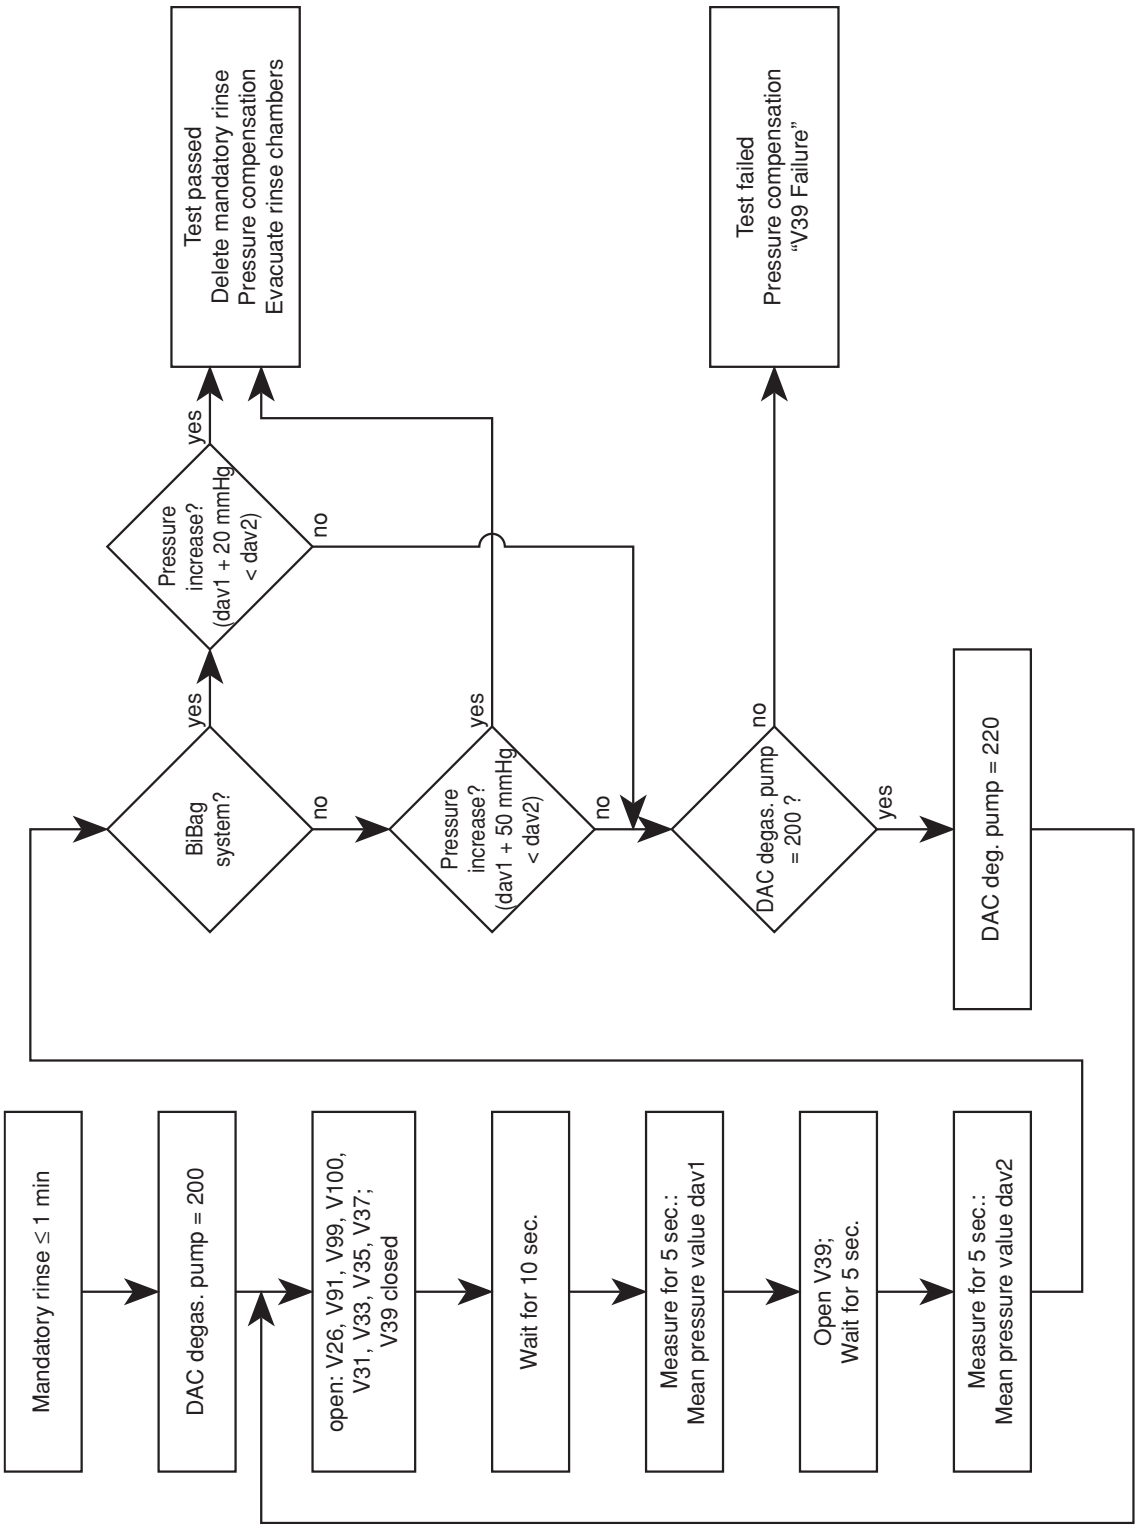
Mandatory rinse ≤ 1 min
DAC degas. pump = 200
open: V26, V91, V99, V100, V31, V33, V35, V37; V39 closed
Wait for 10 sec.
Measure for 5 sec.: Mean pressure value dav1
Open V39; Wait for 5 sec.
Measure for 5 sec.: Mean pressure value dav2
DAC deg. pump = 220
DAC degas. pump = 200 ?
yes
no
Pressure increase? (dav1 + 50 mmHg < dav2)
yes
no
BiBag system?
yes
no
Pressure increase? (dav1 + 20 mmHg < dav2)
yes
no
Test failed Pressure compensation "V39 Failure"
Test passed Delete mandatory rinse Pressure compensation Evacuate rinse chambers

Error message	*Description*
V39 Failure	On opening V39 a difference in pressure (averaged value V39 open – averaged value V39 closed) is detected on the dialysate pressure transducer (182): Standard system: < 50 mmHg bibag system: < 20 mmHg – V39 fails to open / close electrically or mechanically (possibly hydraulic processing unit defective). – It is impossible to re-adjust the degassing pump (P.C.B. LP 634). – V91, V99, V100 fail to open electrically or mechanically. – Dialysate pressure transducer (182) defective or not calibrated (possibly HPU P.C.B. LP 941 defective) – Filter 210 (upstream of degassing pump) clogged.

- **Further messages which may be displayed before or during a cleaning program**

Error message	*Description*
Blood Sensed by OD	Start of a cleaning program in RI I to II, HR I to III, Dis I to V. The optical detector in the air detector module recognizes blood.
Shunt Cover open	Start of a cleaning program or during a cleaning program in RI I to II, HR I to III, Dis I to V. The shunt interlock is not closed.
Dialines not conn	Start of a cleaning program in RI I to II, HR I to III, Dis I to V. The dialysate couplings are not connected to the shunt interlock.
No LD alarm	Priming of the blood line system in RI I to II, HR I to III, Dis I to V. The drip chamber in the air detector module does not recognize any alarm.
Conc line not conn	Start of a cleaning program in RI I to II, HR I to III, Dis I to V, or end of the disinfectant suction phase in Dis V. The concentrate plug is not connected to the rinse chamber. Reconnect the concentrate plug to the rinse chamber.
Bic line not conn	Start of a cleaning program in RI I to II, HR I to III, Dis I to V, or end of the disinfectant suction phase in Dis V. The bicarbonate plug is not connected to the rinse chamber. Reconnect the bicarbonate plug to the rinse chamber.
Voltage Failure	During a cleaning program in RI I to II, HR I to III, Dis I to V. The 24-V/12-V supply voltages are drifting. This error can be acknowledged for 8 sec by pressing the respective program key.
CPU-II failed	During a cleaning program in RI I to II, HR I to III, Dis I to V. The watchdog relay has dropped. Communication (RxD or TxD) may be disturbed.
High temperature	During a cleaning program in RI I to II, HR I to III, Dis I to V. Temperature > 41 °C; > 90 °C during HR; > 91 °C during IHR. The system continues to run. The alarm tone can be acknowledged. Upon error elimination, the message is automatically cleared.
Low temperature	During a cleaning program in RI I to II, HR I to III, Dis I to V. Temperature < 33 °C; < 78.5 °C during HR. The system continues to run. The alarm tone can be acknowledged. Upon error elimination, the message is automatically cleared.

Water alarm	During a cleaning program in RI I to II, HR I to III, Dis I to V. The float switch transmits the “no water available” message for more than 10 seconds. The balancing chamber has stopped; V41 is permanently open. Upon error elimination, the message is automatically cleared.
Water alarm	During a cleaning program in RI I to II, HR I to III, Dis I to V. For more than 30 seconds, the float switch fails to signal that water is required (not applicable to recirculation programs). The system continues to run. Upon error elimination, the message is automatically cleared.
Flow alarm	During a cleaning program in RI I to II, HR I to III, Dis I to V. A current rise pulse is not recognized for more than 12 seconds. The system continues to run at “Eigentakt” (10 seconds). Upon error elimination, the message is automatically cleared.
Upper Flow Alarm	During a cleaning program in RI I to II, HR I to III, Dis I to V. The cleaning flow increases to > 1000 ml/min. The program has stopped. The error can be acknowledged by pressing the respective cleaning program key.
UF-Pump failed	During a cleaning program in RI I to II, HR I to III, Dis I to V. The UF pump has stopped or the rate deviates (2800 ml/h < UFR < 6000 ml/h). The program has stopped. The error can be acknowledged by pressing the respective cleaning program key.
UF-Pump 2 failed	During a cleaning program in RI I to II, HR I to III, Dis I to VI. The UF2 pump has stopped (applicable only to systems with 4008 HDF). The error can be acknowledged by pressing the respective cleaning program key.
Dial. Valve failed	During a cleaning program in RI I to II, HR I to III, Dis I to V. V24 or V24B is closed although it should be open. The program has stopped. The error message can be acknowledged by pressing the respective program key.
Bypass Valve failed	During a cleaning program in RI I to II, HR I to III, Dis I to V. V26 is closed although it should be open. The program has stopped. The error message can be acknowledged by pressing the respective program key.

V102 Failure
During a cleaning program
in RI I to II, HR I to III, Dis I to V.
V102 has been opened electrically.
24 V are switched off.
The error cannot be acknowledged.

V104 Failure
During a cleaning program
in RI I to II, HR I to III, Dis I to V.
V104 has been opened electrically.
24 V are switched off.
The error cannot be acknowledged.

HDF-Pump failure
During a cleaning program
in RI I to II, HR I to III, Dis I to V.
The HDF pump has stopped, or the speed deviates (rated value: 400 ml/min, actual value: ≤ 300 ml/min; rated value: 150 ml/min, actual value: ≤ 100 ml/min).
The error message can be acknowledged for one complete cleaning program run by pressing the respective program key. The prompt: “Are you sure ?” is displayed.

Float-Switch Failure
During a disinfectant program in the suction phase in Dis I to V (CDS: Dis I to IV).
The lower switching point of the float switch is not reached within 20 sec.
The program has stopped.

Connect Disinfectant
Disinfectant suction phase in Dis V.
Request to connect the disinfectant.

Press CONFIRM key
Disinfectant suction phase in Dis V.
After the disinfectant has been connected, the Confirm key on the menu panel must be pressed to start the suction procedure.
The program has stopped.

Please Wait
Disinfectant suction phase in Dis V.
Disinfectant is drawn in via the concentrate pump.

Disinfectant empty ?
Disinfectant suction phase in Dis I to V.
Dis V: After the disinfectant has been drawn in, the float switch does not recognize any fluid.
Dis I to IV, Dis VI: The V84 monitoring unit does not recognize any conductivity.

Disinf-Temp. too high
Transition to disinfection in Dis I to V.
Temperature at the end of the rinse-free procedure > 40 °C.
Again and again, the rinse-free procedure is prolonged by 1 minute.
An audible warning is sounded after 4 minutes.
The message is automatically cleared, and it cannot be acknowledged.

Rinse required !	During stored mandatory rinse in Dis I to V. The mandatory rinse has been interrupted (e.g. the system has been switched off).
Rinse after Disinf.	Selection of a cleaning program, although a mandatory rinse has been requested in HR. A disinfection program has been stopped and subsequently a rinsing or hot rinsing program started.
Power Failure	During a cleaning program in RI I to II, HR I to III, Dis I to V. Line voltage failed.
BIBAG connect. open	Upon start of a cleaning program in RI I to II, HR I to III, Dis I to V. The BIBAG connector is not closed (cap not attached).
Heater error	During the CDS rinsing phase at the end of a hot rinsing program or a hot disinfection program in CDS: HR I to III, Dis II to IV. The heater signal (P.C.B. LP 633: X633R/A26) is not changing for > 40 sec.
Accumulator empty!	Battery voltage <17.2 V ±2.5 % Only in the event of a power failure during the cleaning programs. If the voltage drops below 17 V, the system will switch off.

1.1.5 Error messages after turning power on

Error message	*Description*
EPROM ERROR	System error. Check the plugs and the EPROM for proper connection. Replace the EPROM, if necessary.
BRAM_#_XXXX_XXXX_XXXX	System error. Switch the system off and on again. Check the plugs and the BRAM of P.C.B. LP 631 and P.C.B. LP 632 for proper connection. Replace the BRAM, if necessary. Then recalibrate.
RAM ERROR	System error. Switch the system off and on again. Check the plugs and the RAM for proper connection. Replace the RAM, if necessary.
Keyboard Error	Short-circuit on the keyboard. Switch the system off and on again. Check the plugs for proper connection. Possible short-circuit on the keys. Replace the front panel, if necessary.
Watchdog Error	This error message can only be displayed shortly after switch-on. Switch the system off and on again. Check the WD relay and components. Check CPU2/CPU1. Check the plug connectors on the monitor.
XX (not calibrated)	NOVRAM error upon test request. Switch the system off and on again. Recalibrate the function indicated. Replace the NOVRAM, if necessary.
NTC109 switched off	No valid value has been filed during start in the NOVRAM. The difference in temperature between NTC 109 and NTC 3 is too large. Switch off NTC 109 in the setup menu, or recalibrate the temperature.

1.1.6 Error messages during dialysis

Error message	*Description*
Voltage Failure	The 24-V/12-V supply voltages are drifting. The system enters the safe state and must be switched off/on. – The 12-V or 24-V operating voltage is outside of the permissible range: 24 V: > 26 V / < 22.5 V 12 V: > 13.5 to 15 V / < 10.5 V – Check the power supply unit. – Power supply unit okay: Check the voltages applied to P.C.B. LP 633: +12 V: X633R/A, C31 +24 V: 24V_EM: X633L/B20
24 V Switched Off	The 24-V supply voltage has fallen below 5 V. The system enters the safe state and must be switched off/on. – Check the power supply unit. – Power supply unit okay: Check the voltages at P.C.B. LP 633: +24V_EM: X633L/B20 – Remove all plug-in modules. As soon as the system is running: reconnect each plug-in module individually with the system switched off; determine the defective module and repair it. – Completely loosen the hydraulic compartment connections. *Caution:* J1 must now be fitted on P.C.B. LP 630 since, without it, the system would not be able to perform the watchdog test. Be absolutely sure to remove the jumper again for hemodialysis operation. With the system running, check the short circuit in the hydraulic compartment for 24-V supply and the valves and pumps for short circuit.
CPU-II failed	CPU2 fails to communicate via the serial interface. The system enters the safe state and must be switched off/on. – The software versions of CPU1 and CPU2 are mismatching. – Hardware defect on CPU2.
Profile time diff.	Deviation in time between CPU1 and CPU2. The error message is emitted 60 seconds after the start of the profile. – The clock module on CPU1 (IC14) is defective; or calibrate the time in case of layout < D.
Cyclical PHT F01	Balancing error. – System leakage. – Applicable to Diasafe systems: On CPU II, the DIP switch array 2, switch 1, is not set to “ON”.
Cyclical PHT F02	Balancing error. – System leakage. – Applicable to Diasafe systems: On CPU II, the DIP switch array 2, switch 1, is not set to “ON”.

Cyclical PHT F03 IC1 or IC3 on P.C.B. LP 632 is defective, or system leakage.

Cyclical PHT F04 It was not possible to complete the test within a specific time interval.

V84 faultiness ! Conductivity is recognized at the V84 electrodes.
This error message is emitted for the first time at the end of the T1 test. The error can be acknowledged for the duration of one hemodialysis procedure by pressing the Dialysis Start key. It is, however, not possible to switch off the flow (Bergström-/ISO-UF operating mode). Should the error occur during Flow OFF, the flow is switched on automatically.

- First of all, it must be verified whether a Rinse Failure F01, F02 or F03 occurred during the previous disinfection procedure (see listing of cleaning program errors). Should this be the case, a disinfection program I to IV (not Dis V) must be completed correctly. The problem can also be corrected using the calibration program, NOVRAM menu item (Reset V84).
- Should this not be possible, the error memory of the system can be read out.
- Should this neither be possible, the test described below can be performed:
  Remove the disinfectant.
  Switch the system off and on again.
  Perform or skip the T1 test.
  Should the error message be displayed again at the end of the test, it was generated by a Rinse Failure F01, F02 or F03 and can be cleared only by taking the measures described above.
  Should the message not be displayed again, a second test can be performed:
  Reconnect the disinfectant.
  Set the UF rate and switch on the UF unit.
  Should the error occur at this moment, there is a leakage on V84 (see listing of cleaning program errors).

Shunt Cover open (temporarily)

- P.C.B. LP 633 C24 (100n) temporarily short-circuited.
- Shunt interlock defective (check switches).

Voltage Failure (temporarily) P.C.B. LP 633 C84 (100n) temporarily short-circuited.

UF1 volume - Error
UF2 volume - Error

Failure to pass the test for an UF pump. The fill volume for the secondary air separator is outside the tolerance of 100 ml ±4 ml.
Possible cause:

- The affected UF pump fails to deliver correctly (not calibrated or mechanical defect)
- If the test result is >104 ml, the problem can also be caused by air coming from a poorly deaerated dialyzer.

F327 UF-failure

Pause between two UF1 pump strokes less than 220 ms.
Possible cause:
– CPU-1 defective

F328 UF-failure

Pulse time of one UF1 pump stroke less than 180 ms.
Possible cause:
– Controlling monoflop on LP 634 defective

F329 UF-failure

Pulse time of one UF1 pump stroke exceeds 500 ms
Possible cause:
– Controlling monoflop on LP 634 defective.

F330 UF-failure

Pick-up time of the UF1 pump exceeds 10 sec.
Possible cause:
– Controlling output stage on LP 634 defective.

F331 UF-failure

Theoretical/actual rate of the UF1 pump deviates by more than ±10 %.
Possible cause:
– System error

F332 UF-failure

UF1 pump stopped for more than the maximum time period.
Possible cause:
– Controlling output stage on LP 634 defective.
– UF pump interruption
– System error

F333 UF-failure

Volume changes by more than 10 ml during prescribed standstill (only monitored if OD is dark).
Possible cause:
– System error

F334 UF-failure

Pause between two UF2 pump strokes less than 220 ms.
Possible cause:
– CPU-1 defective

F335 UF-failure

Pulse time of one UF2 pump stroke less than 180 ms.
Possible cause:
– Controlling monoflop on LP 634 defective.

F336 UF-failure

Pulse time of one UF2 pump stroke exceeds 500 ms.
Possible cause:
– Controlling monoflop on LP 634 defective.

F337 UF-failure

Starting time of the UF2 pump exceeds 10 sec.
Possible cause:
– Controlling output stage on LP 634 defective.

F338 UF-failure

Desired/actual rate of the UF2 pump deviates by more than 10 %.
Possible cause:
– System error

F339 UF-failure

UF2 pump stopped for more than the maximum time period.
Possible cause:
– Controlling output stage on LP 634 defective.
– UF pump interruption
– System error

F340 UF-failure

UF2 volume change more than 10 ml although UF is switched off.
Possible cause:
– System error

F341 UF-failure

Mechanical UF1 pump failure.
Possible cause:
– Broken spring
– Contaminated filter

F342 UF-failure

Mechanical UF2 pump failure.
Possible cause:
– Broken spring
– Contaminated filter

F343 UF-failure

UF1/UF2 pump volume difference
Possible cause:
– Delivery volume altered

F350 UF-failure

A difference of more than 100 ml between the CPU1 and the CPU2 volume is detected during an UF data transfer after turning the UF unit on.
Possible cause:
– System error

F351 UF-failure

CPU2 could not detect plausibility of the CPU1 UF parameters.
Possible cause:
– System error

F352 UF-failure

CPU2 UF deviation compared to the theoretical UF target volume.
Possible cause:
– System error

F354 UF-failure

UF rate exceeds the maximum rate allowed.
Possible cause:
– System error

F361 UF-failure

CPU1 sent the UF parameter set to CPU2 and has not received a release from CPU2 after a timeout of 30 s.
Possible cause:
– System error

F363 UF-failure

CPU2 did repeatedly not receive a complete UF parameter set.
Possible cause:
– System error

F364 UF-failure

UF1 volume change although the UF goal has already been reached.
Possible cause:
– System error

F370 UF-failure

UF2 volume change although the UF goal has already been reached.
Possible cause:
– System error

- **HPU error**

Error message	*Description*
HPU Error F00	The HPU logs off with index STATUS_ER; no bit is set in the error bit field. – Problem on P.C.B. LP 941 – Problem on CAN distributor board – Problem on P.C.B. LP 763 – Problem on P.C.B. LP 630
HPU Error F01	The cyclic communication has failed for more than 2 seconds. – System error
HPU Error F02	The response to an event violated the time-out. – System error
HPU Error F03	An error occurred in the program sequence. – System error
HPU Error F04	Voltage drop (24V_SW) during HPU operation. – 24V voltage supply on P.C.B. LP 941 failed (watchdog dropped).
HPU Error F05	Watchdog test failed to be passed. – Watchdog circuit on P.C.B. LP 941
HPU Error F06	Reference voltage monitoring detected an error. – Reference voltage circuit on P.C.B. LP 941 is defective.
HPU Error F07	The HPU was logged off by the monitor. Will not be displayed since CPU1 has already stopped the communication. – System error
HPU Error F08	General valve malfunction: may occur in HPU SW 2.01 or 3.00. (Software versions before evaluation of the HPU errors). – System error
HPU Error F09	Malfunction of the compressor (185) – MV43 defective or activated – Compressor 185 defective or activated – Error on P.C.B. LP 941
HPU Error F10	Malfunction of valve MV39 – MV39 defective or activated – Error on P.C.B. LP 941
HPU Error F11	Malfunction of test valve (183) – MV43 defective or activated – MV183 defective or activated – Error on P.C.B. LP 941

HPU Error F12

Malfunction of evacuation valve (188)
- MV188 defective or activated
- Error on P.C.B. LP 941

HPU Error F13

Malfunction of retentate valve (189)
- MV189 defective or activated
- Error on P.C.B. LP 941

HPU Error F14

Defective component on P.C.B. LP 941
- Error on P.C.B. LP 941

HPU Error F15

Error in the HPU software. Valves are activated incorrectly.
- System error

HPU Error F98

Proceeding to the T1 test is not allowed after restart.
- System error

HPU Error F99

HPU fails without logging off.
- Damaged cable or similar problem
- HPU logged off by CPU1
- CRC error in the transfer HPU → CPU1
- BVM is connected via CAN and software <3.20 is installed in the BVM.
- The VDE test was performed directly after turning the system on. Turn the system on at least 2 minutes before the test.

- **ONLINE module errors**

Error message	*Description*
ONL Error F00	Online module error
ONL Error F01	Watchdog error
ONL Error F02	Watchdog error
ONL Error F03	Watchdog error
ONL Error F04	Error in the program sequence
ONL Error F05	+24V_WD dropped to less than 17V or was switched off
ONL Error F06	Time-out of the communication watchdog exceeded
ONL Error F07	A transmission from the module was not confirmed by the dialysis system
ONL Error F08	General valve error
ONL Error F09	T1 test skipped
ONL Error F10	T1 test for ONLINEplus failed to be passed
ONL Error F11	Reference voltage is outside the tolerance
ONL Error F12	CRC error
ONL Error F13	EEPROM error
ONL Error F14	The monitor disabled the ONLINEplus module
ONL Error F16	Valve error ONL1
ONL Error F17	Valve error ONL2
ONL Error F18	Valve error ONL3

1.2 Functional description of the modules

1.2.1 Blood pump (arterial)

The blood pump ensures a sufficient blood flow in the extracorporeal blood circuit. It is absolutely necessary that sterility is maintained and that the blood is prevented from becoming contaminated.

The blood pump is designed as roller pump provided in an exchangeable plug-in module integrated in the hemodialysis system. The blood line is installed between a stator, which, with its rolling surface bent in a circle, represents a thrust bearing, and a rotor, which is provided with rollers and pivoted in the stator. The pressure of the rollers causes the development of a narrow or seal. If the rollers are moving in the direction of delivery, the blood is pushed in this direction.

A microprocessor controls the stepper motor with quartz accuracy, depending on the selected delivery rate, the set line diameter, and the monitor signals.

The pressure measuring equipment comprises a piezo-resistive pressure transducer. The pressure-proportional voltage is indicated on the monitor on a quasi-analog LED scale.

Functions of the blood pump:
- RAM and CRC test after turning power on,
- control and monitoring of the function by a dual processor system,
- emergency switchoff in case of an alarm: stop recognition (15 or 30 sec),
- setting of the speed to 180 ml/min during priming,
- measurement of the arterial pressure or the Single-Needle pressure (depending on the model concerned),
- semi-automatic loading and unloading of the line segment.

Error messages:
E.01 Line diameter outside the permissible range
E.02 Undefined hex switch position
E.03 Uncalibrated arterial pressure transducer
E.04 Run-time monitoring error during SN operation
E.05 SN stroke volume outside the permissible range
E.06 SN pressure thresholds outside the range of values of the A-D converter
E.08 Stop alarm
E.09 Error during A-D conversion
E.12 Rotary monitoring error (Hall sensor)
E.13 Monitoring error with regard to current sensing resistors
E.14 Monitoring error with regard to current sensing resistors
E.15 Speed monitoring error

1.2.2 Blood pump (Single-Needle), optional

Essentially, the blood pump (Single-Needle) is identical with the arterial blood pump. The difference lies in the Single-Needle control. During SN operation, the pressure outlet of the compliance vessel is connected to the pressure connector of the SN pump. The pressure transducer is protected by a hydrophobic filter both in the external and the internal tubing system.

The SN stroke volume can be set within a range from 10 ml to 50 ml in increments of 5 ml.

To adjust it, first press the **Start/Stop** key and the ▼ key simultaneously.
Then change the value by using the ▲ and ▼ keys.

The lower changeover point is fixed to 75 mmHg.

The upper changeover point depends on the stroke volume:

Stroke volume (ml)	10	15	20	25	30	35	40	45	50
Changeover point (mmHg) ± 7 mmHg	110	130	150	172	195	219	244	270	299

1.2.3 Heparin pump

Since the blood flows through an extracorporeal circuit during hemodialysis, coagulation would occur within a short time. The heparin pump allows continuous heparinization of the blood causing the coagulation time to be prolonged. Since the heparin volume required during hemodialysis depends on the respective patient concerned, it must be determined by the attending physician.

A syringe plunger is moved by a drive rod, which is connected to a threaded spindle via a sliding block. A microprocessor-controlled stepper motor causes the spindle to rotate. Depending on the type of activation, the plunger moves up or down. A Hall sensor indicates the upper end position of the plunger. The protective system of the pump comprises a speed monitoring unit (slotted disc with optical sensor) as well as a motor current monitoring unit.

The different syringe types can be selected by means of a coding switch:

0 20 ml B&D syringe
1 30 ml Fresenius syringe
2 50 ml Fresenius syringe
3 10 ml B&D syringe
4 30 ml B&D syringe
5 50 ml B&D syringe
6 20 ml Terumo syringe
7 30 ml Terumo syringe
8 50 ml Terumo syringe
9 20 ml JMS syringe
A 20 ml Nipro syringe
B – F not used

Caution
Do not change the coding switch position during operation.

Function of the heparin pump:

– RAM and CRC test after turning power on,
– delivery rate adjustable from 0.1 ml to 10 ml in increments of 0.1 ml,
– delivery time preselection (stopwatch) adjustable from 1 min to 9 h 59 min,
– bolus administration.

Error codes:

E01	*Hardware error*, gate array defective
E02	*Hardware error*, reset by spike or test alarm
E03	Checksum error, data loss
E04	First start-up
E05	Incorrect hex switch position
E06	Missing or incorrect data for the variable syringe
E07	Selection of wrong syringe
E11 to E13	*Step error*
E12	Overdelivery during fast return
E14 to E15	*Error in direction of rotation* (software not equal to hardware!)
E16	*Software error*
E19	*Optical sensor error* (stop of syringe holder or optical sensor defective)
E20	*Error in direction of rotation*
E33	*Step error* (impermissible range)
E37	*Slotted disc error*
E40	*Division error* (division by zero)
E41 to E42	*Error in direction of rotation* (fast return)
E43 to E44	*Error in direction of rotation* (slow return)
E45 to E46	*Error in direction of rotation* (fast advance)
E47 to E48	*Error in direction of rotation* (slow advance)
E49	*Step error* (underdelivery during slow advance)
E50	*Step error* (underdelivery during slow return)
E51	*Step error* (overdelivery during fast advance)
E55	*Error in step counting* (optical sensor defective or mechanics too sluggish; no pulses from the slotted disc)
E56	*Error in step counting* (more than 8 pulses during transition of the slotted disc; the slotted disc is oscillating)
E90	*Display error*

1.2.4 Air detector

The penetration of air into the patient's extracorporeal blood circuit may cause an air embolism. In order to catch limited amounts of air and to separate accompanying air bubbles, the venous blood line is expanded (venous drip chamber). A major task of the air detector is to monitor the filling level in the venous drip chamber.

Ultrasonic air detector

The protection system against air infusion uses the method of ultrasonic transmission. Ultrasonic converters are attached on either side of the venous bubble catcher. At periodic intervals of approx. 90 ms, a transmitting resonator generates attenuated ultrasonic vibrations at a natural resonance of approx. 90 kHz, which are absorbed by a receiving resonator. The amplitude of the signal received is dependent upon the medium between the converters. Its value is at its minimum with the bubble catcher empty (air) and at its maximum with bubble-free fluids. The amplitude decreases with increasing air content (foam). The signal path is fail-safe up to and including the receiving resonator, i.e. the failure of any component always leads to a smaller amplitude and, thus, to an alarm. Starting at the receiving resonator, the signal voltage is always sent onto two independent receiver paths. As soon as the signal is too weak, one of these receiver paths causes the blood pump to stop and the other the venous line clamp to close.

The ▲ and ▼ keys are used to both raise and lower the blood level in the venous bubble catcher. As long as the ▲ key is pressed, the venous line clamp closes. The vent valve in the air detector module opens, and the blood level rises. The blood pump runs at reduced speed (180 ml/min). As long as the ▼ key is pressed, the venous line clamp remains open. The vent valve in the air detector module opens, the ventilation pump is running, and the blood level sinks. The blood pump runs at the preselected speed.

Optical detector

The optical detector serves to detect if there is blood or saline solution or air in the venous return line downstream of the bubble catcher. In the hemodialysis system, the hemodialysis phase is defined by presence of a dark medium and the preparation phase by presence of a clear medium.

Venous pressure measurement

The venous pressure measuring equipment comprises a piezo-resistive pressure sensor provided on the P.C.B. with following operational amplifier. The pressure-proportional output voltage is supplied onto the logic P.C.B. in the monitor. There, the pressure is indicated on a quasi-analog LED scale, and the transmembrane pressure is computed by determinig the difference between the dialysate pressure and the venous pressure.

1.3 Functional description of the hydraulic unit

Fig.: Flow diagram

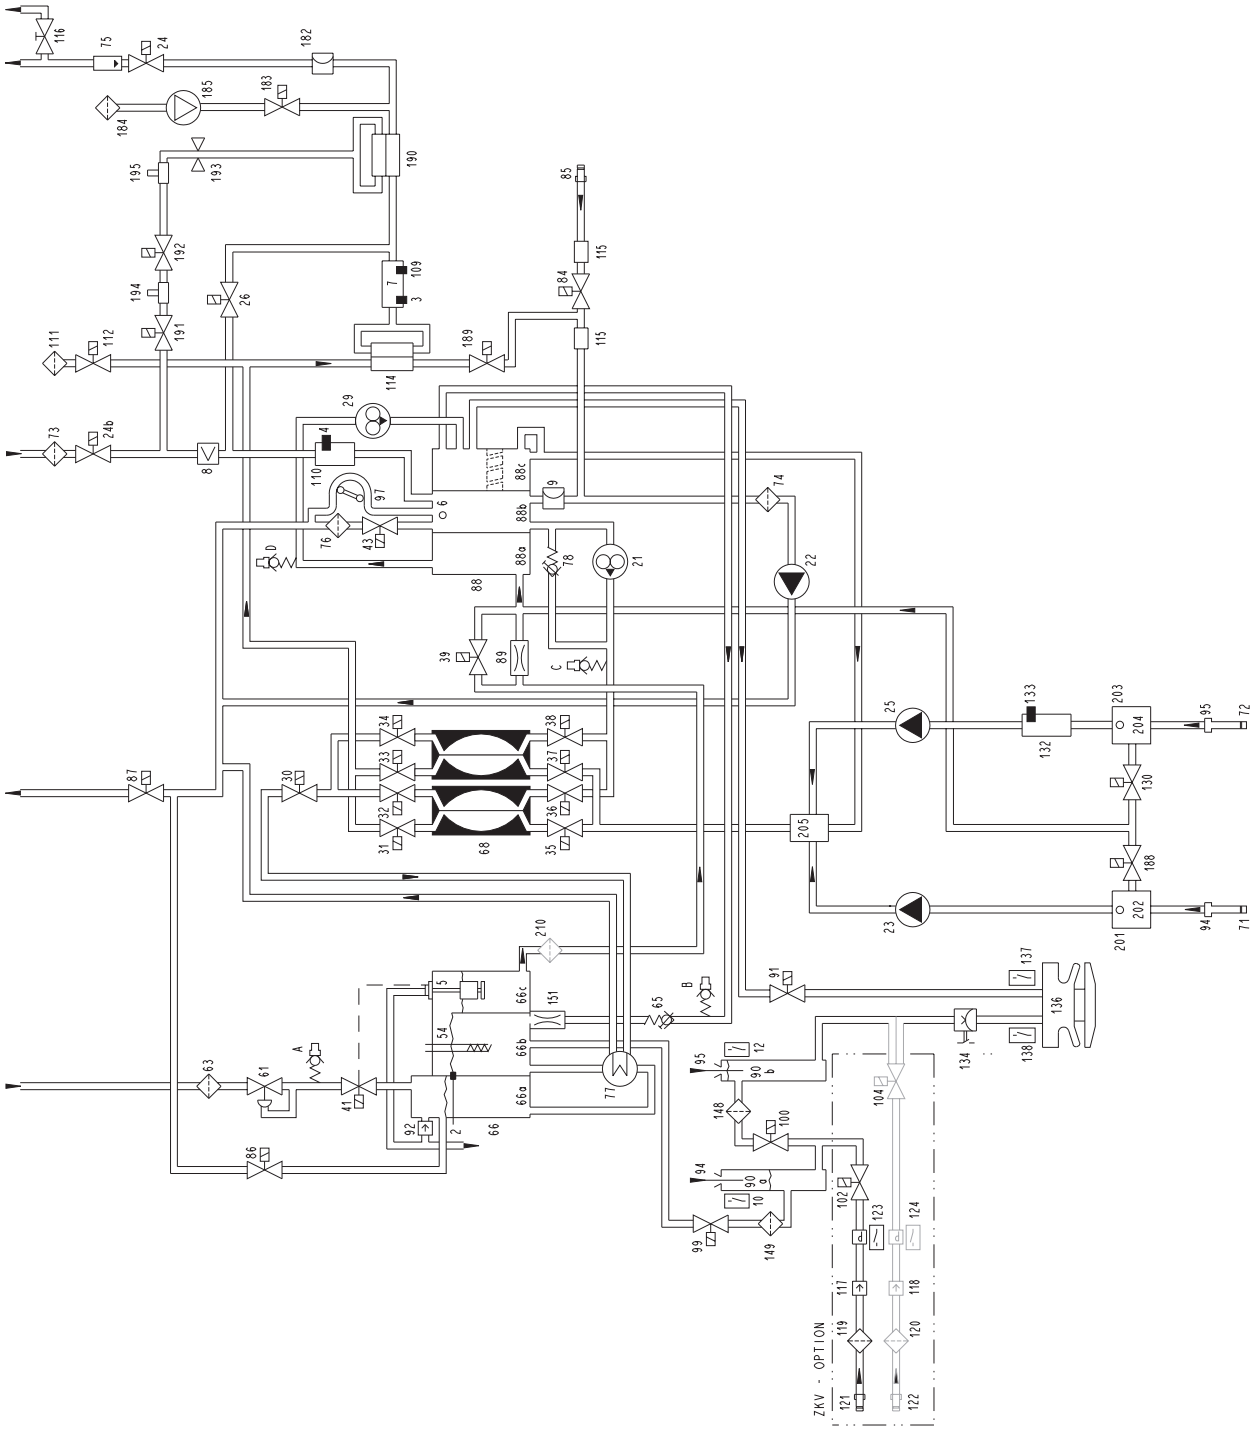

Legend

2 Temperature sensor
3 Temperature sensor
4 Temperature sensor (OCM option)
5 Float switch
6 Level sensor
7 Conductivity cell
8 Blood leak detector
9 Pressure transducer
10 Reed contact for concentrate
12 Reed contact for bicarbonate
21 Flow pump
22 UF pump
23 Concentrate pump
24 Dialyzer valve 1
24b Dialyzer valve 2
25 Bicarbonate pump
26 Bypass valve
29 Degassing pump
30 Outlet valve
31 Balancing chamber valve 1
32 Balancing chamber valve 2
33 Balancing chamber valve 3
34 Balancing chamber valve 4
35 Balancing chamber valve 5
36 Balancing chamber valve 6
37 Balancing chamber valve 7
38 Balancing chamber valve 8
39 Negative pressure valve
41 Water inlet valve
43 Fill valve
54 Heater rod
61 Pressure reduction valve
63 Filter/water inlet
65 Loading pressure valve
66 Heater block
66a Water inflow chamber
66b Heater rod chamber
66c Float switch chamber
68 Balancing chamber
71 Filter/concentrate
72 Filter/bicarbonate
73 Filter/dialysate
74 Filter/UF
75 External flow indicator
76 Filter/fill valve
77 Heat exchanger
78 Relief valve
84 Disinfection valve
85 Disinfection connector
86 Recirculation valve
87 Drain valve
88 Multifunction block
88a Degassing chamber
88b Secondary air separator
88c Primary air separator
89 Degassing orifice
90a Concentrate rinse chamber
90b Bicarbonate rinse chamber
91 Rinse valve
92 Vent valve
94 Concentrate suction tube
95 Bicarbonate suction tube
97 Air separating pump
98 Rinse valve
99 Rinse valve
100 Rinse valve
102 CDS, concentrate valve
104 CDS, bicarbonate valve
109 Temperature sensor
110 Conductivity cell (OCM option)
111 Hydrophobic filter (advanced hydraulics)
112 Vent valve (advanced hydraulics)
114 Dialysate filter
115 Disinfection valve sensor
116 Fluid sample valve
117 Check valve (concentrate)
118 Check valve (bicarbonate)
119 Filter (concentrate)
120 Filter (bicarbonate)
121 CDS, concentrate connector
122 CDS, bicarbonate connector
123 Pressure switch for V102
124 Pressure switch for V104
125 Temperature compensation plate
130 Bibag drain valve
132 Bibag conductivity cell
133 Bibag temperature sensor
134 Bibag pressure transducer
136 Bibag connector
137 Bibag microswitch 1
138 Bibag microswitch 2
148 Filter (rinse valve 100)
149 Filter (rinse valve 99)
151 Orifice
182 Pressure transducer 2 (advanced hydraulics)
183 Test valve (advanced hydraulics)
184 Hydrophobic filter
185 Compressor (advanced hydraulics)
188 Evacuation valve
189 Retentate valve
190 Online filter (Online plus option)
191 Online 3 valve (Online plus option)
192 Online 2 valve (Online plus option)
193 Online 1 valve (Online plus option)
194 Rinse port (Online plus option)
195 Substituate port (Online plus option)
201 Concentrate air separator
202 Concentrate level sensor
203 Bicarbonate air separator
204 Bicarbonate level sensor
205 Concentrate / bicarbonate mixing point
210 Filter

Hydraulics measuring points

A Reduced water inlet pressure
B Loading pressure
C Pressure of flow pump
D Pressure of degassing pump

1.3.1 Description of the hydraulic unit

As soon as the inlet valve (41) opens, the water flows through the pressure reducing valve (61) into the chamber (66a) of the heater block and across the heat exchanger (77) into the heater rod chamber (66b).

The concentrate pump (23) admixes concentrate to the inflowing water per balancing chamber phase.

The vent tubing prevents pressure from building up in chambers b and c. In the hot rinse mode, the developing vapor can escape through the vent tubing.

While it is rising, the fluid is warmed up to the preset temperature by the heater (54). The heater is controlled by the temperature sensor (2).

From chamber b, the dialysate flows into the chamber (66c). Incorporated in this chamber is a float switch (5), which controls the solenoid valve (41), thus ensuring the correct fluid level.

The degassing pump (29) draws in the dialysate via the degassing orifice (89). This generates a negative pressure of approx. 0.8 bar.

In the lines and the following chamber (88a), the dialysate is degassed to a level which is sufficient for hemodialysis.

Via the degassing pump (29), dialysate and released air are directed tangentially into the primary air separator (88c), where air bubbles and the airless dialysate are separated. The air accumulates at the top of the chamber (88c). Then, together with the recirculation flow and via the loading pressure valve (65) as well as the chamber (66c), the air escapes into the atmosphere.

Chamber 88c is provided with a separating disc (standard hydraulics only), which serves to prevent bicarbonate, if added, from being recirculated via the heater rod chamber (66b).

At the bottom of chamber 88c, the degassed dialysate is pressed out and into the balancing chamber (68) by means of the loading pressure.

Together with the eight solenoid valves (31 to 38), the balancing chamber (68) constitutes the balancing system. Each of the two sections of the balancing chamber comprises two compartments separated by an elastic membrane each. Hence, there are two chambers with four spaces:
– **F1** and **F2**: fresh fluid
– **A1** and **A2**: waste fluid (used)

As soon as one of the chambers (A1 or A2) is filled with dialysate, the solenoid valves are reversed in groups of four. The valves are reversed by the electronic evaluation of the current rise pulse of the drive motor of the pump (21), which receives this pulse upon membrane abutment. Within the filling phase, F1 or F2 is filled with fresh dialysate by means of the loading pressure. In order to obtain a continuous flow, a second chamber is switched parallel to the first chamber. The second chamber is operated at an inverse sequence.

Each time the chamber is changed over (maximum deflection of the membrane), all valves are closed for approx. 100 ms (dead time).

From the balancing chamber, the dialysate flows through the conductivity cell (7) with integrated temperature sensor (3). The measured conductivity values are indicated on the monitor in ms/cm, related to 25 °C.

The temperature sensor (3) has the following functions:
– temperature compensation of the conductivity display,
– indication of the dialysate temperature.

Should the actual values (temperature or conductivity) of the dialysate exceed or fall below the limit settings, the bypass valve (26) opens, and the dialyzer valve (24) is closed. The system is now in the bypass mode. The dialysate is discharged into the drain not via the dialyzer, but via the secondary air separator (88b) and the balancing chamber (68).

If the actual conductivity and temperature values of the dialysate are within the set limits, the dialyzer valve (24) opens. The valve (26) is closed. The dialysate flows to the dialyzer.

After the dialyzer, the dialysate which is now loaded with the substances usually eliminated with the urine flows into the secondary air separator (88b) via a filter (73), the valve (24b) and the blood leak detector (8). The secondary air separator (88b) comprises the pressure transducer (9) and the level sensor (6).

With a hematocrit of 0.25, blood losses of 0.5 ml per minute are recognized in the dialysate by the blood leak detector.

Together with the venous back pressure, the signal of the pressure transducer (9) is evaluated and indicated on the monitor as TMP. The fluid level in the secondary air separator (88b) is monitored by the level sensor (6). Due to the secondary air separator (88b), only airless dialysate is always delivered into the balancing chamber (68). Any presence of air bubbles in the balancing chamber (68) would cause balancing errors.

The dialysate is pressed into the balancing chamber (68) by the flow pump (21). As mentioned above, the balancing chamber valves are reversed by the current rise pulses of the drive motor of the flow pump. Using the speed of this pump, the dialysate flow can be adjusted in the dialysis program: 300, 500, and 800 ml/min. In the cleaning programs, the flow of the dialysate is fixed.

The relief valve (78) is used to limit the pressure of the flow pump before the balancing chamber to approx. 2 bar.

After the balancing chamber, the dialysate flows through the valve (30), the heat exchanger (77) and the valve (87) into the drain.

The valves (86) and (87) serve to recirculate fluid during the hot rinsing and disinfection programs.

1.3.2 Theory of operation of the balancing chamber

- **(Standard program)**

1st cycle:

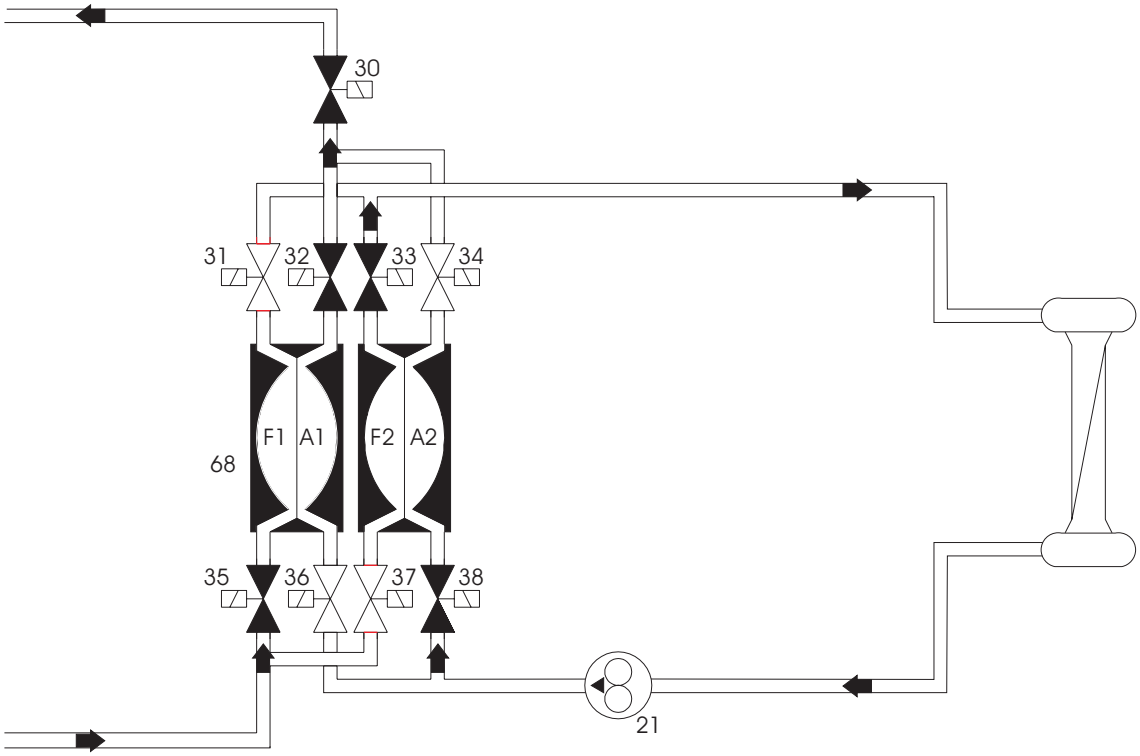

2nd cycle:

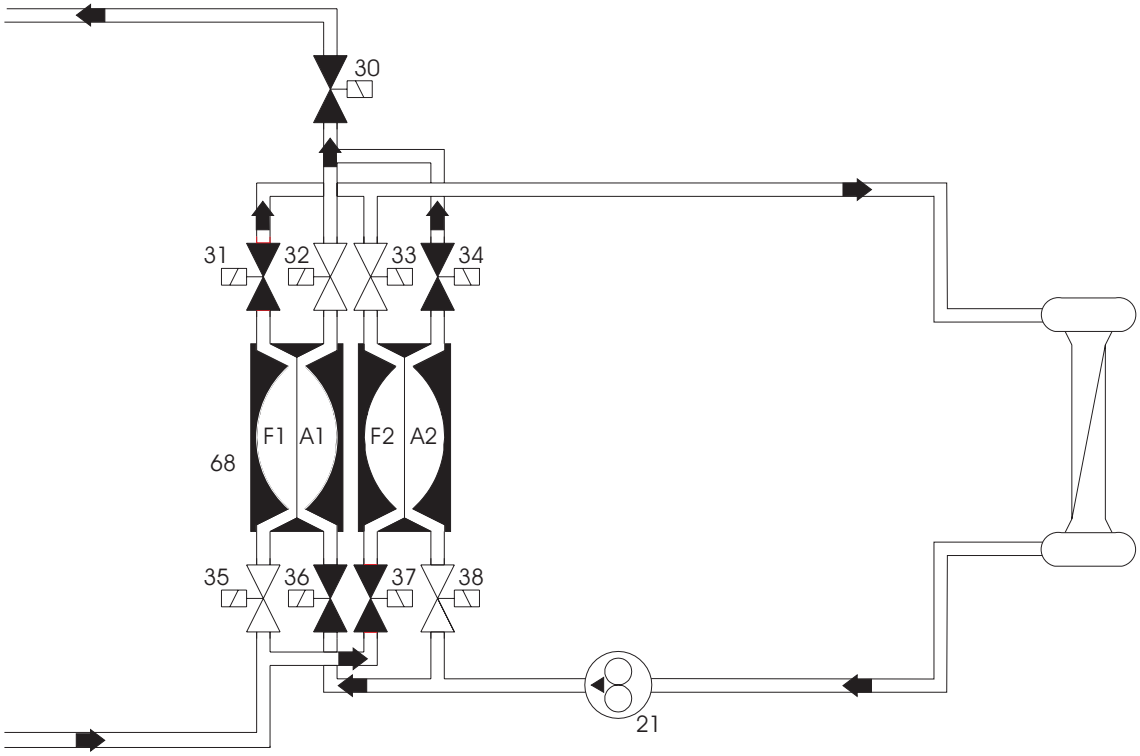

1st cycle: Closed valves: 31, 34, 36, and 37
F1 is filled with fresh dialysate.
A1 used dialysate is discharged into the drain.
F2 fresh dialysate is forced into the dialyzer.
A2 is filled with used dialysate.

2nd cycle: Closed valves: 32, 33, 35, and 38
F1 fresh solution is forced into the dialyzer.
A1 is filled with used dialysate.
F2 is filled with fresh dialysate.
A2 used dialysate is discharged into the drain.

This system ensures that equal amounts of fluid enter and exit the dialyzer. This leads to an exact balancing of the dialysate and, in conjunction with the ultrafiltration pump (22), a controlled volumetric ultrafiltration.

- **Secondary air purging by the air separation pump 97**

As soon as the fluid level in the secondary air separator (88b) has dropped below the level sensor (6), this sensor activates the air separation pump (97). Should the fluid level not have reached the level sensor (6) within a given time period, the FILL PROGRAM is started.

Note
In order to recognize the fluid level, the level sensor (6) requires fluid with a certain minimum conductivity, which is definitely achieved in all dialysis programs. Separation of air is only required in the dialysis programs. In all other programs, the air separation pump (97) and the valve (43) are force-actuated.

- **FILL PROGRAM: air separation by valve 43 at atmospheric pressure**

1st cycle:

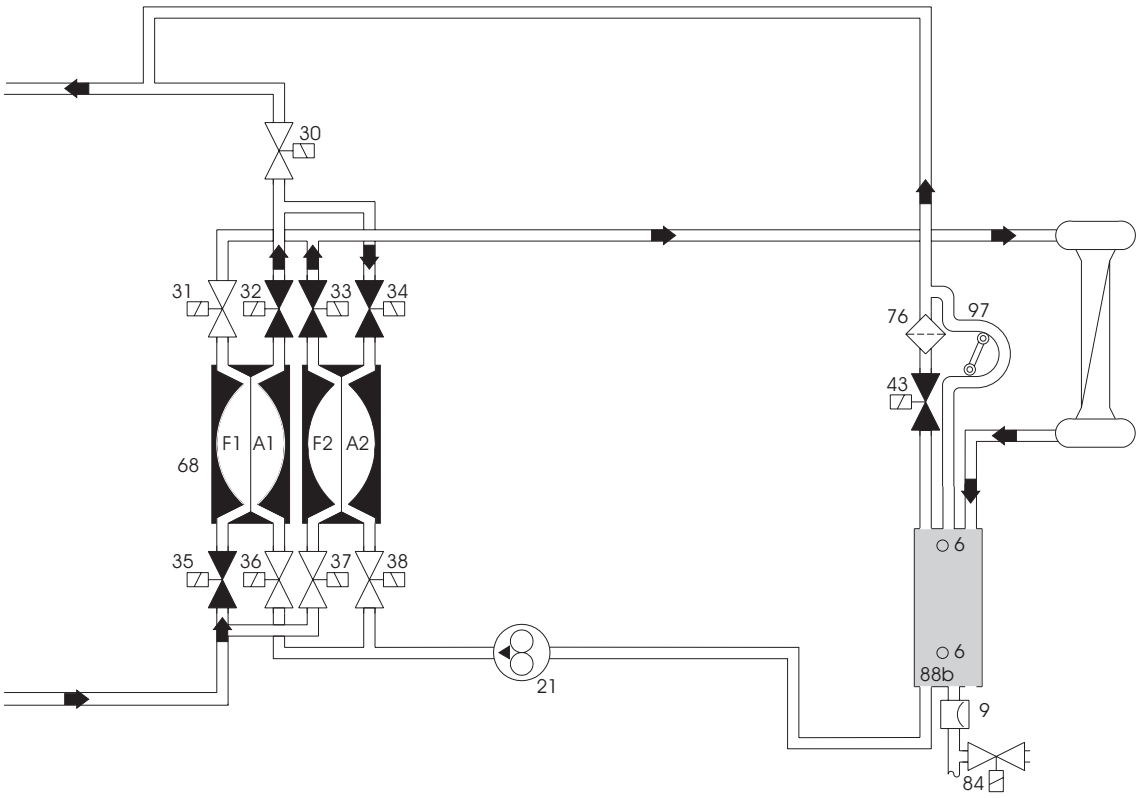

2nd cycle:

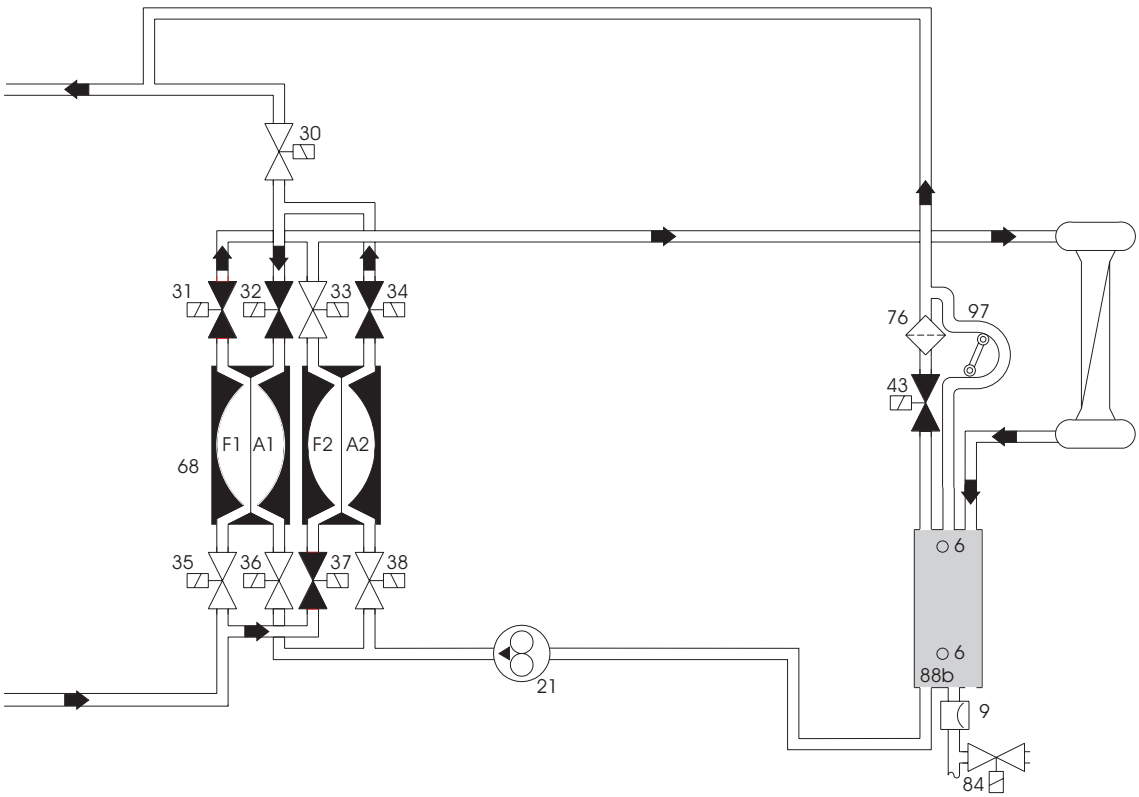

If not enough air was separated and the fluid level is still below the level sensor (6), the FILL PROGRAM is activated.

The pump (21) fills either chamber A1 or chamber A2. Valves (36), (38), and (30) are closed. The valve (43) opens. The air can escape into the drain.

1st cycle: Chamber F1 is filled. This forces the fluid from chamber A1 into chamber A2. The fluid is then forced into the seconary air separator (88b) by chamber A2 via the dialyzer.

2nd cycle: Chamber F2 is filled. This forces the fluid from chamber A2 into chamber A1. The fluid is then forced into the secondary air separator (88b) by chamber A1 via the dialyzer.

Filling is performed in this way to prevent a change in conductivity. As is the case in the standard program, here as well one stroke of the concentrate pump is still accomplished per balancing chamber cycle (30 ml).

A fill program is always activated at the beginning of hemodialysis (to fill the dialyzer). Should it be activated during the hemodialysis procedure (OD dark), this is shown on the display.

Note
Repeated activation of the fill program during treatment indicates a defect (leakages).

1.3.3 Central delivery system option

The central delivery system is connected to the connectors 121/122. The concentrate flows into the rinse chambers via the inlet filters and the valves 102/104. Through the connected concentrate suction tubes, the concentrate pumps deliver the concentrate to the mixing point.

During hemodialysis, the valves 91/99 and 100 are closed. Depending on the central delivery system, V102 and/or V104 are open.

During the cleaning programs, the valves 102 and 104 are closed. During the suction phase of concentrate pump and bicarbonate pump, the valves 91 and 99 open for 500 ms upon each balancing chamber changeover. Valve 100 is open.

In order to check the tightness of the valves 102 and 104, the pressure switch is tested during the rinse-clear phase with following disinfection or hot disinfection or a mandatory rinse. To perform this test, pressure is applied to the two lines between the check valves 117/118 and the valves 102/104. The pressure switches P123 and P124 are used to monitor the pressure. Three minutes before the mandatory rinse program is completed, a functional check of the valves 91/99 and 100 is performed.

1.3.4 Program sequences during the cleaning programs

Fig.: Flow chart of cleaning programs – overview

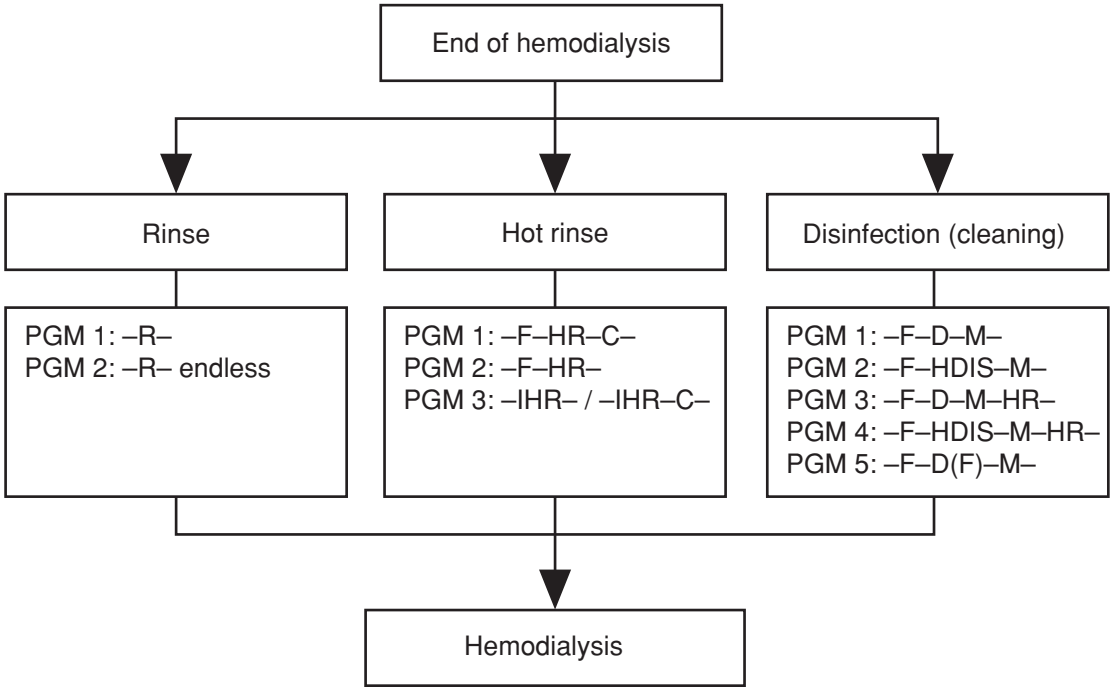

- **Explanation of the abbreviations used**

PGM	Program
R	Rinse
R endless	Endless rinse
F	Rinsing clear
HR	Hot rinsing
C	Cooling rinse
D	Disinfection
D(F)	Disinfection Disinfectant drawn in from the front (concentrate suction tube).
HDIS	Hot disinfection
M	Mandatory rinse
IHR	Integrated hot rinsing

- **Notes on program runs**

  At the end of the set program, the rinse chamber is evacuated for approx. 1 min.

  Any statements on time refer to the factory setting. Shorter or longer program times can be set at any time by means of the SETUP menu (see Technical Manual, chapter 6).

- **Rinse**

PGM 1: –R–

PGM 2: –R– endless

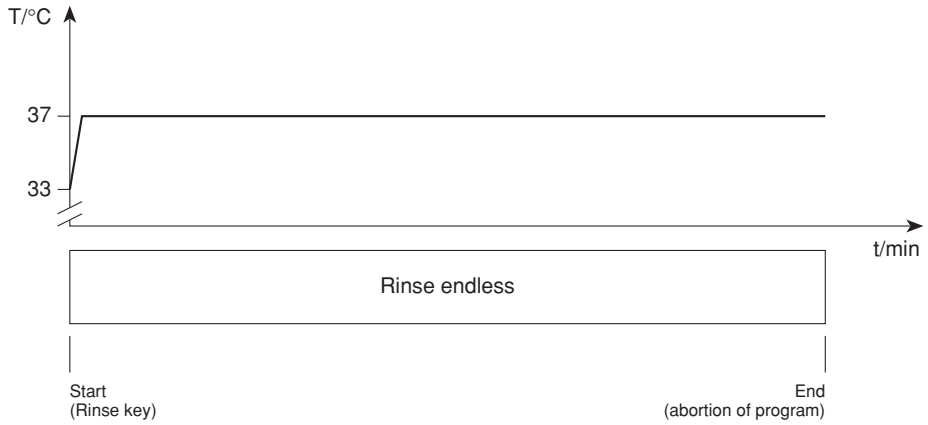

- **Hot rinsing**

PGM 1: –F–HR–C–

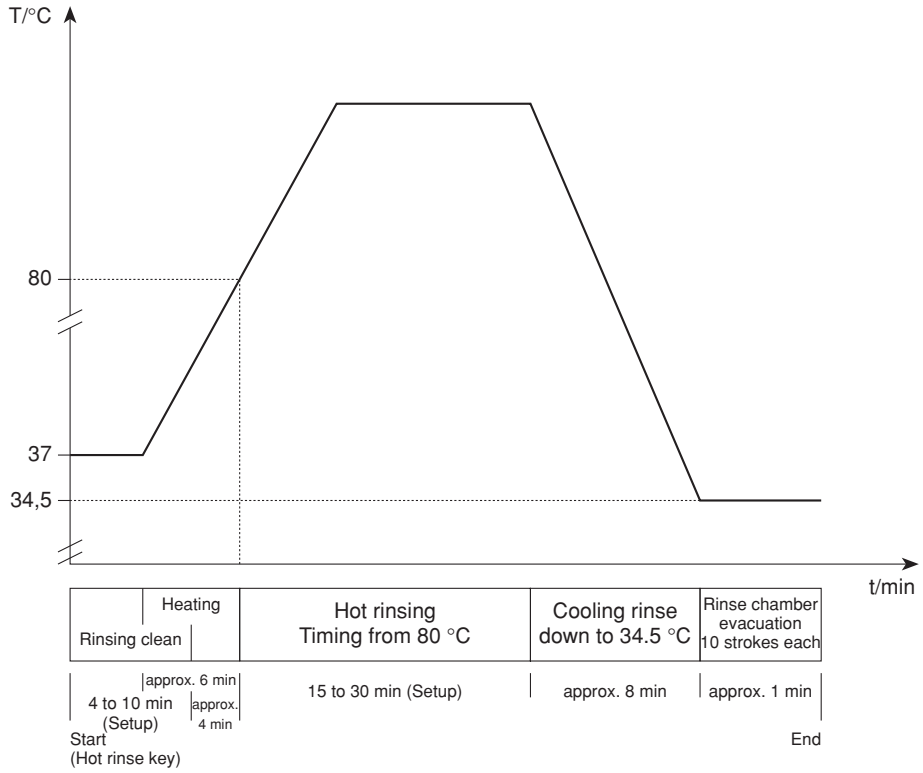

PGM 2: –F–HR–

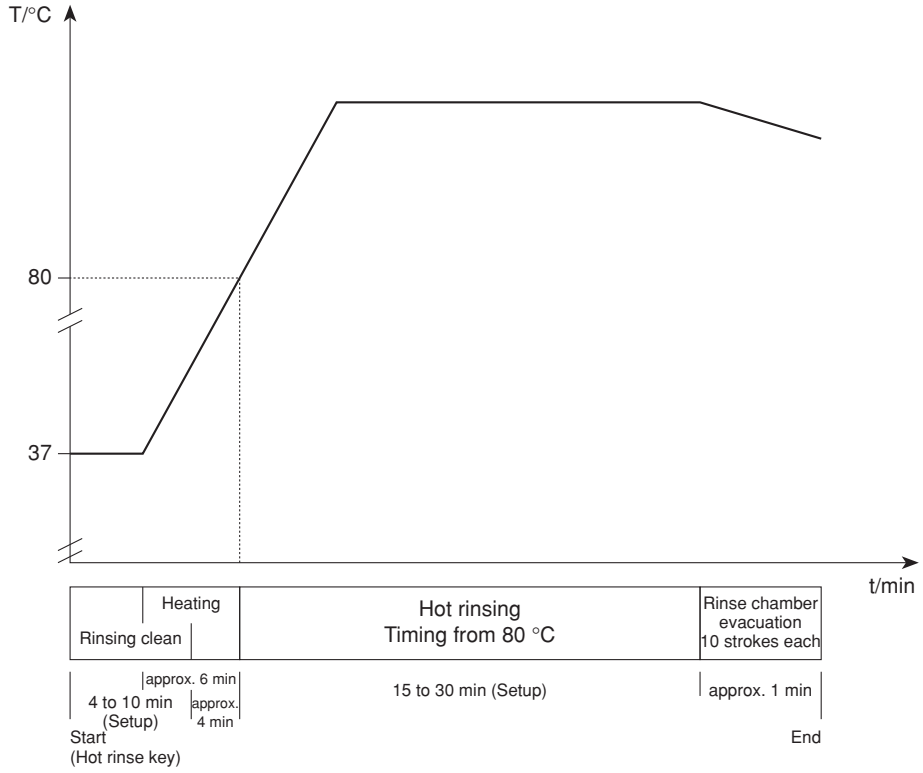

PGM 3: –IHR–

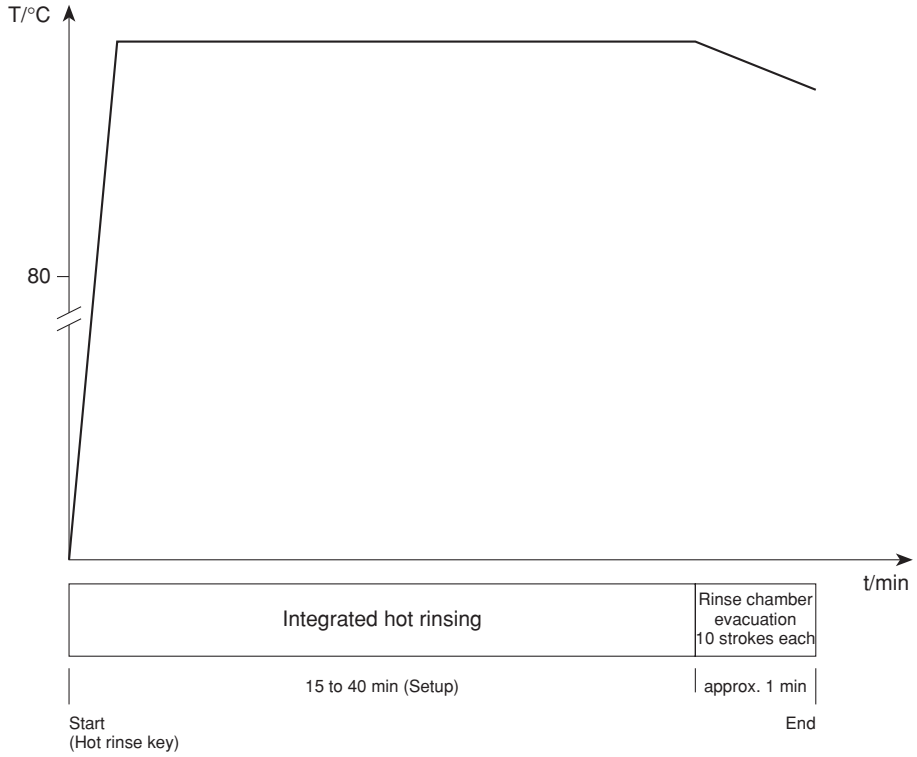

PGM 3: –IHR–C–

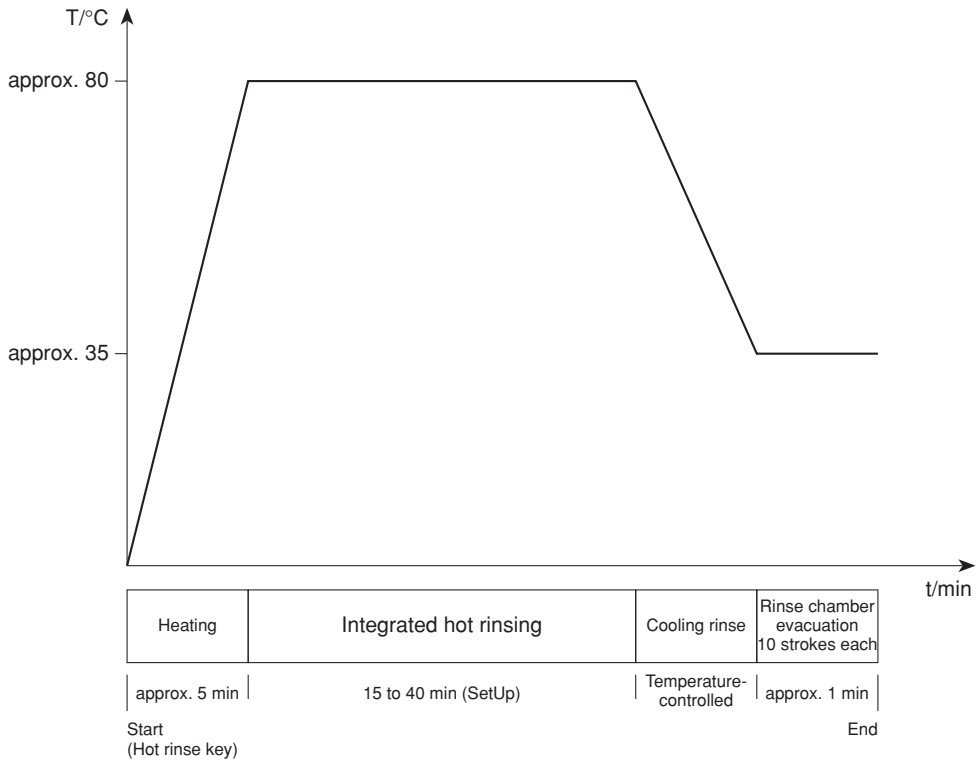

- **Disinfection**

PGM 1: –F–D–M–

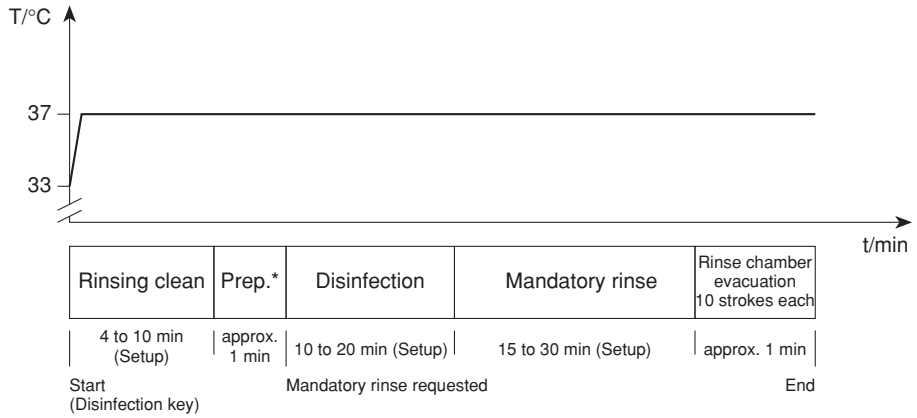

*Prep.: preparation phase:
Heater off
Set the level of the float switch chamber below the lower switching point of the float switch by
1 balancing chamber changeover and
4 UF pump strokes.
Aspiration of disinfectant for 50 UF-pump strokes.

PGM 2: –F–HDIS–M–

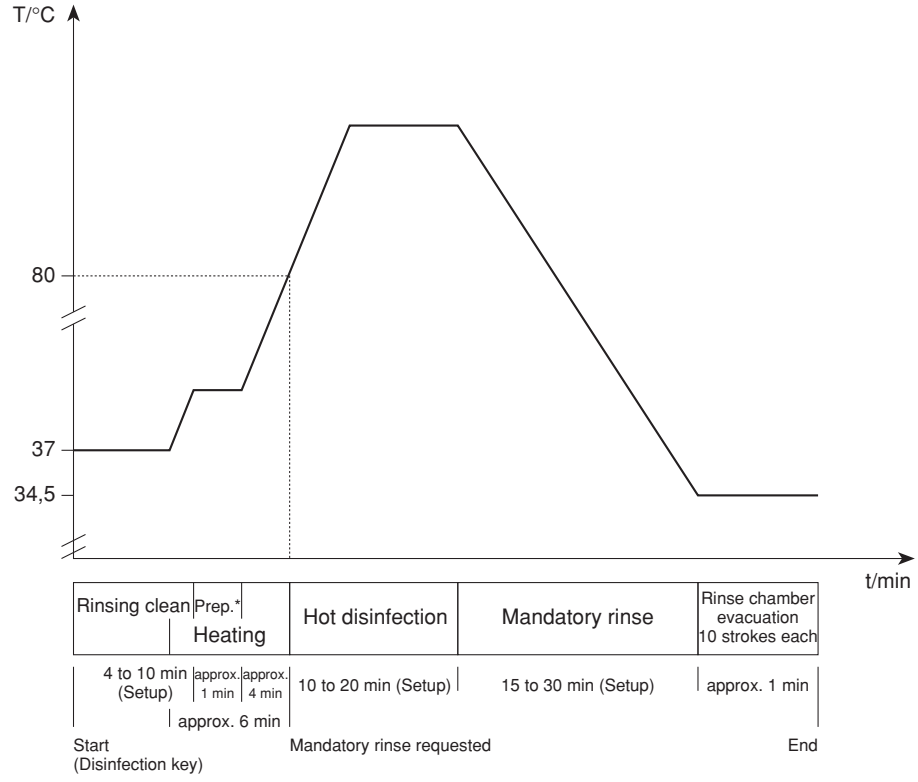

*Prep.: preparation phase:
Heater off
Set the level of the float switch chamber below the lower switching point of the float switch by
1 balancing chamber changeover and
4 UF pump strokes.
Aspiration of disinfectant for 50 UF-pump strokes.

PGM 3: –F–D–M–HR

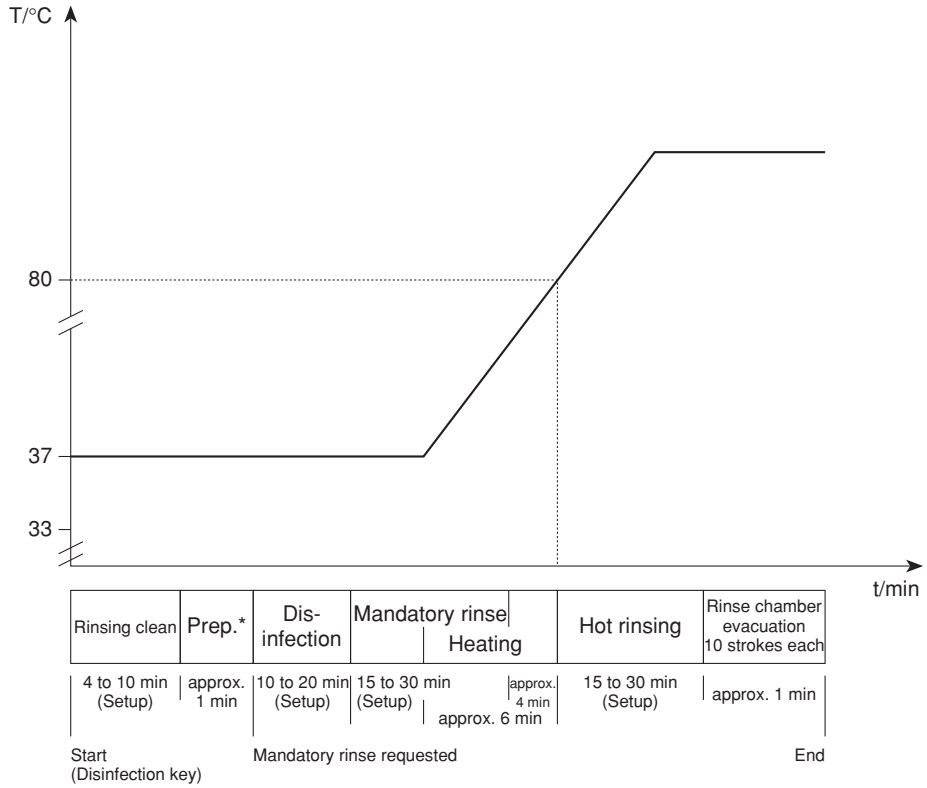

*Prep.: preparation phase:
Heater off
Set the level of the float switch chamber below the lower switching point of the float switch by
1 balancing chamber changeover and
4 UF pump strokes.
Aspiration of disinfectant for 50 UF-pump strokes.

PGM 4: –F–HDIS–M–HR–

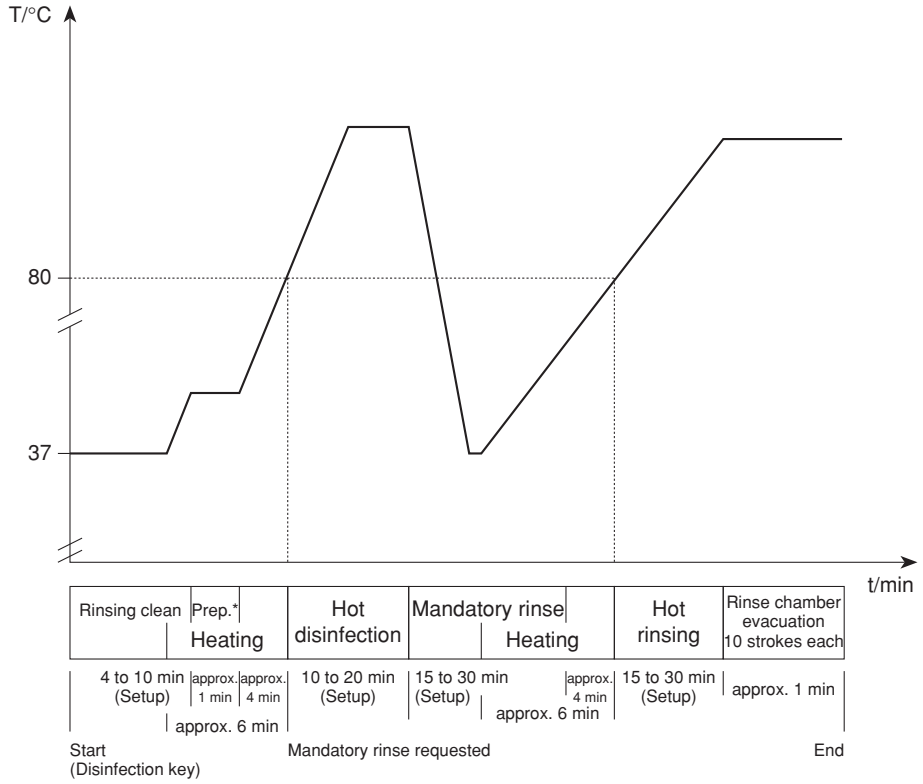

*Prep.: preparation phase:
Heater off
Set the level of the float switch chamber below the lower switching point of the float switch by
1 balancing chamber changeover and
4 UF pump strokes.
Aspiration of disinfectant for 50 UF-pump strokes.

PGM 5: –F–D(F)–M–

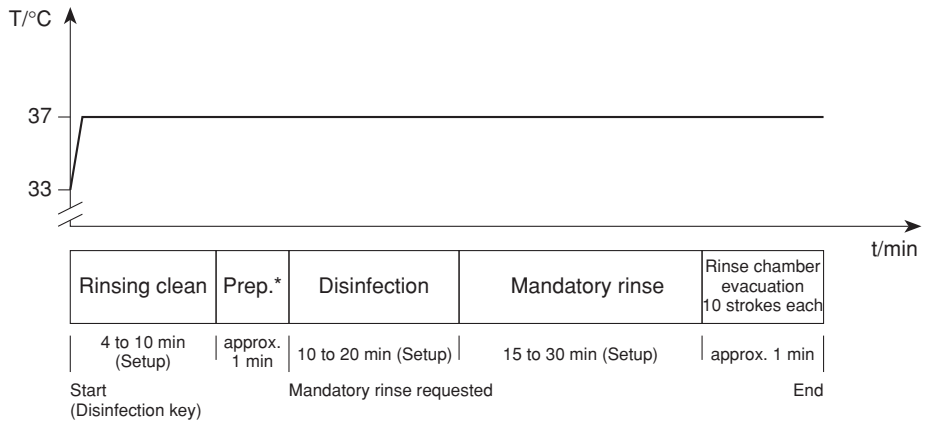

*Prep.: preparation phase:
Heater off
Set the level of the float switch chamber below the lower switching point of the float switch by
23 UF pump strokes.
Aspiration of disinfectant for
32 concentrate pump strokes à 330 steps.

Table of Contents
2 Technical Safety Checks / Maintenance

Section		Page
2.1	**Technical Safety Checks and Maintenance for 4008 hemodialysis systems and options**	2-3
2.1.1	Important notes	2-3
2.1.2	Description – Technical Safety Checks and Maintenance	2-5
2.1.3	Report – Technical Safety Checks and Maintenance	2-16
2.1.4	Notes – Check of the electrical safety	2-21
2.2	**TSC report**	2-25

2.1 Technical Safety Checks and Maintenance for 4008 hemodialysis systems and options

2.1.1 Important notes

This chapter lists all necessary Technical Safety Checks **(TSC)** and Maintenance procedures **(MA)**.

These checks must be performed every **24 months** if all of the following requirements have been met:
- Unique assignment of the rotors to the appropriate line roller pumps
- Software:
  4008 E/B systems: from 4.951 to < 5.00 or with 5.201 or higher
  4008 H/S systems: from 2.951 to < 3.00 or with 4.311 or higher
- DIP switch P.C.B. LP 632 array 2 SW 5 set to OFF.
- DIP switch P.C.B. LP 631 array 2 SW 7 set to ON.
- DIP switch P.C.B. LP 631 array 2 SW 8 set to ON. (With CDS option only)
- Heater rod made of Titanium

If one of the requirements mentioned above has not been met, the checks have to be performed every **12 months**.

Performance of the Technical Safety Checks must be recorded in the Medical Device Register.

Please refer to page 2-5 to page 2-14 for the description of the Technical Safety Checks and Maintenance.

Please refer to the pages 2-29 and 2-30 for the report for the Technical Safety Checks and Maintenance. Numbers not listed are not part of the TSC. These are part of the Maintenance procedures (MA).

Instructions to be observed when servicing the system

Assembly, extensions, adjustments, modifications or repairs may only be carried out by the manufacturer or persons authorized by him.

The activities described in the Technical Manual require the availability of the necessary technical test equipment and accessories.

When working on the open system, the following precautions must be respected:
- Protect the components against ingress of fluids.
- Do not touch live parts (e. g. connectors of the power cable or heater).

When repairing and when replacing spare parts, observe the applicable ESD precautions (e.g. EN 100 015-1).

2.1.2 Description – Technical Safety Checks and Maintenance

These checks must be performed every **24 months** if all of the following requirements have been met: ❏ Unique assignment of the rotors to the appropriate line roller pumps ❏ Software: 4008 E/B systems: from 4.951 to < 5.00 or with 5.201 or higher 4008 H/S systems: from 2.951 to < 3.00 or with 4.311 or higher ❏ DIP switch P.C.B. LP 632 array 2 SW 5 set to OFF. ❏ DIP switch P.C.B. LP 631 array 2 SW 7 set to ON. ❏ DIP switch P.C.B. LP 631 array 2 SW 8 set to ON. (With CDS option only) ❏ Heater rod made of Titanium If one of the requirements mentioned above has not been met, the checks have to be performed every **12 months**.	**Interval:** ❏ 24 months ❏ 12 months (please check)

These inspections must be carried out by persons who are qualified to properly perform the specified Technical Safety Checks owing to their educational background and training, their knowledge and experience gained in practice and who are not subject to any directions with regard to this inspection activity.

TSC	MA	No.	Description	Expected value / function
		1	**Visual inspections**	
TSC		1.1	Fuses accessible from the outside	Must comply with the maximum permissible values.
TSC		1.2	Labels and identification	Must be present and legible.
TSC		1.3	Mechanical condition	Must permit further safe use.
TSC		1.4	Damage and contaminations	There must not be any detectable damage or contamination.
TSC		1.4.1	Rotors of the line roller pumps 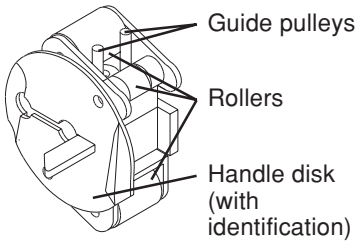 	The rotors show no signs of damage. Check the rotors of the line roller pumps. – Rotors installed in the proper location and identification present. – Handle disks tight and undamaged. – Check the rollers for smooth running. – No mechanical damage on the guide pulleys an other parts of the rotors (see drawing) Damaged rotors must be replaced by new ones.
TSC		1.5	Power cable	Must not be damaged.

TSC	MA	No.	Description	Expected value / function
	MA	1.6	Preventive Maintenance procedures	
	MA	1.6.1	Replace the sealing in the concentrate/bicarbonate suction tubes and lubricate with silicone paste. Replace the rivet in the suction tubes, if necessary.	
	MA	1.6.2	Check the rubber in the rinse chambers for proper function.	
	MA	1.6.3	Replace the filters of the suction tubes (71/72).	
	MA	1.6.4	Retighten the rinse chamber (90a/90b) screws.	
	MA	1.6.5	Replace the check valve (92). When using CDS, replace the check valves (117/118) and the filters 119/120.	
	MA	1.6.6	Replace the filter sieves; upstream of the UF pump (filter 74), downstream of MV43 (filter 76), between MV99 and rinse chamber (filter 149), between MV100 and rinse chamber (filter 148).	
	MA	1.6.7	Replace the filter sieve in the dialyzer line; replace the complete filter (73), if necessary.	
	MA	1.6.8	Replace the O-rings in the dialyzer couplings.	
	MA	1.6.9	Check the line in the sampling valve (116) dialysate circuit for proper function, replace the complete valve, if necessary.	
	MA	1.6.10	Clean or replace the fan filter in the monitor.	
	MA	1.6.11	Check the air separation pump (97): replace the belt ribbon and the line segment. Observe direction of delivery.	
	MA	1.6.12	MV 84 must be replaced after 2 years. *Only if Puristeril is used.*	
	MA	1.6.13	Replace the connecting piece or equilibration chamber. *Only for systems in which the* ONLINE*plus*™ *option or the* DIASAFE®*plus option is not used.*	
	MA	1.6.14	Replace filter 210 (if present).	
	MA	1.6.15	Replace the filter of the disinfectant suction tube.	
	MA	1.6.16	Replace worn or dirty tubings.	
		2	**General checks**	
TSC		2.1	Power failure alarm	Dialysis mode; Continuous sound after removing the power plug. Text displayed: **Emergency operation** The extracorporeal blood circuit incl. all monitoring functions is maintained.
TSC		2.2	Check level sensor	Draw in air via the dialysate couplings. The air separation pump is activated. If more air is detected, the system will switch to the fill program, depending on the dialysate flow. Text displayed when the OD senses opaque fluid: **Fillprogram**
TSC		2.3	Check DIP switches	P.C.B. LP 631 (CPU1) DIP switch array 2 SW7 is set to ON. With central delivery system: P.C.B. LP 631 (CPU1) DIP switch array 2 SW8 is set to ON.

TSC	MA	No.	Description	Expected value / function
		3	**Check of the hydraulics**	
			Check all pressures with undamped pressure gauges!	
	MA	3.1	Check the water inlet pressure (reduced) and correct, if necessary.	Connect a pressure gauge before MV41 to measuring point A in the hydraulic unit. With the valve MV41 closed the pressure should range between 0.9 and 1.4 bar.
	MA	3.2	Check the balancing chamber loading pressure and correct, if necessary.	Connect a pressure gauge to the pressure side of the degassing pump (measuring point B in the hydraulic unit). The pressure should be between 1.2 and 1.3 bar. In case of the equipment codes 4008B - EC495 4008H - EC295 4008S - EC275 and higher, the pressure must be 1.45 bar ±0.05 bar.
	MA	3.3	Check the negative degassing pump pressure	Connect a pressure gauge to the suction side of the degassing pump (measuring point D in the hydraulic unit). The negative pressure should be between 0.81 and 0.85 bar.
	MA	3.4	Check the balancing chamber relief pressure at a flow of 800 ml/min (relief valve 78).	Connect a pressure gauge to the pressure side of the flow pump (measuring point C in the hydraulic unit). The relief pressure depends on the loading pressure set (➜ MA 3.2): Loading pressure: Relief pressure: 1.2 to 1.3 bar 1.9 to 2.1 bar 1.45 ± 0.05 bar 2.2 ± 0.05 bar
		4	**Ultrafiltration system and membrane pumps**	
STK		4.1	Check the delivery volume of the UF pump.	In the dialysis mode collect 60 ml of dialysate in an appropriate graduated cylinder. 60 strokes = 60 ml (±0.5 ml). Correct the setting of the UF pump, if necessary.
	WA	4.2	Check the balancing chamber volume.	Collect the volume of two consecutive balancing chamber switchings. The average volume must be 30 ml ±1 ml.
	WA	4.3	Test the concentrate pump volume or compare it with an appropriate reference.	Adjust according to calibration instructions, if necessary.
	WA	4.4	Test the bicarbonate pump volume or compare it with an appropriate reference.	Adjust according to calibration instructions, if necessary.

TSC	MA	No.	Description	Expected value / function
		5	**Dialysis mode**	
	MA	5.1	Temperature	Use a reference meter connected between the dialyzer couplings to verify that the temperature is 37 °C ±0.5 °C. Correct any deviations with the calibration program.
	MA	5.2	Temperature display (not applicable for 4008 B / 4008 S)	The temperature shown on the monitor front panel must be 37 °C ±0.5 °C. Correct any deviations with the calibration program.
	MA	5.3	Verify the dialysate flow 300/500/800 ml/min	Collect fluid on the drain using a measuring cylinder. 800 ml/min (desired value: 765 to 837 ml/min) 500 ml/min (desired value: 471 to 528 ml/min) 300 ml/min (desired value: 279 to 321 ml/min) Adjust according to calibration instructions, if necessary.
	MA	5.4	Dialysate pressure	Perform a TMP test according to the calibration instructions. (part 14 CAL. DIAL. PRESSURE)
TSC		5.5	Verify the conductivity display	When the bi*b*ag® option is used, connect a bi*b*ag®! Measure the conductivity with a reference meter connected between the dialyzer couplings. The conductivity measured must agree with the value on the reference meter. Correct any deviations with the calibration program.

TSC	MA	No.	Description	Expected value / function
		6	**Extracorporeal components**	
	MA	6.1	Arterial pressure transducer	Check the slope of the pressure transducer. After applying a pressure of approx. 200 mmHg to the pressure transducer the value displayed must agree with the reading shown on the external reference meter (tolerance ±10 mmHg). Correct any deviations with the calibration program.
	MA	6.2	Venous pressure transducer	Check the slope of the pressure transducer. After applying a pressure of approx. 300 mmHg to the pressure transducer the value displayed on the system must agree with the reading shown on the external reference meter (tolerance ±10 mmHg). Correct any deviations with the calibration program.
TSC		6.3	Arterial and Single-Needle blood pump rate	Check the blood pump rate (calibration program: BP-Rate CHECK).
TSC		6.4	SN switching points	Check the switching points according to the table in the TM.
TSC		6.5	Check the blood pump stop alarm.	Opening the blood pump door will trigger the blood pump stop alarm after 30 s (factory setting).
TSC TSC		6.6 6.7	Air detector	In the event of a blood alarm, the venous line clamp must close. Generate a pressure of about 2 bar in the venous bubble catcher. Ensure that the pressure does not drop by more than 0.1 bar within 3 minutes. (See chapter 3, Adjustment instructions.)

TSC	MA	No.	Description	Expected value / function
		7	**Options**	
		7.1	bi*b*ag®	
	MA	7.1.1	bi*b*ag® connector	Replace the O-rings.
	MA	7.1.2	PSW 134	Check the switching pressure. The maximum switching pressure is 130 mbar + 30 mbar.
		7.2	DIASAFE	
	MA	7.2.1	DIASAFE filter life	Check the filter life. Filter life: 12 weeks
	MA	7.2.2	Hydrophobic filter 111	Replace the filter.
	MA	7.2.3	O-rings in the dialysate couplings of the DIASAFE	Replace the O-rings.
		7.3	DIASAFE®*plus*	
	MA	7.3.1	DIASAFE®*plus* filter life	Check the filter life. Filter life: 12 weeks
	MA	7.3.2	Hydrophobic filter 111	Replace the filter.
		7.4	4008 HDF	
TSC		7.4.1	Check the delivery rate of the 2nd UF pump.	Collect 60 ml of dialysate in the dialysis mode using an appropriate measuring cylinder. 60 strokes = 60 ml (±0.5 ml) If necessary, correct the value.

TSC	MA	No.	Description	Expected value / function
		7.5	ON-LINE-HDF (and DIASAFE)	
	MA	7.5.1	Filter life of DIASAFE and ON-LINE filter	Check the filter life. Filter life of the DIASAFE: 12 weeks Filter life of ON-LINE filter: 8 weeks or 50 treatments
	MA	7.5.2	Hydrophobic filter 111	Replace the filter.
	MA	7.5.3	O-rings in the dialysate couplings of the DIASAFE	Replace the O-rings.
	MA	7.5.4	HDF pump rotor	Check the rotor for smooth running and wear.
	MA	7.5.5	Fastening strap	Check the fastening strap for Luer-lock.
TSC		7.5.6	Substituate pump (part no. 672 521 1) with DC motor ***or*** Substituate pump (part no. 674 982 1) with stepper motor	Speed 150 ml/min To determine the delivery volume: the volume of fluid delivered must agree with the preset value (±10 %). To check the speed: with the above setting the blood pump rotor must turn at 13.5 rpm. (See Technical Manual ON-LINE-HDF, chapter 3). Check the pump rate (calibration program: BP-Rate CHECK).
TSC		7.5.7	Substituate pump stop	Stop the substituate pump by – triggering a blood alarm, – triggering the bypass function, – opening the blood pump door.
TSC		7.5.8	Substituate pump function – Rinse – Hot rinse – Disinfection	 Start the rinse program; the pump will deliver at 400 ml/min. Start the hot rinse program; the pump will deliver at 150 ml/min. Start the disinfection program; the pump will deliver at 400 ml/min.

TSC	MA	No.	Description	Expected value / function
		7.6	ONLINE*plus*™ (and DIASAFE®*plus*)	
	MA	7.6.1	Filter life of DIASAFE®*plus* and ONLINE*plus*™ filter	Check the filter life. Filter life of DIASAFE®*plus* and ONLINE*plus*™ filter: 12 weeks or 100 treatments
	MA	7.6.2	Hydrophobic filters 111 and 184	Replace the filters.
	MA	7.6.3	Substituate port (195) and rinse port (194)	Replace the O-rings.
TSC		7.6.4	Line pinch valve 193 (ONL1)	Replace the line.
TSC		7.6.5	Check DIP switch	With HPU (hydraulic processing unit) P.C.B. LP 632 (CPU2) DIP switch array 2 switch 5 is set to OFF.
		7.7	OCM	
	MA		Perform OCM PULSE calibration.	

TSC	MA	No.	Description	Expected value / function
		7.8	BPM 4008	
	MA	7.8.1	Labels and indications	Must be present and clearly legible. Check of the actual condition.
	MA	7.8.2	Mechanical condition	Must permit further safe use.
	MA MA MA	7.8.2.1 7.8.2.2 7.8.2.3	Check whether the line connector is correctly attached to the system. Check whether the internal blood pressure module, the printed circuit boards and all cable connections are correctly fixed. Replace damaged lines or cuffs.	
	MA	7.8.2.4	Indicating elements	Visual and audible functional checks after turn-on. (See Operating Instructions BPM 4008, chapter 2.2)
	MA	7.8.2.5	Touch panel	Check whether the touch panel is functioning correctly.
TSC		7.8.3	Leakage test	Perform the leakage test with cuff and pressure line connected. The pressure leakage rate must be less than 6 mmHg/min. (See Technical Manual BPM 4008, chapter 3.1)
TSC		7.8.4	Calibration	Calibration: Pressure values: Tolerance: 250 mmHg ±5 mmHg 200 mmHg ±4 mmHg 150 mmHg ±3 mmHg 100 mmHg ±3 mmHg 50 mmHg ±3 mmHg (See Technical Manual BPM 4008, chapter 3.2)
TSC		7.8.5	Safety valve	Check the safety valve. The system must be discharged at 320 mmHg ± 10 mmHg. (See Technical Manual BPM 4008, chapter 3.3)
TSC		7.8.6	Measuring of blood pressure	Measure the blood pressure in the manual mode. Check the results for plausibility.
		7.9	BTM 4008	
			No further Technical Safety Checks and Maintenance procedures must be performed.	
		7.10	BVM 4008	
			No further Technical Safety Checks and Maintenance procedures must be performed.	

TSC	MA	No.	Description	Expected value / function
		8	**Check of the electrical safety** In Germany according to DIN VDE 0751 standard – 1st edition 10/2001. In other countries, observe the local regulations!	
			For measuring points, see 2.1.4 Notes – Check of the electrical safety.	
TSC		8.1	Visual inspections performed	see item 1 Visual inspections
TSC		8.2	Protective earth resistance	Max. 0.3 Ω (with power cable)
TSC		8.3	Measurement of the leakage current (device leakage current) Differential current measurement according to fig. C.6 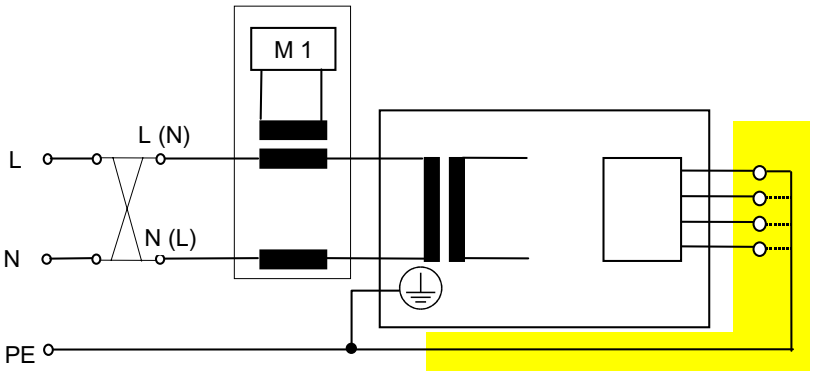 ***or*** Direct measurement according to fig. C.5 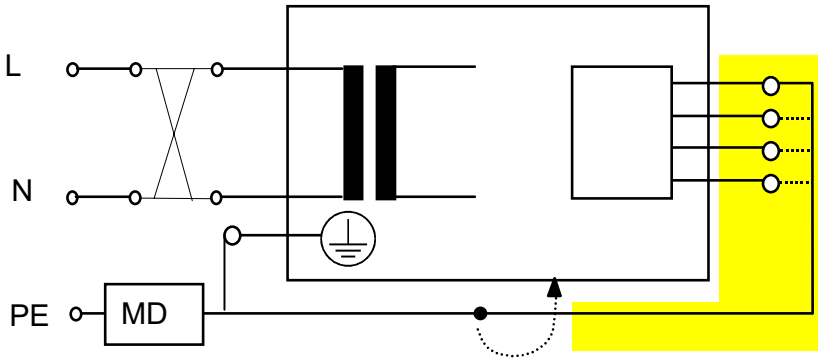 Basic conditions: – Measurement of the protective earth resistance has been completed. – Perform the measurement with the system being at operating temperature in the Dialysis or Preparation operation mode. – Dialysate: Dialysis temperature ≥ 37°C Dialysate flow ≥ 300 ml/min Conductivity ≥ 13 mS/cm – When performing a direct measurement, the following precautions must be observed: The system must be installed under insulated conditions. All external connections must have been removed from the system.	

TSC	MA	No.	Description	Expected value / function
			Documentation covers the line voltage during the measurement and the maximum device leakage current of both mains polarities scaled to the line voltage of the power supply. Maximum device leakage current: 500 µA Example: Line voltage during measurement: 225 V Device leakage current for mains polarity 1: 180 µA for mains polarity 2: 120 µA Maximum value of both mains polarities: 180 µA Nominal voltage of the power supply: 230 V Scaled to nominal voltage: 184 µA (180 µA : 225 V • 230 V = 184 µA) Device leakage current < 500 µA: OK Additional conditions: If the device leakage current is higher than 90 % of the admissible alarm limit (450 µA), the last measured value or the first measured value must additionally be considered for the rating. If the device leakage current considerably increased since the last measurement or continuously increased since the first measurement (creeping deterioration of the insulation), or if the sum composed of the current value plus the difference since the last measurement is > 500 µA, the measurement has not been passed. Example 1: Leakage current: 470 µA Last measured value: 450 µA 470 + (470 – 450) = 470 + 20 = 490 ➜ OK Example 2: Leakage current: 470 µA Last measured value: 390 µA 470 + (470 – 390) = 470 + 80 = 550 ➜ not passed	
		9	**Functional check**	
TSC		9.1	Perform the functional test	Press the Test key. The system must successfully pass the T1 test.
	MA	9.2	Hot rinse / disinfection	Run a disinfection program.

2.1.3 Report – Technical Safety Checks and Maintenance

These checks must be performed every **24 months** if all of the following requirements have been met: ❑ Unique assignment of the rotors to the appropriate line roller pumps ❑ Software: 4008 E/B systems: from 4.951 to < 5.00 or with 5.201 or higher 4008 H/S systems: from 2.951 to < 3.00 or with 4.311 or higher ❑ DIP switch P.C.B. LP 632 array 2 SW 5 set to OFF. ❑ DIP switch P.C.B. LP 631 array 2 SW 7 set to ON. ❑ DIP switch P.C.B. LP 631 array 2 SW 8 set to ON. (With CDS option only) ❑ Heater rod made of Titanium If one of the requirements mentioned above has not been met, the checks have to be performed every **12 months**.	**Interval:** ❑ 24 months ❑ 12 months (please check)

Customer/Customer no.:		**Service report no.:**
Serial no.:	**Inventory no.:**	**Operating hours:**
System type: 4008 ❑ 4008 B ❑ 4008 H ❑ 4008 S ❑		
With option: SN ❑ bi*ba*g® ❑ 4008 HDF ❑ ON-LINE-HDF ❑ ONLINE*plus*™ ❑ BTM ❑ BPM ❑ BVM ❑ DIASAFE ❑ DIASAFE®*plus* ❑ OCM ❑		

	1	**Visual checks**	
TSC	1.1	Fuses accessible from the outside comply with the indicated values	❑
TSC	1.2	Labels and identifications present and legible	❑
TSC	1.3	Mechanical conditions permits further safe use	❑
TSC	1.4	No damage or contaminations detectable	❑
TSC	1.4.1	The rotors of the line roller pumps show no signs of damage	❑
TSC	1.5	Power cable not damaged	❑
	1.6	Preventive Maintenance procedures	
MA	1.6.1	Sealing in the suction tubes changed and lubricated, rivet replaced	❑
MA	1.6.2	Rubber in rinse chambers checked for proper function	❑
MA	1.6.3	Suction tube filters replaced	❑
MA	1.6.4	Rinse chamber screws tight	❑
MA	1.6.5	Check valve replaced	❑
MA	1.6.6	Pre-UF pump filter, filter downstream of MV43, filter between rinse chambers, and on MV99, MV100, CDS and disinfectant port replaced	❑
MA	1.6.7	Dialysate filter replaced or sieve changed	❑
MA	1.6.8	O-rings in dialyzer couplings replaced	❑
MA	1.6.9	Sampling valve functions properly	❑
MA	1.6.10	Fan filter replaced	❑
MA	1.6.11	Ribbon belt and line segment in air separation pump changed	❑
MA	1.6.12	MV84, replaced after 2 years. (Only if Puristeril is used.)	❑
MA	1.6.13	Connecting piece or equilibration chamber replaced. (Only if ONLINE™*plus* or DIASAFE®*plus* option is not used.)	❑
MA	1.6.14	Filter 210 replaced (if present)	❑
MA	1.6.15	Filter of the disinfectant suction tube replaced	❑
MA	1.6.16	No dirty or worn tubings	❑

	2	**General checks**	
TSC	2.1	Power failure alarm – continous sound – display: Emergency operation	❑
TSC	2.2	Air separation by air separation pump activated; display if more air must be separated and OD senses opaque fluid: fill program	❑
TSC	2.3	Check DIP switches P.C.B. LP 631 (CPU1) DIP switch array 2 SW7 is set to ON. With central delivery system: P.C.B. LP 631 (CPU1) DIP switch array 2 SW8 is set to ON.	❑
	3	**Check of the hydraulics**	
MA	3.1	Water inlet pressure (reduced) 0.9 bar to 1.4 bar ..... *Measured value:*_____	❑
MA	3.2	Loading pressure 1.25 bar ±0.05 bar ..... *Measured value:*_____ With EC495 (4008B); EC295(4008H), EC 275 (4008S) and higher Loading pressure 1.45 bar ±0.05 bar ..... *Measured value:*_____	❑ ❑
MA	3.3	Negative degassing pump pressure 0.81 to 0.85 bar ..... *Measured value:*_____	❑
MA	3.4	Balancing chamber relief pressure at 800 ml/min ..... *Measured value:*_____ Loading pressure: Relief pressure: 1.2 to 1.3 bar 1.9 to 2.1 bar 1.45 ± 0.05 bar 2.2 ± 0.05 bar	❑
	4	**Ultrafiltration system and membrane pumps**	
TSC	4.1	UF pump, 1 stroke = 1 ml, 60 strokes = 60 ml ±0.5 ml ..... *Measured value:*_____	❑
MA	4.2	Average balancing chamber volume 30 ± 1 ml ..... *Measured value:*_____	❑
MA	4.3	Concentrate pump calibration volume removal / number of strokes ..... *Measured value:*_____	❑
MA	4.4	Bicarbonate pump calibration volume removal / number of strokes ..... *Measured value:*_____	❑
	5	**Dialysis mode**	
MA	5.1	Expected temperature 37 °C ± 0.5 °C ..... *Measured value:*_____	❑
MA	5.2	Temperature display 37 °C ± 0.5 °C ..... *Measured value:*_____	❑
MA	5.3	Dialysate flow check 800 ml/min (desired value: 765 to 837 ml/min) ..... *Measured value:*_____ 500 ml/min (desired value: 471 to 528 ml/min) ..... *Measured value:*_____ 300 ml/min (desired value: 279 to 321 ml/min) ..... *Measured value:*_____	❑ ❑ ❑
MA	5.4	Dialysate pressure – Check zero point with flow off ..... – Slope checked	❑ ❑
TSC	5.5	Conductivity display checked with reference meter ..... If the bi*b*ag® option is used, connect a bi*b*ag®! – CD system ..... *Measured value:*_____ – CD ref. ..... *Measured value:*_____	❑ ❑ ❑
	6	**Extracorporeal components**	
MA	6.1	Arterial pressure displayed checked with reference meter	❑
MA	6.2	Venous pressure displayed checked with reference meter	❑
TSC	6.3	Blood pumps: blood pump rate checked (calibration program: BP-Rate CHECK)	❑
TSC	6.4	SN switching pressure checked according to table in TM	❑
TSC	6.5	Blood pump stop alarm checked	❑
TSC	6.6	Venous line clamp closes after blood alarm	❑
TSC	6.7	Pressure of about 2 bar in the venous bubble catcher ..... Pressure must not drop by more than 0.1 bar within 3 minutes.	❑ ❑

7 Options

7.1 bibag®

MA 7.1.1 bibag® connector, O-rings replaced ..... ❑

MA 7.1.2 Switching pressure of PSW134 checked,
130 mbar, + 30 mbar ..... *Measured value:*_____ ❑

7.2 DIASAFE

MA 7.2.1 DIASAFE filter life checked ..... ❑

MA 7.2.2 Hydrophobic filter 111 replaced ..... ❑

MA 7.2.3 O-rings in the dialysate couplings of the DIASAFE replaced ..... ❑

7.3 DIASAFE®plus

MA 7.3.1 DIASAFE®plus filter life checked ..... ❑

MA 7.3.2 Hydrophobic filter 111 replaced ..... ❑

7.4 4008 HDF

TSC 7.4.1 2nd UF pump 1 stroke = 1 ml, 60 strokes = 60 ml ± 0.5 ml ..... *Measured value:*_____ ❑

7.5 ON-LINE-HDF (and DIASAFE)

MA 7.5.1 Filter life of the DIASAFE and ON-LINE filter checked ..... ❑

MA 7.5.2 Hydrophobic filter 111 replaced ..... ❑

MA 7.5.3 O-rings in the dialysate couplings of the DIASAFE replaced ..... ❑

MA 7.5.4 HDF pump rotor checked (smooth running, wear) ..... ❑

MA 7.5.5 Fastening strap for Luer-lock checked ..... ❑

TSC 7.5.6 Substituate pump ..... ❑

❑ (part no. 672 521 1) with DC motor:
volume delivered by the pump checked ..... *desired/actual:*____/____

or

❑ (part no. 674 982 1) with stepper motor:
pump rate checked (calibration program: HDF-P.-Rate CHECK)

TSC 7.5.7 Substituate pump stop

– after blood alarm ..... ❑

– after triggering the bypass function ..... ❑

– after opening the blood pump door ..... ❑

TSC 7.5.8 Check substituate pump for proper function

– Rinse program, delivery rate: 400 ml/min ..... ❑

– Hot rinse program, delivery rate: 150 ml/min ..... ❑

– Disinfection program, delivery rate: 400 ml/min ..... ❑

7.6 ONLINEplus™ (and DIASAFE®plus)

MA 7.6.1 Filter life of DIASAFE®plus and ONLINEplus™ checked ..... ❑

MA 7.6.2 Hydrophobic filters 111 and 184 replaced ..... ❑

MA 7.6.3 O-rings in substituate port 195 and in rinse port 194 replaced ..... ❑

TSC 7.6.4 Line in the line pinch valve 193 (ONL1) replaced ..... ❑

TSC 7.6.5 Check DIP switch
With HPU (hydraulic processing unit)
P.C.B. LP 632 (CPU2) DIP switch array 2 switch 5 is set to OFF. ..... ❑

7.7 OCM

MA OCM PULSE calibration performed ..... ❑

7.8 BPM 4008

MA 7.8.1 Labels and indications are present and legible ..... ❑
MA 7.8.2 Mechanical condition permits further safe use ..... ❑
MA 7.8.2.1 Line connector is correctly fixed to the system ..... ❑
MA 7.8.2.2 Internal blood pressure module, printed circuit boards, cable connections are correctly fixed ..... ❑
MA 7.8.2.3 Damaged lines or cuffs have been replaced ..... ❑
MA 7.8.2.4 Indicating elements checked ..... ❑
MA 7.8.2.5 Touch panel checked ..... ❑
TSC 7.8.3 Leakage test: pressure leakage rate less than 6 mmHg/min ..... ❑
TSC 7.8.4 Calibration:

Pressure values	Tolerance	
250 mmHg	±5mmHg	..... *Measured value:*_____ ❑
200 mmHg	±5mmHg	..... *Measured value:*_____ ❑
150 mmHg	±3mmHg	..... *Measured value:*_____ ❑
100 mmHg	±3mmHg	..... *Measured value:*_____ ❑
50 mmHg	±3mmHg	..... *Measured value:*_____ ❑

TSC 7.8.5 Safety valve: discharge at 320 mmHg, ±10 mmHg ..... ❑
TSC 7.8.6 Blood pressure measured ..... ❑

7.9 BTM 4008

No further Technical Safety Checks and Maintenance procedures must be performed.

7.10 BVM 4008

No further Technical Safety Checks and Maintenance procedures must be performed.

8 Check of the electrical safety

In Germany according to DIN VDE 0751 standard – 1st Edition 10/2001.
In other countries, observe the local regulations!

For measuring points, see 2.1.4 VDE check.
For 4008 HDF option, check additional measuring point!

TSC 8.1 Visual inspections performed according to item 1 ..... ❑

TSC 8.2 Protective earth resistance max. 0.3 Ω (with power cable) .... *Measured value:*_____ ❑

TSC 8.3 Measurement of the leakage current ..... ❑
❑ Differential current measurement according to fig. C.6
or
❑ Direct measurement according to fig. C.5

Nominal voltage of power supply ..... _____ *Volt*
Device leakage current mains polarity 1 ..... _____ *µA*
for line voltage ..... _____ *Volt*
scaled to nominal voltage (maximum 500 µA,
see also Additional conditions) ..... *Measured value:*_____

Device leakage current mains polarity 2 ..... _____ *µA*
for line voltage ..... _____ *Volt*
scaled to nominal voltage (maximum 500 µA,
see also Additional conditions) ..... *Measured value:*_____

Test equipment used: _____

9 Final checks

TSC 9.1 T1 test performed ..... ❑
MA 9.2 Hot rinse / disinfection performed ..... ❑

Date:	Signature:	Stamp:

The system has been released for further use	❑ Yes ❑ No

Remarks:

Date:	Signature:	Stamp:

2.1.4 Notes – Check of the electrical safety

- **Test 4008 E, 4008 H**

1. Protective earth resistance measuring points

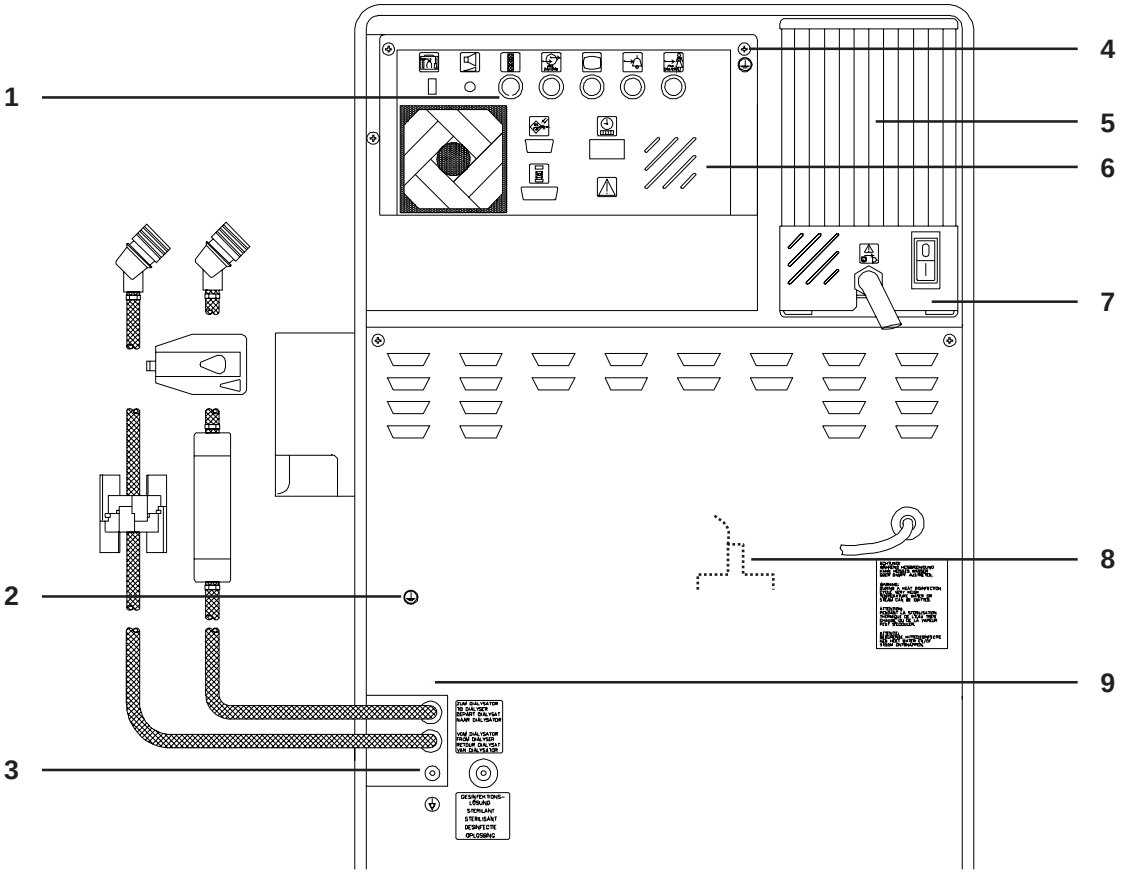

Legend

1 Monitor rear panel (ports housing)
2 Hydraulic unit rear panel (plate on the push-on blade inside)
Caution: The grounding cable must be connected.
3 Ground stud for potential equalization
4 Upper rear panel (screw)
5 Heat sink (power supply unit)
6 Monitor rear panel (plate)
7 Power supply plate
8 Heater rod housing (hydraulic unit open)
9 Dialyzer line ports (hydraulic unit open / earthing screw)

2. Use a meter (e.g. SECUTEST 0701) to check the leakage current.

- **Test 4008 B, 4008 S**

1. Protective earth resistance measuring points

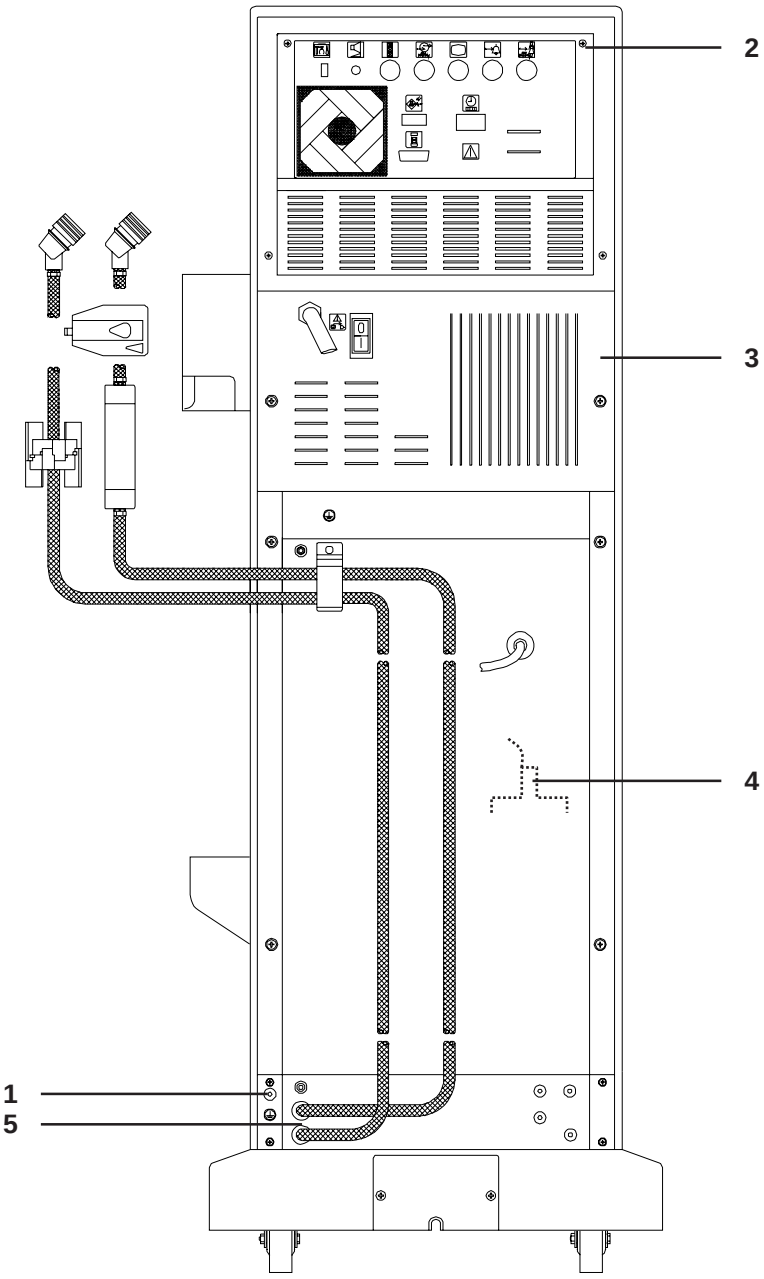

Legend

1	Ground stud for potential equalization	3	Heat sink (power supply unit)
2	Upper rear panel (screw)	4	Heater rod housing (hydraulic unit open)
		5	Dialyzer line ports (adapters)

2. Use a meter (e.g. SECUTEST 0701) to check the leakage current.

- **Test 4008 HDF (option)**

1. Protective earth resistance measuring point

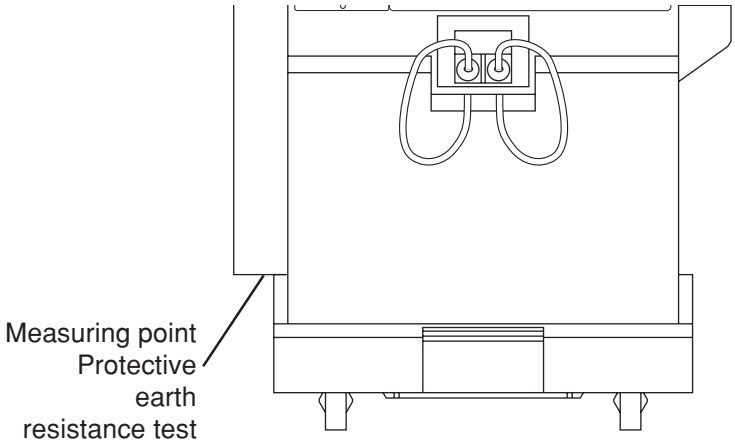

2. Use a meter (e.g. SECUTEST 0701) to check the leakage current.

3. Measurement conditions

The measurements must be taken in the dialysis mode in the “ON phase” of the heater control system.
The scales must be moved out to such an extent that neither of the two end switches are actuated (middle position).

2.2 TSC report

4008	TSC report Page 1/2	Fresenius Medical Care

These checks must be performed every **24 months** if all of the following requirements have been met: ❑ Unique assignment of the rotors to the appropriate line roller pumps ❑ Software: 4008 E/B systems: from 4.951 to < 5.00 or with 5.201 or higher 4008 H/S systems: from 2.951 to < 3.00 or with 4.311 or higher ❑ DIP switch P.C.B. LP 632 array 2 SW 5 set to OFF. ❑ DIP switch P.C.B. LP 631 array 2 SW 7 set to ON. ❑ DIP switch P.C.B. LP 631 array 2 SW 8 set to ON. (With CDS option only) ❑ Heater rod made of Titanium If one of the requirements mentioned above has not been met, the checks have to be performed every **12 months**.	**Interval:** ❑ 24 months ❑ 12 months (please check)

Name of technician:		**Service report no.:**
Customer/Customer no.:		
Inventory no.:	**Serial no.:**	**Operating hours:**
System type: **With option(s):**		

No.	Description	Measured value	✓
1	**Visual inspections**		
1.1	Fuses accessible from the outside comply with the indicated values	–	❑
1.2	Labels and identifications are present and legible	–	❑
1.3	Mechanical condition permits further safe use	–	❑
1.4	No damage or contaminations detectable	–	❑
1.4.1	No signs of damage on the line roller pump rotors	–	❑
1.5	Power cable not damaged	–	❑
2	**General checks**		
2.1	Power failure alarm – continuous sound – text displayed: Emergency operation	–	❑
2.2	Air separation by air separation pump activated; text displayed if more air must be separated and OD senses opaque fluid: Fill program	–	❑
2.3	Check of DP switches P.C.B. LP 631 (CPU1) DIP switch array 2 SW7 is set to ON. With Central Delivery System: P.C.B. LP 631 (CPU1) DIP switch array 2 SW8 is set to ON.	–	❑
4	**Ultrafiltration system and membrane pumps**		
4.1	UF pump, 1 stroke = 1 ml, 60 strokes = 60 ml ± 0.5 ml	.....	❑
5	**Dialysis mode**		
5.5	Conductivity display checked using a reference meter CD system/CD ref. (If the bi*b*ag® option is used, connect a bi*b*ag®.)	..... /	❑
6	**Extracorporeal components**		
6.3	Blood pumps: check the blood pump rate (calibration program: BP-Rate CHECK)	–	❑
6.4	SN switching pressure checked according to table in TM	–	❑
6.5	Blood pump stop alarm checked	–	❑
6.6	Venous line clamp closes after blood alarm	–	❑
6.7	Pressure of approx. 2 bar in the venous bubble catcher. Pressure must not drop by more than 0.1 bar within 3 minutes.	–	❑
7	**Options**		
7.4	4008 HDF		
7.4.1	Volume delivered by the 2nd UF pump checked: 60 strokes = 60 ml ± 0.5 ml	.....	❑
7.5	Online-HDF		
7.5.6	❑ Substituate pump (part no. 672 521 1) with DC motor: check volume delivered by the pump desired/actual ***or*** ❑ Substituate pump (part no. 674 982 1) with stepper motor: check the pump rate (calibration program:BP-Rate CHECK)	..... / ..... –	❑ ❑

Nr.	Bezeichnung	Meßwert	✔
7.5.7	Substituate pump stop: – after blood alarm – after triggering the bypass function – after opening the blood pump door	 – – –	 ❑ ❑ ❑
7.5.8	Check substituate pump for proper function: – Rinse program, delivery rate: 400 ml/min – Hot rinse program, delivery rate: 150 ml/min – Disinfection program, delivery rate: 400 ml/min	 – – –	 ❑ ❑ ❑
7.6	ONLINE*plus*™		
7.6.4	Line in the line pinch valve 193 (ONL1) replaced	–	❑
7.6.5	Check of DP switch With HPU (hydraulic processing unit) P.C.B. LP 632 (CPU2) DIP switch array 2 SW5 is set to OFF.	–	❑
7.8	BPM 4008		
7.8.3	Leakage test: pressure leakage rate less than 6 mmHg/min	.....	❑
7.8.4	Calibration 250 mmHg ± 5 mmHg 200 mmHg ± 5 mmHg 150 mmHg ± 3 mmHg 100 mmHg ± 3 mmHg 50 mmHg ± 3 mmHg		 ❑ ❑ ❑ ❑ ❑
7.8.5	Safety valve: discharge at 320 mmHg ± 10 mmHg	.....	❑
7.8.6	Blood pressure measured	–	❑
8	**Checking the electrical safety** In Germany according to DIN VDE 0751 standard –1st edition 10/2001. In other countries, observe the local regulations!		
8.1	Visual inspection performed according to item 1.		❑
8.2	Protective earth resistance maximum 0.3 ohms (with power cable)	..... Ω	❑
8.3	Measurement of the leakage current (device leakage current) ❑ Differential current measurement according to fig. C.6 ***or*** ❑ Direct measurement according to fig. C.5 Nominal voltage of power supply: ..... V Device leakage current mains polarity 1 ..... µA for line voltage ..... V scaled to nominal voltage (maximum 500 µA, see also Additional conditions) Device leakage current mains polarity 2 ..... µA for line voltage ..... V scaled to nominal voltage (maximum 500 µA, see also Additional conditions) Test equipment used	 ..... µA ..... µA	❑
9	**Functional test**		
9.1	T1 test performed	–	❑

Date:	**Signature:**	**Stamp:**

The system has been released for further use ❑ **Yes** ❑ **No**

Remarks:

Date:	**Signature:**	**Stamp:**

Table of contents
3 Adjustment instructions

Section		Page
	Fig.: Measuring equipment	3-2
	Fig.: Flow diagram hydraulics incl. DIASAFE®plus (Option) with basic hydraulics	3-4
	Fig.: Flow diagram hydraulics 4008 with advanced hydraulics	3-6
	Fig.: P.C.B. overview	3-8
3.1	**Overview of the DIP switches in the 4008**	3-9
3.1.1	P.C.B. LP 631 (CPU 1) DIP switch array 1	3-9
3.1.2	P.C.B. LP 631 (CPU 1) DIP switch array 2	3-10
3.1.3	P.C.B. LP 632 (CPU 2) DIP switch array 1	3-11
3.1.4	P.C.B. LP 632 (CPU 2) DIP switch array 2	3-12
3.2	**Calibration mode**	3-13
3.2.1	Basic conditions	3-13
3.2.2	Messages on the displays on the UF monitor (4008 E/B) or on the screen (4008 H/S)	3-13
3.3	**Hydraulics**	3-15
3.3.1	Reduced water inlet pressure	3-16
3.3.2	Degassing pump pressure	3-18
3.3.3	Balancing chamber loading pressure	3-20
3.3.4	Flow pump pressure	3-22
3.3.5	UF pump volume	3-24
3.3.6	CDS pressure switch	3-26
3.3.7	bibag® pressure transducer calibration	3-28
3.4	**Air detector**	3-31

Fig.: Measuring equipment

1

2

3

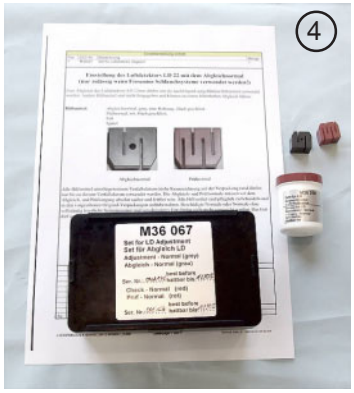

4

5

6

9

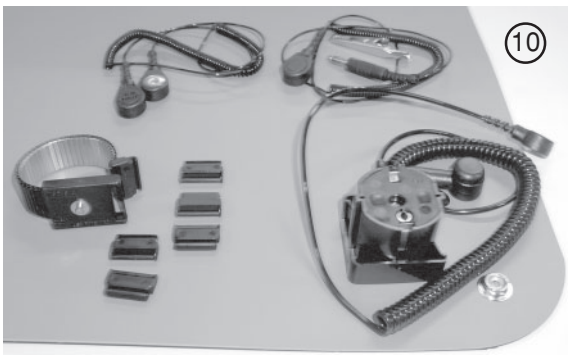

10

11

Pos.	Measuring equipment
1	Pressure gauge HMED with carrying case (set)
2	Universal measuring device UMED (set) (conductivity, pressure, temperature)
3	Secutest VDE tester (without printer module) Printer module (not ill.) Carrying case (not ill.)
4	Calibration kit for 22 mm AD
5	4008 Service Software set
6	Electronic pocket scales Test weight with spirit level and certificate
7	Measuring cylinder, 100 ml (not ill.)
8	Special tool for installation and removal of modules (not ill.)
9	ESD service kit
10	ESD work station kit
11	IC extraction tool

The current list of the measuring equipment with part numbers can be found in the electronic Spare Pars Catalog.

Fig.: Flow diagram hydraulics incl. DIASAFE®plus (Option) with basic hydraulics

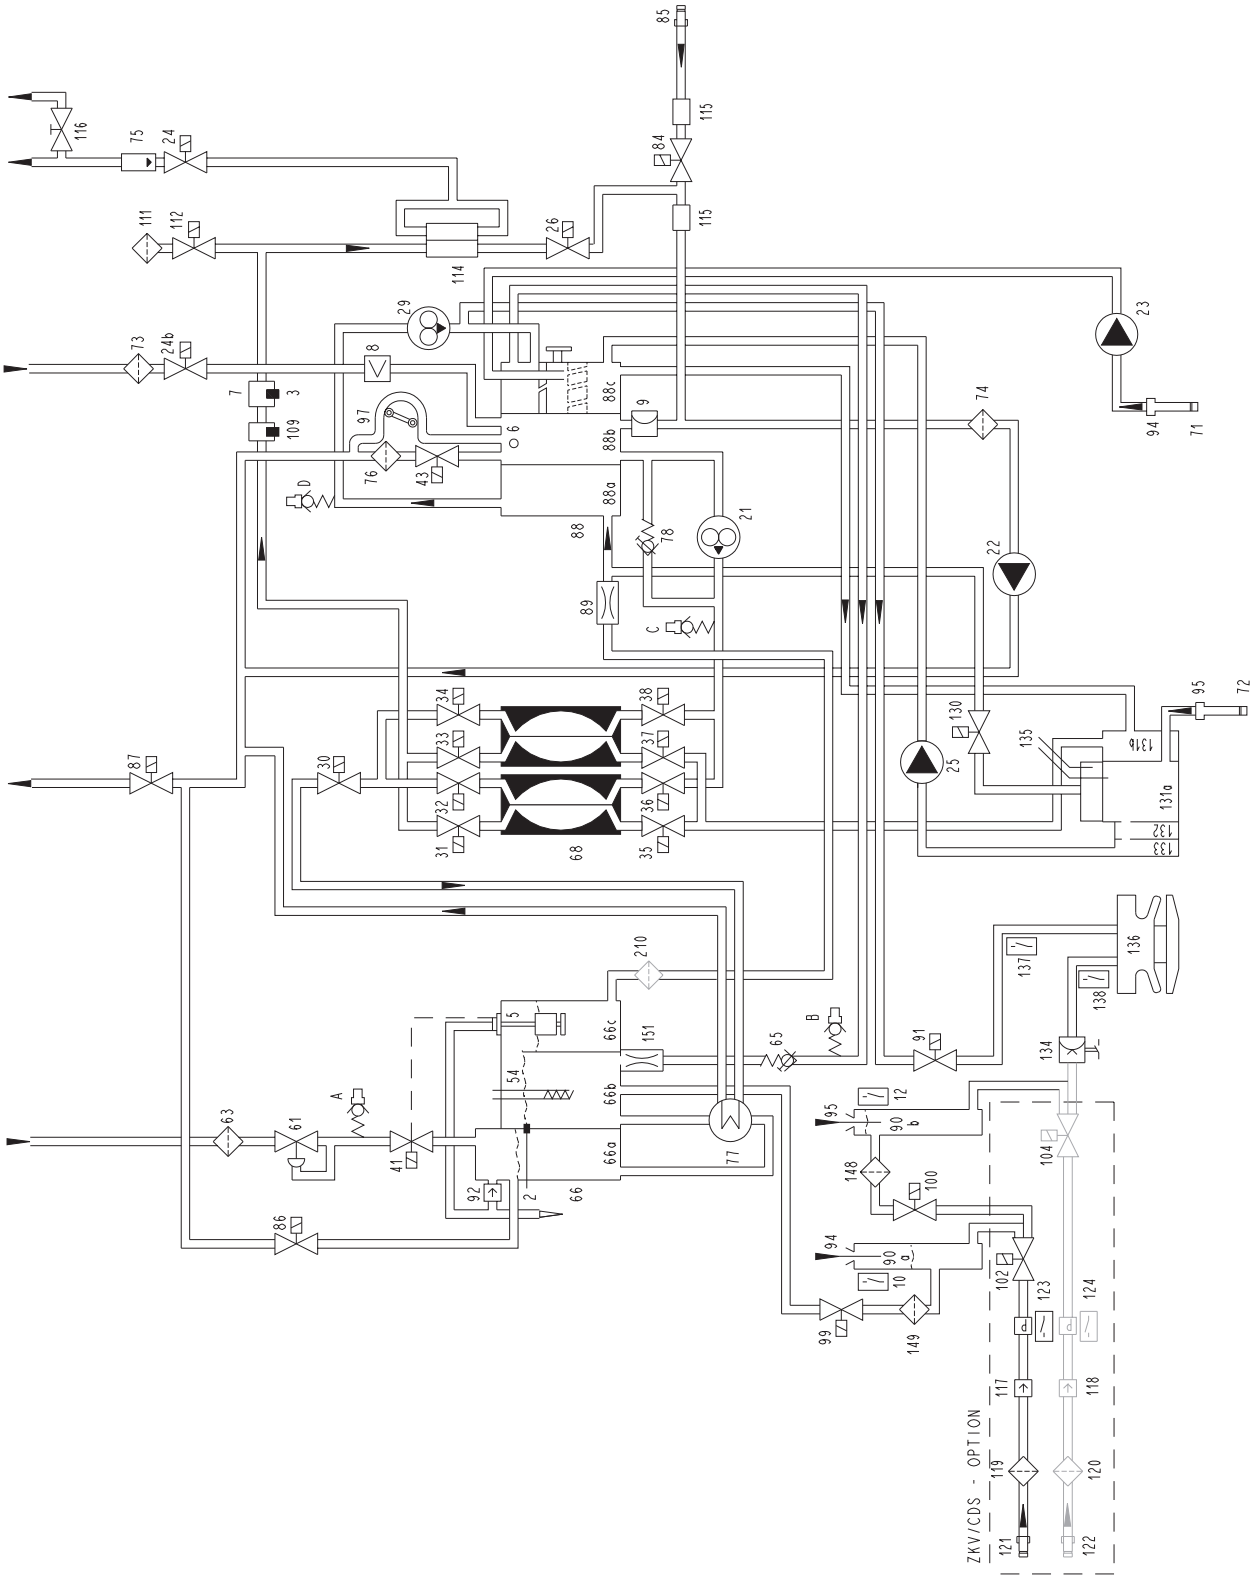

Legend

2 Temperature sensor
3 Temperature sensor
5 Float switch
6 Level sensor
7 Conductivity cell
8 Blood leak detector
9 Pressure transducer
10 Reed contact for concentrate
12 Reed contact for bicarbonate
21 Flow pump
22 UF pump
23 Concentrate pump
24 Dialyzer valve 1
24b Dialyzer valve 2
25 Bicarbonate pump
26 Bypass valve
29 Degassing pump
30 Outlet valve
31 Balancing chamber valve 1
32 Balancing chamber valve 2
33 Balancing chamber valve 3
34 Balancing chamber valve 4
35 Balancing chamber valve 5
36 Balancing chamber valve 6
37 Balancing chamber valve 7
38 Balancing chamber valve 8
41 Water inlet valve
43 Fill valve
54 Heater rod
61 Pressure reducing valve
63 Water inlet filter
65 Loading pressure valve
66 Heater block
66a Water inflow chamber
66b Heater rod chamber
66c Float chamber
68 Balancing chamber
71 Filter/concentrate
72 Filter/bicarbonate
73 Filter/dialysate ext.
74 Filter/UF
75 External flow indicator
76 Filter/fill valve
77 Heat exchanger
78 Relief valve
84 Disinfectant valve
85 Disinfectant connector
86 Recirculation valve
87 Drain valve
88 Multifunction block
88a Degassing chamber
88b Secondary air separator
88c Primary air separator
89 Degassing orifice
90a Rinse chamber concentrate
90b Rinse chamber bicarbonate
91 Rinse valve
92 Vent valve
94 Concentrate suction tube
95 Bicarbonate suction tube
97 Air separation pump
99 Rinse valve
100 Rinse valve
102 Central concentrate delivery valve
104 Central bicarbonate delivery valve
109 Temperature sensor
111 Hydrophobic filter
112 Vent valve
114 Dialysate filter
115 Sensor disinfection valve
116 Sampling valve
117 Check valve (concentrate)
118 Check valve (bicarbonate)
119 Filter (concentrate)
120 Filter (bicarbonate)
121 Central concentrate delivery connector
122 Central bicarbonate delivery connector
123 Pressure switch for V102
124 Pressure switch for V104
130 bi*b*ag® drain valve
131 bi*b*ag® block
131a bi*b*ag® air sep. chamber
131b bi*b*ag® mixing chamber
132 bi*b*ag® conductivity cell
133 bi*b*ag® temperature sensor
134 bi*b*ag® pressure transducer
135 bi*b*ag® level sensor
136 bi*b*ag® connector
137 bi*b*ag® microswitch 1
138 bi*b*ag® microswitch 2
148 Filter/rinse valve 100
149 Filter/rinse valve 99
151 Orifice
210 Filter (degassing orifice)

Hydraulics measuring points

A Reduced water inlet pressure
B Balancing chamber loading pressure
C Flow pump pressure
D Degassing pump pressure

Fig.: Flow diagram hydraulics 4008 with advanced hydraulics

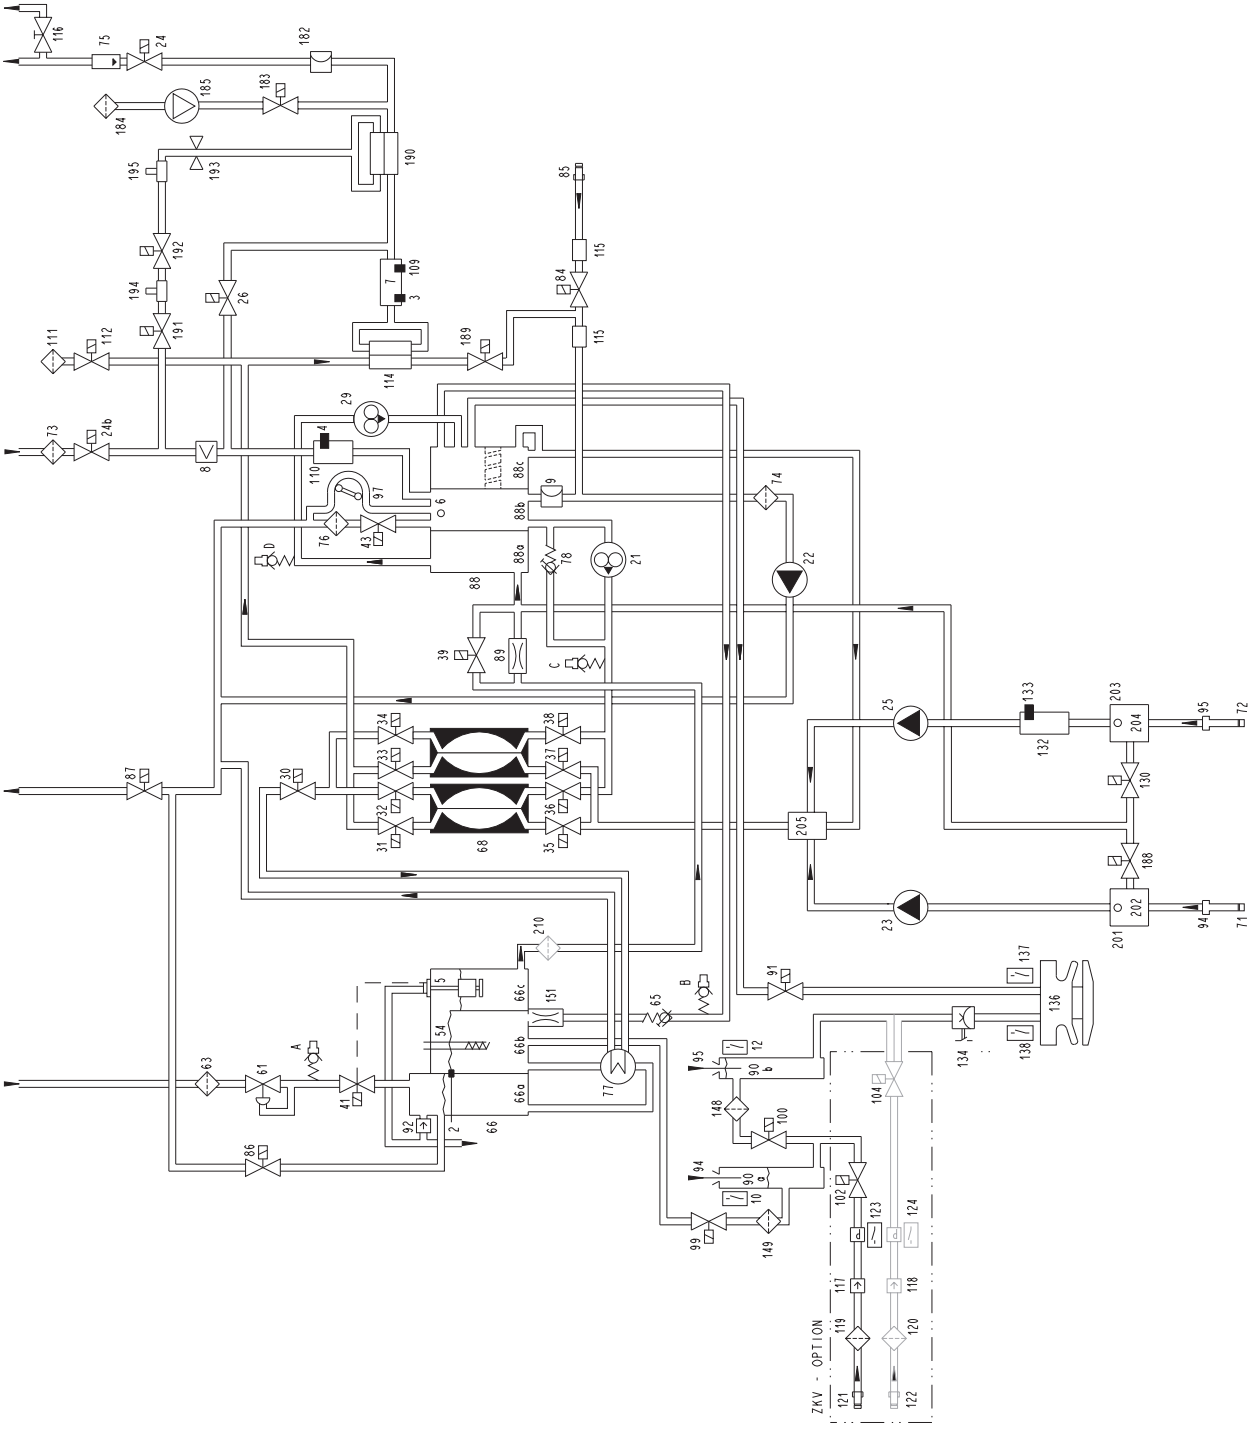

Legend

2 Temperature sensor
3 Temperature sensor
4 Temperature sensor (OCM option)
5 Float switch
6 Level sensor
7 Conductivity cell
8 Blood leak detector
9 Pressure transducer
10 Reed contact for concentrate
12 Reed contact for bicarbonate
21 Flow pump
22 UF pump
23 Concentrate pump
24 Dialyzer valve 1
24b Dialyzer valve 2
25 Bicarbonate pump
26 Bypass valve
29 Degassing pump
30 Outlet valve
31 Balancing chamber valve 1
32 Balancing chamber valve 2
33 Balancing chamber valve 3
34 Balancing chamber valve 4
35 Balancing chamber valve 5
36 Balancing chamber valve 6
37 Balancing chamber valve 7
38 Balancing chamber valve 8
39 Negative pressure valve
41 Water inlet valve
43 Fill valve
54 Heater rod
61 Pressure reducing valve
63 Water inlet filter
65 Loading pressure valve
66 Heater block
66a Water inflow chamber
66b Heater rod chamber
66c Float chamber
68 Balancing chamber
71 Filter/concentrate
72 Filter/bicarbonate
73 Filter dialysate external
74 Filter/UF
75 External flow indicator
76 Filter/fill valve
77 Heat exchanger
78 Relief valve
84 Disinfectant valve
85 Disinfectant connector
86 Recirculation valve
87 Drain valve
88 Multifunction block
88a Degassing chamber
88b Secondary air separator
88c Primary air separator
89 Degassing orifice
90a Rinse chamber, concentrate
90b Rinse chamber, bicarbonate
91 Rinse valve
92 Vent valve
94 Concentrate suction tube
95 Bicarbonate suction tube
97 Air separation pump
99 Rinse valve
100 Rinse valve
102 Central concentrate delivery valve
104 Central bicarbonate delivery valve
109 Temperature sensor
110 Condctivity measuring cell (OCM option)
111 Hydrophobic filter (advanced hydraulics)
112 Vent valve (advanced hydraulics)
114 Dialysate filter (Diasafe plus option)
115 Sensor disinfection valve
116 Sampling valve
117 Check valve (concentrate)
118 Check valve (bicarbonate)
119 Filter (concentrate)
120 Filter (bicarbonate)
121 Central concentrate delivery connector
122 Central bicarbonate delivery connector
123 Pressure switch for V102
124 Pressure switch for V104
125 Temperature compensation plate
130 bi*b*ag® drain valve
132 bi*b*ag® conductivity measuring cell
133 bi*b*ag® temperature sensor
134 bi*b*ag® pressure transducer
136 bi*b*ag® connector
137 bi*b*ag® microswitch 1
138 bi*b*ag® microswitch 2
148 Filter/rinse valve 100
149 Filter/rinse valve 99
151 Orifice
182 Pressure transducer 2 (advanced hydraulics)
183 Test valve (advanced hydraulics)
184 Test valve filter
185 Compressor (advanced hydraulics)
188 Evacuation valve
189 Retentate valve
190 Online filter (Online plus option)
191 Online 3 valve (Online plus option)
192 Online 2 valve (Online plus option)
193 Online 1 valve (Online plus option)
194 Rinse port (Online plus option)
195 Substituate port (Online plus option)
201 Air separator
202 Level sensor
203 Air separator
204 Level sensor
205 Concentrate / bicarbonate mixing point
210 Filter (degassing orifice)

Hydraulics measuring points

A Reduced water inlet pressure
B Balancing chamber loading pressure
C Flow pump pressure
D Degassing pump pressure

Fig.: P.C.B. overview

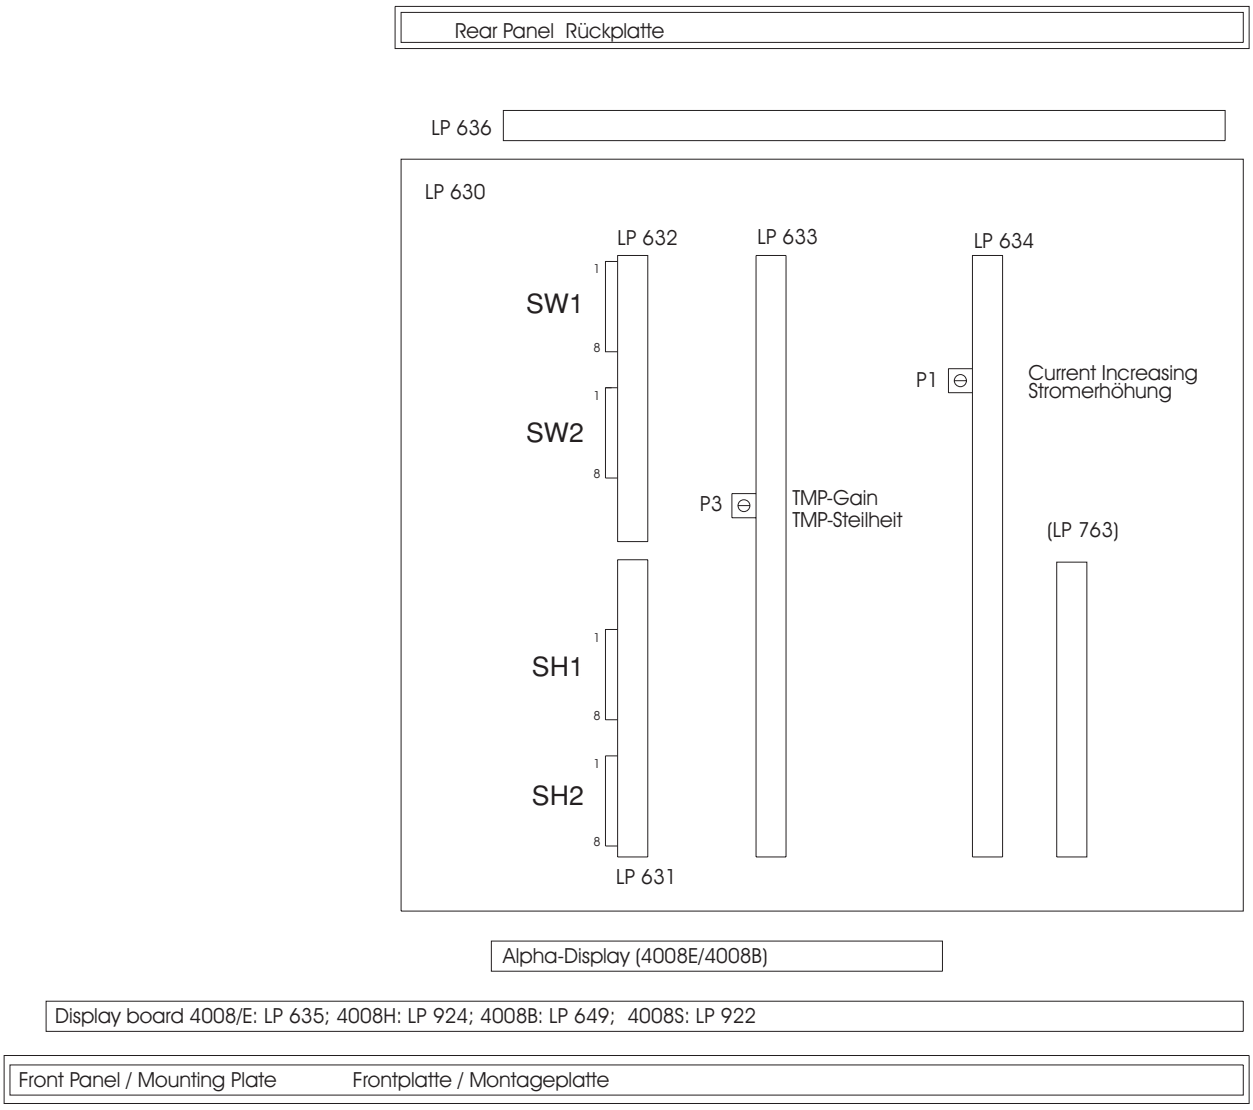

LP 630 Motherboard
LP 631 CPU 1 (operating system)
LP 632 CPU 2 (safety system)
LP 633 Input board
LP 634 Output board
LP 635 Display board
LP 636 External connectors
LP 649 Display board 4008 B
LP 763 Interface board
LP 924 Display board 4008 H
LP 922 Display board 4008 S

3.1 Overview of the DIP switches in the 4008

3.1.1 P.C.B. LP 631 (CPU 1) DIP switch array 1

Note
Dip switch 6 is provided for service purposes/troubleshooting only and must be set to the OFF position for dialysis mode.

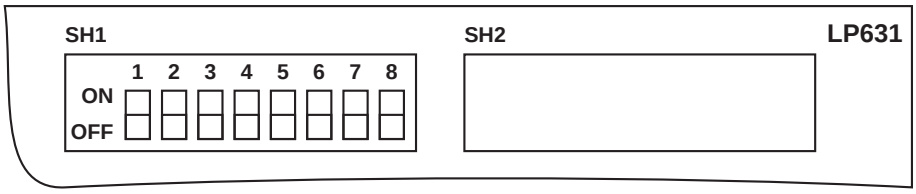

Switch / Position			Function			
SW 1	**SW 2**		**max. UF rate**			
ON	ON		1000 ml/h			
OFF	ON		2000 ml/h			
ON	*OFF*		*3000 ml/h*			
OFF	OFF		4000 ml/h			
SW 3	**SW 4**	**SW 5**	**Language 1**	**Language 2**	**Language 3**	**Language 4**
ON	ON	ON	English	English	English	English
OFF	ON	ON	German	Finnish	Japanese	Hungarian*
ON	OFF	ON	French	Czech	Bulgarian	
OFF	OFF	ON	Portuguese	Danish	Greek	
ON	ON	OFF	Dutch	Russian	Arabic*	
OFF	ON	OFF	Italian	Turkish	Norwegian*	
ON	OFF	OFF	Swedish	Polish	Slovenian*	
OFF	OFF	OFF	Spanish	Slovakian	Ex-Yugoslavian*	
SW 6			**CRC/RAM test**			
ON			skip			
OFF			*perform*			
SW 7			**Heater rod**			
ON			1300 W (at 100 to 120 V)			
OFF			*1600 W (at 220 to 240 V)*			
SW 8			**Test and cleaning flow**			
ON			500 ml/min			
OFF			*800 ml/min*			

The basic position upon delivery is shown in italics.
For "not used" the switch must be set to OFF.

* 4008 H/S only

3.1.2 P.C.B. LP 631 (CPU 1) DIP switch array 2

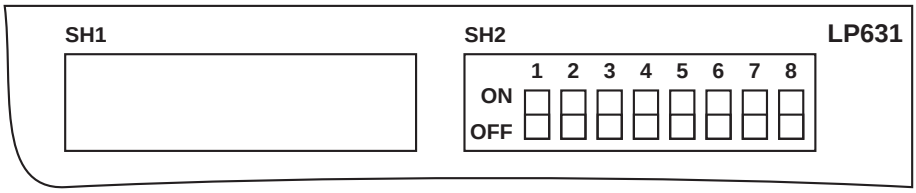

Switch / Position	Function
SW 1 ON *OFF*	**CAL mode** Mode 0 *Mode 1*
SW 2 **SW 3** ON ON OFF ON ON OFF *OFF* *OFF*	**Ext. alarm input** Invalid RO system Patient bell *Ext. alarm*
SW 4 ON *OFF*	**Remote control** System with remote control *System without remote control*
SW 5 ON *OFF*	**COMMCO LP 763 or LP 758 or LP 729** Enabled *Disabled*
SW 6 ON *OFF*	**COMMCO** Special record *Standard record*
SW 7 ON OFF	**Hydraulics test (not CDS)** Active Inactive
SW 8 ON OFF	**Central delivery system** Installed Not installed

The basic position upon delivery is shown in italics.
For "not used" the switch must be set to OFF.

3.1.3 P.C.B. LP 632 (CPU 2) DIP switch array 1

Note
DIP switches 3 and 8 permit to skip test steps which are requested by the system.
If the switches are set to the “can be skipped” position, it is important to know that the operator can then bypass the automatic test of the safety systems.
The person demanding this switch position shall be solely responsible for such a procedure.

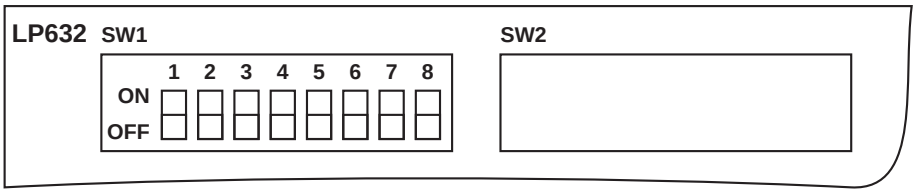

Switch / Position	Function
SW 1 ON *OFF*	*Not used*
SW 2 ON *OFF*	**T1 test** serial sequence *parallel sequence*
SW 3 ON *OFF*	**T1 test** skip *mandatory*
SW 4 ON *OFF*	**Test service** “ON” (individual test steps can be selected, dialysis not possible) *“OFF” (automatic T1 test)*
SW 5 ON *OFF*	**Cyclic PHT** every 2 minutes and indication of the test result (service) *every 12.5 minutes, alarm emission only with cyclical PHT alarm*
SW 6 *ON* OFF	**Cyclic PHT** *“ON”* “OFF”
SW 7 ON *OFF*	**Air detector** with PCB LP 450 without AD28 *with PCB LP 450-2 or with AD28*
SW 8 ON *OFF*	**HDF test** can be skipped *mandatory*

The basic position upon delivery is shown in italics.
For “not used” the switch must be set to OFF.

3.1.3 P.C.B. LP 632 (CPU 2) DIP switch array 2

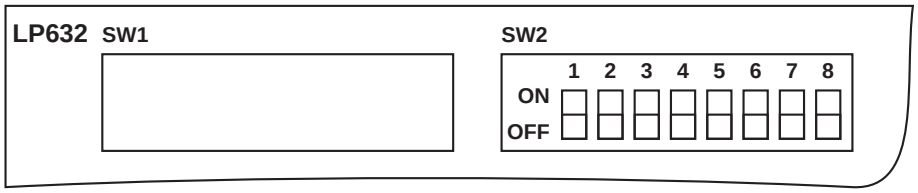

Switch / Position	Function
SW 1 ON OFF	**DIASAFE / DIASAFE®*plus*** On Off
SW 2 ON OFF	**ON-LINE-HDF** On Off
SW 3 ON OFF	**ONLINE*plus*™** On Off
SW 4 ON OFF	**Hydraulics** with WTR withoutWTR
SW 5 ON *OFF*	**V39 Test** On *Off*
SW 6 ON *OFF*	**Fast heating HDIS** deactivated *activated*
SW 7 ON *OFF*	*Not used*
SW 8 ON *OFF*	*Not used*

The basic position upon delivery is shown in italics.
For "not used" the switch must be set to OFF.

3.2 Calibration mode

3.2.1 Basic conditions

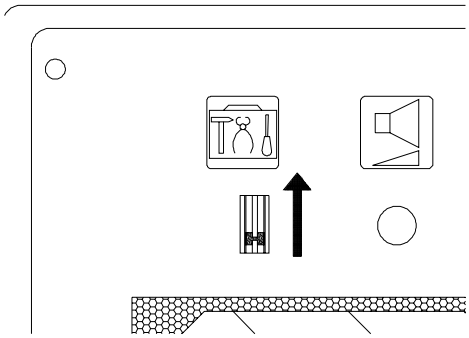

- The hemodialysis system must be switched off.
- The service switch must be in the **ON** (up) position.
- Turn the hemodialysis system on.

Caution
If the Service switch is set to ON during the treatment or the cleaning program, the heater relay will be turned off.

3.2.2 Messages on the displays on the UF monitor (4008 E/B) or on the screen (4008 H/S)

- **4008/E/B**

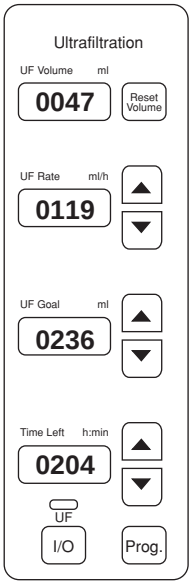

Watchdog supply voltage (4.5 V to 5.5 V)

12-V voltage (11.5 V to 12.5 V)

24-V voltage (23 V to 25 V)

Battery charging voltage (> 20 V)

The values indicated on the display must be divided by the factor 10.
Values in brackets: tolerances

- **4008 H/S**

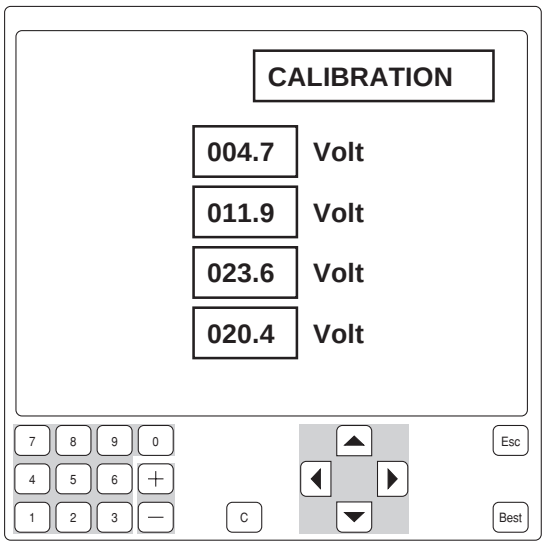

Watchdog supply voltage (4.5 V – 5.5 V)

12 V voltage (11.5 V – 12.5 V)

24 V voltage (23 V – 25 V)

Battery charging voltage (> 20 V)

3.3 Hydraulics

Note
Measuring equipment for measurement points in the hydraulic unit:
UMED, HMED or pressure gauge with a measuring range of
–1 to +2.2 bar, min. quality class 1.6.

3.3.1 Reduced water inlet pressure

Measuring equipment: UMED, HMED or pressure gauge

Place of measurement: Hydraulics, measurement port A

Condition: Flow on

Check/adjustment:

- **Checking the reduced water inlet pressure**
  Connect the measuring equipment to measurement port A.
  Measure the water pressure with MV 41 closed.
  Rated value of water inlet pressure: 0.90 to 1.40 bar
  If it deviates from the rated value, the water inlet pressure must be adjusted.
- **Adjusting the reduced water inlet pressure**
  Pull back the knurled nut on the pressure reducing valve (16).
  Turn the knurled nut to set the water pressure to the desired value (clockwise: +, counter-clockwise: –).
  Push the knurled nut back in.

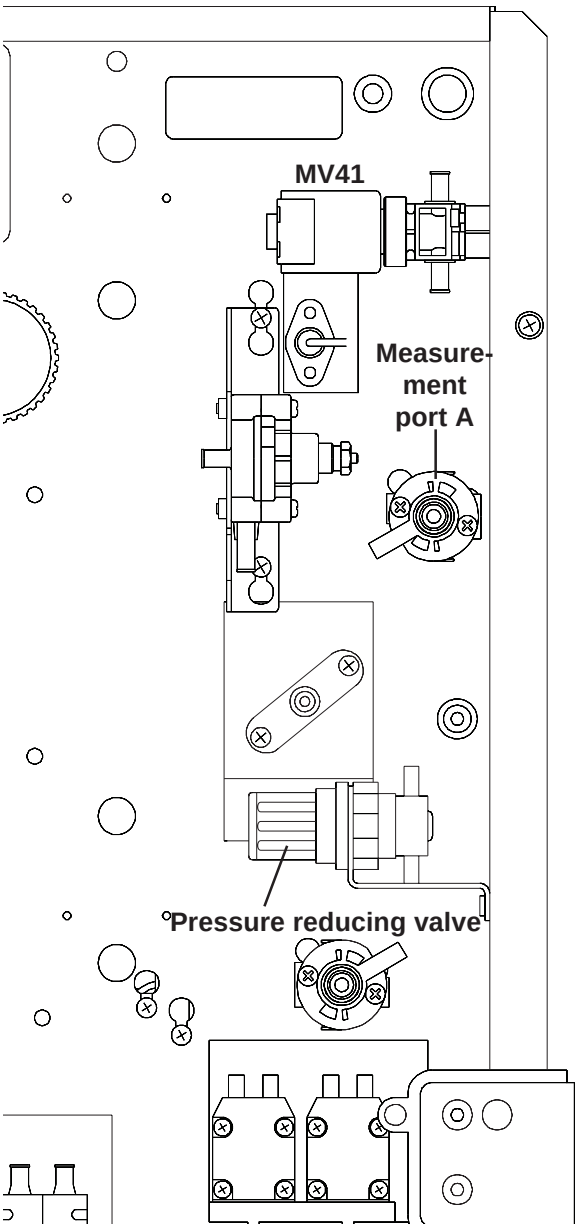

4008 E/H

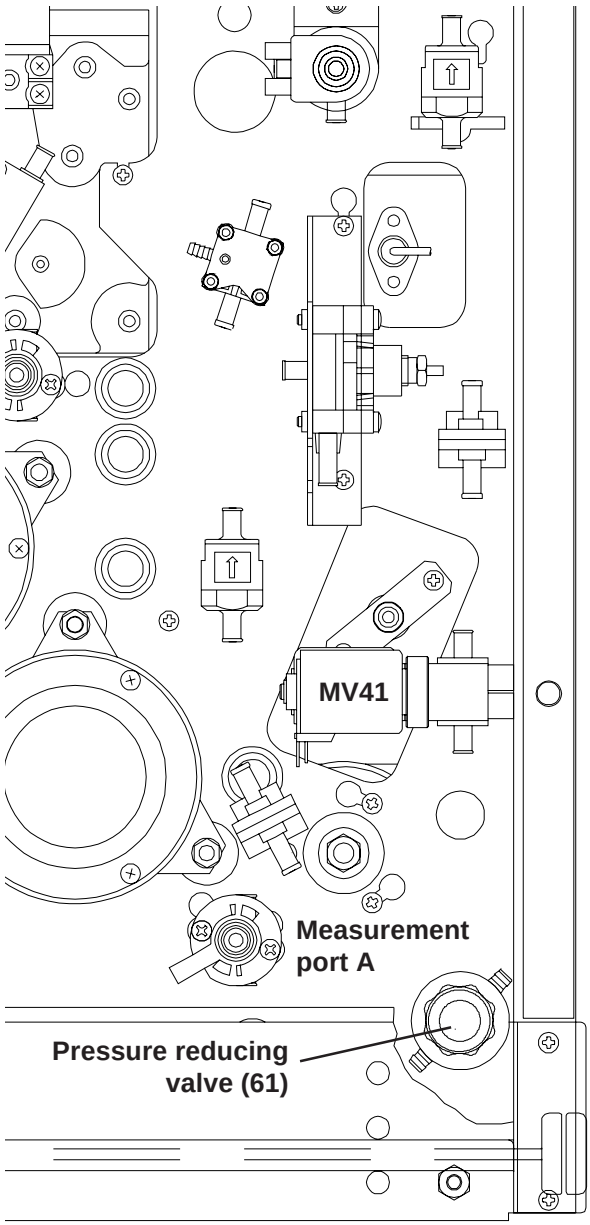

4008 B/S

3.3.2 Degassing pump pressure

Measuring equipment: UMED, HMED or pressure gauge

Place of measurement: Hydraulics, measurement port D

Check/adjustment:

– **Checking the pressure of the degassing pump**
  Connect the measuring equipment to the measurement port D.
  Measure the pressure of the degassing pump.
  Rated value of degassing pump pressure: –0.81 to –0.85 bar
  If it deviates from the rated value, the pressure of the degassing pump must be adjusted.
– **Adjusting the pressure of the degassing pump**
  Enter the **CALIBRATION** menu, select and start the option **CAL. DEGAS. PRESSURE** (➜ Calibration, chapter 4, section 7).

Note
If the pressure of the degassing pump was changed, make sure to check the loading pressure and readjust, if necessary.

- **Calibration of the negative degassing pressure on higher situated installation sites**

If 4008 systems are operated on higher situated sites (observe sea level), the specified negative degassing pressure can not be reached. The calibration has to be performed as follows:
The setting for the degassing pump has to be increased in increments from a low speed until no significant increase of the negative pressure can be detected anymore.
This setting can also be stored.

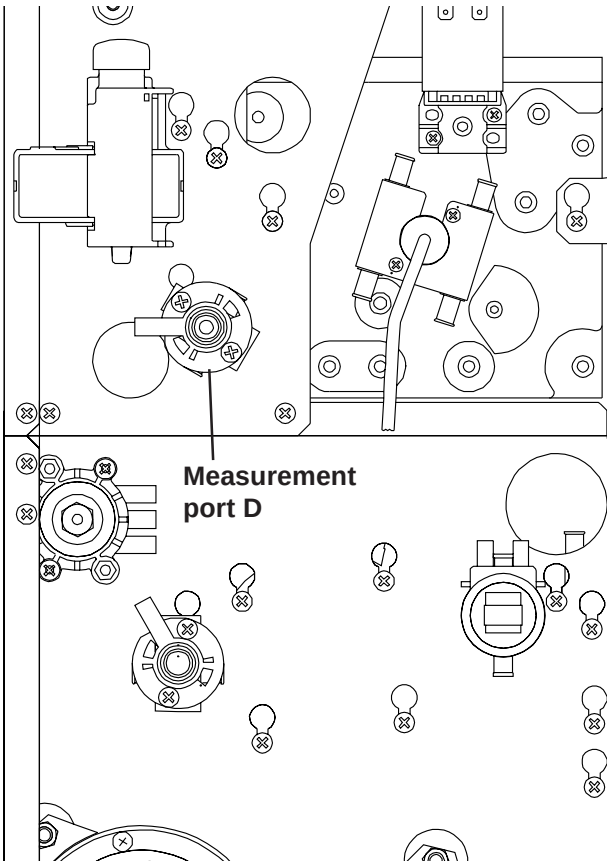

4008 E/H

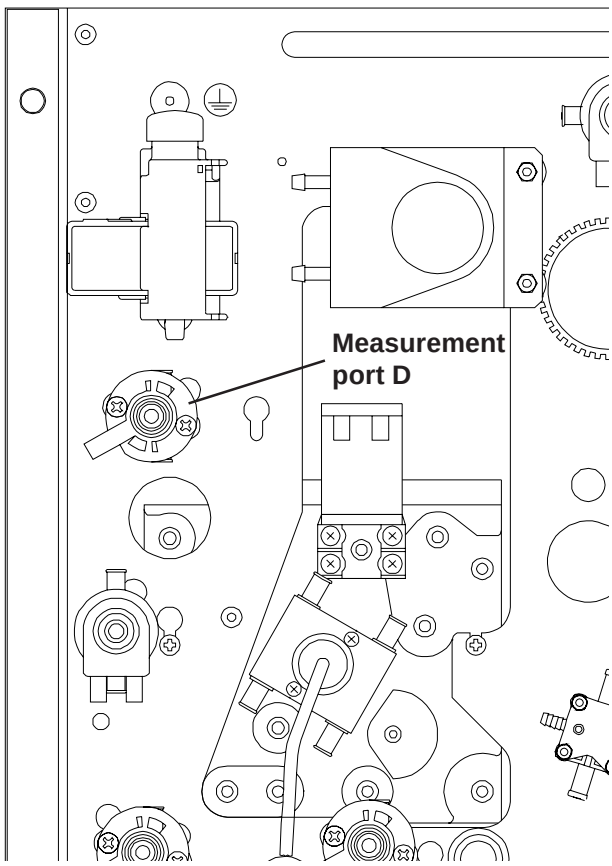

4008 B/S

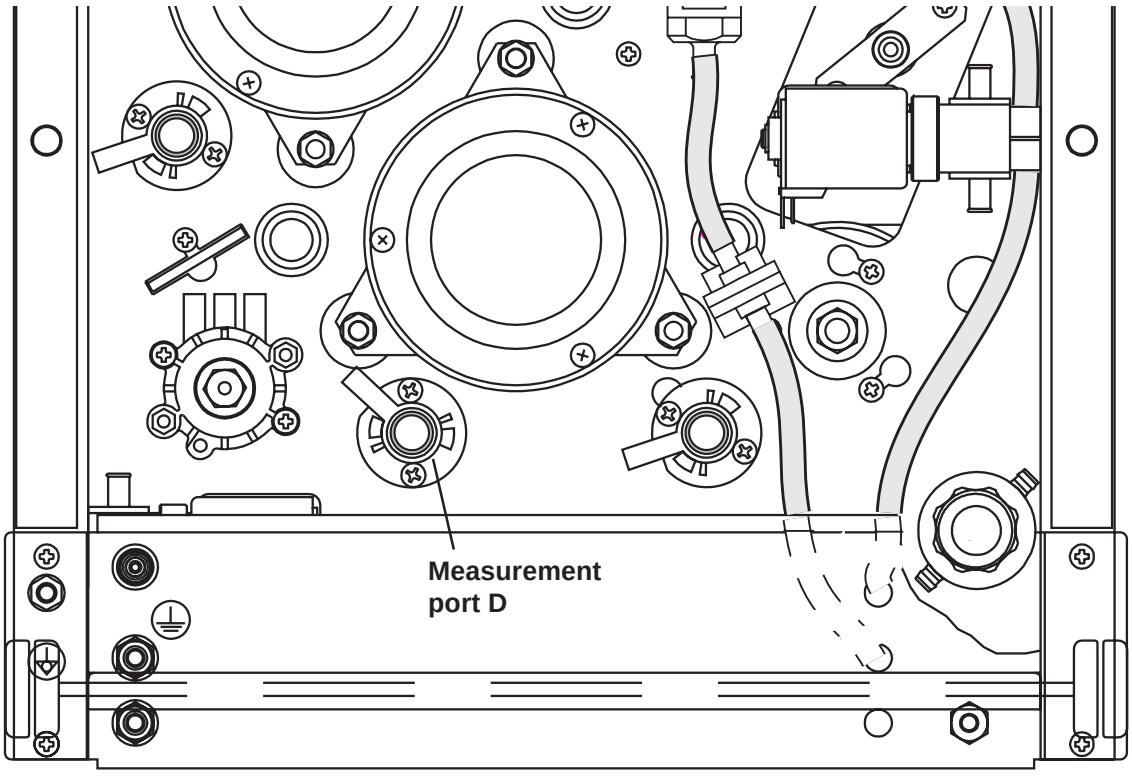

4008 B/S ONLINE*plus*™

3.3.3 Balancing chamber loading pressure

Measuring equipment: UMED, HMED or pressure gauge

Place of measurement: Hydraulics, measurement port B

Check/adjustment:

- **Checking the loading pressure of the balancing chamber**
  Connect the measuring equipment to the measurement port B.
  Measure the loading pressure of the balancing chamber.
  Rated value of the balancing chamber loading pressure: 1.2 to 1.3 bar
  With 4008 B EC495, 4008 H EC 295, 4008 S EC 275 or higher (change of the compression spring in the loading pressure valve): The loading pressure of the balancing chamber has been increased to 1.45 bar ± 0.05 bar.
  If it deviates from the rated value, the loading pressure of the balancing chamber must be adjusted.
- **Adjusting the loading pressure of the balancing chamber**
  Use the loading pressure valve (65) to adjust the loading pressure to the rated value.
  Turning the adjusting screw clockwise will increase the loading pressure.

Note
During the balancing chamber fill phase, the loading pressure drops to approx. 1.0 bar.

Note
If the loading pressure was changed, make sure to check the degassing pump pressure and readjust, if necessary.

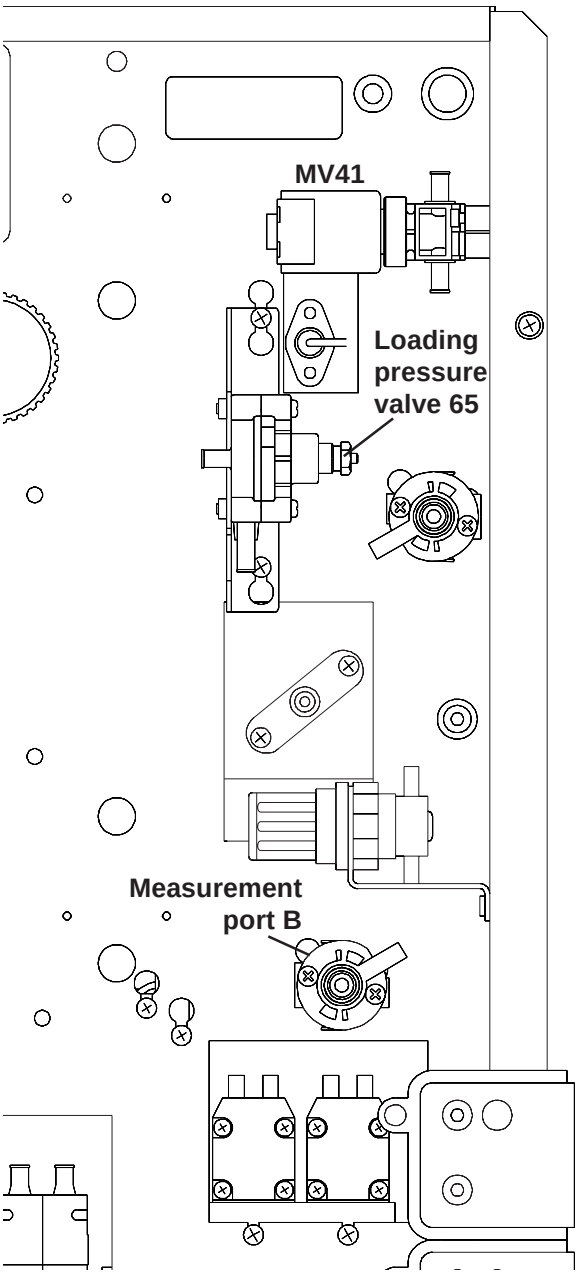

4008 E/H

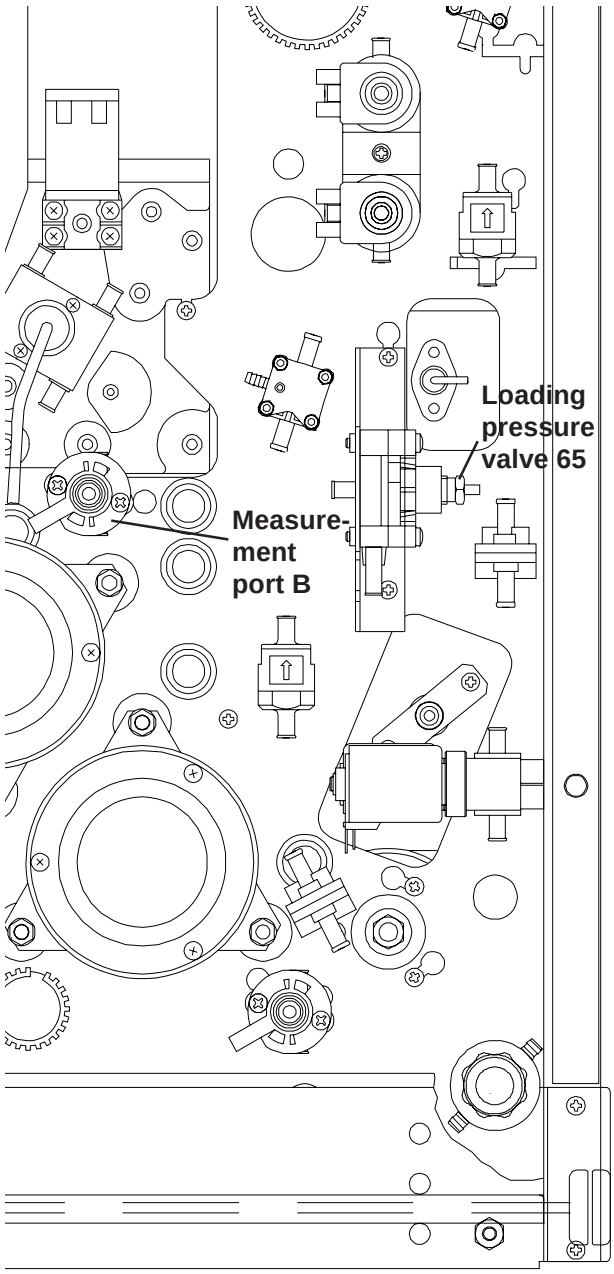

4008 B/S

3.3.4 Flow pump pressure

Measuring equipment: UMED, HMED or pressure gauge

Place of measurement: Hydraulics, measurement port C

Prerequisite: A dialysate flow of 800 ml/min must have been preselected.

Check/adjustment:

- **Checking the pressure of the flow pump**
  Connect the measuring equipment to the measurement port C.
  Turn the water supply off; water alarm; balancing chamber inactive.
  Measure the pressure of the flow pump.
  The desired pressure value of the flow pump depends on the loading pressure set:
  Loading pressure: 1.2 to 1.3 bar 1.9 to 2.1 bar
  Flow pump pressure: 1.45 ± 0.05 bar 2.2 ± 0.05 bar
  If it deviates from the rated value, the pressure of the flow pump must be adjusted.
- **Adjusting the pressure of the flow pump**
  Use the relief valve (78) to adjust the rated value.

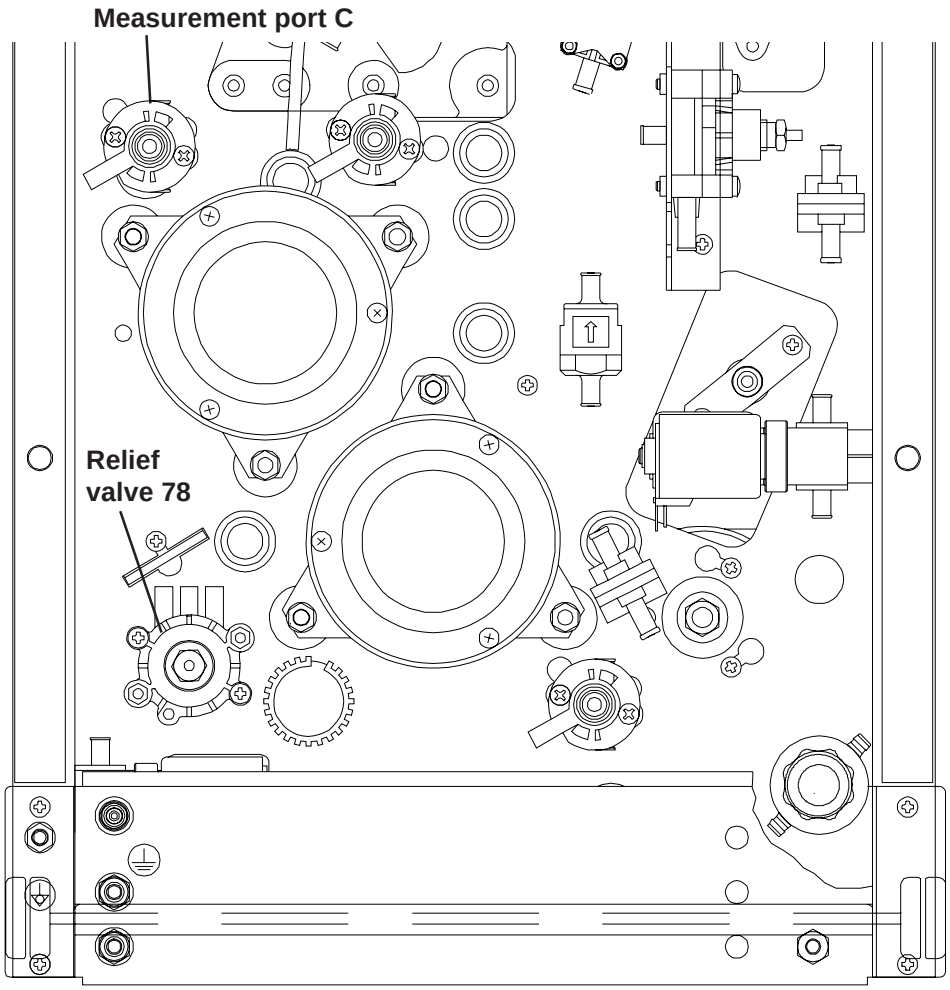

4008 B/S

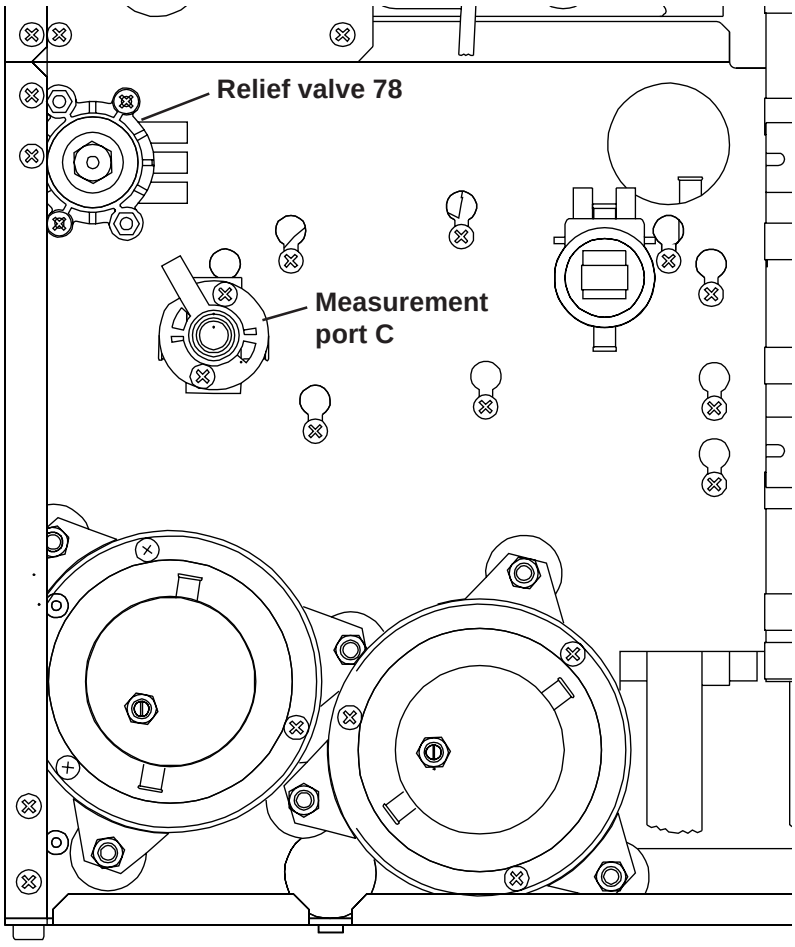

4008 E/H

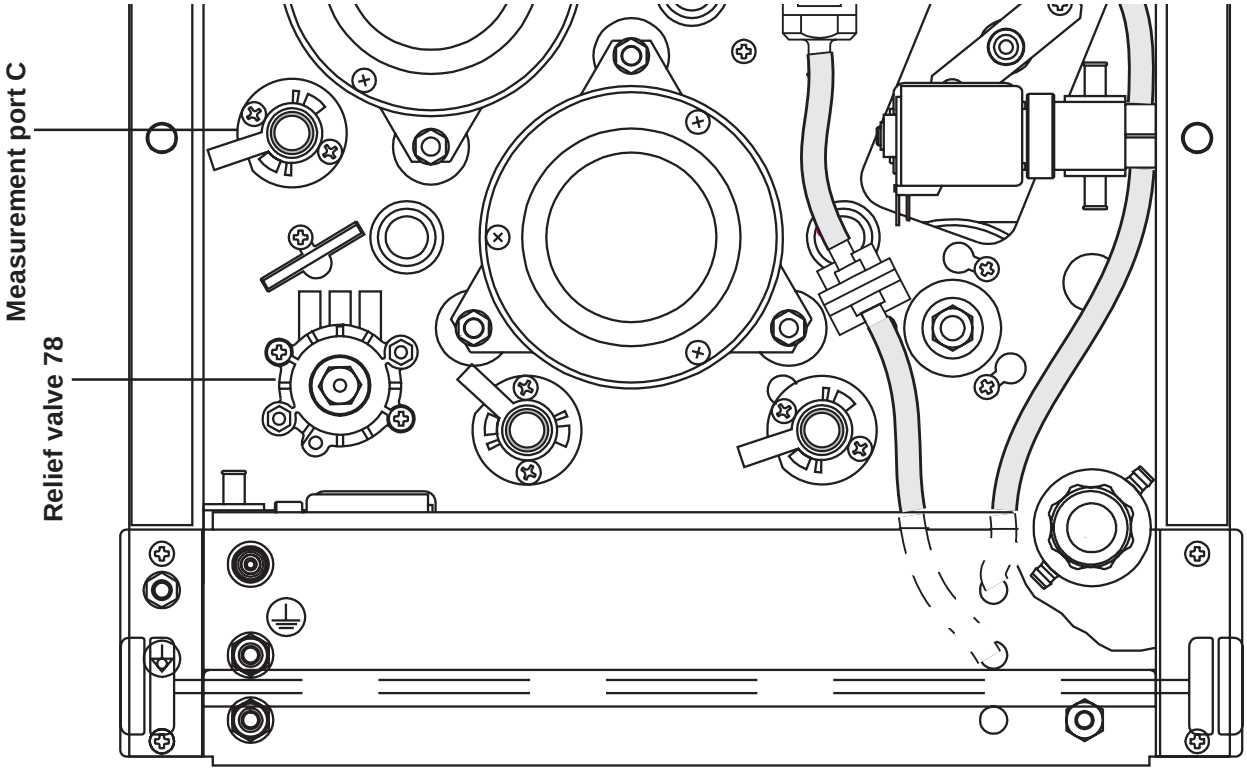

4008 B/S ONLINE*plus*™

3.3.5 UF pump volume

Note
If scales are used for measuring, it must be ensured that no concentrate is connected.

Measuring equipment: Scales or measuring cylinder, tolerance ±0.5 %

Place of measurement: Hydraulic unit open

Condition: Calibration program selected

Check/adjustment:

– **Checking the UF pump volume**
Remove the drain line of the UF pump from the T-piece (close the T-piece).
Place the drain line in the measuring cylinder.
Access the **CALIBRATION** menu, select and start the **ADJ. UF-PUMP VOLUME** option (➜ Calibration, chapter 4, Part 6).
Rated value: number of strokes in ml or g ±1%.

– **Adjusting the UF pump**
Remove the protective cover.
Unscrew the lock nut.
Change the delivery volume, using the adjusting screw (turning the adjusting screw clockwise reduces, turning it counter-clockwise increases the stroke volume).
Retighten the lock nut.
Verify the delivery volume.

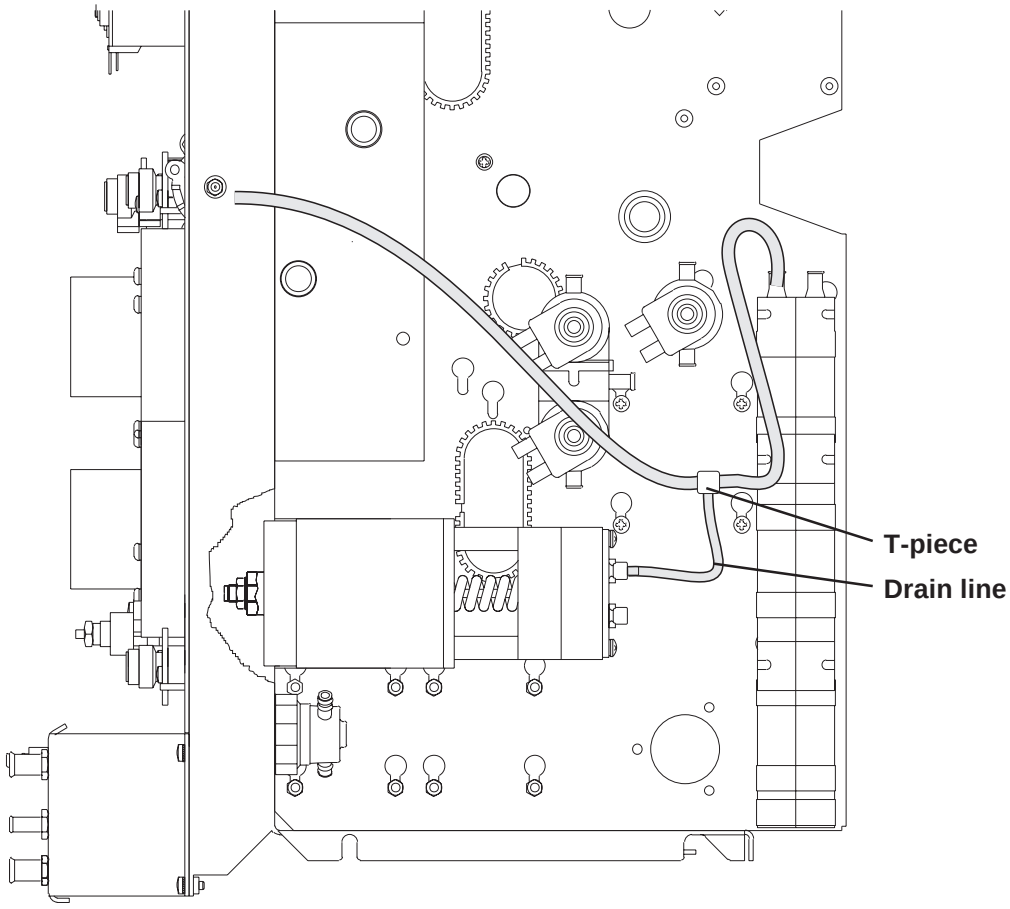

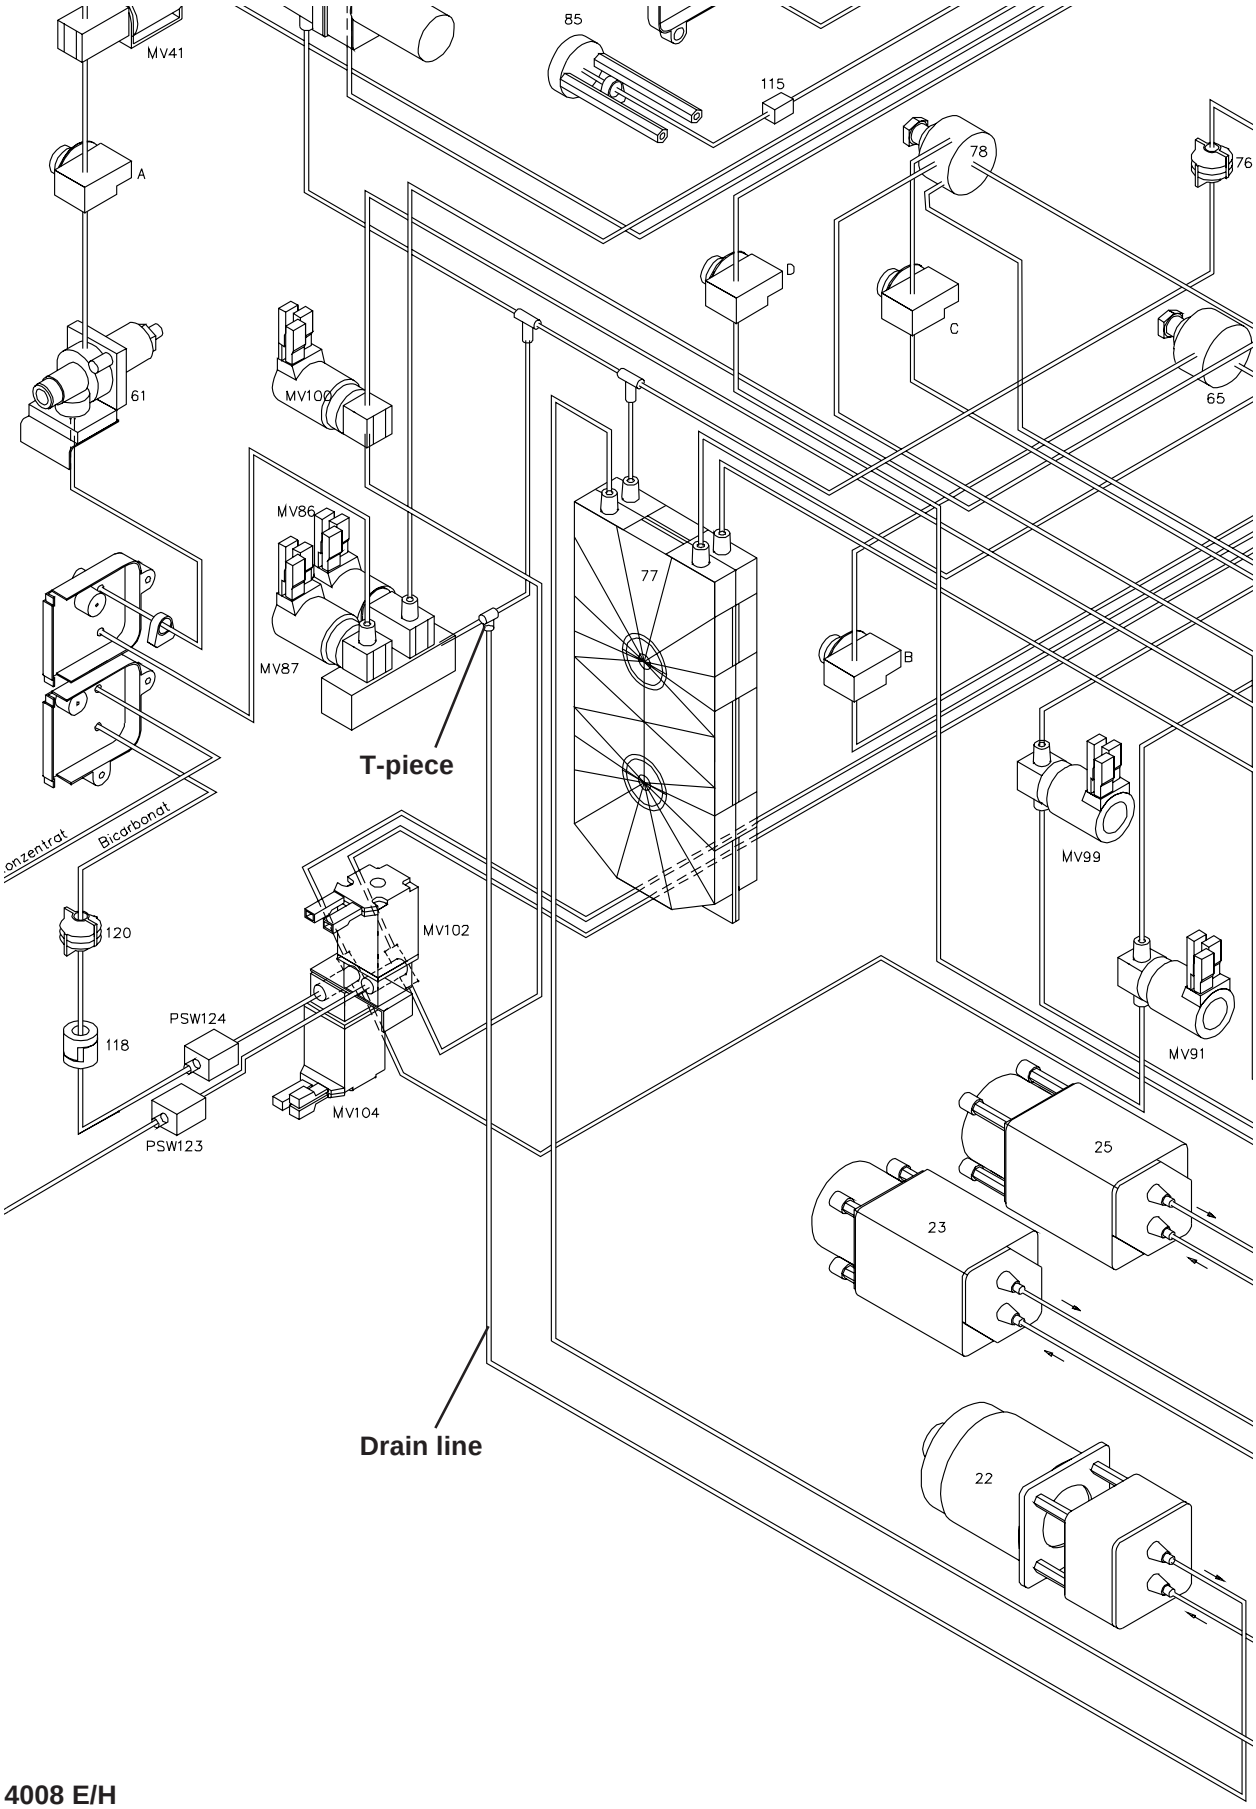
MV41
A
61
MV100
MV86
MV87
T-piece
onzentrat
Bicarbonat
120
118
PSW124
PSW123
MV102
MV104
85
115
78
76
D
C
65
77
B
MV99
MV91
25
23
22
Drain line

4008 E/H

3.3.6 CDS pressure switch

Measuring equipment: Measurement setup according to diagram,
UMED, HMED or pressure gauge (e.g. 0 to 1 bar, accuracy ±1 %),
syringe

Place of measurement: Hydraulic unit open

Condition: The CDS connectors in position 121 and position 122 must be depressurized.
The pressure compensation port on the pressure switch must be open to air (atmospheric pressure).
The lines of the measuring equipment should be as short as possible.
The service mode must be selected.

Check/adjustment:
– Connect the measuring equipment as illustrated in the diagram.
– Select the DIAGNOSTICS menu:
READ INPUTS
READ DIGITAL INPUTS
CPU1: RD DIGITAL INP
I: CPU1_PSW_V102 or I: CPU1_PSW_104
– Activate the audible alarm by pressing the (**Alarm**) **Tone Mute** key (depressurized: alarm on).
– During these menu options, the solenoid valves MV102 and MV104 are closed.
– Use the syringe to create a pressure of 0.7 bar.
– Use forceps to clamp the line at point **a**, so that the pressure switch remains loaded with 0.7 bar.
– Verify the switching point by means of the audible alarm
Rated values:
Alcatel pressure switch (part no.: 674 322 1) (yellow): 0.68 – 0.80 bar
Delta pressure switch, dark grey: 0.68 – 0.72 bar
Envec pressure switch: 0.68 – 0.72 bar
If the switching point deviates, adjust with the adjusting screw **b** (make sure there is no mechanical load on the pressure switch while adjusting).
– After completed adjustment, depressurize the measuring equipment and repeat the check. If necessary, repeat the adjustment procedure.

This adjustment procedure simultaneously checks the tightness of the check valves 117 and 118 and the solenoid valves 102 and 104.

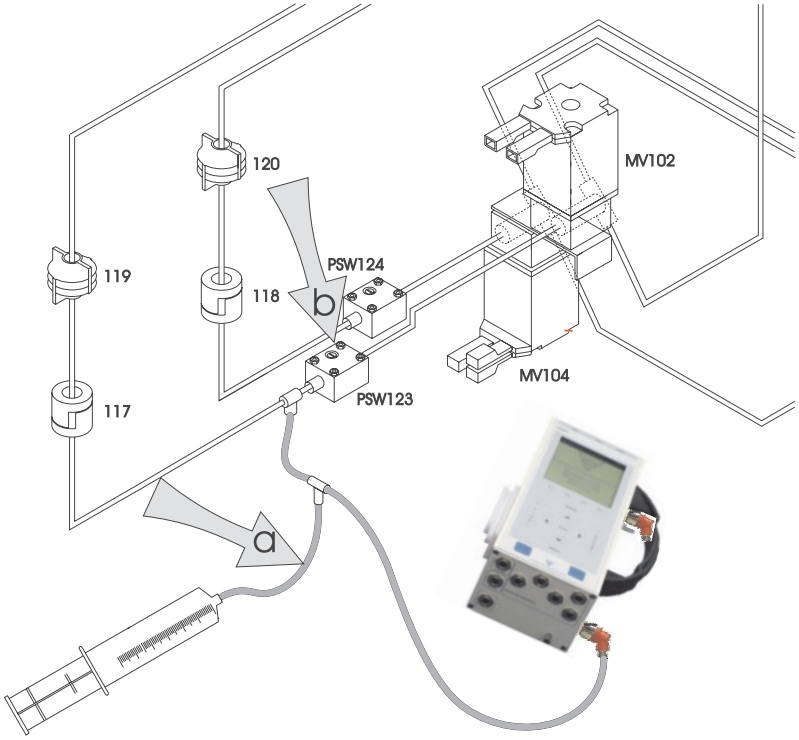

4008 E/H

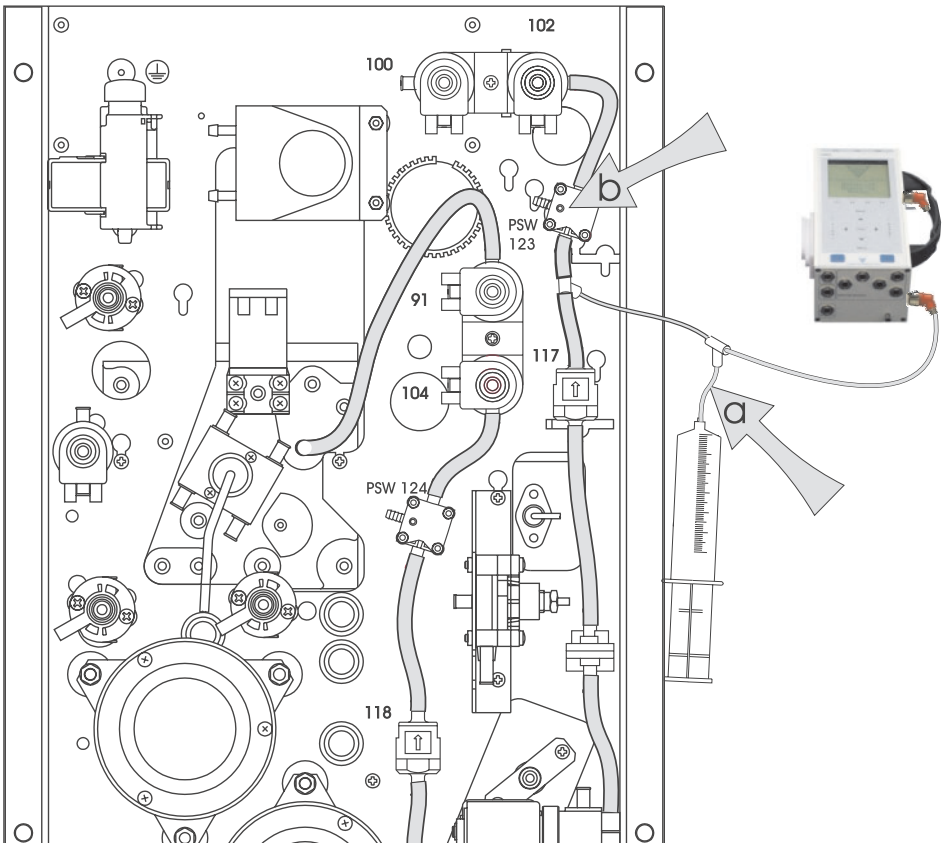

4008 B/S

3.3.7 bi*b*ag® pressure transducer calibration

- **General Notes on bi*b*ag® pressure transducer calibration**

The calibration described below can be performed by means of a multimeter or the diagnostics program.

In order to read in the corresponding signal, the voltage of AD22 must be measured at pin 1 or the **E: CPU1_BIBAG_PSW** menu item must be selected in the diagnostics program.

The ALCATEL pressure switch is calibrated in the diagnostics program of the dialysis system.

The calibration of the Envec pressure switch is neither possible nor required. These pressure switches are set to a fixed position and can be checked in the diagnostics program.

The audible signal can be activated by pressing the **TONE MUTE** key.

- **Selection in the Diagnostics program**

Turn the hemodialysis system off.

Set the Service switch to **ON** (up).

Turn the hemodialysis system on.

DIAGNOSTICS

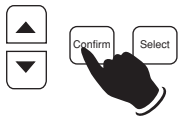

Use the ▲ and ▼ keys to select **DIAGNOSTICS**.

Press the **Confirm** key.

READ INPUTS

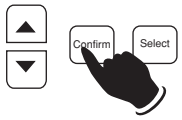

Use the ▲ and ▼ keys to select **READ INPUTS**.

Press the **Confirm** key.

READ DIGITAL INPUTS

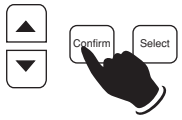

Use the ▲ and ▼ keys to select **READ DIGITAL INPUTS**.

Press the **Confirm** key.

CPU1: RD DIGITAL INP

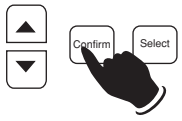

Use the ▲ and ▼ keys to select **CPU1: RD DIGITAL INP**.

Press the **Confirm** key.

E: CPU1_BIBAG_PSW

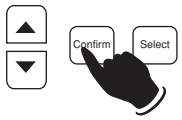

Use the ▲ and ▼ keys to select **E: CPU1_BIBAG_PSW**.

Press the **Confirm** key.

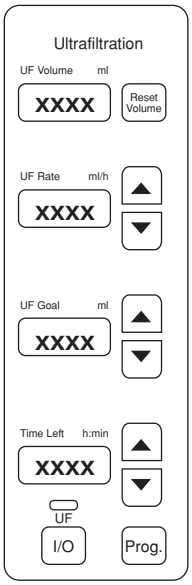

Watchdog supply voltage (4.5 V to 5.5 V)

12-V voltage (11.5 V to 12.5 V)

24-V voltage (23 V to 25 V)

Battery charging voltage (> 20 V)

The active levels **0000** or **1111** are shown on all UF displays or on the display of dialysis systems with a monitor.

Note
In the menu items **E: CPU1_BIBAG_PSW**, the active level is identified by **1111**.
The active level of the circuit output is LOW (< 1 V).

- **Calibration of the ALCATEL pressure switch**

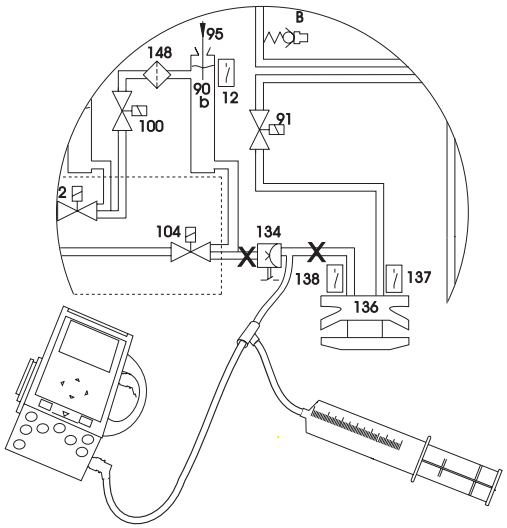

Clamp the lines (**X**).

Connect the pressure gauge and the syringe and build up a pressure of 100 mbar + 10 mbar.

Turn the potentiometer (AD22 or directly on the pressure switch) until Low Level (< 1 V) (**1111**) is displayed on the UF displays.

Slowly turn the potentiometer into the opposite direction until the High level (> 10 V) (**0000**) is shown on the UF displays.

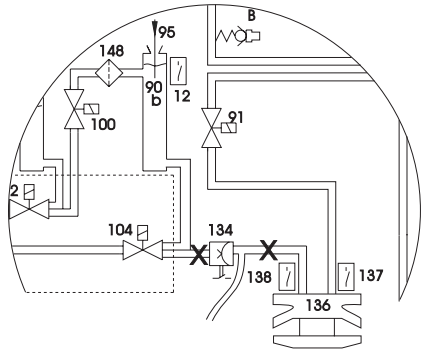

No pressure at the pressure transducer.

UF displays must show High level (**0000**).

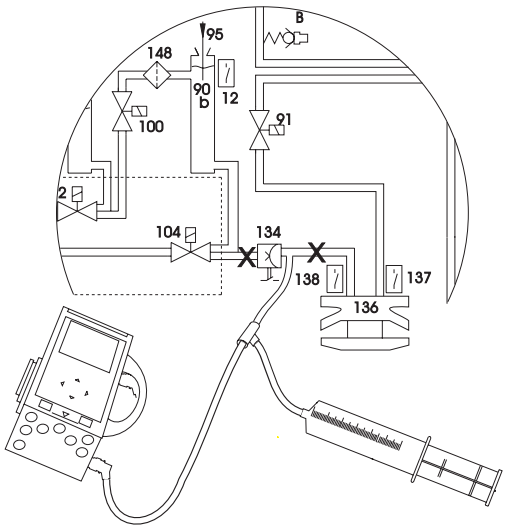

Clamp the lines (**X**).

Connect the pressure gauge and the syringe and build up a pressure of 160 mbar.

UF displays must show Low level (**1111**).

Slowly reduce the pressure. UF displays must show High level (**0000**) at a minimum of 100 mbar.

If necessary, repeat calibration.

Pressure transducer calibration completed.

3.4 Air detector

Caution
For adjusting the air detector, the system must be in “Calibration” mode. The ambient temperature should range between 15 and 35 °C.

Caution
The calibration using the set for the air detector calibration is only valid for systems used together with Fresenius tubing systems.
Observe the “use by” date!

- **Adjusting the air detector LD 22, using the set for the air detector calibration (see also adjustment instructions no. M36 067)**

  The system must be in Service mode and the bridge J1 / LP 450 in the calibration position.

  Fill the spherical hollow in the adjusting block with grease; remove excess grease with the spatula, so that only the hollows are filled to the brim with grease.

  Introduce the greased adjusting block into the drip chamber holder (the slant edges first). During this process, make sure that the ultrasonic sensors neatly engage into the spherical hollows of the normal. The normal must not touch the walls of the holder but hang freely between the sensors.

  Turn the potentiometer 1 and then the potentiometer 2 on LP 450 clockwise until LED D5 and LED D10 on LP 450 have turned dark.
  Slowly (caution: time constant) turn back the potentiometer 1 / LP 450 until LED D5 on LP 450 is illuminated.
  Slowly (caution: time constant) turn back the potentiometer 2 / LP 450 until LED D10 on LP 450 is illuminated.

  Plug bridge J1 / LP 450 to the ‘operating’ position.

  LED D5 and LED D10 must both be dark.

  Take the adjusting block out of the drip chamber and completely remove the grease from the drip chamber holder, using only lint-free cloth and permissible disinfectants.

  Check:

  Fill the spherical hollows of the checking block with grease and remove any excess grease with a spatula, so that only the hollows are filled to the brim with grease.

  Insert the greased checking block into the drip chamber holder. During this process, make sure that the ultrasonic sensors neatly engage into the spherical hollows of the normal. The normal must not touch the walls of the holder but hang freely between the sensors.

  Both LED D5 and LED D10 must be illuminated. If one or two of the LEDs is not illuminated, repeat the adjustment process.

  Take the checking block out of the drip chamber and completely remove the grease from the drip chamber holder, using only lint-free cloth and permissible disinfectants.

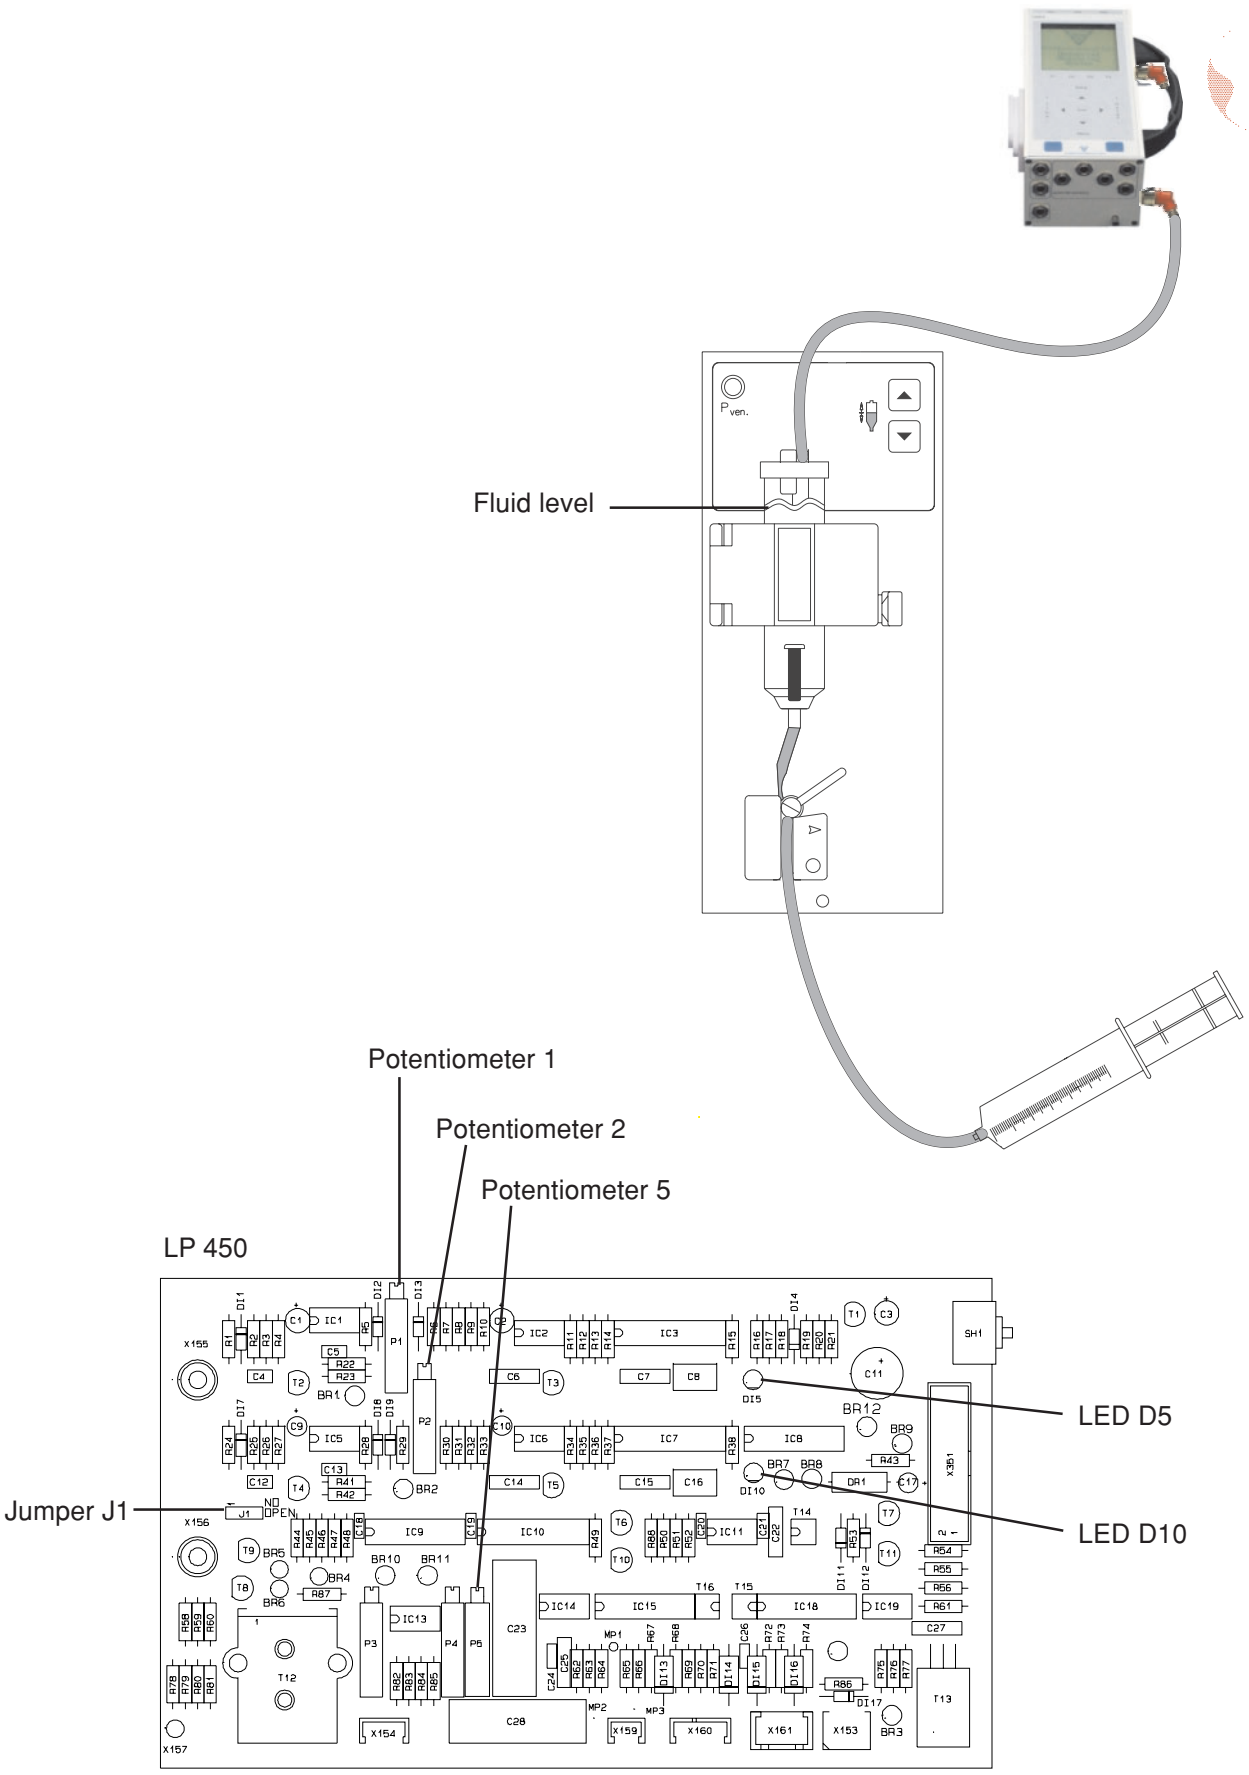
Fluid level
Potentiometer 1
Potentiometer 2
Potentiometer 5
LP 450
LED D5
LED D10
Jumper J1

- **Alternative: Adjusting the air detector without the set for the air detector calibration**

  Measuring equipment: Measurement setup according to diagram
  UMED, HMED or pressure gauge, bubble catcher, syringe filled with degassed water or saline solution

  Place of measurement: Air detector

  Check / adjustment:
  - **Adjusting the ultrasonic detector**
    Install the measurement set-up before checking / adjusting the air detector. Do not yet place the line in the occlusion clamp.
    Jumper J1 / P.C.B. LP 450 set to calibration.
    Fill the bubble catcher. The fluid level must be set to approx. 10 mm above the top edge of the sensor holder.
    Turn potentiometer 1 and potentiometer 2 on P.C.B. LP 450 clockwise, until the LED DI5 and LED DI10 on P.C.B. LP 450 are dark.
    Slowly (attention: time constant) turn potentiometer 1 on P.C.B. LP 450 counterclockwise, until the LED DI5 on P.C.B. LP 450 lights.
    Slowly (attention: time constant) turn the potentiometer 2 on P.C.B. LP 450 counterclockwise, until the LED DI10 on P.C.B. LP 450 lights.
    After completion of the calibration procedure, set the jumper J1 / P.C.B. LP 450 back to the operation position.
  - **Check**
    Lower the level in the bubble catcher: an alarm must be emitted.
    Raise the level in the bubble catcher: it must be possible to clear the alarm; both LEDs must be off!
  - **Checking the venous line clamp** (➜ Fig.)
    Place the line in the venous line clamp.
    Open the clamp and, using the syringe, generate a pressure of approx. 2 bar.
    Close the clamp.
    The pressure must not drop by more than 0.1 bar within 3 minutes.
  - **Adjusting the optical detector**
    Use the gray filter, double-laid, part no. 640 560 1.
    Diagnostics menu; reading of digital inputs by CPU 1; item E: CPU1_OD_IN.
    Install the gray filter, double-laid; close the hinged cover.
    Slowly turn potentiometer P5 on P.C.B. LP 450 clockwise, until the UF display indicates 1111.
    Slowly turn potentiometer P5 counterclockwise, until the display jumps to 0000. Continue to turn the potentiometer counterclockwise for half a turn.
    Avoid incident light from external sources.

4 Calibration program

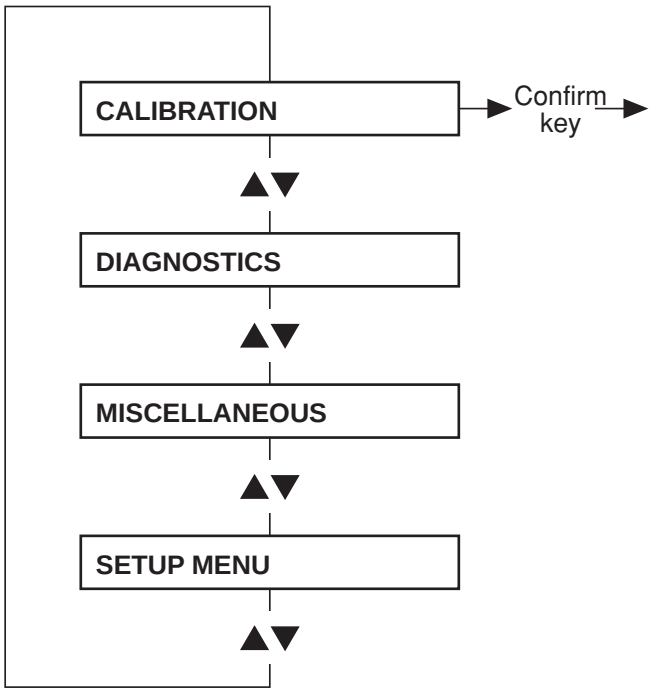

Adjustments made without display messages:

Adjusting the blood pump stop alarm (blood pump or HDF pump) 4-5

Calibrating the Single-Needle blood pump 4-11

Adjusting the current rise pulse 4-15

Adjusting the Hall sensor in the heparin pump 4-43

In the Calibration, Diagnostics, Setup and Miscellaneous program the function of the keys differs between 4008 E/B and 4008 H/S systems.

Function	4008 E/B	4008 H/S
Scrolling through menu options	▲▼	▲▼
Selecting a menu option	Confirm	Conf
Changing values and functions in a menu	▲▼	+/–
Saving changes	Override	Tone Mute
Exiting a menu without saving the data	Select	Esc

In the description of the steps, the differing keys to be used on 4008 H/S systems are shown in brackets.

- **Main menu**

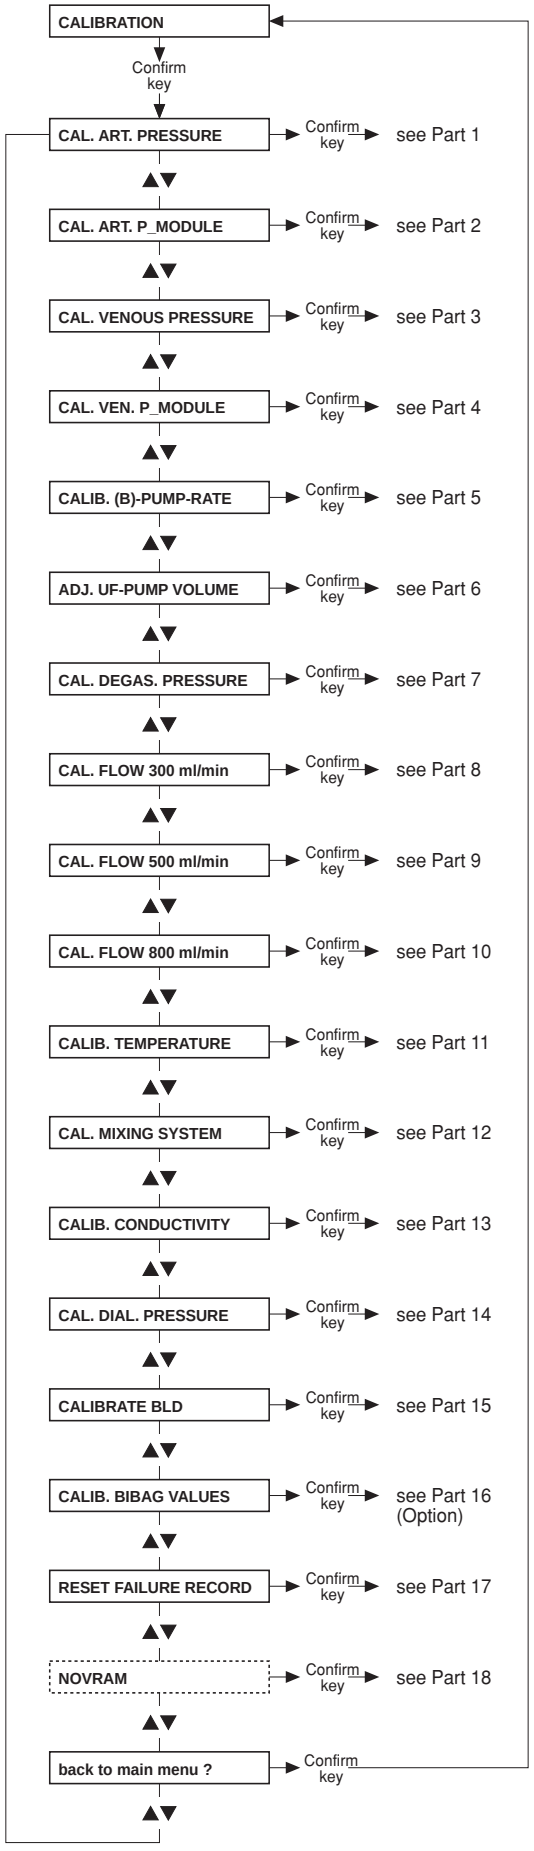

Note
Before calibrating the hydraulics, remove possibly existing precipitate by running an appropriate disinfection program.

- **Part 1: Calibrating the arterial pressure**

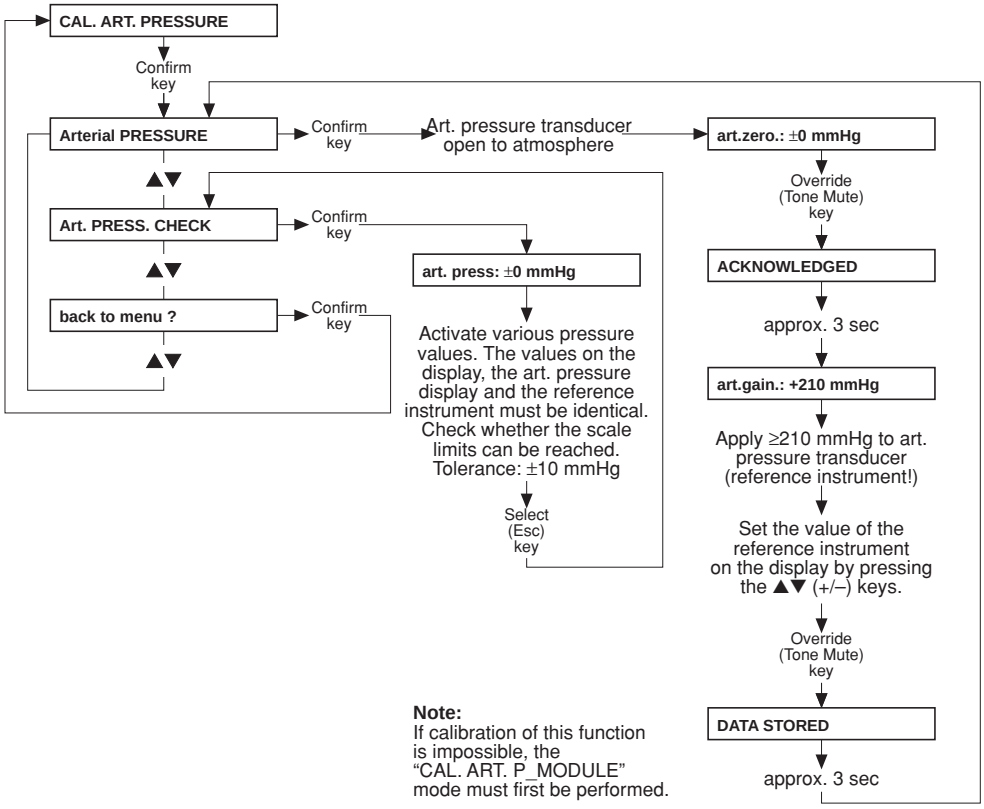
CAL. ART. PRESSURE
Confirm key
Arterial PRESSURE
Confirm key
Art. pressure transducer open to atmosphere
art.zero.: ±0 mmHg
Override (Tone Mute) key
ACKNOWLEDGED
approx. 3 sec
art.gain.: +210 mmHg
Apply ≥210 mmHg to art. pressure transducer (reference instrument!)
Set the value of the reference instrument on the display by pressing the ▲▼ (+/–) keys.
Override (Tone Mute) key
DATA STORED
approx. 3 sec
Art. PRESS. CHECK
Confirm key
art. press: ±0 mmHg
Activate various pressure values. The values on the display, the art. pressure display and the reference instrument must be identical. Check whether the scale limits can be reached. Tolerance: ±10 mmHg
Select (Esc) key
back to menu ?
Confirm key
Note:
If calibration of this function is impossible, the "CAL. ART. P_MODULE" mode must first be performed.

Note
Pressure gauge accuracy: ±1 % of the measured value.

- **Part 2: Calibrating the pressure in the arterial blood pump**

Set the hex switch in the module (P.C.B. LP 624, pos. 1) to position F.
Should the error message E02 appear on the blood pump display, clear the message by pressing the **Start/Stop** key.

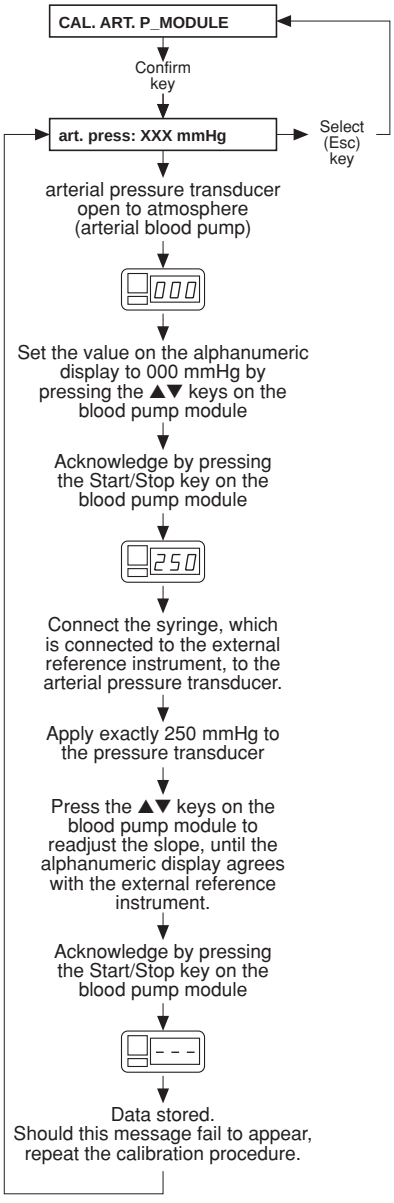
CAL. ART. P_MODULE
Confirm key
art. press: XXX mmHg
Select (Esc) key
arterial pressure transducer open to atmosphere (arterial blood pump)
000
Set the value on the alphanumeric display to 000 mmHg by pressing the ▲▼ keys on the blood pump module
Acknowledge by pressing the Start/Stop key on the blood pump module
250
Connect the syringe, which is connected to the external reference instrument, to the arterial pressure transducer.
Apply exactly 250 mmHg to the pressure transducer
Press the ▲▼ keys on the blood pump module to readjust the slope, until the alphanumeric display agrees with the external reference instrument.
Acknowledge by pressing the Start/Stop key on the blood pump module
- - -
Data stored.
Should this message fail to appear, repeat the calibration procedure.

Return the hex switch to position 0.

- **Without display messages: adjusting the blood pump stop alarm (blood pump or HDF pump)**

  Set the hex switch in the module (P.C.B. LP 624, pos. 1) to position B.
  Should the error message E02 appear on the blood pump display, clear the message by pressing the **Start/Stop** key.

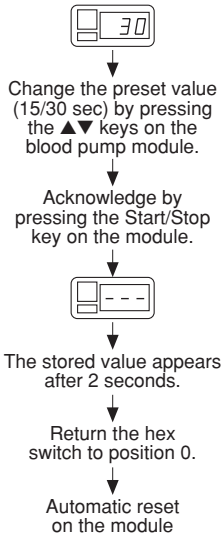
30
Change the preset value (15/30 sec) by pressing the ▲▼ keys on the blood pump module.
Acknowledge by pressing the Start/Stop key on the module.
- - -
The stored value appears after 2 seconds.
Return the hex switch to position 0.
Automatic reset on the module

- **Part 3: Calibrating the venous pressure**

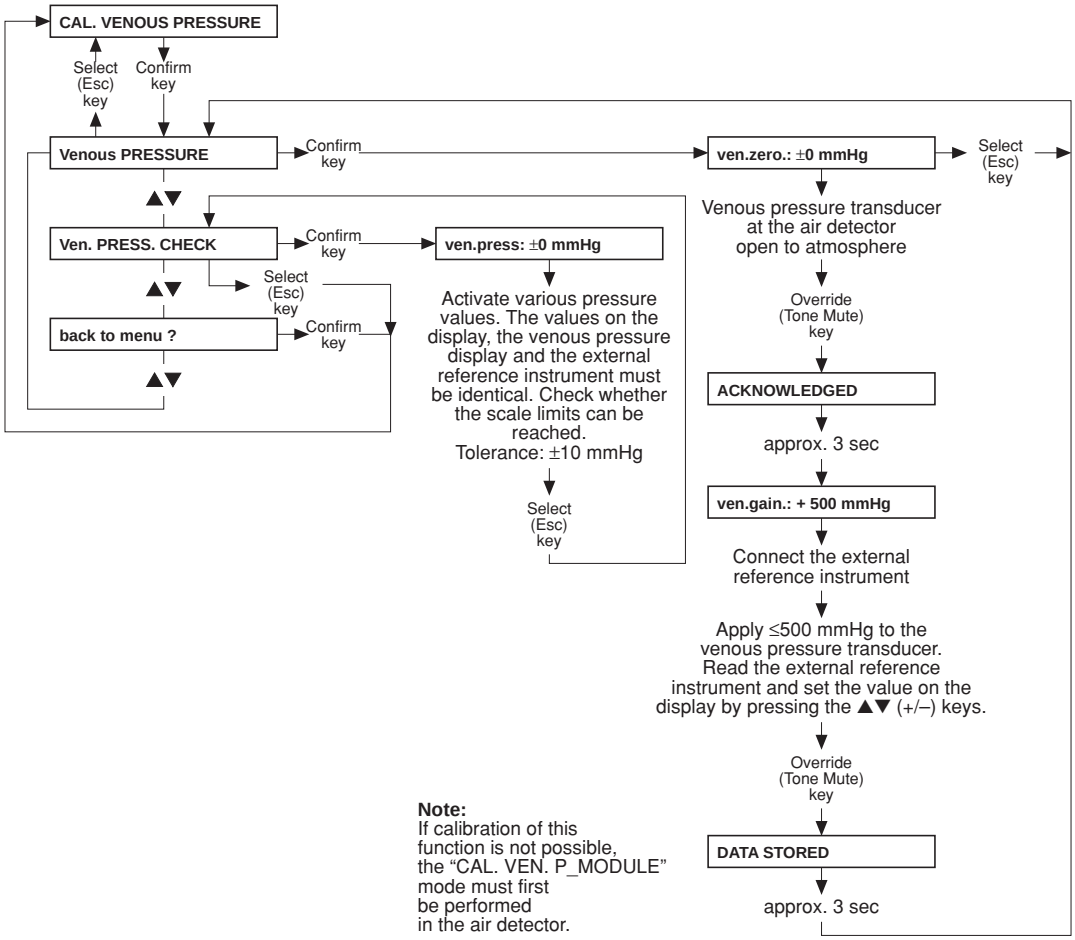
CAL. VENOUS PRESSURE
Select (Esc) key
Confirm key
Venous PRESSURE
Confirm key
ven.zero.: ±0 mmHg
Select (Esc) key
Venous pressure transducer at the air detector open to atmosphere
Override (Tone Mute) key
ACKNOWLEDGED
approx. 3 sec
ven.gain.: + 500 mmHg
Connect the external reference instrument
Apply ≤500 mmHg to the venous pressure transducer. Read the external reference instrument and set the value on the display by pressing the ▲▼ (+/–) keys.
Override (Tone Mute) key
DATA STORED
approx. 3 sec
Ven. PRESS. CHECK
Confirm key
ven.press: ±0 mmHg
Activate various pressure values. The values on the display, the venous pressure display and the external reference instrument must be identical. Check whether the scale limits can be reached.
Tolerance: ±10 mmHg
Select (Esc) key
Select (Esc) key
back to menu ?
Confirm key
Note:
If calibration of this function is not possible, the “CAL. VEN. P_MODULE” mode must first be performed in the air detector.

Note
Pressure gauge accuracy: ±1 % of the measured value.

- **Part 4: Calibrating the venous pressure measurement in the air detector**

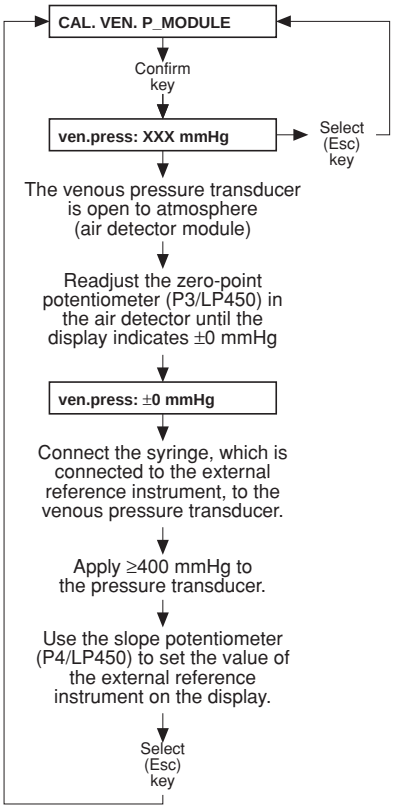
CAL. VEN. P_MODULE
Confirm key
ven.press: XXX mmHg
Select (Esc) key
The venous pressure transducer is open to atmosphere (air detector module)
Readjust the zero-point potentiometer (P3/LP450) in the air detector until the display indicates ±0 mmHg
ven.press: ±0 mmHg
Connect the syringe, which is connected to the external reference instrument, to the venous pressure transducer.
Apply ≥400 mmHg to the pressure transducer.
Use the slope potentiometer (P4/LP450) to set the value of the external reference instrument on the display.
Select (Esc) key

Note:
Check zero point and slope;
if necessary, repeat the procedure.

Note:
When adjusting the
air detector,
execute the
CAL. VENOUS PRESSURE
menu item.

LP 450

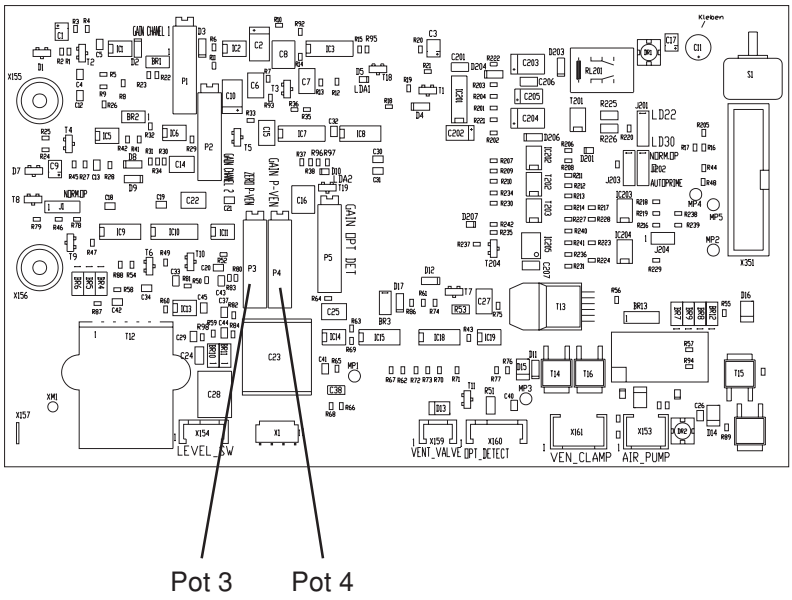

- **Part 5: Calibrating the blood pump rates**

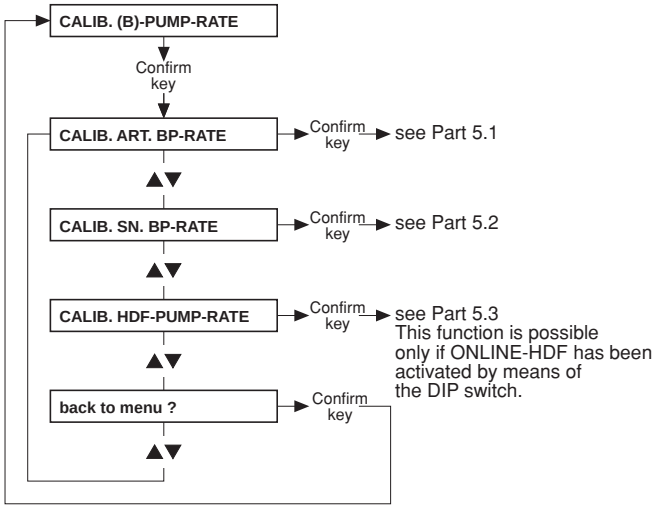

- **Part 5.1: Calibrating the arterial blood pump**

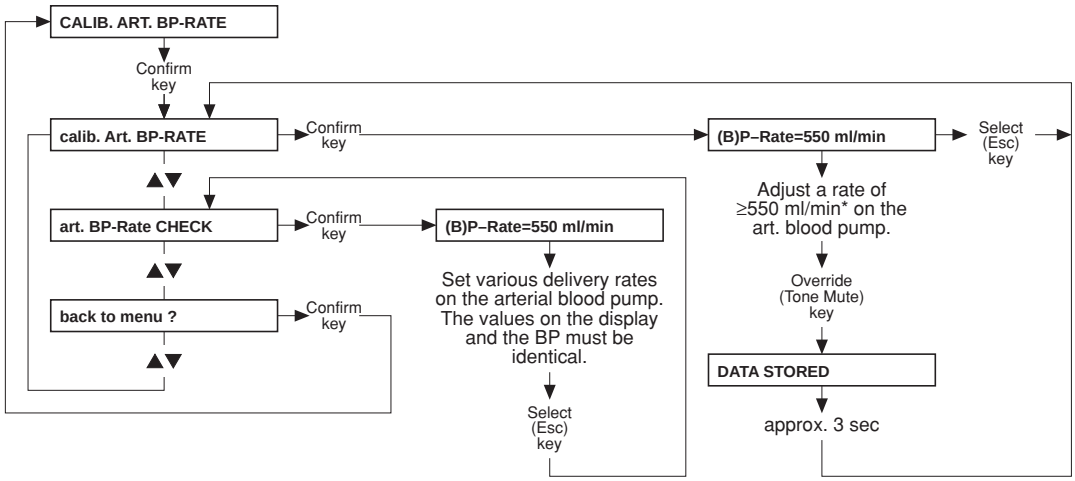
CALIB. ART. BP-RATE
Confirm key
calib. Art. BP-RATE
Confirm key
(B)P–Rate=550 ml/min
Select (Esc) key
Adjust a rate of ≥550 ml/min* on the art. blood pump.
art. BP-Rate CHECK
Confirm key
(B)P–Rate=550 ml/min
Set various delivery rates on the arterial blood pump. The values on the display and the BP must be identical.
Override (Tone Mute) key
back to menu ?
Confirm key
DATA STORED
Select (Esc) key
approx. 3 sec

Note: Set the line diameter to 8 mm before starting the calibration procedure and press **Start/Stop** on the blood pump.

* The BP rate of 550 ml/min represents a default value. It can be changed using the ▲▼ (+/–) keys.

- **Part 5.2: Calibrating the Single-Needle blood pump rate**

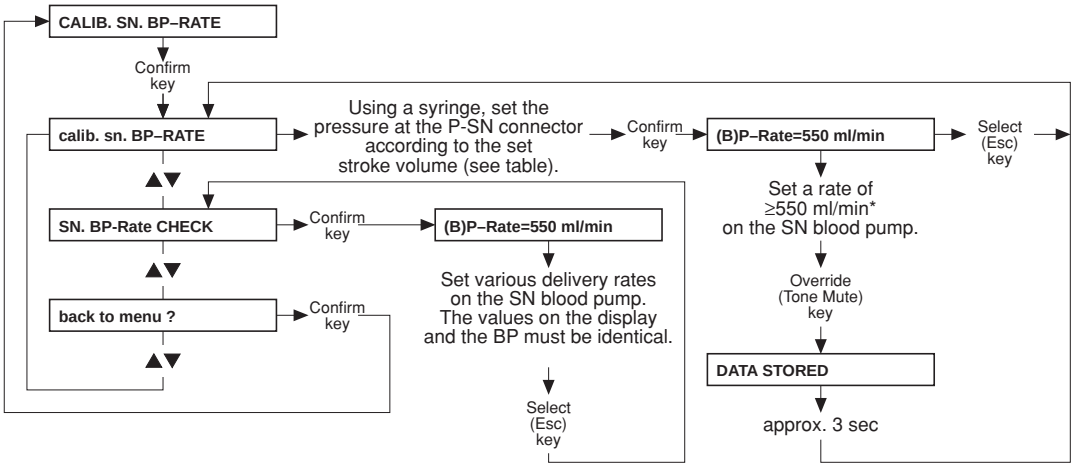
CALIB. SN. BP–RATE
Confirm key
calib. sn. BP–RATE
Using a syringe, set the pressure at the P-SN connector according to the set stroke volume (see table).
Confirm key
(B)P–Rate=550 ml/min
Select (Esc) key
Set a rate of ≥550 ml/min* on the SN blood pump.
SN. BP-Rate CHECK
Confirm key
(B)P–Rate=550 ml/min
Set various delivery rates on the SN blood pump. The values on the display and the BP must be identical.
Override (Tone Mute) key
back to menu ?
Confirm key
DATA STORED
Select (Esc) key
approx. 3 sec

Note: Set the line diameter to 8 mm before starting the calibration procedure and press Start/Stop on the blood pump.

* The BP rate of 550 ml/min represents a default value. It can be changed using the ▲▼ (+/–) keys.

SN pump: lower switching point fixed to 75 mmHg

Stroke volume (ml)	10	15	20	25	30	35	40	45	50
Upper switching point (mmHg) ± 7 mmHg	110	130	150	172	195	219	244	270	299

- **Setting the Single-Needle stroke volume**

Press the ▼ and the **Start/Stop** key simultaneously.
Use the ▲ and ▼ keys to adjust the stroke volume and the **Start/Stop** key to confirm the value.

- **Part 5.3: Calibrating the ONLINE-HDF pump (option)**

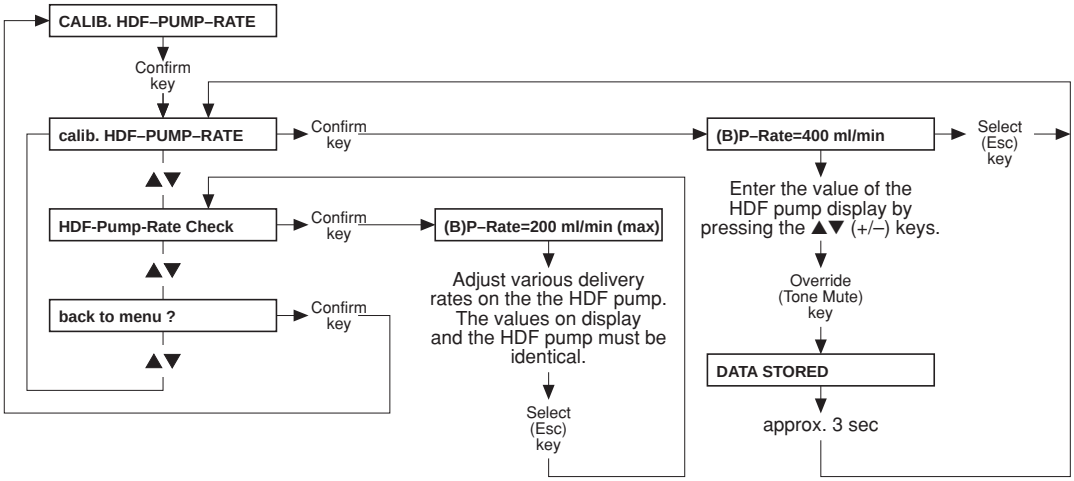
CALIB. HDF–PUMP–RATE
Confirm key
calib. HDF–PUMP–RATE
Confirm key
(B)P–Rate=400 ml/min
Select (Esc) key
Enter the value of the HDF pump display by pressing the ▲▼ (+/–) keys.
Override (Tone Mute) key
DATA STORED
approx. 3 sec
HDF-Pump-Rate Check
Confirm key
(B)P–Rate=200 ml/min (max)
Adjust various delivery rates on the the HDF pump. The values on display and the HDF pump must be identical.
Select (Esc) key
back to menu ?
Confirm key

Note: This function is possible only if ONLINE-HDF has been activated by means of the DIP switch.

- **Without display messages: Calibrating the Single-Needle blood pump (SN pressure) (option)**

Set the hex switch in the module (P.C.B. LP 624, pos. 1) to position F.
Should the error message E02 appear on the blood pump display, clear the message by pressing the **Start/Stop** key.

The SN pressure transducer is open to atmosphere (SN blood pump).

Press the Start/Stop key on the SN blood pump.

Connect the syringe, which is connected to the external reference instrument, to the SN pressure transducer.

Apply exactly 250 mmHg to the pressure transducer.

Acknowledge by pressing the Start/Stop key on the SN blood pump.

The values are stored.

Finally return the hex switch to position 1. Then select SN.BP-Rate CHECK

Check the SN stroke volume.

Set stroke volume, e.g. 30 ml.

Using a syringe and the external reference instrument, check the lower (fixed to 75 mmHg) and the upper switching point. (Depending on the stroke volume selected, the upper switching point can be found in the table).

If the switching points are outside the tolerance range, repeat the calibration procedure.

SN pump: lower switching point fixed to 75 mmHg

Stroke volume (ml)	10	15	20	25	30	35	40	45	50
Upper switching point (mmHg) ± 7 mmHg	110	130	150	172	195	219	244	270	299

Note
It may be necessary to change the Single-Needle stroke volume:
Press the ▼ and the **Start/Stop** key simultaneously.
Use the ▲ and ▼ keys to adjust the stroke volume and the **Start/Stop** key to confirm the value.

- **Part 6: Adjusting the UF pump volume**

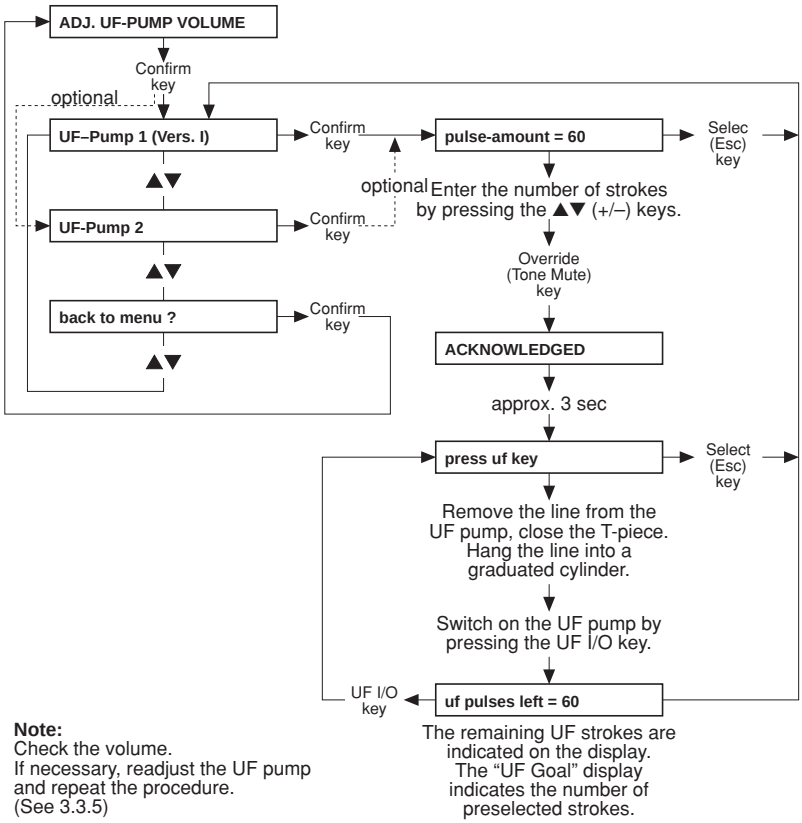
ADJ. UF-PUMP VOLUME
Confirm key
optional
UF–Pump 1 (Vers. I)
Confirm key
pulse-amount = 60
Selec (Esc) key
optional
Enter the number of strokes by pressing the ▲▼ (+/–) keys.
UF-Pump 2
Confirm key
Override (Tone Mute) key
back to menu ?
Confirm key
ACKNOWLEDGED
approx. 3 sec
press uf key
Select (Esc) key
Remove the line from the UF pump, close the T-piece. Hang the line into a graduated cylinder.
Switch on the UF pump by pressing the UF I/O key.
UF I/O key
uf pulses left = 60
The remaining UF strokes are indicated on the display. The “UF Goal” display indicates the number of preselected strokes.
Note:
Check the volume.
If necessary, readjust the UF pump and repeat the procedure.
(See 3.3.5)

Note
Graduated cylinder accuracy: ±0.5 %.

Note
If a scale is used as measurement instrument it must be ensured that no concentrate is connected.

- **Part 7: Calibrating the degassing pressure**

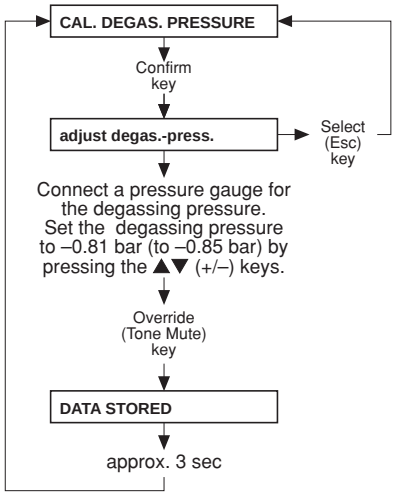
CAL. DEGAS. PRESSURE
Confirm key
adjust degas.-press.
Select (Esc) key
Connect a pressure gauge for the degassing pressure. Set the degassing pressure to –0.81 bar (to –0.85 bar) by pressing the ▲▼ (+/–) keys.
Override (Tone Mute) key
DATA STORED
approx. 3 sec

At this point, the following messages may appear:
– fill program active
– set flow on

See also 3.3.2 Degassing pump pressure

- **Part 8: 300 ml/min flow**

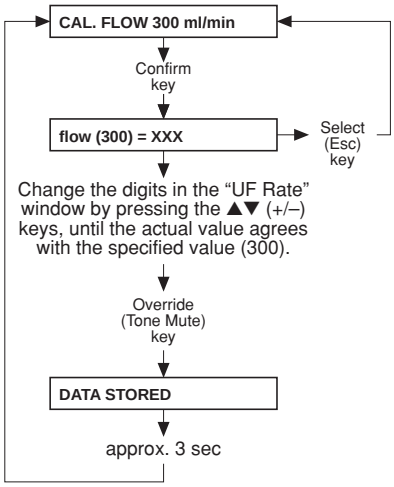
CAL. FLOW 300 ml/min
Confirm key
flow (300) = XXX
Select (Esc) key
Change the digits in the “UF Rate” window by pressing the ▲▼ (+/–) keys, until the actual value agrees with the specified value (300).
Override (Tone Mute) key
DATA STORED
approx. 3 sec

Important:
If it is impossible to adjust the 300 – 500 – 800 flow volumes, or if problems caused by flow alarms occur after the “calibrate flow” message has appeared, this can be caused by the setting of the current rise pulse.

Note:
(only for systems with advanced hydraulics)
For the flow selected first, the message “DIASAFE-filling act.” is displayed for 17 balancing chamber switchings.

Adjusting the current rise pulse:

– Select "**CAL.FLOW 300 ml/min**"; display: flow (300) = XXX.
– The actual flow XXX must be approx. 300; if necessary, correct it using the ▲ and ▼ keys.
– Connect an oscilloscope to MP8 and MP1, and the ground MP7 to P.C.B. LP 634.
– Use P1 to set the current rise pulse as shown in the diagram below. Make sure that the actual flow (display XXX) remains at approx. 300; if necessary, correct it using the ▲ and ▼ keys.

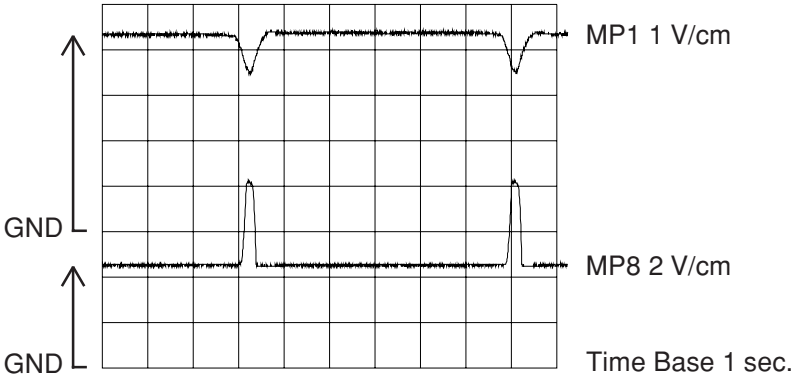

Alternative adjustment of the current rise (if an oscilloscope is not available):

– Select "calibrate flow 300 ml/min".
– There are two possibilities of reaction by the system:

1. The system runs with regular balancing chamber switching.
   Display: flow (300) = XXX.
   – If necessary, correct the flow using the ▲ and ▲ keys, until the actual flow indicates approx. 300.
   – Turn the potentiometer P1 counter-clockwise (wait for at least 10 sec after each rotation!), until the system switches to "Eigentakt".
   – Display: flow (300) = 147.
   – Now turn the potentiometer P1 clockwise (wait for at least 10 sec after each half-rotation!), until the actual flow again indicates approx. 300.
   – Turn the potentiometer P1 clockwise for another 2 rotations.

2. The system is in the "Eigentakt" mode.
   Display: flow (300) = 147.
   – Turn the potentiometer P1 clockwise, until the system switches from "Eigentakt" to regular balancing chamber switching (wait for approx. 10 sec after each rotation!).
   – Display: flow (300) = XXX.
   – If necessary, correct the flow using the ▲ and ▲ keys, until the actual flow indicates approx. 300.
   – Turn the potentiometer P1 counter-clockwise (wait for at least 10 sec after each rotation), until the system switches to "Eigentakt".
   – Display: flow (300) = 147.
   – Now turn the potentiometer P1 clockwise (wait for at least 10 sec after each half-rotation!), until the actual flow again indicates approx. 300.
   – Turn the potentiometer P1 clockwise for another 2 rotations.

After adjusting the current rise pulse, check and, if necessary, readjust the 300/500/800 flow settings.

- **Part 9: Calibrating the 500 ml/min flow**

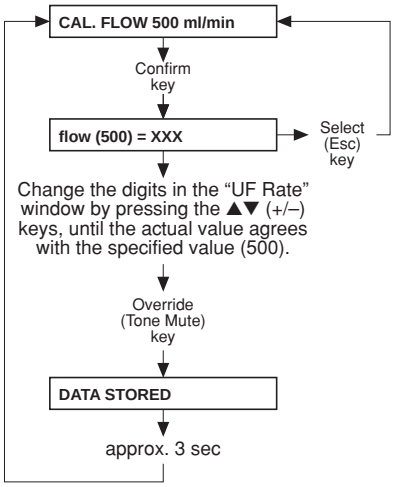
CAL. FLOW 500 ml/min
Confirm key
flow (500) = XXX
Select (Esc) key
Change the digits in the “UF Rate” window by pressing the ▲▼ (+/–) keys, until the actual value agrees with the specified value (500).
Override (Tone Mute) key
DATA STORED
approx. 3 sec

- **Part 10: 800 ml/min flow**

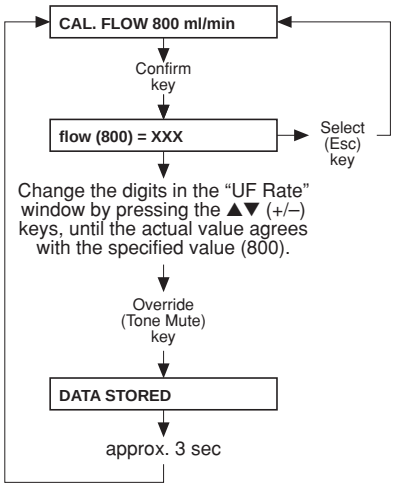
CAL. FLOW 800 ml/min
Confirm key
flow (800) = XXX
Select (Esc) key
Change the digits in the “UF Rate” window by pressing the ▲▼ (+/–) keys, until the actual value agrees with the specified value (800).
Override (Tone Mute) key
DATA STORED
approx. 3 sec

- **Part 11: Calibrating the dialysate temperature**

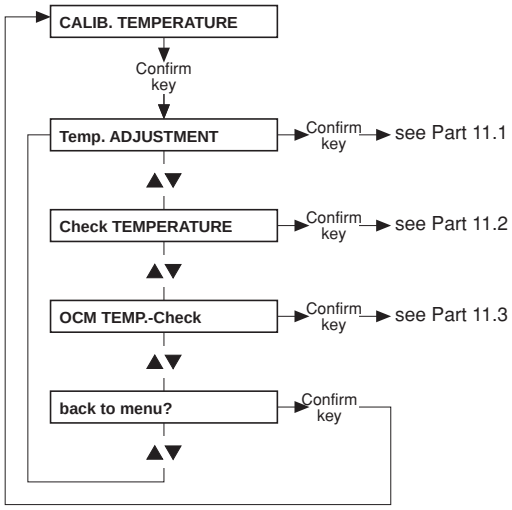

Note
Accuracy of the measuring instrument to be connected externally: ±0.2 °C.

- **Part 11.1: Adjusting the dialysate temperature**

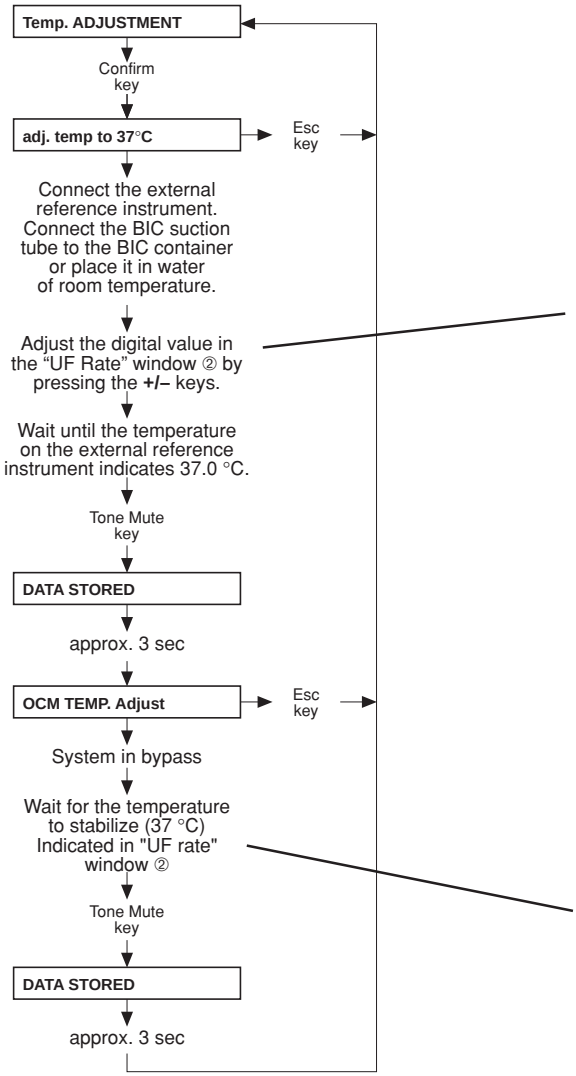
Temp. ADJUSTMENT
Confirm key
adj. temp to 37°C
Esc key
Connect the external reference instrument. Connect the BIC suction tube to the BIC container or place it in water of room temperature.
Adjust the digital value in the "UF Rate" window ② by pressing the +/– keys.
Wait until the temperature on the external reference instrument indicates 37.0 °C.
Tone Mute key
DATA STORED
approx. 3 sec
OCM TEMP. Adjust
Esc key
System in bypass
Wait for the temperature to stabilize (37 °C) Indicated in "UF rate" window ②
Tone Mute key
DATA STORED
approx. 3 sec

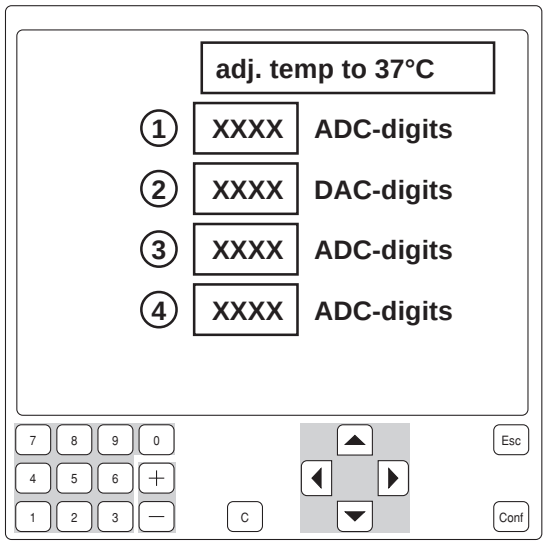

① NTC3; 8 bit

② Control 8 bit

③ NTC3; 12 bit (with OCM option only)

④ NTC109; 8 bit,
if NTC 109 is activated in SETUP

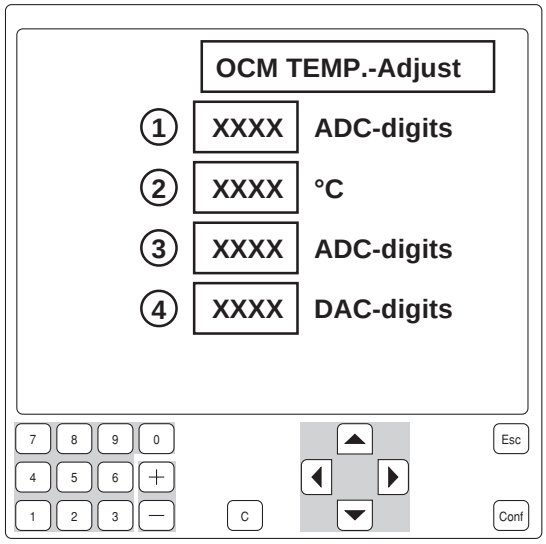

① NTC3; 8 bit (with OCM option: 12 bit)

② NTC3 temperature

③ NTC4; 12 bit (with OCM option only)

④ Dynamic measurement range switching

- **Part 11.2: Checking the dialysate temperature**

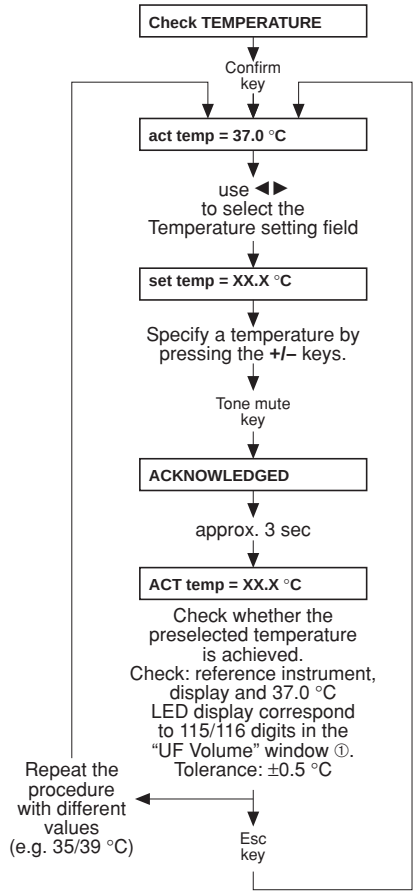
Check TEMPERATURE
Confirm key
act temp = 37.0 °C
use ◄ ► to select the Temperature setting field
set temp = XX.X °C
Specify a temperature by pressing the +/– keys.
Tone mute key
ACKNOWLEDGED
approx. 3 sec
ACT temp = XX.X °C
Check whether the preselected temperature is achieved.
Check: reference instrument, display and 37.0 °C
LED display correspond to 115/116 digits in the "UF Volume" window ①.
Tolerance: ±0.5 °C
Repeat the procedure with different values (e.g. 35/39 °C)
Esc key

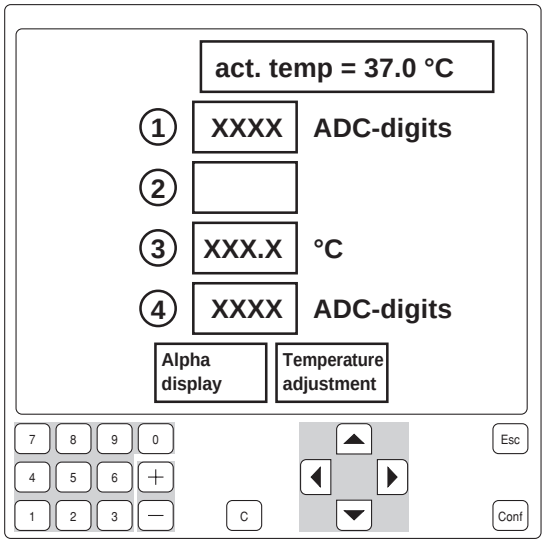

① NTC3; 8 bit

②

③ NTC109; temperature

④ NTC109; 8 bit

- **Part 11.3: Checking the dialysate temperature for the OCM option**

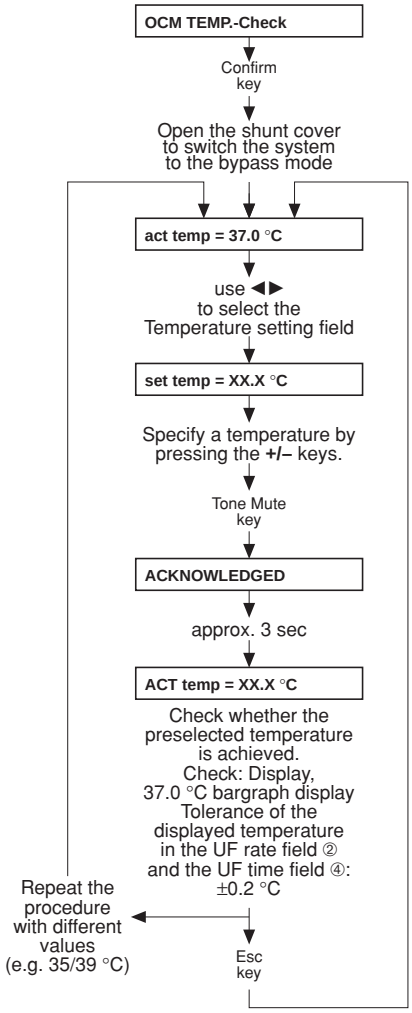
OCM TEMP.-Check
Confirm key
Open the shunt cover to switch the system to the bypass mode
act temp = 37.0 °C
use ◄► to select the Temperature setting field
set temp = XX.X °C
Specify a temperature by pressing the +/– keys.
Tone Mute key
ACKNOWLEDGED
approx. 3 sec
ACT temp = XX.X °C
Check whether the preselected temperature is achieved.
Check: Display, 37.0 °C bargraph display
Tolerance of the displayed temperature in the UF rate field ②
and the UF time field ④:
±0.2 °C
Repeat the procedure with different values (e.g. 35/39 °C)
Esc key

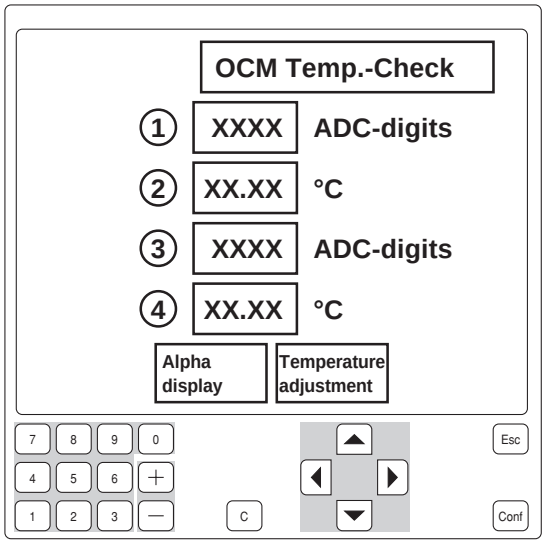

① NTC3; 12 bit
② NTC3; temperature
③ NTC4; 12 bit
④ NTC4; temperature

- **Part 12: Calibrating the mixing system**

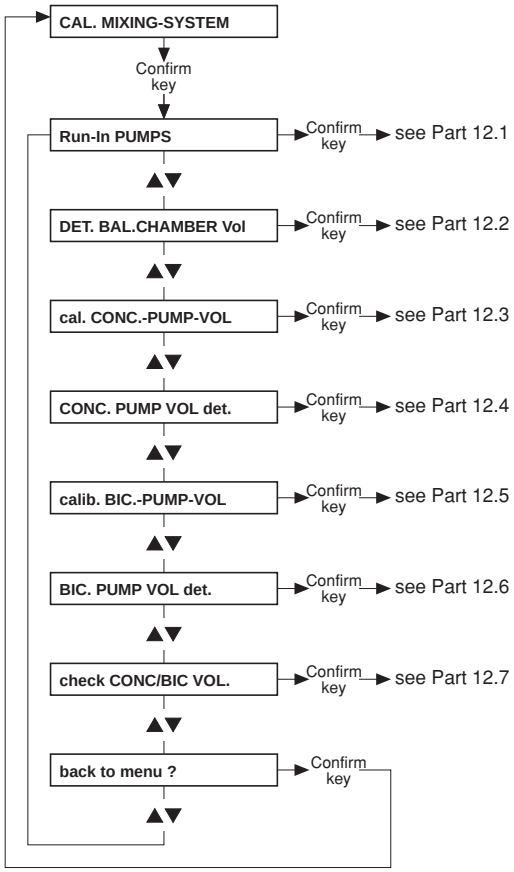

- **Part 12.1: Running-in of the membrane pumps**

The membrane pumps have to run-in so that the concentrate/bicarbonate pumps reach their operating temperatures before the pump volume is verified.

The concentrate suction tubes are in a container filled with water

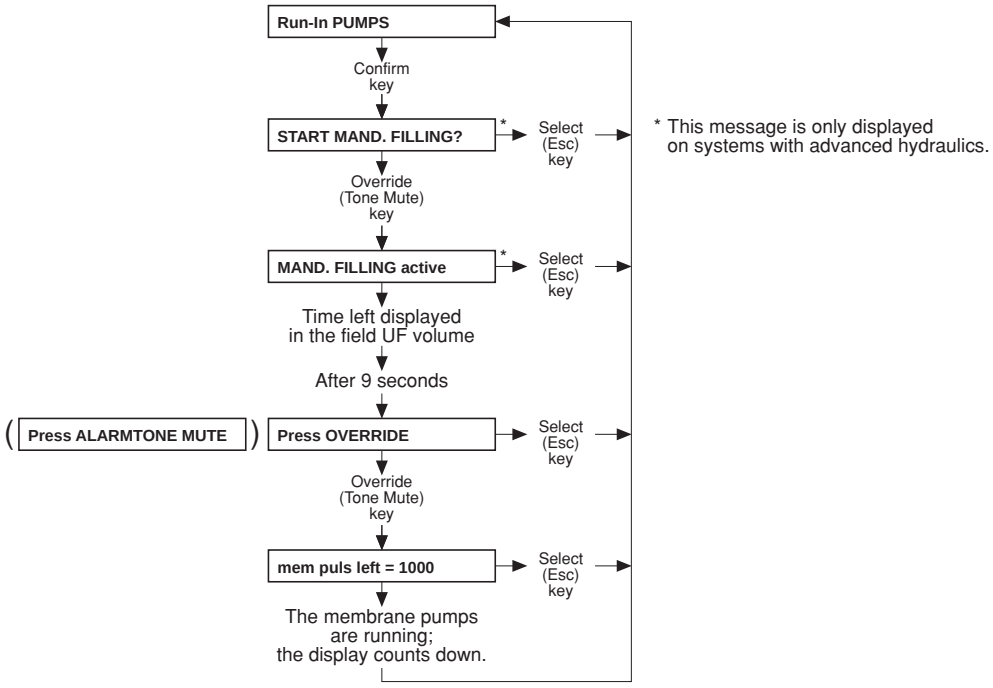

- **Part 12.2: Determining the balancing chamber volume**

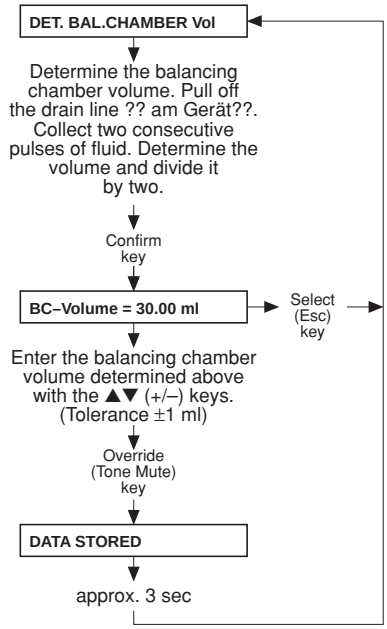
DET. BAL.CHAMBER Vol
Determine the balancing chamber volume. Pull off the drain line ?? am Gerät??. Collect two consecutive pulses of fluid. Determine the volume and divide it by two.
Confirm key
BC–Volume = 30.00 ml
Select (Esc) key
Enter the balancing chamber volume determined above with the ▲▼ (+/–) keys. (Tolerance ±1 ml)
Override (Tone Mute) key
DATA STORED
approx. 3 sec

Note
Accuracy of the measuring cylinder: ±0.5 %.

Note
If a scale is used as measurement instrument it must be ensured that no concentrate is connected.

- **Part 12.3: Calibrating the concentrate pump stroke**

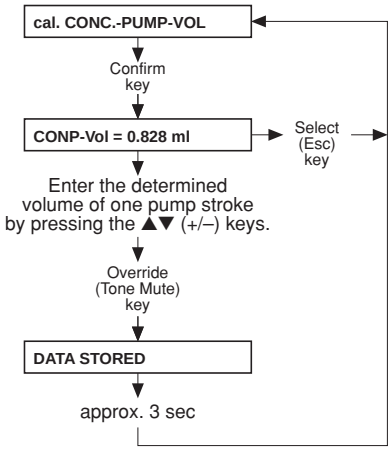
cal. CONC.-PUMP-VOL
Confirm key
CONP-Vol = 0.828 ml
Select (Esc) key
Enter the determined volume of one pump stroke by pressing the ▲▼ (+/–) keys.
Override (Tone Mute) key
DATA STORED
approx. 3 sec

Note
Accuracy of the measuring cylinder: ±0.5 %.

- **Part 12.4: Determining the concentrate pump volume**

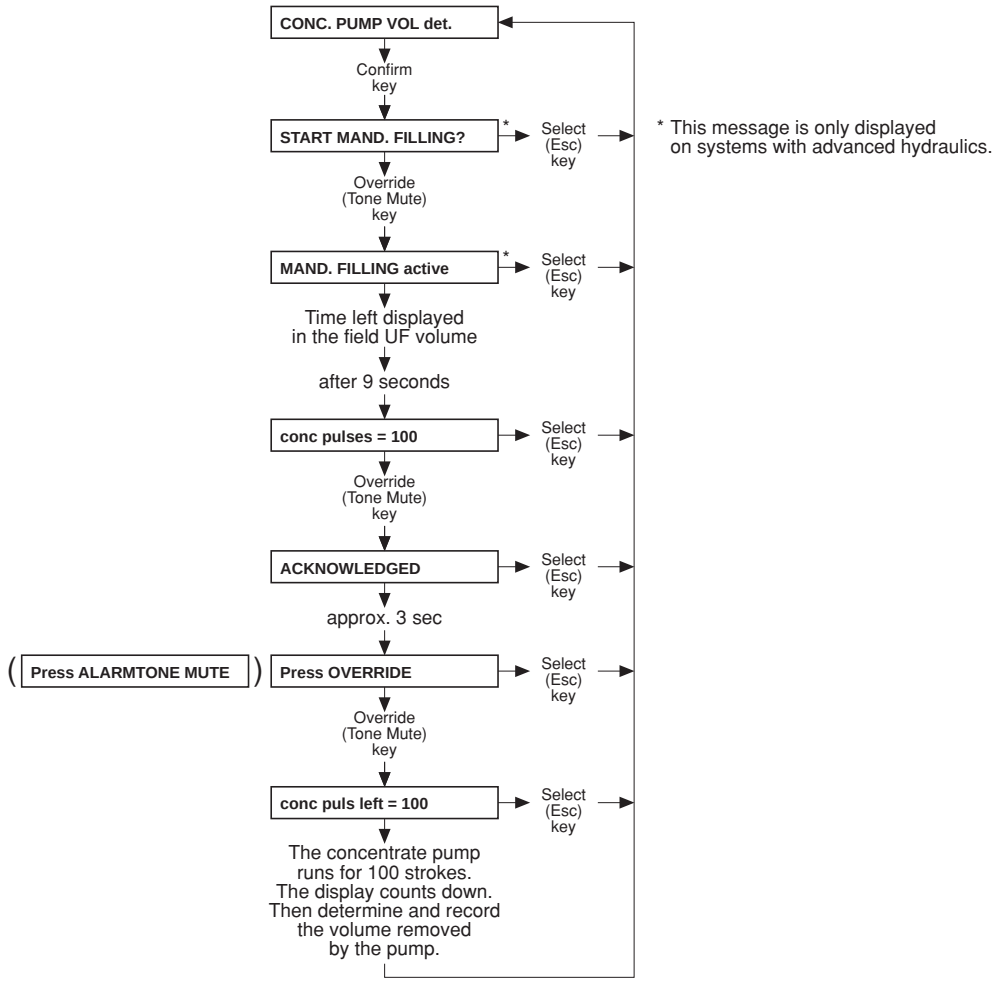
CONC. PUMP VOL det.
Confirm key
START MAND. FILLING?
*
Select (Esc) key
* This message is only displayed on systems with advanced hydraulics.
Override (Tone Mute) key
MAND. FILLING active
*
Select (Esc) key
Time left displayed in the field UF volume
after 9 seconds
conc pulses = 100
Select (Esc) key
Override (Tone Mute) key
ACKNOWLEDGED
Select (Esc) key
approx. 3 sec
(Press ALARMTONE MUTE)
Press OVERRIDE
Select (Esc) key
Override (Tone Mute) key
conc puls left = 100
Select (Esc) key
The concentrate pump runs for 100 strokes. The display counts down. Then determine and record the volume removed by the pump.

Notes:

100 strokes are factory-set. This setting can be changed by pressing the ▲▼ (+/–) keys (depending on the graduated cylinder used). However, when returning to “CAL. MIXING-SYSTEM”, the display will indicate the factory setting again.

Check the volume and, if necessary, repeat the procedure.

Note
Accuracy of the measuring cylinder: ±0.5 %.

Note
If a scale is used as measurement instrument it must be ensured that no concentrate is connected.

- **Part 12.5: Calibrating the bicarbonate pump stroke**

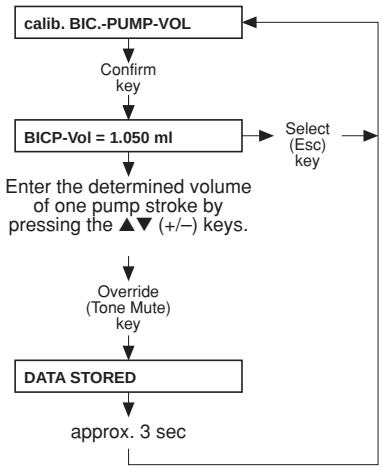
calib. BIC.-PUMP-VOL
Confirm key
BICP-Vol = 1.050 ml
Select (Esc) key
Enter the determined volume of one pump stroke by pressing the ▲▼ (+/–) keys.
Override (Tone Mute) key
DATA STORED
approx. 3 sec

Note
Accuracy of the measuring cylinder: ±0.5 %.

Note
If a scale is used as measurement instrument it must be ensured that no concentrate is connected.

- **Part 12.6: Determining the bicarbonate pump volume**

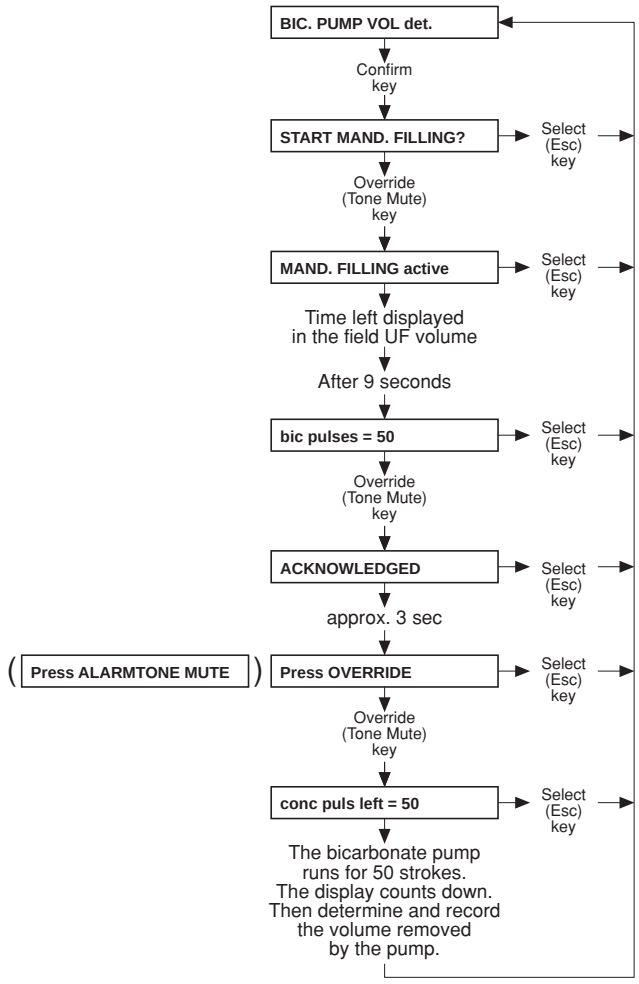
BIC. PUMP VOL det.
Confirm key
START MAND. FILLING?
Select (Esc) key
Override (Tone Mute) key
MAND. FILLING active
Select (Esc) key
Time left displayed in the field UF volume
After 9 seconds
bic pulses = 50
Select (Esc) key
Override (Tone Mute) key
ACKNOWLEDGED
Select (Esc) key
approx. 3 sec
Press ALARMTONE MUTE
Press OVERRIDE
Select (Esc) key
Override (Tone Mute) key
conc puls left = 50
Select (Esc) key
The bicarbonate pump runs for 50 strokes. The display counts down. Then determine and record the volume removed by the pump.

Notes:

50 strokes are factory-set. This setting can be changed by pressing the ▲▼ (+/–) keys (depending on the graduated cylinder used). However, when returning to “CAL. MIXING-SYSTEM”, the display will indicate the factory setting again.

Check the volume and, if necessary, repeat the procedure.

Note
Accuracy of the measuring cylinder: ±0.5 %.

Note
If a scale is used as measurement instrument it must be ensured that no concentrate is connected.

- **Part 12.7: Checking the concentrate and/or bicarbonate volume**

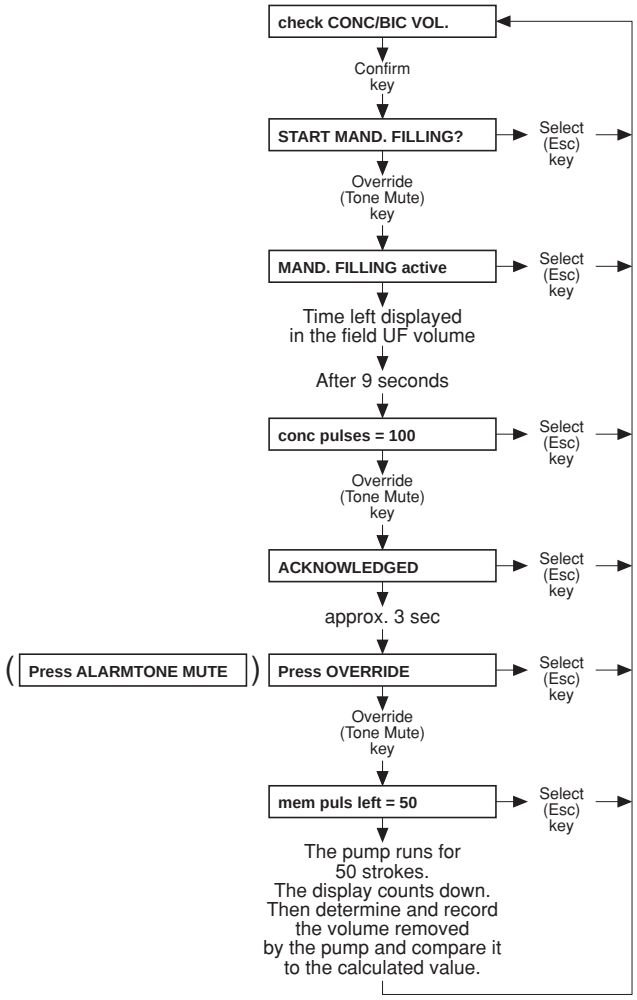
check CONC/BIC VOL.
Confirm key
START MAND. FILLING?
Select (Esc) key
Override (Tone Mute) key
MAND. FILLING active
Select (Esc) key
Time left displayed in the field UF volume
After 9 seconds
conc pulses = 100
Select (Esc) key
Override (Tone Mute) key
ACKNOWLEDGED
Select (Esc) key
approx. 3 sec
Press ALARMTONE MUTE
Press OVERRIDE
Select (Esc) key
Override (Tone Mute) key
mem puls left = 50
Select (Esc) key
The pump runs for 50 strokes. The display counts down. Then determine and record the volume removed by the pump and compare it to the calculated value.

Check mixing ratio

Notes:

This test step permits verification of the concentrate or bicarbonate pump volumes in accordance with the parameters entered for the mixing system (mixing ratio, BC volume, conc. and bic. pump volume).

The pump whose concentrate suction tube is pulled off is activated.

50 strokes are factory-set. This setting can be changed by pressing the ▲▼ (+/–) keys (depending on the graduated cylinder used). However, when returning to “CAL. MIXING-SYSTEM”, the display will indicate the factory setting again.

Note
Accuracy of the measuring cylinder: ±0.5 %.

Note
If a scale is used as measurement instrument it must be ensured that no concentrate is connected.

- **Part 13: Calibrating the conductivity**

The indicated values are examples

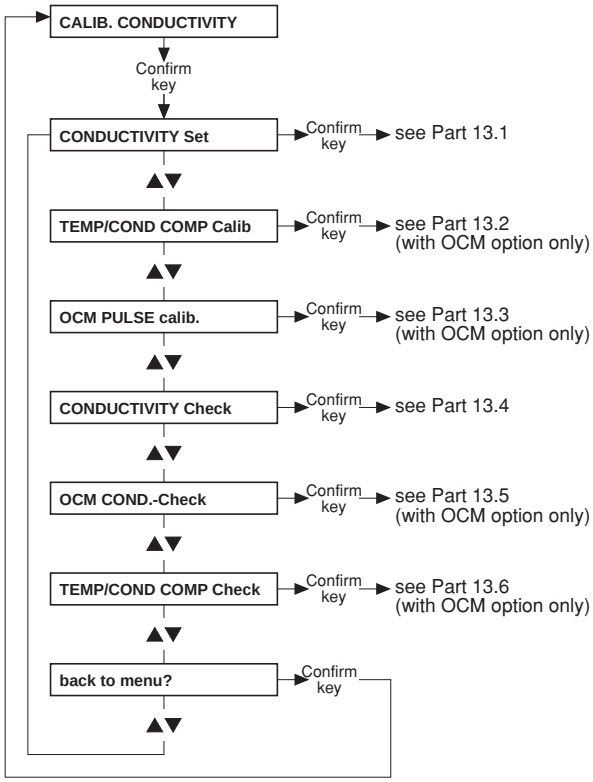

- **Part 13.1: Setting the conductivity**

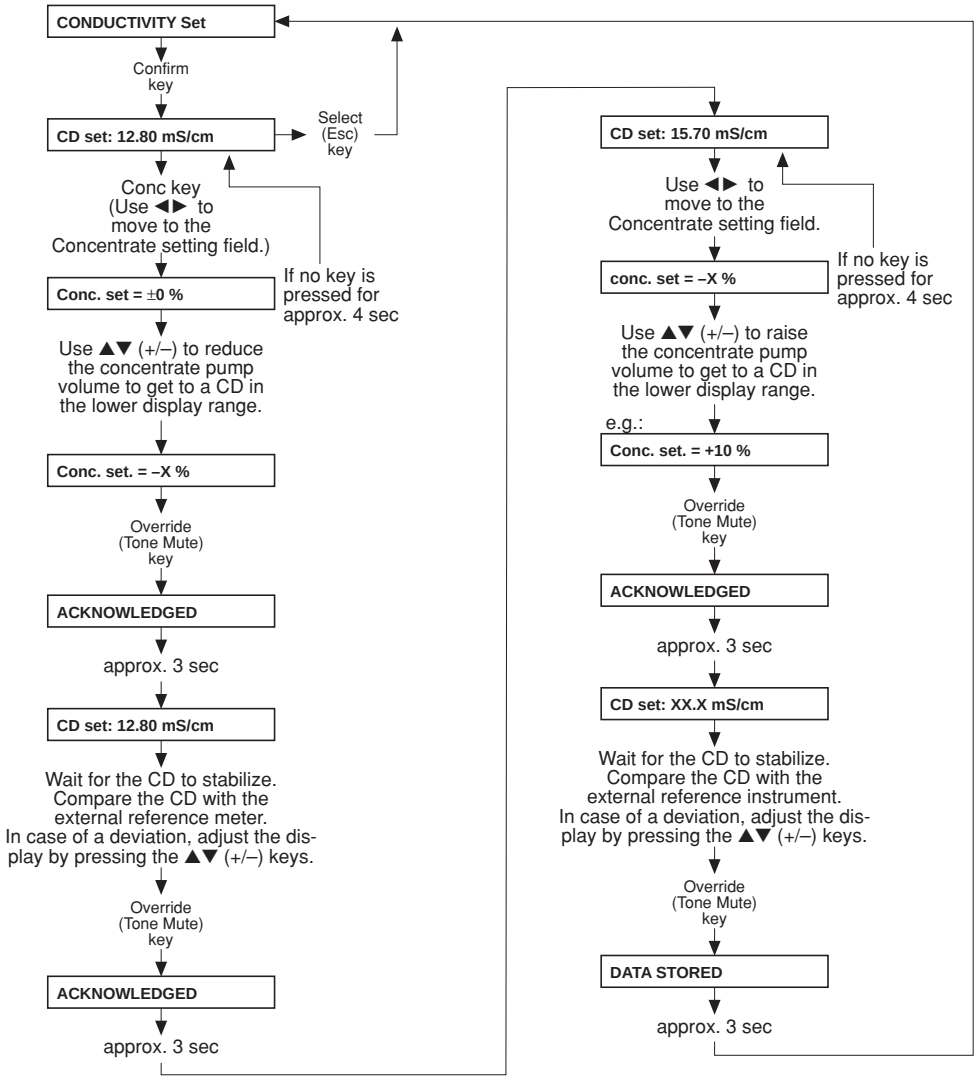
CONDUCTIVITY Set
Confirm key
CD set: 12.80 mS/cm
Select (Esc) key
Conc key (Use ◄► to move to the Concentrate setting field.)
Conc. set = ±0 %
If no key is pressed for approx. 4 sec
Use ▲▼ (+/–) to reduce the concentrate pump volume to get to a CD in the lower display range.
Conc. set. = –X %
Override (Tone Mute) key
ACKNOWLEDGED
approx. 3 sec
CD set: 12.80 mS/cm
Wait for the CD to stabilize. Compare the CD with the external reference meter. In case of a deviation, adjust the display by pressing the ▲▼ (+/–) keys.
Override (Tone Mute) key
ACKNOWLEDGED
approx. 3 sec
CD set: 15.70 mS/cm
Use ◄► to move to the Concentrate setting field.
conc. set = –X %
If no key is pressed for approx. 4 sec
Use ▲▼ (+/–) to raise the concentrate pump volume to get to a CD in the lower display range.
e.g.:
Conc. set. = +10 %
Override (Tone Mute) key
ACKNOWLEDGED
approx. 3 sec
CD set: XX.X mS/cm
Wait for the CD to stabilize. Compare the CD with the external reference instrument. In case of a deviation, adjust the display by pressing the ▲▼ (+/–) keys.
Override (Tone Mute) key
DATA STORED
approx. 3 sec

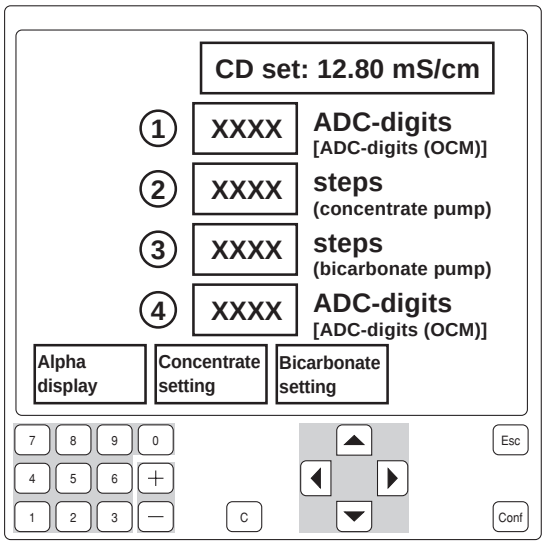

① CD cell 7; 12 bit / 8 bit alternating (with OCM option only)

②

③

④ CD cell 110; 12 bit/ 8 bit alternating (with OCM option only)

- **Part 13.2: Setting the temperature/conductivity compensation (with OCM option only)**

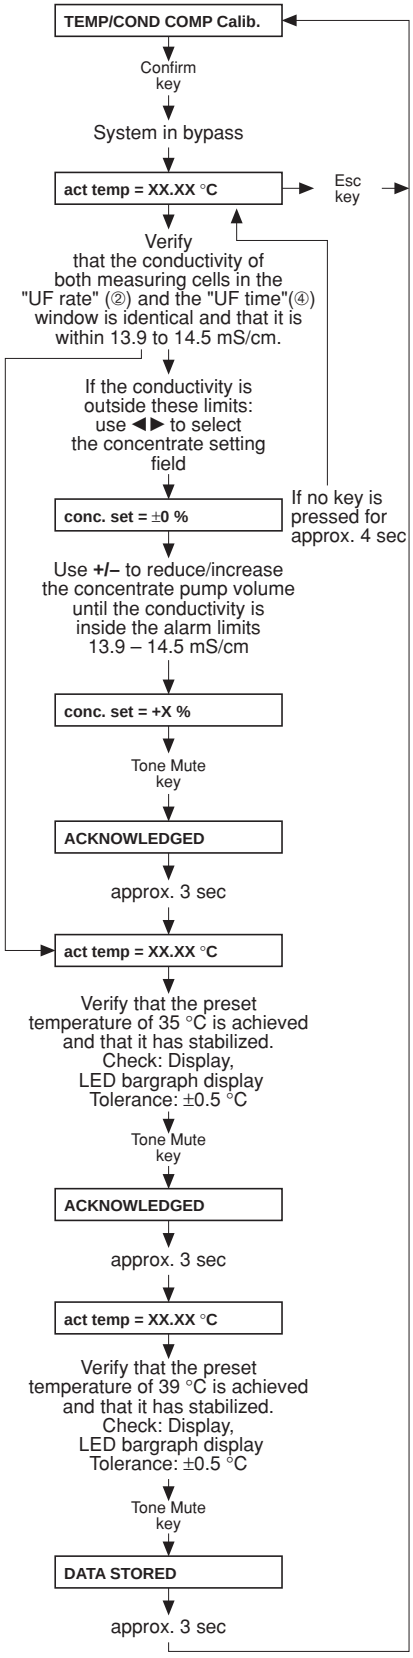
TEMP/COND COMP Calib.
Confirm key
System in bypass
act temp = XX.XX °C
Esc key
Verify that the conductivity of both measuring cells in the "UF rate" (②) and the "UF time"(④) window is identical and that it is within 13.9 to 14.5 mS/cm.
If the conductivity is outside these limits: use ◄► to select the concentrate setting field
conc. set = ±0 %
If no key is pressed for approx. 4 sec
Use +/– to reduce/increase the concentrate pump volume until the conductivity is inside the alarm limits 13.9 – 14.5 mS/cm
conc. set = +X %
Tone Mute key
ACKNOWLEDGED
approx. 3 sec
act temp = XX.XX °C
Verify that the preset temperature of 35 °C is achieved and that it has stabilized. Check: Display, LED bargraph display Tolerance: ±0.5 °C
Tone Mute key
ACKNOWLEDGED
approx. 3 sec
act temp = XX.XX °C
Verify that the preset temperature of 39 °C is achieved and that it has stabilized. Check: Display, LED bargraph display Tolerance: ±0.5 °C
Tone Mute key
DATA STORED
approx. 3 sec

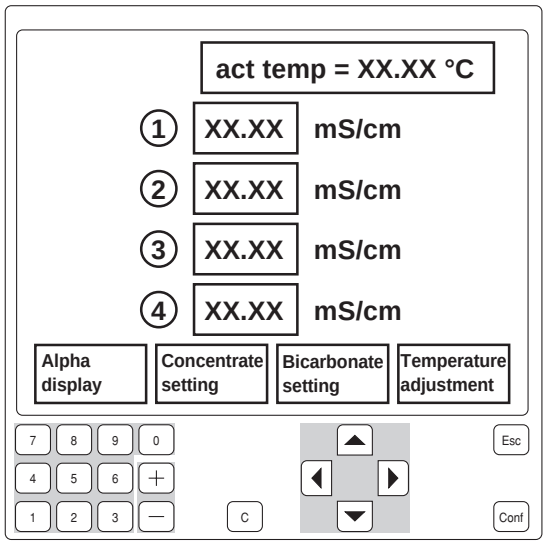

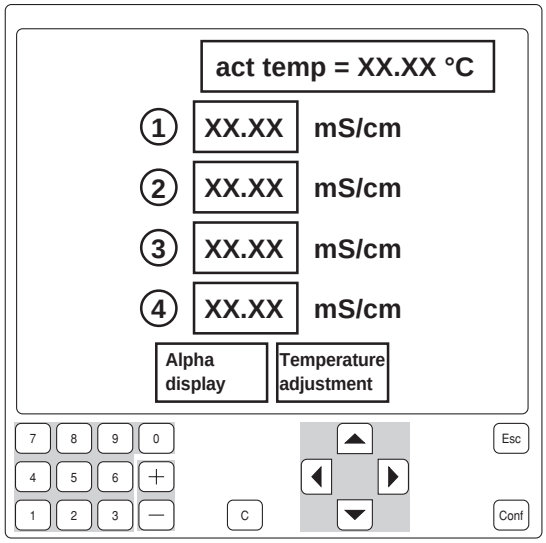

① CD cell 7,
Value in mS/cm after confirmation of 35°C

② CD cell 7, current value in mS/cm

③ CD cell 110,
Value in mS/cm after confirmation of 35°C

④ CD cell 110, current value in mS/cm

- **Part 13.3: Calibrating the OCM pulse (with OCM option only)**

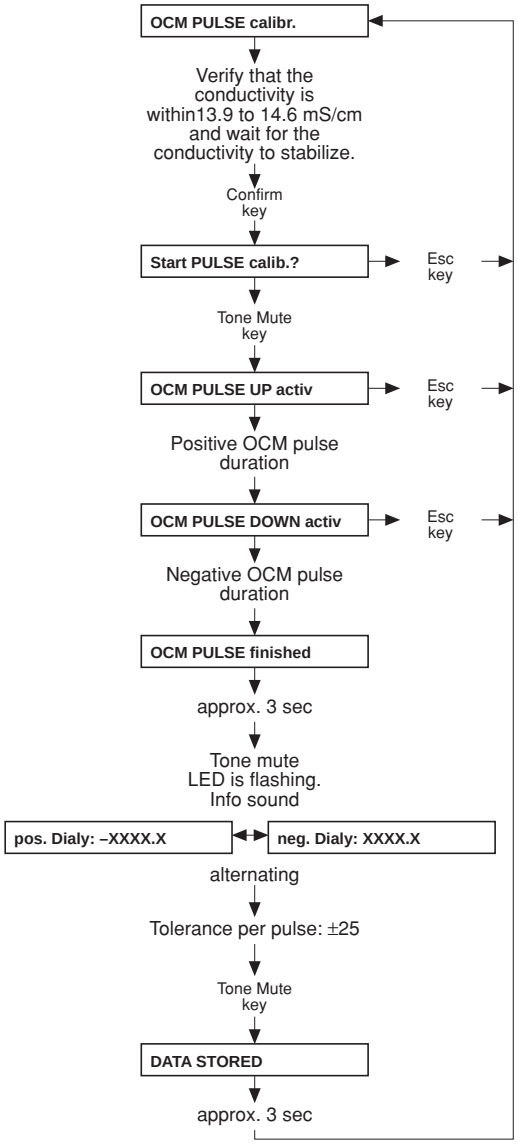

Note
If the value is outside ±25, check the conductivity measuring system of the dialysis system.

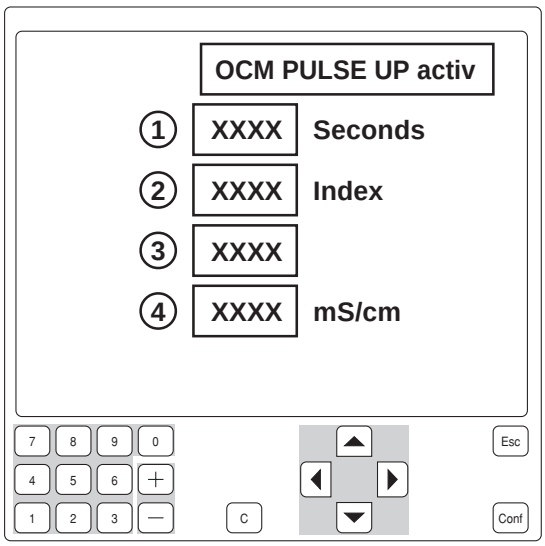

① Time elapsed since the pulse calibration was started

② Counter

③ Concentrate setting

④ CD cell 7, compensated CD value

- **Part 13.4: Checking the conductivity**

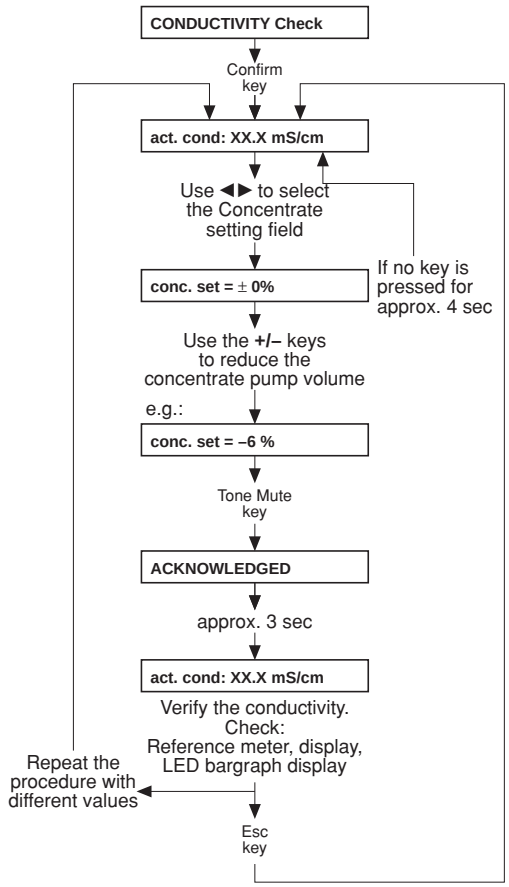
CONDUCTIVITY Check
Confirm key
act. cond: XX.X mS/cm
Use ◄► to select the Concentrate setting field
conc. set = ± 0%
If no key is pressed for approx. 4 sec
Use the +/– keys to reduce the concentrate pump volume
e.g.:
conc. set = –6 %
Tone Mute key
ACKNOWLEDGED
approx. 3 sec
act. cond: XX.X mS/cm
Verify the conductivity. Check: Reference meter, display, LED bargraph display
Repeat the procedure with different values
Esc key

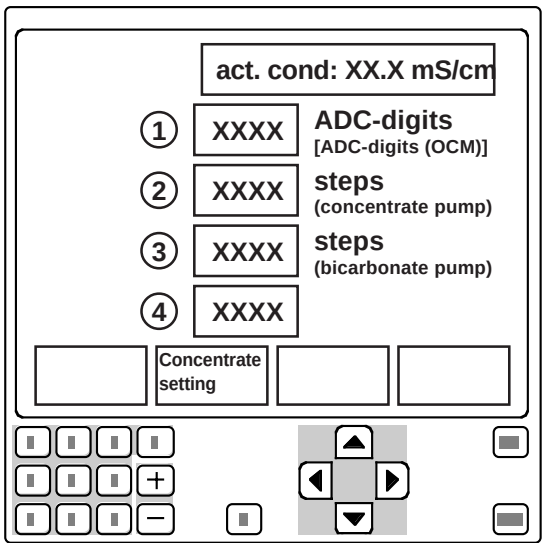

① CD cell 7;
12 bit / 8 bit
alternating
(with OCM option only)

②

③

④ CD cell 110;
12 bit / 8 bit
alternating
(with OCM option only)

- **Part 13.5: Checking the OCM conductivity (with OCM option only)**

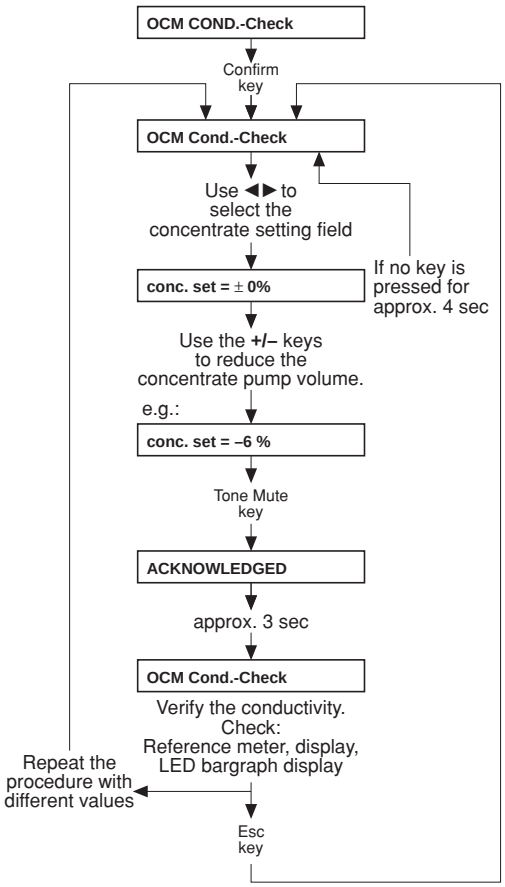
OCM COND.-Check
Confirm key
OCM Cond.-Check
Use ◄► to select the concentrate setting field
conc. set = ± 0%
If no key is pressed for approx. 4 sec
Use the +/– keys to reduce the concentrate pump volume.
e.g.:
conc. set = –6 %
Tone Mute key
ACKNOWLEDGED
approx. 3 sec
OCM Cond.-Check
Verify the conductivity. Check: Reference meter, display, LED bargraph display
Repeat the procedure with different values
Esc key

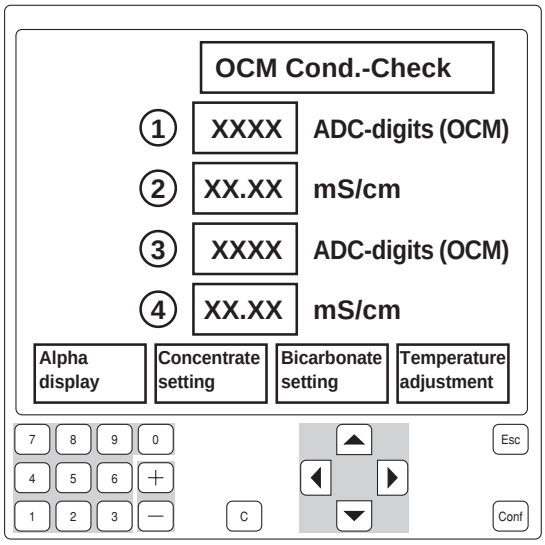

① CD cell 7; 12 bit

② CD cell 7

③ CD cell 110;12 bit

④ CD cell 110

- **Part 13.6: Temperature/conductivity compensation test (with OCM option only)**

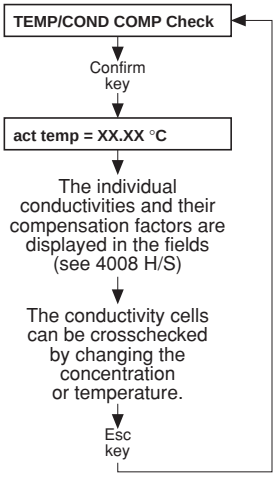
TEMP/COND COMP Check
Confirm key
act temp = XX.XX °C
The individual conductivities and their compensation factors are displayed in the fields (see 4008 H/S)
The conductivity cells can be crosschecked by changing the concentration or temperature.
Esc key

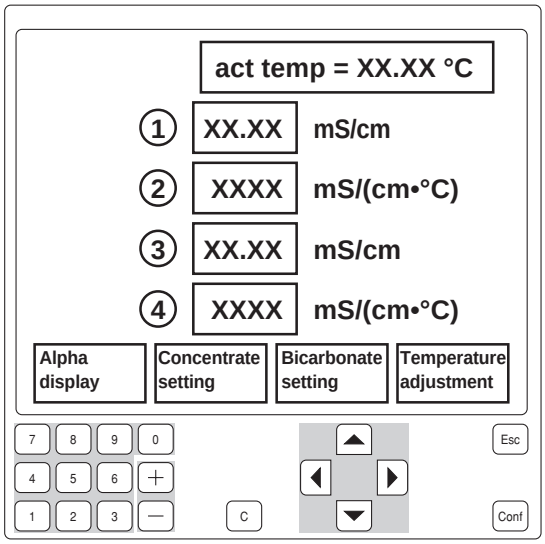

① CD cell 7, compensated

② CD cell 7, compensation factor

③ CD cell 110, compensated

④ CD cell 110, compensation factor

- **Part 14: Calibrating the dialysate pressure (stainless steel pressure transducer)**

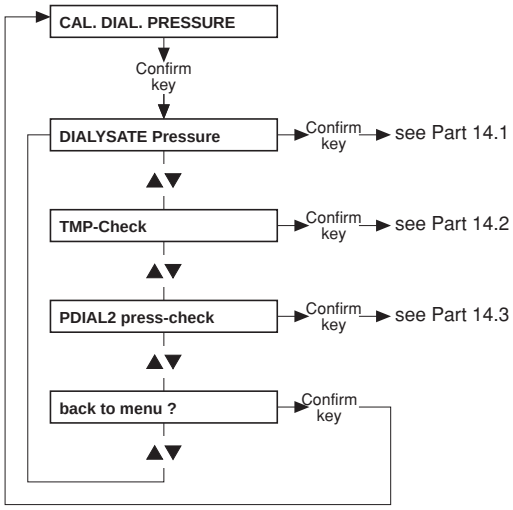

Note
Measuring instrument accuracy: ±1 % of the measured value.

- **Part 14.1: Dialysate pressure**

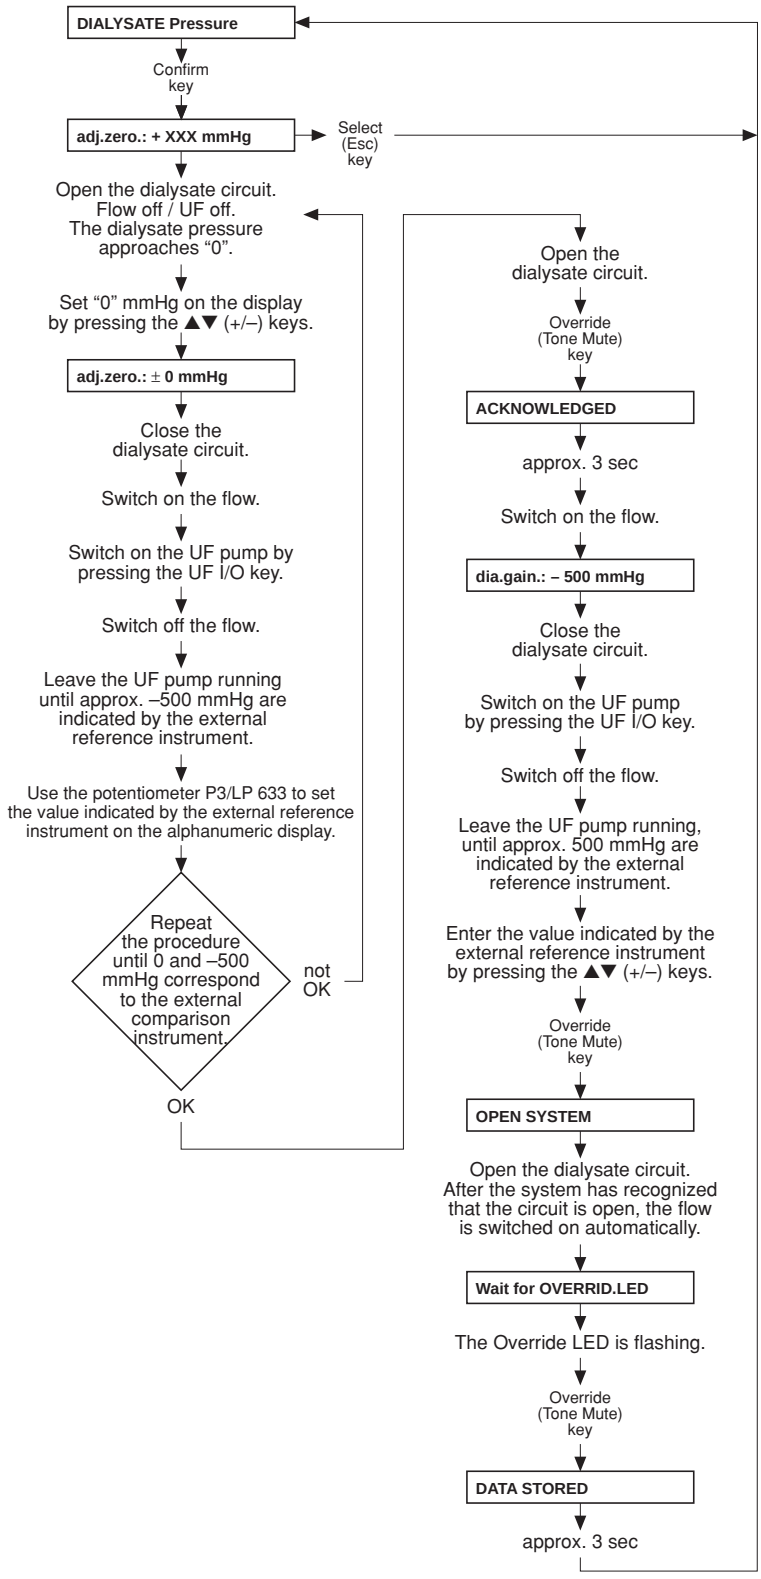
DIALYSATE Pressure
Confirm key
adj.zero.: + XXX mmHg
Select (Esc) key
Open the dialysate circuit. Flow off / UF off. The dialysate pressure approaches “0”.
Set “0” mmHg on the display by pressing the ▲▼ (+/–) keys.
adj.zero.: ± 0 mmHg
Close the dialysate circuit.
Switch on the flow.
Switch on the UF pump by pressing the UF I/O key.
Switch off the flow.
Leave the UF pump running until approx. –500 mmHg are indicated by the external reference instrument.
Use the potentiometer P3/LP 633 to set the value indicated by the external reference instrument on the alphanumeric display.
Repeat the procedure until 0 and –500 mmHg correspond to the external comparison instrument.
not OK
OK
Open the dialysate circuit.
Override (Tone Mute) key
ACKNOWLEDGED
approx. 3 sec
Switch on the flow.
dia.gain.: – 500 mmHg
Close the dialysate circuit.
Switch on the UF pump by pressing the UF I/O key.
Switch off the flow.
Leave the UF pump running, until approx. 500 mmHg are indicated by the external reference instrument.
Enter the value indicated by the external reference instrument by pressing the ▲▼ (+/–) keys.
Override (Tone Mute) key
OPEN SYSTEM
Open the dialysate circuit. After the system has recognized that the circuit is open, the flow is switched on automatically.
Wait for OVERRID.LED
The Override LED is flashing.
Override (Tone Mute) key
DATA STORED
approx. 3 sec

- **Part 14.2: TMP check**

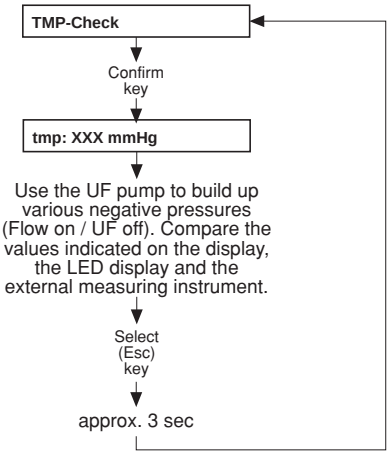
TMP-Check
Confirm key
tmp: XXX mmHg
Use the UF pump to build up various negative pressures (Flow on / UF off). Compare the values indicated on the display, the LED display and the external measuring instrument.
Select (Esc) key
approx. 3 sec

Note:
Observe the venous pressure!

Note:
Switch the flow on and off again once in a while, to maintain the operating temperature of the pressure transducer.

- **Part 14.3: PDIAL2 pressure check (for systems with advanced hydraulics only)**

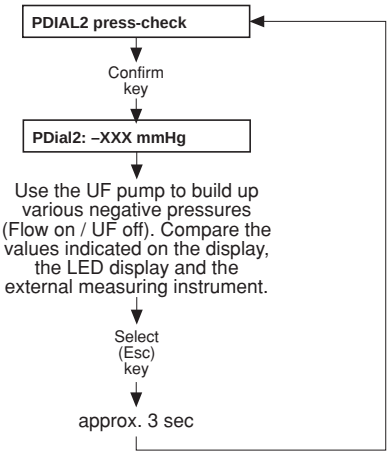
PDIAL2 press-check
Confirm key
PDial2: –XXX mmHg
Use the UF pump to build up various negative pressures (Flow on / UF off). Compare the values indicated on the display, the LED display and the external measuring instrument.
Select (Esc) key
approx. 3 sec

Note:
Observe the venous pressure!

4008 H/S:

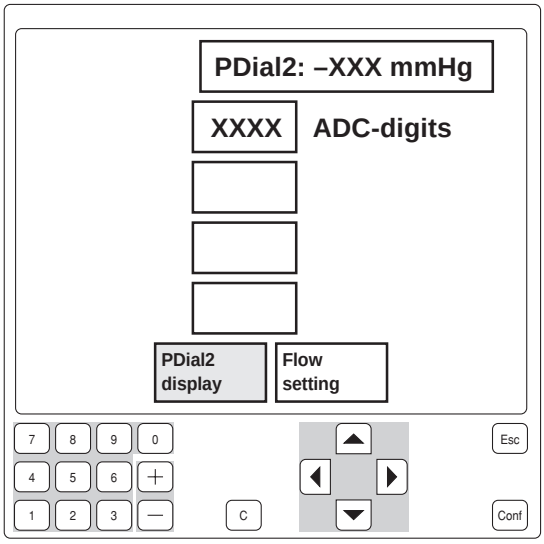

In 4008 H/S systems the temperature compensation function can also be checked:
Press ◄► to select the field **Flow setting**.
Adjust the flow by pressing **+/–**.
Confirm by pressing the **Tone Mute** key.

• Part 15: Blood leak voltage

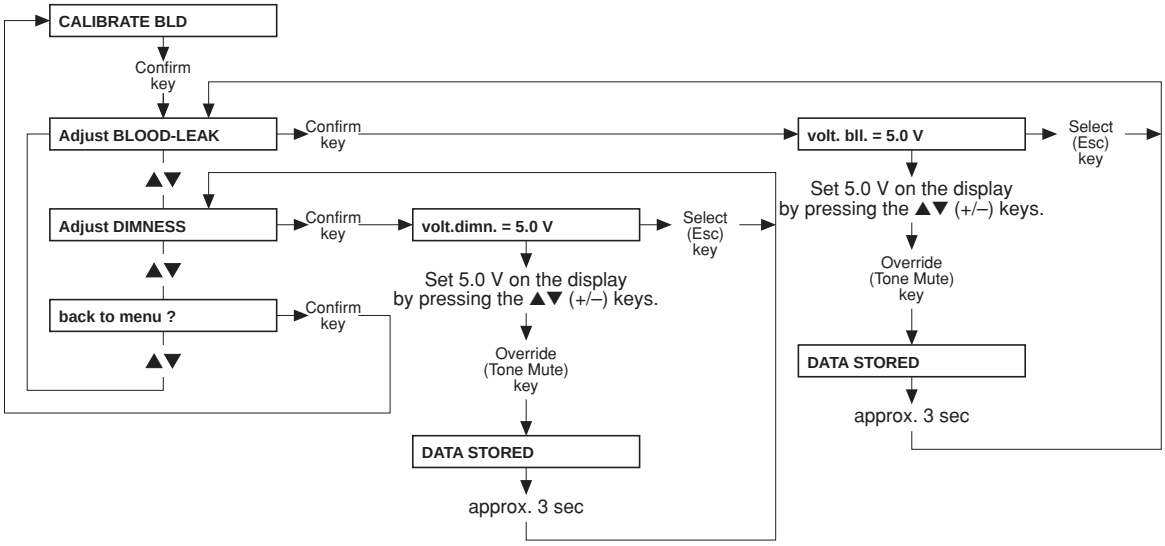

Tolerance for dimness voltage: 5 V ± 0.3 V.

Note: If values deviate check the glass burette for contamination.
Close the housing; temperature 37 °C; avoid incident light from an external source.

- **Part 16: Calibrating the BIBAG values (optional)**

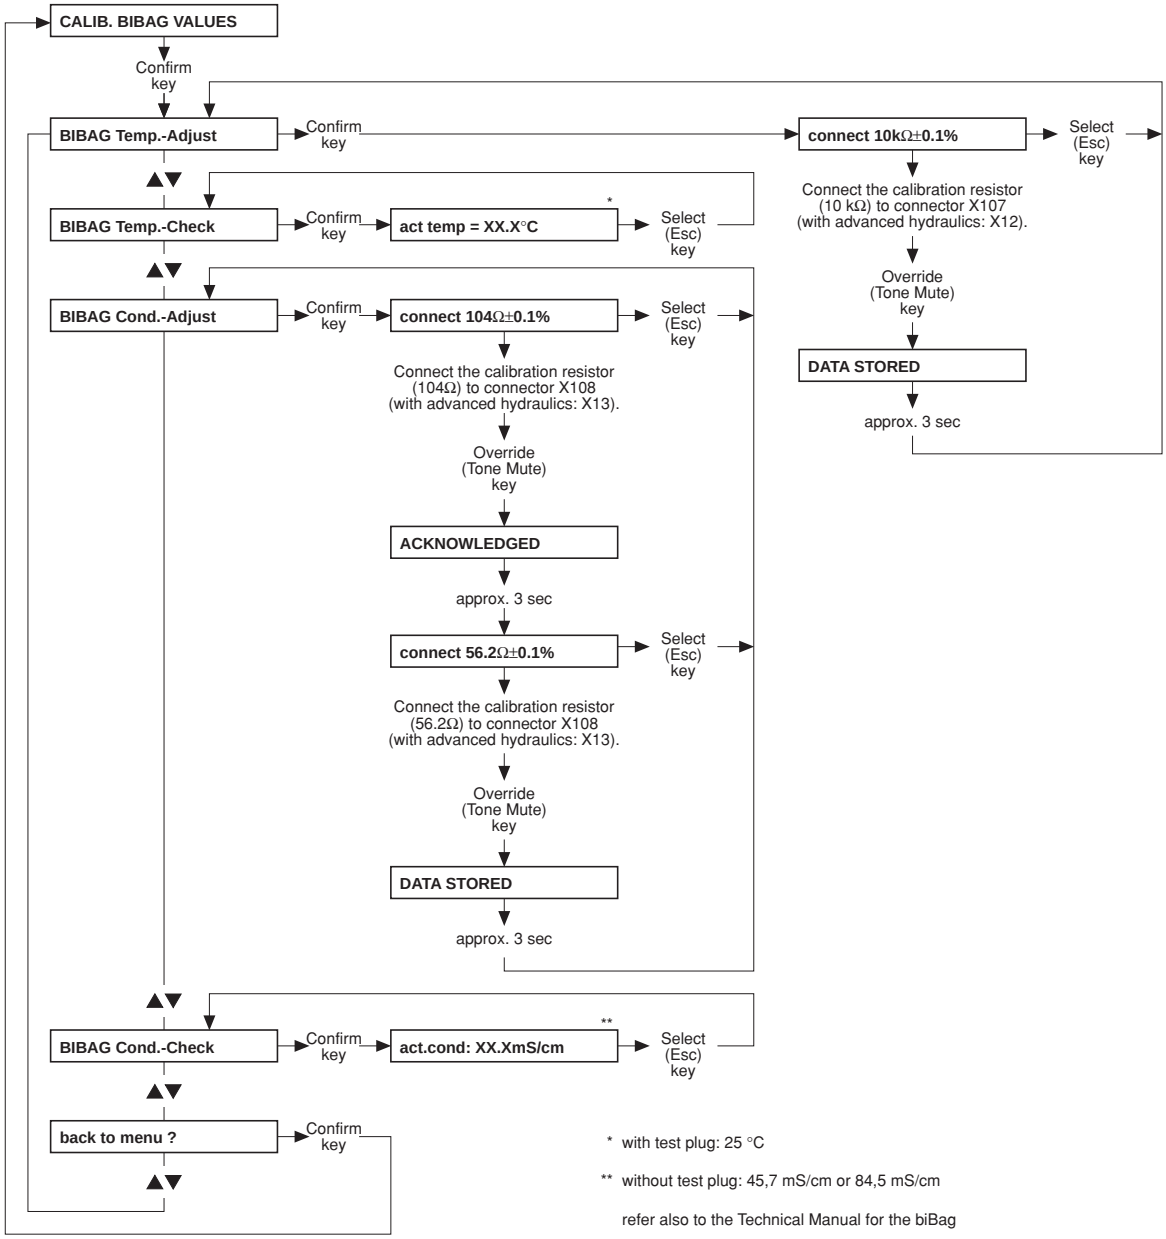

- **Part 17: Resetting the failure record**

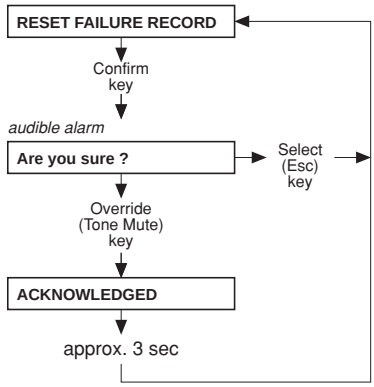

- **Part 18: Initializing the NOVRAM, resetting the mandatory rinse, resetting the V84 malfunction**

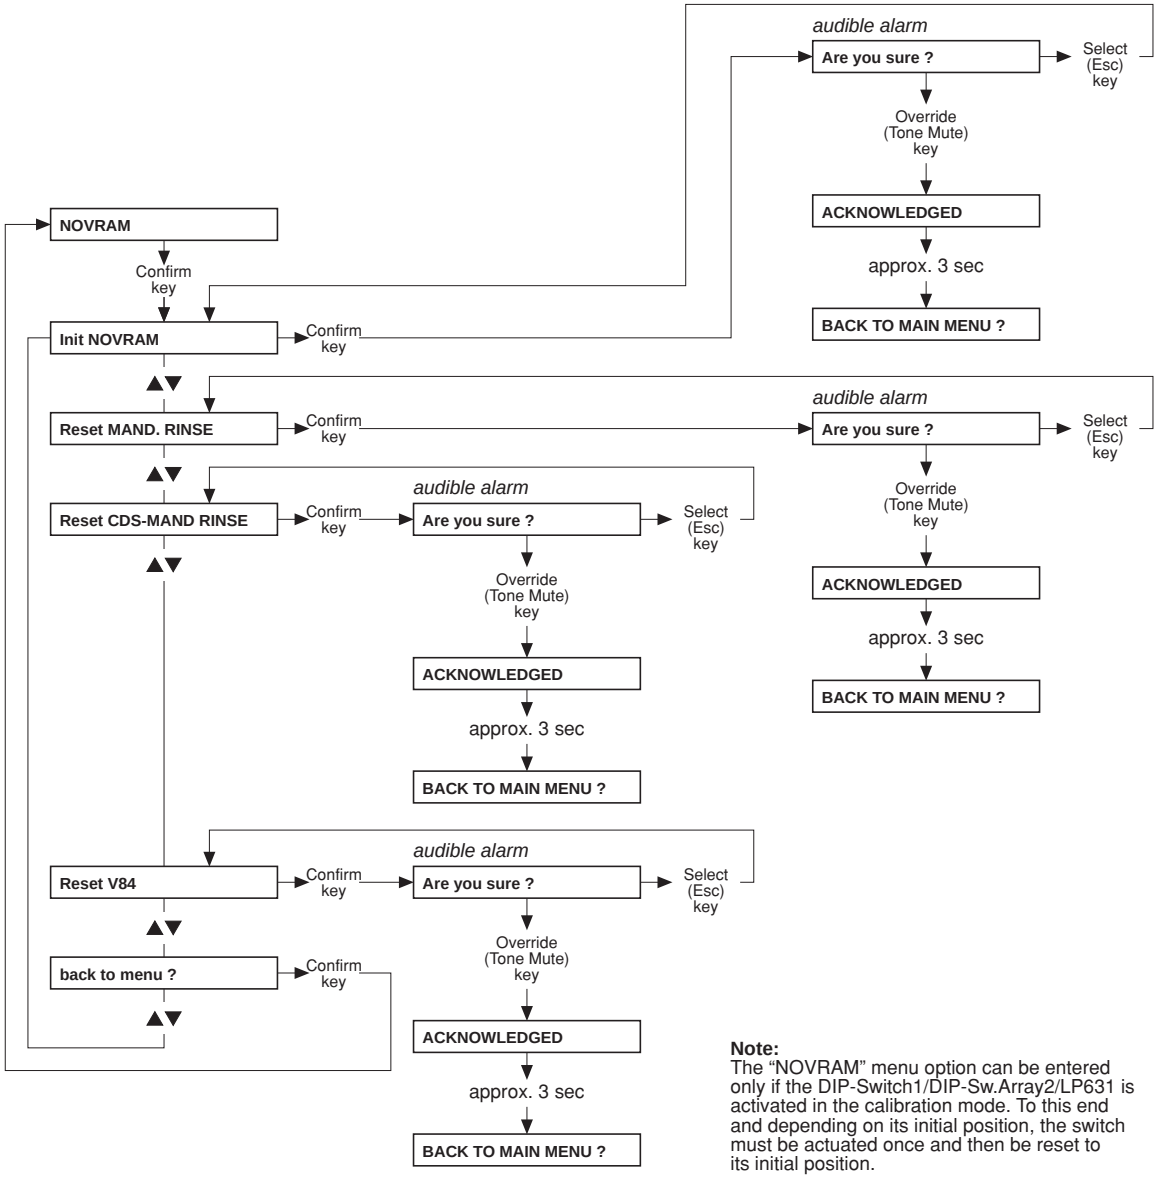

Note:
The “NOVRAM” menu option can be entered only if the DIP-Switch1/DIP-Sw.Array2/LP631 is activated in the calibration mode. To this end and depending on its initial position, the switch must be actuated once and then be reset to its initial position.

- **Without menu display: Adjusting the Hall sensor in the heparin pump**

Adjustment of Hall sensor 1
– Remove plug connector from Hall sensor 2.
– Move the slide carriage down over Hall sensor 1.
– Move the slide carriage up to its fully open position.
– Move the slide carriage down again to the end of its travel.
– The free motion between the slide carriage and the housing should be approx. 0.5 mm. If necessary, change the position of Hall sensor 1 and repeat the procedure.

Adjustment of Hall sensor 2
– Reconnect plug connector for Hall sensor 2.
– Move the slide carriage down to approx. 2 cm before the end of its travel.
– Manually turn the threaded spindle approx. 2-3 rotations in delivery direction.
– Move the slide carriage down.
– The slide carriage must stop before the mechanical end of its travel. If necessary, change the position of Hall sensor 2 and repeat the procedure several times.

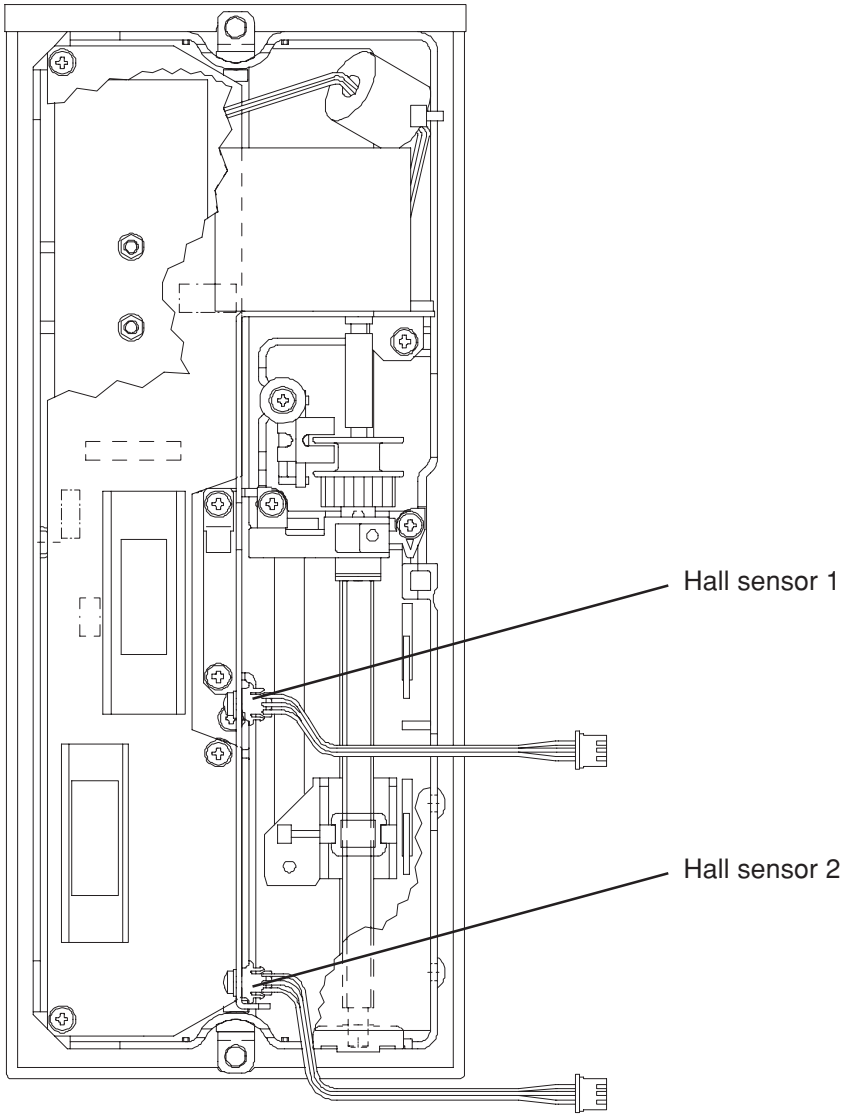

Table of contents
5 Diagnostics program

Section		Page
5.1	General notes	5-3
5.2	Menu structure	5-5
5.3	Reading the analog inputs of CPU I	5-7
5.4	Reading the analog inputs of CPU II	5-9
5.5	Reading the digital inputs of CPU I	5-10
5.6	Reading the digital inputs of CPU II	5-15
5.7	Writing the analog outputs of CPU I	5-19
5.8	Writing the analog outputs of CPU II	5-20
5.9	Writing the digital outputs of CPU I	5-21
5.10	Writing the digital outputs of CPU II	5-27
5.11	Writing/Reading the digital outputs of CPU I	5-30
5.12	ONLINE*plus*™ module	5-31
5.13	HPU	5-32

5.1 General notes

The diagnostics program serves to activate all inputs and outputs of the hemodialysis system. Activation is related to CPU1 (P.C.B. LP 631), CPU2 (P.C.B. LP 632), as well as to the output board (P.C.B. LP 634) and the input board (P.C.B. LP 633).

Using this program, the technician is able to program his own settings for testing of error images.

The diagnostics program is divided into the following menus:

- READ INPUTS
  - READ ANALOG INPUTS
    - CPU1: RD ANALOG INP.
    - CPU2: RD ANALOG INP.
  - READ DIGITAL INPUTS
    - CPU1: RD DIGITAL INP
    - CPU2: RD DIGITAL INP
- WRITE OUTPUTS
  - WRITE ANALOG OUTPUTS
    - CPU1: WR ANALOG OUTP
    - CPU2: WR ANALOG OUTP
  - WRITE DIGIT. OUTPUTS
    - CPU1: WR DIGIT. OUTP
    - CPU2: WR DIGIT. OUTP
- INP/OUTP COMBINATION
    - CPU1: COMBINATION
- CAN–COMPONENTS
    - HPU
    - ONLINE–PLUS–MODUL

In order to indicate the corresponding levels, *all* UF-seven-segment displays as well as the status indicator (monitor), the external traffic light and the loudspeaker are used in the “READ DIGITAL INPUTS” menu.

The *active* signal state (which may correspond to both present and absent voltage) is indicated by 1111 on the UF displays, activated traffic light (status indicator) and audible signal.
An audible signal can be deactivated by pressing the **(Alarm) Tone Mute** key. With the audible signal deactivated, the **(Alarm) Tone Mute** LED is flashing as a reminder.

The audible signal indication can be used to evaluate the state of the signal without having to look at the monitor. This may be advantageous in case measurements have to be made behind the system (e.g. hydraulic unit).

Note
In the diagnostics program, the signals are listed in the order of their electric connection, i.e. in latch groups of 8 signals each, according to the 8-bit data bus and according to the latch numbering on the circuit diagram (e.g. P.C.B. LP 633: CS_LATCH0 – CS_LATCH6).
The are *not* divided into groups of pertinency (e.g. all Bibag signals one after the other). The only exception here is the activation of the solenoid valves. These are listed in the menu in the order of their numbers. This facilitates finding each individual valve since, as a rule, several valves must be simultaneously activated for trouble shooting.
Since the signals are assigned to their respective connections (latch groups), it is possible at any time, by using the circuit diagram, to locate the respective signal in the menu, even if the signal name should have changed. Within one latch group, only *one* known signal suffices to find the renamed signal by counting through the menu.
Deviations of all voltage values indicated are possible due to tolerances and depending on the various systems.

The “CPU1: RD DIGITAL INP” menu item includes the “I:CPU1_KEY_TESTING” item, which serves to perform the key test.
The key actuated is indicated on the alphanumeric display.
The UP, DOWN, CONFIRM, SELECT and I/O keys have not been implemented, since their function can be tested by selecting the corresponding menu.

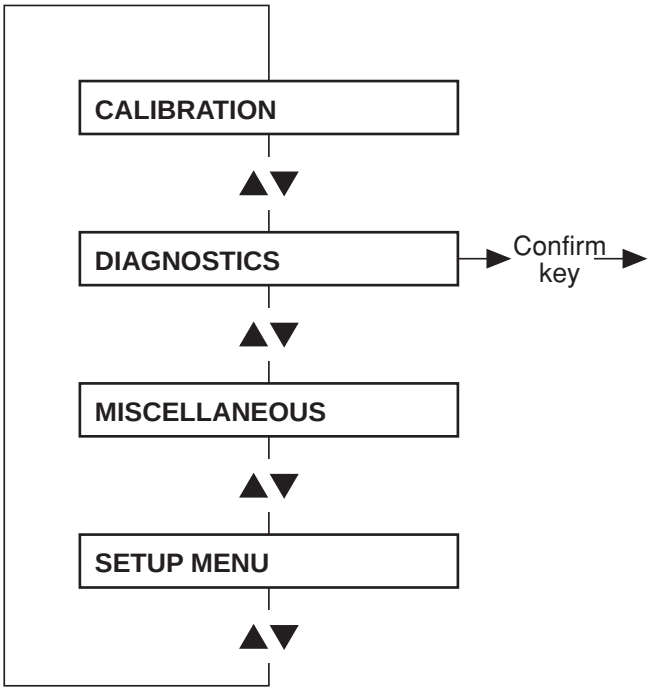

5.2 Menu structure

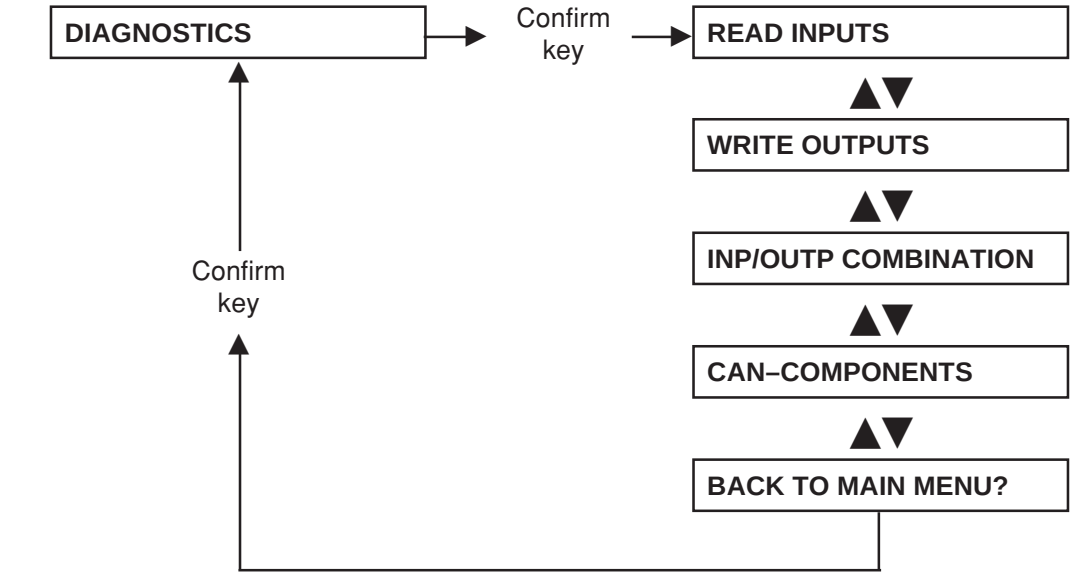

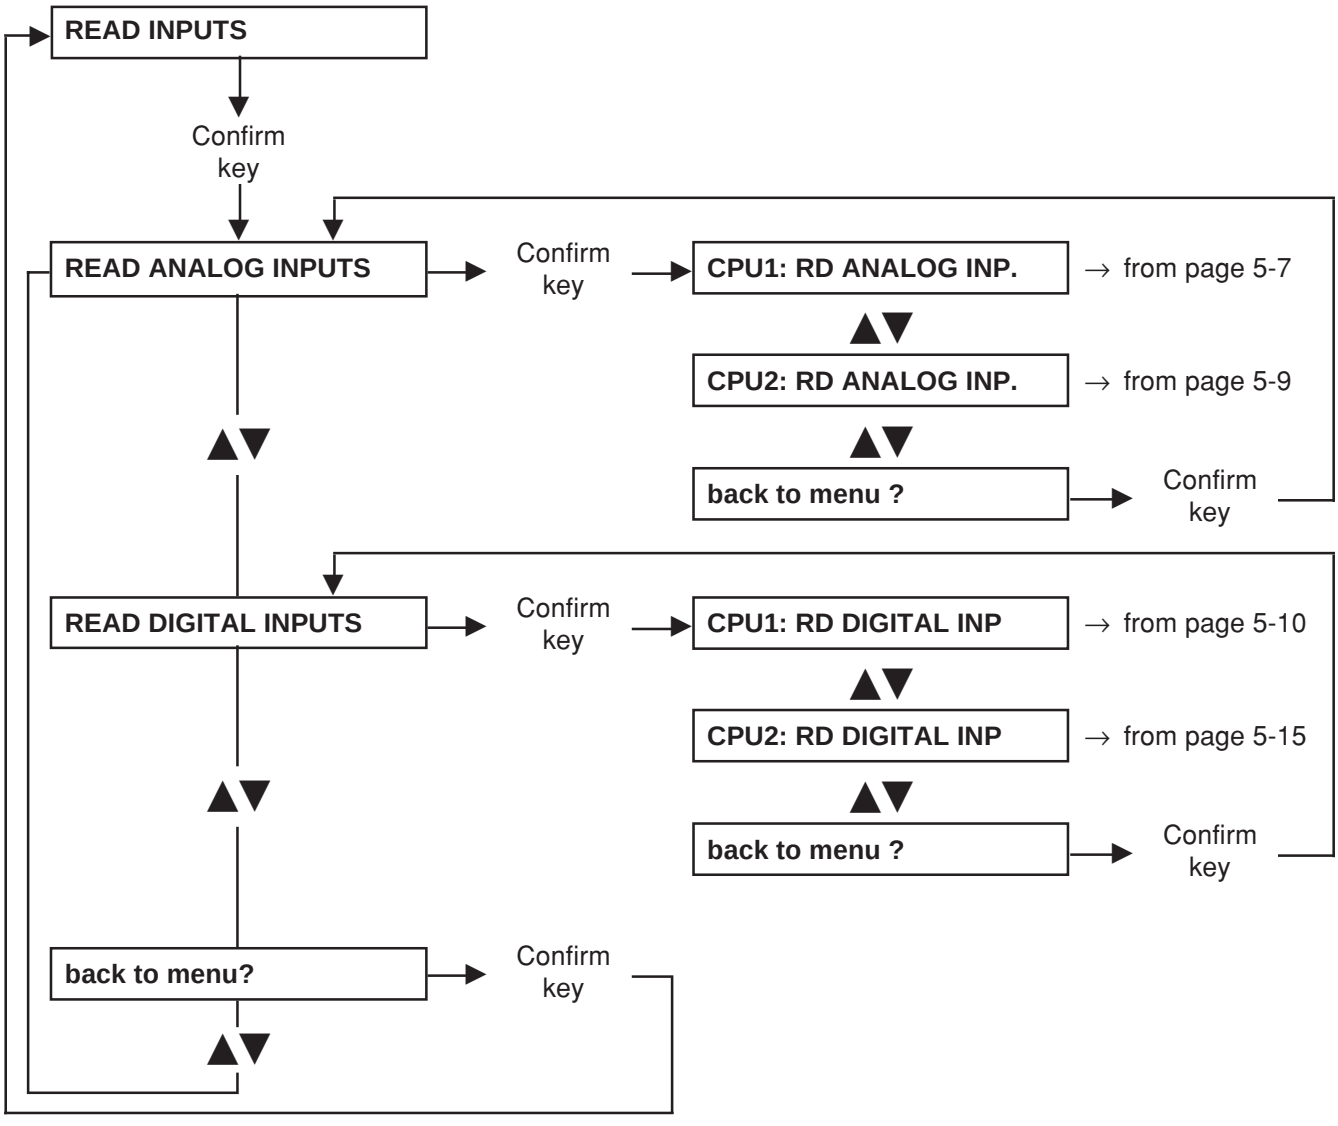

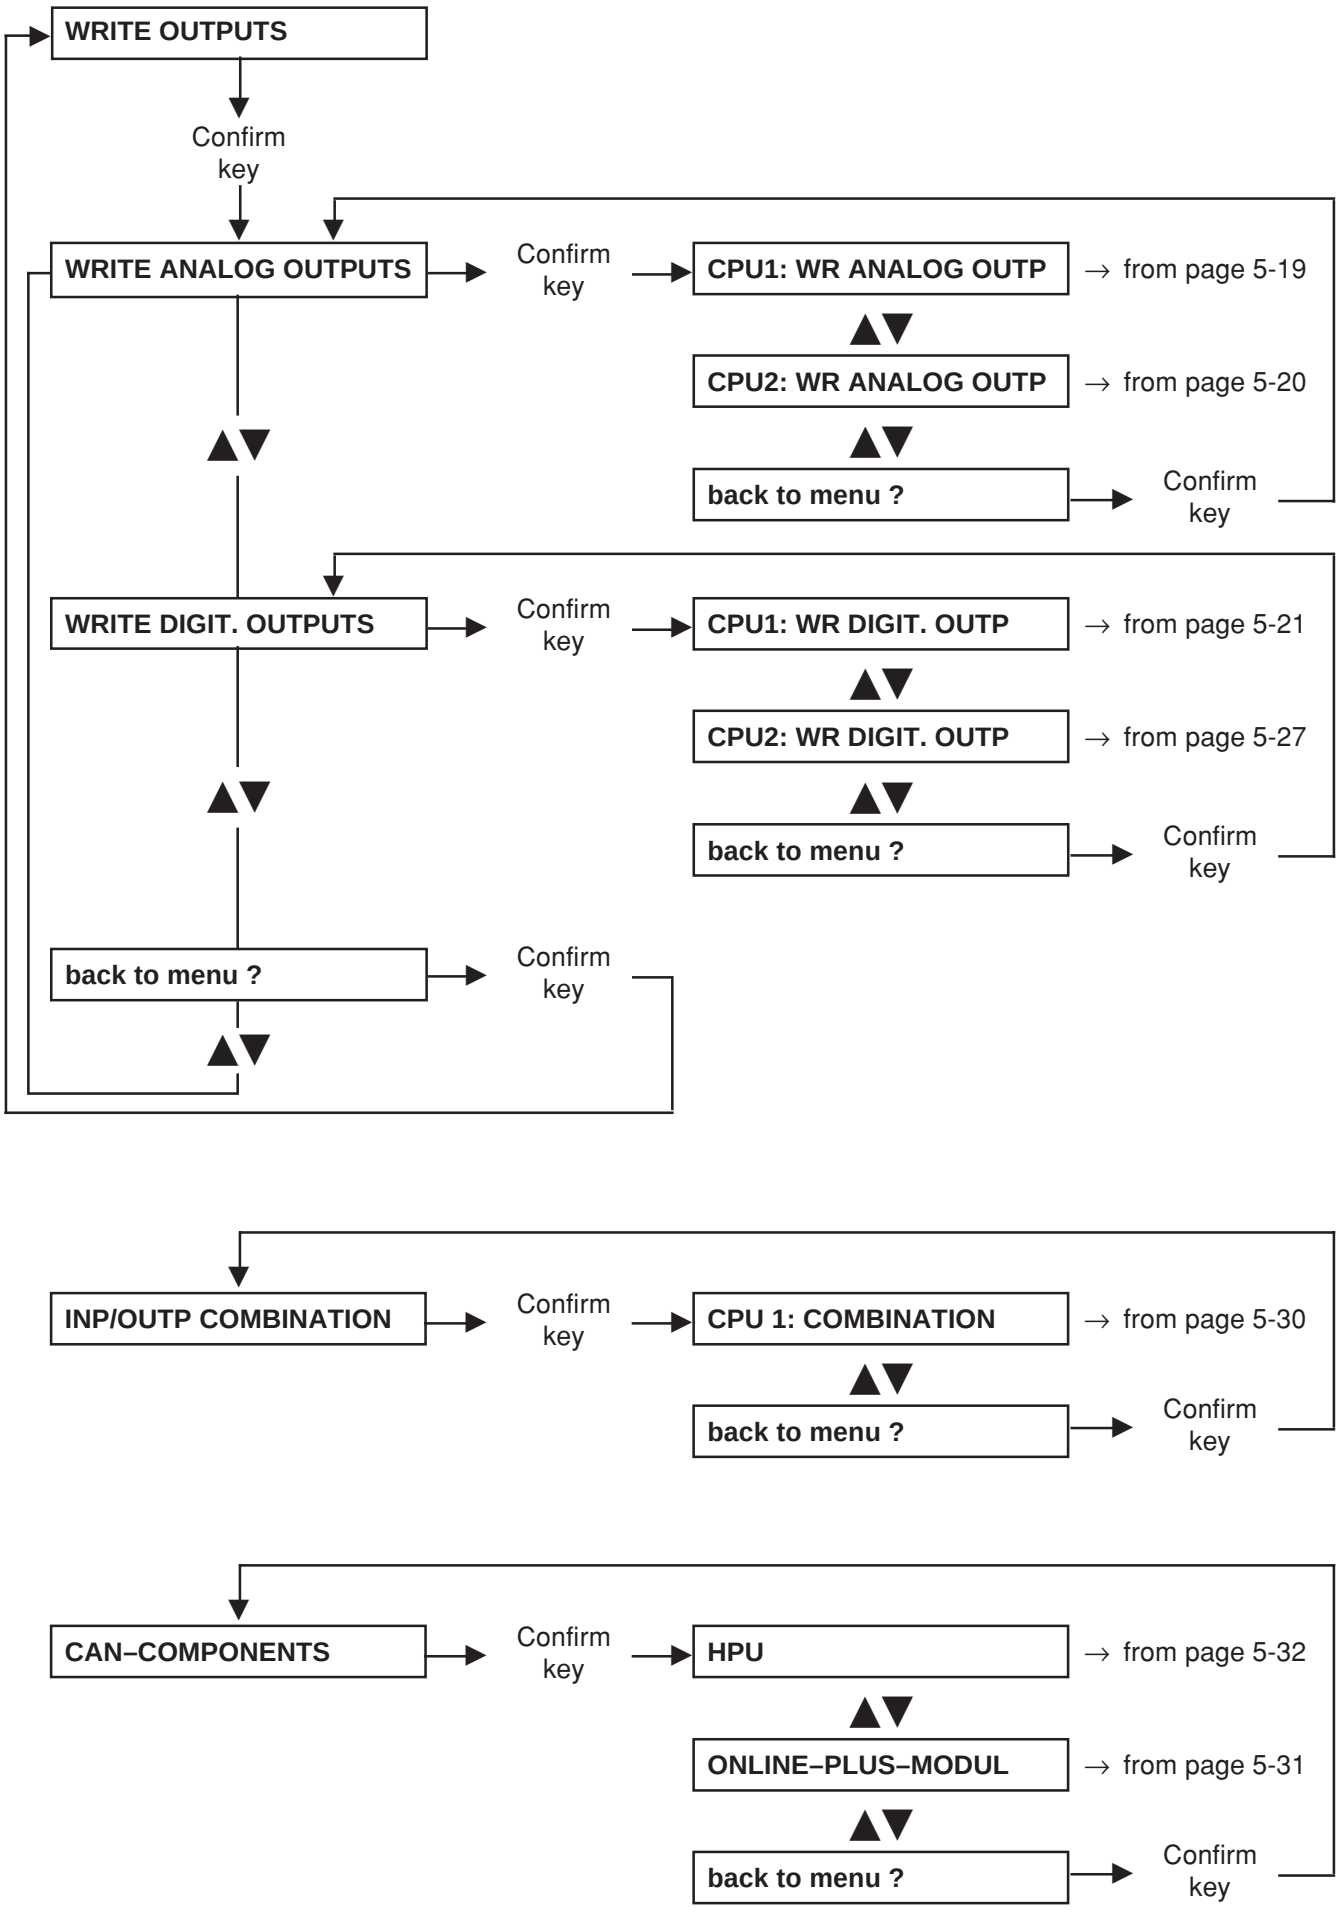
WRITE OUTPUTS
Confirm key
WRITE ANALOG OUTPUTS
Confirm key
CPU1: WR ANALOG OUTP
→ from page 5-19
CPU2: WR ANALOG OUTP
→ from page 5-20
back to menu ?
Confirm key
WRITE DIGIT. OUTPUTS
Confirm key
CPU1: WR DIGIT. OUTP
→ from page 5-21
CPU2: WR DIGIT. OUTP
→ from page 5-27
back to menu ?
Confirm key
back to menu ?
Confirm key
INP/OUTP COMBINATION
Confirm key
CPU 1: COMBINATION
→ from page 5-30
back to menu ?
Confirm key
CAN–COMPONENTS
Confirm key
HPU
→ from page 5-32
ONLINE–PLUS–MODUL
→ from page 5-31
back to menu ?
Confirm key

5.3 Reading the analog inputs of CPU I

Explanation:
UF Volume display: ADC value
Time Left display: Analog voltage (in 0.1 V), converted to the value at the input of P.C.B. LP 633

CPU1: RD ANALOG INP.

↓

Confirm key

↓

I: CPU1_PWR_WD

Voltage for watchdog monitoring
5 V, IC 27/26, ACD 107
(4.5 to 5.5 V)

▲▼

I: CPU1_P_CONC

Not used
0 V, IC 27/27, ACD 0

▲▼

I: CPU1_P_VEN

Venous pressure
0 to 12 V, IC 27/28, ADC 0 to 255

▲▼

I: CPU1_BPR_VEN

Venous blood pump rate
0 to 10 V, IC 27/1, ADC 0 to 215
(8 mm line diameter)

▲▼

I: CPU1_PR_HDF

HDF blood pump rate
0 to 3.3 V, IC 27/1, ADC 0 to 72
(HDF switched on,
8 mm line diameter)

▲▼

I: CPU1_BPR_ART

Arterial blood pump rate
0 to 10 V, IC 27/2, ADC 0 to 215
(8 mm line diameter)

▲▼

I: CPU1_VEN_BPR_SET

Rated value specified for the venous blood pump rate
0 to 8 V, IC 27/3, ADC 0 to 171
(8 mm line diameter)

▲▼

I: CPU1_HDF_PR_SET

Rated value specified for the HDF blood pump rate
0 to 2.7 V, IC 27/3, ADC 0 to 58
(HDF switched on,
8 mm line diameter)

▲▼

I: CPU1_ART_BPR_SET

Rated value specified for the arterial blood pump rate
0 to 8 V, IC 27/4, ADC 0 to 171
(8 mm line diameter)

▲▼

I: CPU1_REF1

Reference voltage AD 0
2.5 V, IC 27/5, ADC 128
(2.3 to 2.5 V)

▲▼

I: CPU1_U_ACCU

Battery voltage
e.g. 22 V, IC 28/26, ADC e.g. 184

▲▼

I: CPU1_P_BIC

Not used
0 V, IC 28/27, ADC 0

▲▼

I: CPU1_24V_EM

24V_EMERGENCY
24 V, IC 28/28, ADC 117
(22.5 to 26 V)

▲▼

I: CPU1_P_ART

Arterial pressure
0 to 10.5 V, IC 28/1, ADC 0 to 225

▲▼

I: CPU1_BLL_DIM

Blood leak dimness voltage
5.0 V, IC 28/2, ADC 108

▲▼

I: CPU1_BLL

Blood leak voltage
5.0 V, IC 28/3, ADC 108

▲▼

I: CPU1_COND_SIGNAL1

CD display
0 to 10.8 V, IC 28/4, ADC 0 to 231

▲▼

I: CPU1_REF2

Reference voltage AD1
2.5 V, IC 28/5, ADC 128
(2.3 V to 2.5 V)

▲▼

I: CPU1_FREE1

Not used
0 V, IC 29/26, ADC 0

▲▼

I: CPU1_TEMP_DIAL2

Temperature NTC 109
0 to 12 V, IC 29/27, ADC 0 to 255

▲▼

I: CPU1_COND_SINGAL2

Not used
0 V, IC 29/28, ADC 0

▲▼

I: CPU1_TEMP_DIAL3

Temperature NTC
(slot X107 / LP 747)
0 – 12 V, IC 29/1, ADC 0 – 255

▲▼

I: CPU1_COND_SIGNAL3

CD cell (slot X108 / LP 747)
0 – 10,8 V, IC 29/2, ADC 0 – 231

▲▼

I: CPU1_FREE2

Not used, open input
IC 29/3

▲▼

I: CPU1_U_BATT_SW

Voltage for alarm tone, if battery relay is off
10.6 V, IC 29/4, ADC 110

▲▼

I: CPU1_REF3

Reference voltage AD2
2.5 V, IC 29/5, ADC 128
(2.3 to 2.5 V)

▲▼

back to menu ?

↓

Confirm key

↓

CPU1: RD ANALOG INP.

5.4 Reading the analog inputs of CPU II

Explanation:
UF Volume display: ADC value
Time Left display: Analog voltage (in 0.1 V), converted to the value at the input of P.C.B. LP 632

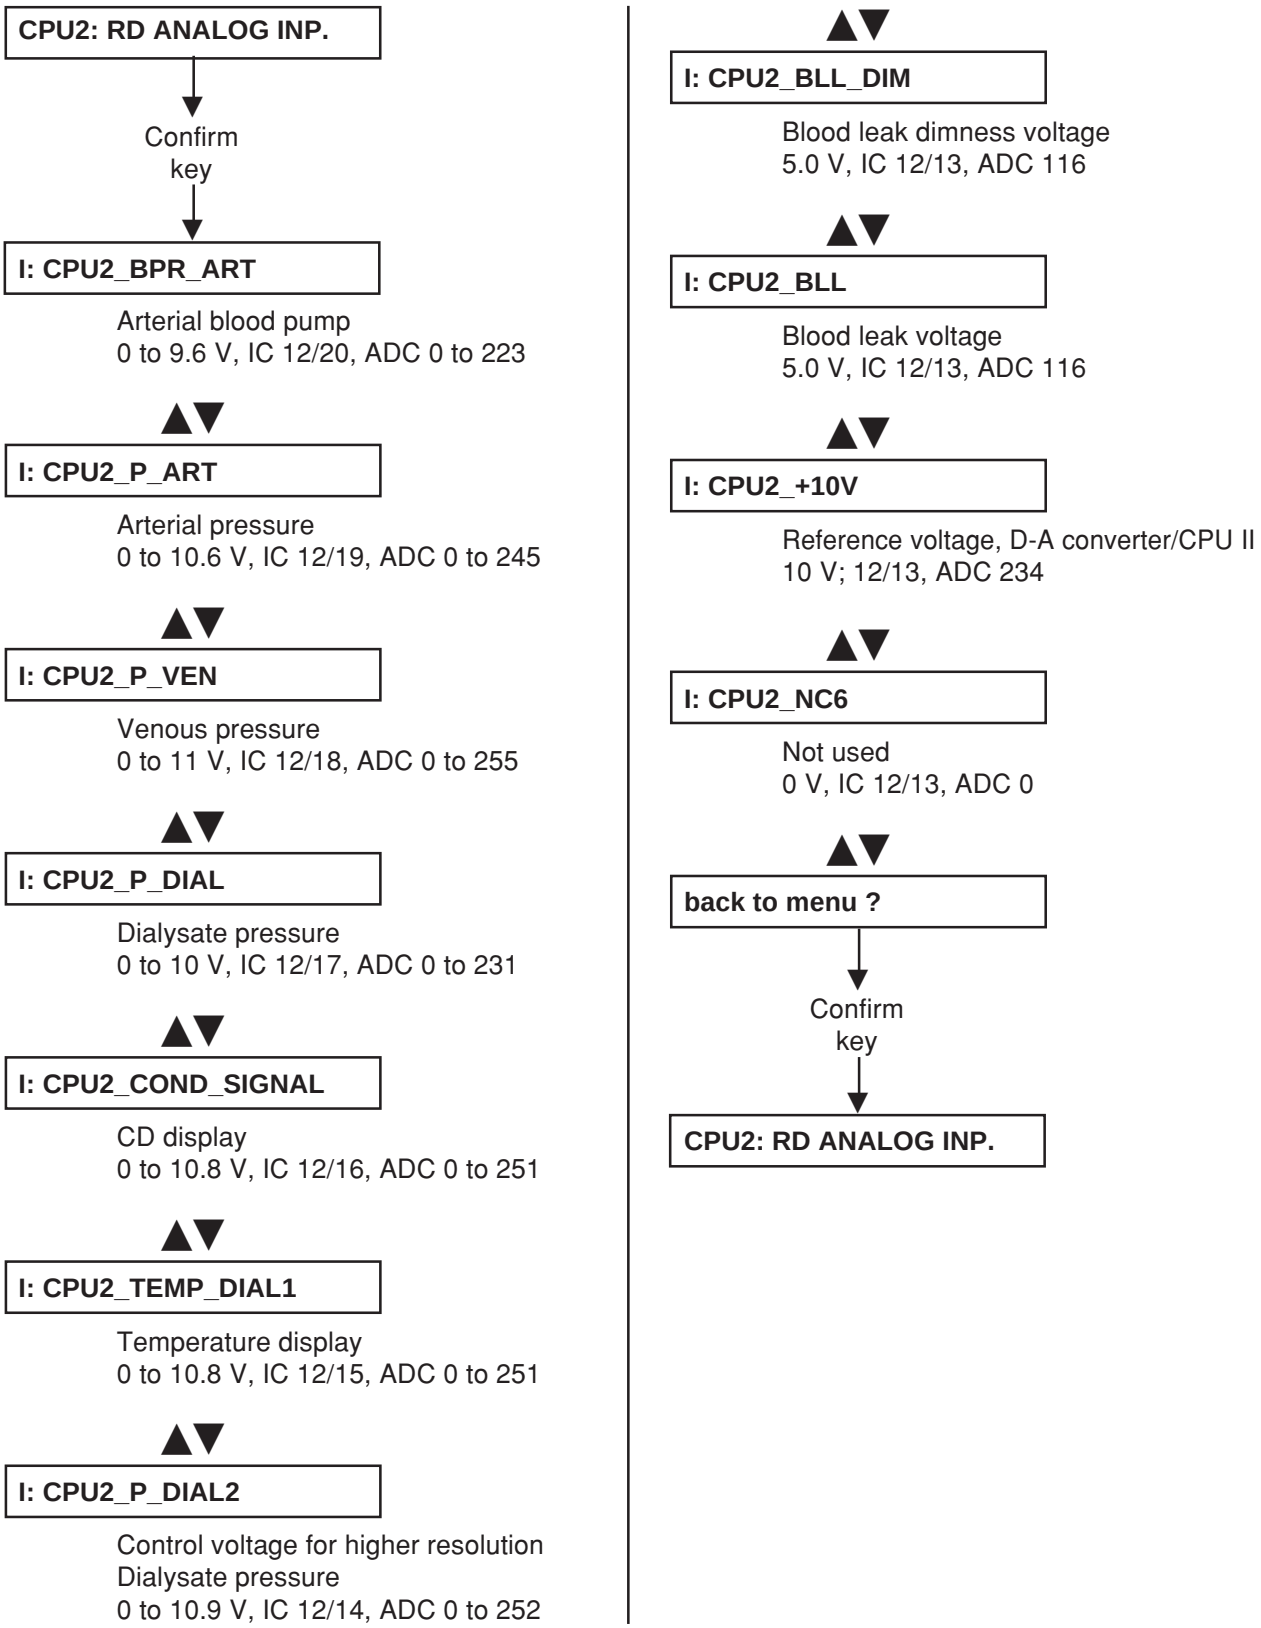
CPU2: RD ANALOG INP.
Confirm key
I: CPU2_BPR_ART
Arterial blood pump
0 to 9.6 V, IC 12/20, ADC 0 to 223
I: CPU2_P_ART
Arterial pressure
0 to 10.6 V, IC 12/19, ADC 0 to 245
I: CPU2_P_VEN
Venous pressure
0 to 11 V, IC 12/18, ADC 0 to 255
I: CPU2_P_DIAL
Dialysate pressure
0 to 10 V, IC 12/17, ADC 0 to 231
I: CPU2_COND_SIGNAL
CD display
0 to 10.8 V, IC 12/16, ADC 0 to 251
I: CPU2_TEMP_DIAL1
Temperature display
0 to 10.8 V, IC 12/15, ADC 0 to 251
I: CPU2_P_DIAL2
Control voltage for higher resolution
Dialysate pressure
0 to 10.9 V, IC 12/14, ADC 0 to 252
I: CPU2_BLL_DIM
Blood leak dimness voltage
5.0 V, IC 12/13, ADC 116
I: CPU2_BLL
Blood leak voltage
5.0 V, IC 12/13, ADC 116
I: CPU2_+10V
Reference voltage, D-A converter/CPU II
10 V; 12/13, ADC 234
I: CPU2_NC6
Not used
0 V, IC 12/13, ADC 0
back to menu ?
Confirm key
CPU2: RD ANALOG INP.

5.5 Reading the digital inputs of CPU I

Explanation:
All UF displays show 0000; red, yellow, green traffic light off: low level at latch on P.C.B. LP 633
All UF displays show 1111; red, yellow, green traffic light on: high level at latch on P.C.B. LP 633
If high level is applied, an audible alarm is simultaneously sounded. This tone can be suppressed by pressing the Alarm Tone Mute key. In this case, the Alarm Tone Mute LED is illuminated.

CPU1: RD DIGITAL INP

↓

Confirm key

↓

I: CPU1_COND_V84

V84 CD recognition
IC 19/2
Check by pulling off/short-circuiting the sensors

▲▼

I: CPU1_LDA1

LD alarm, channel 1
IC 19/3
Check whether LD in alarm/alarm-free state

▲▼

I: CPU1_OD_IN

LD optical detector
IC 19/4
Check whether OD detects dark/light

▲▼

I: CPU1_FL_SWITCH1

Float switch
IC 19/5
Generate water deficiency in calibration mode: 0
Open V 41 until water exits the vent tubing: 1

▲▼

I: CPU1_CI

Balancing chamber switching pulse
IC 19/6

▲▼

I: CPU1_ABG_BYP

Not used
IC 19/7

▲▼

I: CPU1_ABG_ON

Not used
IC 19/8

▲▼

I: CPU1_ABG_ALARM

Not used
IC 19/9

▲▼

I: CPU1_V43

Valve 43
IC 13/2
Check by opening/closing the valve

▲▼

I: CPU1_V26

Valve 26
IC 13/3
Check by opening/closing the valve

▲▼

I: CPU1_V24b

Valve 24b
IC 13/4
Check by opening/closing the valve

▲▼

I: CPU1_V24

Valve 24
IC 13/5
Check by opening/closing the valve

▲▼

I: CPU1_UF_P1

Acknowledgement of UF pump 1
IC 13/6
Check possible only in the combination menu

▲▼

I: CPU1_LDA2

LD alarm, channel 2
IC 13/7
Preparation:
LD alarm-free and set CLAMP_CTRL (CPU1: WR DIGIT. OUTP) to 1
Check: initiate an LD alarm

▲▼

I: CPU1_SUB_W_P

Acknowledgement of UF pump 2
IC 13/8

▲▼

I: CPU1_LC11

IC 13/9

▲▼

I: CPU1_REED_BIC

Bicarbonate reed contact
IC 14/2
Actuate rinse chamber/bicarbonate reed contact

▲▼

I: CPU1_BIBAG

Microswitch 137 / connector
IC 14/3
Check by connecting/removing the BIBAG

▲▼

I: CPU1_REED_RINSE

Concentrate reed contact
IC 14/4
Actuate rinse chamber/concentrate reed contact

▲▼

I: CPU1_BIBAG_C

Microswitch 138 / connector
IC 14/5
Check by connecting/removing the cap

▲▼

I: CPU1_PSW_V102

Concentrate pressure switch
IC 14/6
Check by increasing/decreasing the pressure at the pressure switch

▲▼

I: CPU1_PSW_V104

Bicarbonate pressure switch
IC 14/7
Check by increasing/decreasing the pressure at the pressure switch

▲▼

I: CPU1_PWR_OFF

Power off
IC 14/8

▲▼

I: CPU1_HEP_ON

Heparin pump on
IC 14/9
Switch heparin pump on/off

▲▼

I: CPU1_LA32

IC 15/2

▲▼

I: CPU1_SW_ON_OFF

On/off key on system
IC 15/3
Brief key actuation

▲▼

I: CPU1_PWR_FAIL

Power failure recognition
IC 15/4

▲▼

I: CPU1_SHUNT_OUTP

Microswitch, interlock shunt
IC 15/5
Both lines in the interlock shunt and interlock shunt closed: 0

▲▼

I: CPU1_SHUNT_INP

Microswitch, interlock shunt
IC 15/6
Red line only in the interlock shunt and interlock shunt closed: 0

▲▼

I: CPU1_SHUNT

Microswitch, interlock shunt
IC 15/7
Open/close interlock shunt

▲▼

I: CPU1_SERV_EN

Not used
IC 15/8

▲▼

I: CPU1_LEV_SIGNAL

Level sensor (NTC 6 – replacement)
IC 15/9
Check by removing/short-circuiting the sensor pins

▲▼

I: CPU1_SN

Single-Needle changeover
IC 16/2
Changeover pressure of SN blood pump reached: 0

▲▼

I: CPU1_ADKS

Single-Needle blood pump recognition connected
IC 16/3
Connect/remove the blood pump (only with the system off)

▲▼

I: CPU1_BPSB_ART

Arterial blood pump stop confirmation
IC 16/4
Actuation of Start/Stop key on the arterial blood pump

▲▼

I: CPU1_BPUS_ART

Arterial blood pump revolution stop
IC 16/5
Arterial blood pump alarm field on: 0 (cleared by pressing the Start/Stop key on the blood pump)

▲▼

I: CPU1_BPSB_VEN

Venous blood pump stop confirmation
IC 16/6
Actuation of the Start/Stop key on the venous blood pump

▲▼

I: CPU1_BPUS_VEN

Venous blood pump revolution stop
IC 16/7
Preparation:
Set SNST (CPU1: WR DIGIT. OUTP) to 1 and wait for the alarm field.
Venous blood pump on.
Check: clearing of the alarm field by pressing the Start/Stop key on the venous blood pump

▲▼

E. CPU1_HEP_ALARM

Heparin pump alarm
IC 16/8
Generate a heparin pump alarm
(e.g. by blocking the syringe slide)

▲▼

I: CPU1_BIB_LEVEL

Level sensor 135
IC 16/9
Check by removing/shorting the sensor pins

▲▼

I: CPU1_EXT_ALARM

External alarm
IC 20/2
Release of an external alarm

▲▼

I: CPU1_SERVICE_MODE

Dialysis/calibration changeover
IC 20/3
Reset the service switch

▲▼

I: CPU1_LEVEL_UP

Raise the LD level
IC 20/4
Press the “Raise level” key

▲▼

I: CPU1_LEVEL_DOWN

Lower the LED level
IC 29/5
Preparation:
LD alarm-free, set CLAMP_CTRL (CPU1: WR DIGIT. OUTP) to 1
Check: press the “Lower level” key

▲▼

I: CPU1_ADS_SN

Not used
IC 20/6

▲▼

I: CPU1_ACKN_CONC

Not used
IC 20/7

▲▼

I: CPU1_ACKN_BIC

Not used
IC 20/8

▲▼

I: CPU1_BIBAG_PSW

BIBAG pressure switch
IC 20/9
Check by increasing/decreasing pressure on the pressure switch

▲▼

I: CPU1_RA21

Not used
IC 21/2

▲▼

I: CPU1_HDF_ON

HDF on
IC 21/3
Actuation of HDF On/Off switch

▲▼

I: CPU1_V102

Acknowledgement, valve 102
IC 21/4
Open/close the valve

▲▼

I: CPU1_V104

Acknowledgement, valve 104
IC 21/5
Open/close the valve

▲▼

I: CPU1_CSS_REED

IC 21/6

▲▼

I: CPU1_HEAT_CLK

IC 21/7

▲▼

I: CPU1_BYP_REQ

IC 21/8

▲▼

I: CPU1_CLP_REQ

IC 21/9

▲▼

I: CPU1_LATCH7_FREE1

Not used
IC 7/2

▲▼

I: CPU1_LATCH7_FREE2

Not used
IC 7/3

▲▼

I: CPU1_LATCH7_FREE3

Not used
IC 7/4

▲▼

I: CPU1_LATCH7_FREE4

Not used
IC 7/5

▲▼

I: CPU1_LATCH7_FREE5

Not used
IC 7/6

▲▼

I: CPU1_LATCH7_FREE6

Not used
IC 7/7

▲▼

I: CPU1_LATCH7_FREE7

Not used
IC 7/8

▲▼

I: CPU1_LATCH7_FREE8

Not used
IC 7/9

▲▼

I: CPU1_DIP1:00011100

DIP switch CPU I/array I
P.C.B. LP 631/IC 12/2 to 9
The position of the DIP switches is shown on the alphanumeric display (1: DIP switch „ON“)

▲▼

I: CPU1_DIP2: 00000000

DIP switch CPU I/array II
P.C.B. LP 631/IC 13/2 to 9
The position of the DIP switches is shown on the alphanumeric display (1: DIP switch „ON“)

▲▼

I: CPU1_KEY_TESTING

Touch panel test
P.C.B. LP 635/IC 73/2 to 6
The key pressed is shown on the alphanumerical display, the LED next to the key is illuminated.

▲▼

I: CPU1_RCU_KEY_TEST

Touch panel test for the remote control RCU 4008.
The key pressed is shown on the alphanumerical display, the LED next to the key is illuminated.

▲▼

back to menu ?

↓

Confirm key

↓

CPU1: RD DIGITAL INP

5.6 Reading the digital inputs of CPU II

Explanation:
All UF displays show 0000; red, yellow, green traffic light off: low level at latch on P.C.B. LP 632
All UF displays show 1111; red, yellow, green traffic light on: high level at latch on P.C.B. LP 632
If high level is applied, an audible alarm is simultaneously sounded. This tone can be suppressed by pressing the Alarm Tone Mute key. In this case, the Alarm Tone Mute LED is illuminated.

CPU2: RD DIGITAL INP

↓ Confirm key ↓

I: CPU2_NC3

Not used
IC 4/2

▲▼

I: CPU2_UF_P1

Acknowledgement, UF pump 1
IC 4/3

▲▼

I: CPU2_ACKN_AIRSEP

Acknowledgement, air separation pump
IC 4/4

▲▼

I: CPU2_UF_P2

Acknowledgement, UF pump 2
IC 4/5

▲▼

I: CPU2_CI

Balancing chamber switching pulse
IC 4/6

▲▼

I: CPU2_V24

Acknowledgement, valve 24
IC 4/7, open/close the valve

▲▼

I: CPU2_V24b

Acknowledgement, valve 24b
IC 4/8, open/close the valve

▲▼

I: CPU2_V26

Acknowledgement, valve 26
IC 4/9, open/close the valve

▲▼

I: CPU2_V43

Acknowledgement, valve 43
IC 5/2, open/close the valve

▲▼

I: CPU2_BL_ALARM

Blood pump rate changeover SN/HDF
IC 5/3

▲▼

I: CPU2_PWR_OFF

Power off
IC 5/4

▲▼

I: CPU2_FL_SWITCH+5V

Float switch
IC 5/5
Generate a water deficiency in the calibration mode = 0
Open V41 until water exits the vent tubing = 1

▲▼

I: CPU2_LDA1

LD alarm, channel 1
IC 5/6, LD alarm/alarm-free

▲▼

I: CPU2_LDA2

LD alarm, channel 2
IC 5/7
Preparation:
LD alarm-free and set CLAMP_CTRL (CPU1: WR DIGIT. OUTP) to 1
Check: generate an LD alarm

▲▼

I: CPU2_BPSB_VEN

Venous blood pump stop confirmation
IC 5/8
Actuation of the Start/Stop key on the venous blood pump

▲▼

I: CPU2_BPSB_ART

Arterial blood pump stop confirmation
IC 5/9
Actuation of the Start/Stop key on the arterial blood pump

▲▼

I: CPU2_V42

Not used
IC 6/2

▲▼

I: CPU2_BPST_ART

Acknowledgement, special control of the arterial blood pump
IC 6/3
Check by setting BPST_ART (CPU1: WR DIGIT. OUTP) to 1/0

▲▼

I: CPU2_BPUS_ART

Arterial blood pump revolution stop
IC 6/4
Alarm field of the arterial blood pump on = 0
(cleared by pressing the Start/Stop key on the blood pump)

▲▼

I: CPU2_BPST_VEN

Acknowledgement, special control of the venous blood pump
IC 6/5
Check by setting BPST_VEN (CPU1: WR DIGIT. OUTP) to 1/0

▲▼

I: CPU2_BPUS_VEN

Venous blood pump revolution stop
IC 6/6
Preparation:
Set SNST (CPU1: WR DIGIT. OUTP) to 1 and wait for the alarm field of the venous blood pump to turn on
Check: clear the alarm field by pressing the Start/Stop key on the venous blood pump

▲▼

I: CPU2_ADKS

Single-Needle blood pump recognition connected
IC 6/7
Connect/remove the blood pump (with the system off only)

▲▼

I: CPU2_LEVEL_UP

Raise LD level
IC 6/8, press the “Raise level” key

▲▼

I: CPU2_LEVEL_DOWN

Lower LD level
IC 6/9
Preparation:
LD alarm-free, set CLAMP_CTRL (CPU1: WR DIGIT. OUTP) to 1
Check: press the “Lower level” key

▲▼

I: CPU2_RINSE

Concentrate reed contact
IC 7/2
Actuate rinse chamber/concentrate reed contact

▲▼

I: CPU2_V147

IC 7/3

▲▼

I: CPU2_REED_BIC

Bicarbonate reed contact
IC 7/4
Actuate rinse chamber/bicarbonate reed contact

▲▼

I: CPU2_PSW_104

Bicarbonate pressure switch
IC 7/5
Check by increasing/decreasing pressure at the pressure switch

▲▼

I: CPU2_V145

IC 7/6

▲▼

I: CPU2_SHUNT_OUTP

Microswitch, interlock shunt
IC 7/7
Both lines in the interlock shunt and interlock shunt closed: 0

▲▼

I: CPU2_SHUNT_INP

Microswitch, interlock shunt
IC 7/8
Red line only in the interlock shunt and interlock shunt closed: 0

▲▼

I: CPU2_SHUNT

Microswitch, interlock shunt
IC 7/9, open/close the interlock shunt

▲▼

I: CPU2_ABG_ON

Not used
IC 8/2

▲▼

I: CPU2_SERVICE_MODE

Changeover dialysis/calibration
IC 8/3, reset the service switch

▲▼

I: CPU2_HOT_RINSE

Changeover hot rinsing
IC 8/4
Check by setting HOT_RINSE (CPU1: WR DIGIT. OUTP) to 0/1

▲▼

I: CPU2_OD_OUT

LD optical detector
IC 8/5, optical detector light/dark

▲▼

I: CPU2_SNST

Single-Needle control
IC 8/6

▲▼

I: CPU2_24V_SW

24-V switch
IC 8/7

▲▼

I: CPU2_SN

Single-Needle changeover
IC 8/8, SN switching pressure reached: 0

▲▼

I: CPU2_HEAT_RL_WATCH

Acknowledgement, heater relay
IC 8/9

▲▼

I: CPU2_DIP1: 01100110

DIP switch CPU II/array I
IC 9/2 to 9
DIP switch position shown on the alphanumeric display
(1: DIP switch „ON“)

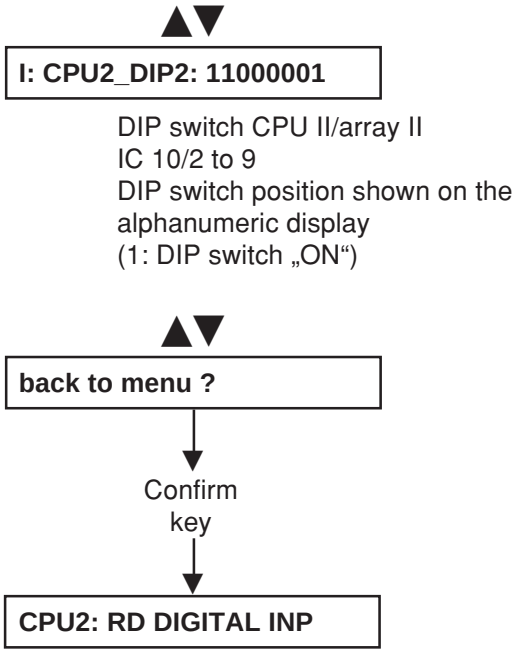
I: CPU2_DIP2: 11000001
DIP switch CPU II/array II
IC 10/2 to 9
DIP switch position shown on the
alphanumeric display
(1: DIP switch „ON“)
back to menu ?
Confirm
key
CPU2: RD DIGITAL INP

5.7 Writing the analog outputs of CPU I

Explanation:
UF Rate display: DAC value (can be changed with: 4008/E/B: ▲▼ UF Rate, 4008 H/S: +/–)
Time Left display: Analog voltage on P.C.B. LP 634, in 0.1 V

CPU1: WR ANALOG OUTP

Confirm key

O: CPU1_TEMP_SET

Rated value specified for the temperature
IC 53/9
0 to 5 V (X634R/C20, 0.2 to 10 V)

▲▼

O: CPU1_DAC_DIM

Calibration voltage, dimness
IC 53/8
0 to 5 V (C634R/A11, 0 to 5 V)

▲▼

O: CPU1_TEMP_ADJ

Calibration voltage, temperature control
IC 53/7
0 to 5 V (X634R/C21, 0 to 5 V)

▲▼

O: CPU1_DAC_BLL

Calibration voltage, blood leak
IC 53/6
0 to 5 V
(X634R/A12, 0 to 5 V)

▲▼

O: CPU1_BIBAG_TEMP_AJ

Calibration voltage for temperature NTC
(slot X107 / LP 747)
IC 53/5
0 to 5 V (X634R/A13, 0 to 5 V)

▲▼

O: CPU1_DAC_X2

Not used
IC 53/4
0 to 5 V (X634R/C13, 0 to 5 V)

▲▼

O: CPU1_STEUER_EP

Speed setting, degassing pump
IC 53/3
0 to 4.4 V (X634L/ between A, B, C 27 and A, B, C 28, 0 to 21 V)

▲▼

O: CPU1_STEUER_FP

Speed setting, flow pump
IC 53/2
0 to 4.4 V (X634L/ between A, B, C 29 and A, B, C 30, 0 to 21 V)

▲▼

back to menu ?

Confirm key

CPU1: WR ANALOG OUTP

5.8 Writing the analog outputs of CPU II

Explanation:
UF Rate display: DAC value (can be changed with: 4008/E/B: ▲▼ UF Rate, 4008 H/S: +/–)
Time Left display: Analog voltage on P.C.B. LP 632, in 0.1 V

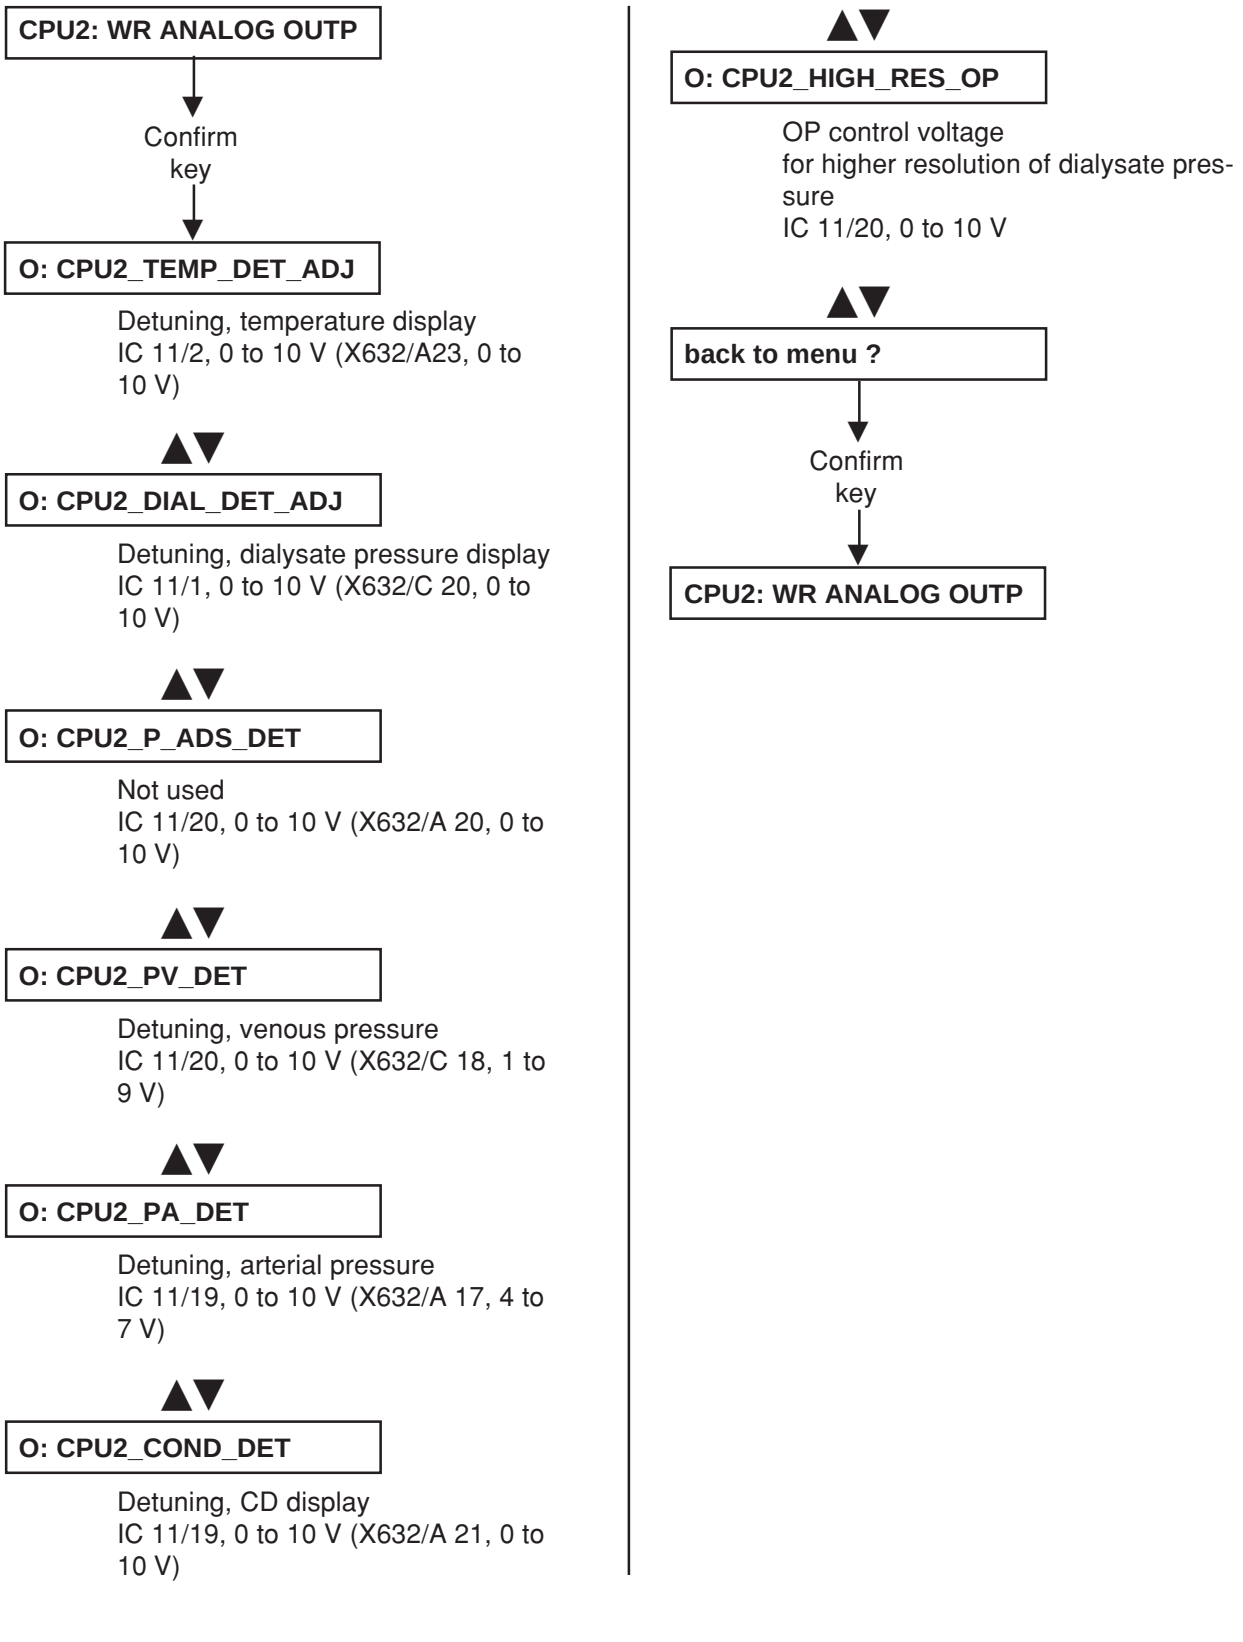
CPU2: WR ANALOG OUTP
Confirm key
O: CPU2_TEMP_DET_ADJ
Detuning, temperature display
IC 11/2, 0 to 10 V (X632/A23, 0 to 10 V)
▲▼
O: CPU2_DIAL_DET_ADJ
Detuning, dialysate pressure display
IC 11/1, 0 to 10 V (X632/C 20, 0 to 10 V)
▲▼
O: CPU2_P_ADS_DET
Not used
IC 11/20, 0 to 10 V (X632/A 20, 0 to 10 V)
▲▼
O: CPU2_PV_DET
Detuning, venous pressure
IC 11/20, 0 to 10 V (X632/C 18, 1 to 9 V)
▲▼
O: CPU2_PA_DET
Detuning, arterial pressure
IC 11/19, 0 to 10 V (X632/A 17, 4 to 7 V)
▲▼
O: CPU2_COND_DET
Detuning, CD display
IC 11/19, 0 to 10 V (X632/A 21, 0 to 10 V)
▲▼
O: CPU2_HIGH_RES_OP
OP control voltage
for higher resolution of dialysate pressure
IC 11/20, 0 to 10 V
▲▼
back to menu ?
Confirm key
CPU2: WR ANALOG OUTP

5.9 Writing the digital outputs of CPU I

Explanation:
UF Rate display: 0000 = not active
1111 = active (P.C.B. LP 634 level)
(can be changed with: 4008/E/B: ▲▼ UF Rate, 4008 H/S: +/–)

CPU1: WR DIGIT. OUTP

↓ Confirm key ↓

O: CPU1_V24

Valve 24
IC 10/19

▲▼

O: CPU1_V24b

Valve 24b
IC 10/13

▲▼

O: CPU1_V26

Valve 26
IC 10/18

▲▼

O: CPU1_V130

Valve 130
IC 10/17

▲▼

O: CPU1_V30

Valve 30
IC 7/16

▲▼

O: CPU1_V31

Valve 31
IC 12/19

▲▼

O: CPU1_V32

Valve 32
IC 12/18

▲▼

O: CPU1_V33

Valve 33
IC 12/17

▲▼

O: CPU1_V34

Valve 34
IC 12/16

▲▼

O: CPU1_V35

Valve 35
IC 12/15

▲▼

O: CPU1_V36

Valve 36
IC 12/14

▲▼

O: CPU1_V37

Valve 37
IC 12/13

▲▼

O: CPU1_V38

Valve 38
IC 12/12

▲▼

O: CPU1_V41

Valve 41
IC 7/13
(After a short time interval, the valve closes automatically, to prevent the water from overflowing.)

▲▼

O: CPU1_V43

Valve 43
IC 7/15

▲▼

O: CPU1_V84

Valve 84
IC 7/18
Note: After the valve V84 has been activated, rinsing is mandatory.

▲▼

O: CPU1_V86

Valve 86
IC 7/17

▲▼

O: CPU1_V87

Valve 87
IC 10/15

▲▼

O: CPU1_V91

Valve 91
IC 10/14
Note: When exiting this menu option (return to „CPU1: WR DIGIT. OUTP“) the valve will be closed.

▲▼

O: CPU1_V99

Valve 99
IC 7/19
Note: When exiting this menu option (return to „CPU1: WR DIGIT. OUTP“) the valve will be closed.

▲▼

O: CPU1_V100

Valve 100
IC 4/17
Note: When exiting this menu option (return to „CPU1: WR DIGIT. OUTP“) the valve will be closed.

▲▼

O: CPU1_V102

Valve 102
IC 10/12
(Activation of the valve is possible only if a mandatory rinse is not requested.)

▲▼

O: CPU1_V104

Valve 104
IC 7/14
(Activation of the valve is possible only if a mandatory rinse is not requested.)

▲▼

O: CPU1_V126

Not used

▲▼

O: CPU1_V145

Not used

▲▼

O: CPU1_V147

Not used

▲▼

O: CPU1_V172

Not used

▲▼

O: CPU1_V173

Not used

▲▼

O: CPU1_AIR_SEP_PUMP

Air separation pump
IC 4/18, 19
(1111: clockwise)
Note: When exiting the menu option, the ASP stops

▲▼

O: CPU1_STOP_EP

Stopping of the degassing pump
IC 4/16

▲▼

O: CPU1_STOP_FP

Stopping of the flow pump
IC 4/15

▲▼

O: CPU1_SET_UF1_ON

Activation of UF pump 1
IC 4/14
(0/1 jump = 1 stroke)

▲▼

O: CPU1_SET_UF2_ON

Activation of UF pump 2
IC 4/13
(0/1 jump = 1 stroke)

▲▼

O: CPU1_SET_EN_UF2

Not used
IC 4/12

▲▼

O: CPU1_SET_FLOW_ON

Flow on
Dataword to Gal 23:
0000 0010 (active, V 32 open)
0000 0011 (inactive, V 31, 32 open)

▲▼

O: CPU1_SET_FILL_PRG

Fill program
Dataword to Gal 23:
0000 1010 (V 32, 34 open)

▲▼

O: CPU1_EMPTIING_PRG

Emptying program:
Dataword to Gal 23:
0001 0010 (V 32, 35 open)

▲▼

O: CPU1_FILL_ONE_CHAM

Filling of a balancing chamber compartment
Dataword to Gal 23:
0100 0010 (V 32, 37 open)

▲▼

O: CPU1_EMPTY_ONE_CHA

Emptying of a balancing chamber compartment
Dataword to Gal 23:
1100 0010 (V 32, 37, 38 open)

▲▼

O: CPU1_CO:L:XXXXXXXX

Step number of concentrate pump
The dataword to IC 2 is indicated on the alphanumeric display and can be changed by pressing the UF Rate UP/DOWN keys.
Prerequisite: reed contact of concentrate connector open

▲▼

O: CPU1_BI_L:XXXXXXXX

Step number of bicarbonate pump
Prerequisite: reed contact of bicarbonate connector open

▲▼

O: CPU1_ALARM_SOUND

Alarm tone
IC 5/18, 19 set to 1: active

▲▼

O: CPU1_WARN_SOUND

Warning tone
IC 5/18 set to 1, 19 to 0: active

▲▼

O: CPU1_INFO_SOUND

Infosound
IC 5/18 set to 0, 19 to 1: active

▲▼

O: CPU1_CLK_OVERLAP

Changeover of dead time of balancing chamber
IC 5/17 set to 0: 1 kHz; to 1: 2 Hz

▲▼

O:CPU1_EN_IN_PULSE

Changeover, “Eigentakt”
IC 5/16 set to 0: “Eigentakt”; to 1: changover current rise

▲▼

O: CPU1_BC_PULSE

Balancing chamber switching
IC 5/15

▲▼

O: CPU1_EN_STEP_PULS

Gal changeover
IC 5/14

▲▼

O: CPU1_BC_FUNCTION

Activation of balancing chamber gal
IC 5/13

▲▼

O: CPU1_STEPPER_PULS

“Eigentakt”
IC 5/12

▲▼

O: CPU1_FL_SWITCH_EN

V41 release
IC 7/12
Check:
Set level to 1 and float switch down:
V 41 open
Set level to 0 and float switch down:
V 41 closed

▲▼

O: CPU1_SNST

Single-Needle control
IC 13/19
Preparation:
LD alarm-free and set CLAMP_CTRL (CPU1: WR DIGIT. OUTP) to 1
Check:
SNST set to 1: as soon as the SN changeover pressure is reached, the venous blood pump is running

▲▼

O: CPU1_CPU_OFF

Automatic switchoff
IC 13/18
In position 1, the system switches off

▲▼

O: CPU1_EN_PF_AT

Release of audible power failure alarm
IC 13/17
Preparation: set WD_SET (CPU2: WR DIGIT. OUTP)
Check: with EN_PF_AT set to 0/1, the power failure alarm can be switched on/off

▲▼

O: CPU1_PIC_RA3

Not used
IC 13/16

▲▼

O: CPU1_PROG_LOG1

Program logic 1, HDF pump
IC 13/14
(0: speed 200; 1: speed 400)

▲▼

O: CPU1_PROG_LOG2

Program logic 2, HDF pump
IC 13/13
(0: speed 200; 1: speed 150)

▲▼

O: CPU1_VENT_VALVE

LD vent valve
IC 13/12

▲▼

O: CPU1_CLR_ALARM

Clearing of the alarm
IC 11/18
Check: generate a heparin pump alarm; by setting CLR_ALARM from 0 to 1, the alarm is cleared.

▲▼

O: CPU1_HOT_RINSE

Changeover, hot rinsing
IC 11/17

▲▼

O: CPU1_TEST_BATT

Battery test
IC 11/16

▲▼

O: CPU1_CPU_AKKU

Battery relay
IC 11/15

▲▼

O: CPU1_HEAT_OFF

Heater blocking
IC 11/14

▲▼

O: CPU1_STAFF_CALL

Staff call
IC 11/13

▲▼

O: CPU1_TL_RED

Traffic light red
IC 11/12
(The pertinent status indicator on the front panel lights simultaneously.)

▲▼

O: CPU1_BPST_ART

Special control of the arterial blood pump
IC 6/19

▲▼

O: CPU1_BPSST_ART

Arterial blood pump system stop
IC 6/18

▲▼

O: CPU1_CLAMP_CTRL

LD clamp control
IC 6/17
Preparation: LD in no alarm state

▲▼

O: CPU1_BPST_VEN

Special control of the venous blood pump
IC 6/16

▲▼

O: CPU1_BPSST_VEN

Venous blood pump system stop
IC 6/15
Preparation:
Set SNST (CPU1: WR DIGIT. OUTP) to 1
Check: apply pressure to the SN blood pump; with BPSST_VEN, the blood pump can be switched on/off.

▲▼

O: CPU1_BL_ALARM

Changeover, blood pump rate Single-Needle/HDF
IC 6/14

▲▼

O: CPU1_TL_YELLOW

Traffic light yellow
IC 6/13
(The pertinent status indicator on the front panel lights simultaneously.)

▲▼

O: CPU1_TL_GREEN

Traffic Light green
IC 6/12
The pertinent status indicator on the front panel lights simultaneously.

▲▼

O: PUMP FASTER

4008 H/S: **O: CPU1_BP_FASTER**

Increase blood pump rate +
(RCU 4008)
LP 649/X4.4; LP 635/X4.4;
LP 922/X5.4; LP 924/X6.4

▲▼

O: PUMP SLOWER

4008 H/S: **O: CPU1_BP_SLOWER**

Decrease blood pump rate –
(RCU 4008)
LP 649/X4.5; LP 635/X4.5;
LP 922/X5.5; LP 924/X6.5

▲▼

O: CPU1_OVERLAP_VALUE

Charging of the dead time counter
IC 3/12 to 19
(DAC adjustable from 0 to 255)

▲▼

O: CPU1_V_ADS

Not used

▲▼

O: CPU1_NC_I

Not used

▲▼

O: CPU1_NC_II

Not used

▲▼

O: CPU1_NC_III

Not used

▲▼

O: CPU1_ACKN_FLOW

Not used

▲▼

O: CPU1_ACKN_BL_ALARM

Not used

▲▼

O: CPU1_DISPLAY_TEST

All LED indicators are tested.
The display on the UF monitor counts
from 1 to 0.

▲▼

back to menu ?

↓

Confirm
key

↓

CPU1: WR DIGIT. OUTP

5.10 Writing the digital outputs of CPU II

Explanation:
UF Rate display: 0000 = not active
1111 = active (P.C.B. LP 632 level)
(can be changed with: 4008/E/B: ▲▼ UF Rate, 4008 H/S: +/–)

CPU2: WR DIGIT. OUTP

Confirm key

O: CPU2_WD_RES

Watchdog reset
IC 24/18
Preparation:
Set WD_SET (CPU2: WR DIGIT. OUTP) to 0, then to 1 again.
Check:
Briefly set WD_RES to 0; upon reset to 1, the WD relay is connected.

▲▼

O: CPU2_WD_SET

Watchdog set
IC 24/17
Watchdog relay drops out, 24 V switched off, audible signal is sounded.
To clear the alarm, turn the system off and on again.
Otherwise calibration impossible.

▲▼

O: CPU2_V24_EN

Release of V 24
IC 24/16
Preparation: V 24
Switch on (CPU1: WR DIGIT. OUTP).
Check: switch the valve on/off with V 24_EN.

▲▼

O: CPU2_V24B_EN

Release of V24b
IC 24/15
Preparation: switch on V 24B (CPU1: WR DIGIT. OUTP).
Check: switch the valve on/off with V 24B_EN.

▲▼

O: CPU2_UF_P_CTRL

Activation of UF pump
IC 24/14, 0/1 level change = 1 stroke
Preparation: set CPU2_UF_P_EN to 1.

▲▼

O: CPU2_UF_P_EN

Release of UF pumps
IC 24/13

▲▼

O: CPU2_CPU2_ALARM

Release of the alarm tone by CPU II
IC 24/12

▲▼

O: CPU2_UF_P2_CTRL

Activation of UF-Pump 2
IC 24/11, 0/1 level change = 1 stroke
Preparation: set CPU2_UF_P_EN to 1.

▲▼

O: CPU2_4066_ENABLE_1

Analog switch for P_ADS_DET
IC 20/13 (X632/A20)

▲▼

O: CPU2_4066_ENABLE_2

Analog switch for +10-V reference voltage
IC 27/5

▲▼

O: CPU2_4066_ENABLE_3

Analog switch for PV_DET
IC 20/6 (X632/C18)

▲▼

O: CPU2_4066_ENABLE_4

Analog switch for PA_DET
IC 20/12 (X632/A17)

▲▼

O: CPU2_4066_ENABLE_5

Analog switch, not used
IC 27/13

▲▼

O: CPU2_4066_ENABLE_6

Analog switch for COND_DET
IC 20/5 (X632/A21)

▲▼

O: CPU2_4066_ENABLE_7

Analog switch for BLL_DIM
IC 27/6

▲▼

O: CPU2_4066_ENABLE_8

Analog switch for BLL
IC 27/12

▲▼

O: CPU2_SN_ART

Single-Needle control, arterial
X632/A15

▲▼

O: CPU2_LDSA

Attenuation of LD ultrasonic sensor
X632/C16
Preparation:
LD alarm-free and set CLAMP_CTRL (CPU1: WR DIGIT. OUTP) to 1.
Check: by setting LDSA to 1, the clamp at the LD closes.

▲▼

O: CPU2_ODSA

Attenuation of LD optical sensor
X632/C15

▲▼

O: CPU2_CLAMP_CTRL

Clamp control, air detector
X632/C10
Preparation: LD in no alarm state

▲▼

O: CPU2_NC5

Not used
X632/B25

▲▼

O: CPU2_NC7

Not used
X632/B10

▲▼

O: CPU2_BLL_DET

Detuning of blood leak detector
X632/A25

▲▼

O: CPU2_SN_EN

Release of Single-Needle
X632/C19

▲▼

O: CPU2_NC10

Not used
X632/B4

▲▼

O: CPU2_V26

Valve 26
X632/A6

▲▼

O: CPU2_V42

Not used
X632/C4

▲▼

O: CPU2_V43

Valve 43
X632/C5

▲▼

O: CPU2_VENT_DSAFE

Vent valve, Diasafe
X632/B5

▲▼

O: CPU2_EM_HEAT_OFF

Heater relay
X632/A9
For safety reasons, the relay switches off again after having been activated.

▲▼

O: CPU2_NC8

Not used
X632/B9

▲▼

O: CPU2_NC9

X632/C6
IC 29/13

▲▼

O: CPU2_LED1

P.C.B. LP 632, LED 1
IC 21/19

▲▼

O: CPU2_LED2

P.C.B. LP 632, LED 2
IC 21/18

▲▼

O: CPU2_LED3

P.C.B. LP 632, LED 3
IC 21/17

▲▼

O: CPU2_LED4

P.C.B. LP 632, LED 4
IC 21/16

▲▼

O: CPU2_LED5

P.C.B. LP 632, LED 5
IC 21/15

▲▼

O: CPU2_LED6

P.C.B. LP 632, LED 6
IC 21/14

▲▼

O: CPU2_LED7

P.C.B. LP 632, LED 7
IC 21/13

▲▼

O: CPU2_LED8

P.C.B. LP 632, LED 8
IC 21/12

▲▼

back to menu ?

↓

Confirm key

↓

CPU2: WR DIGIT. OUTP

5.11 Writing/Reading the digital outputs of CPU I

Explanation:
UF Volume display: Acknowledgement/input (in case of 1111, the three status LEDs of the traffic light are also illuminated)
UF Rate display: Activation/output (can be changed with: 4008/E/B: ▲▼ UF Rate, 4008 H/S: +/–)

CPU1: COMBINATION

Confirm key

CPU 1_COMBI: V24

Valve 24
Activation, P.C.B. LP 634/IC 10/19
Acknowledgement, P.C.B. LP 633/ IC 13/5

▲▼

CPU 1_COMBI: V24b

Valve 24b
Activation, P.C.B. LP 634/IC 10/13
Acknowledgement, P.C.B. LP 633/ IC 13/4

▲▼

CPU 1_COMBI: V26

Valve 26
Activation, P.C.B. LP 634/IC 10/18
Acknowledgement, P.C.B. LP 633/ IC 13/3

▲▼

CPU 1_COMBI: V43

Valve 43
Activation, P.C.B. LP 634/IC 7/15
Acknowledgement, P.C.B. LP 633/ IC 13/2

▲▼

CPU 1_COMBI: V102

Valve 102
Activation, P.C.B. LP 634/IC 10/12
Acknowledgement, P.C.B. LP 633/ IC 21/4
(Activation of the valve is possible only if a mandatory rinse is not requested)

▲▼

CPU 1_COMBI: V104

Valve 104
Activation, P.C.B. LP 634/IC 7/14
Acknowledgement, P.C.B. LP 633/IC 21/5
(Activation of the valve is possible only if a mandatory rinse is not requested)

▲▼

CPU 1_COMBI: UF1_PUMP

UF pump 1
Activation, P.C.B. LP 634/IC 4/14
Acknowledgement, P.C.B. LP 633/IC 13/6
(when setting from 0 to 1 = 1 stroke; acknowledgement is a brief change to 1)

▲▼

CPU 1_COMBI: AIR_SEP

Switching the ASP on/off

▲▼

back to menu ?

Confirm key

CPU 1: COMBINATION

5.12 ONLINE*plus*™ module

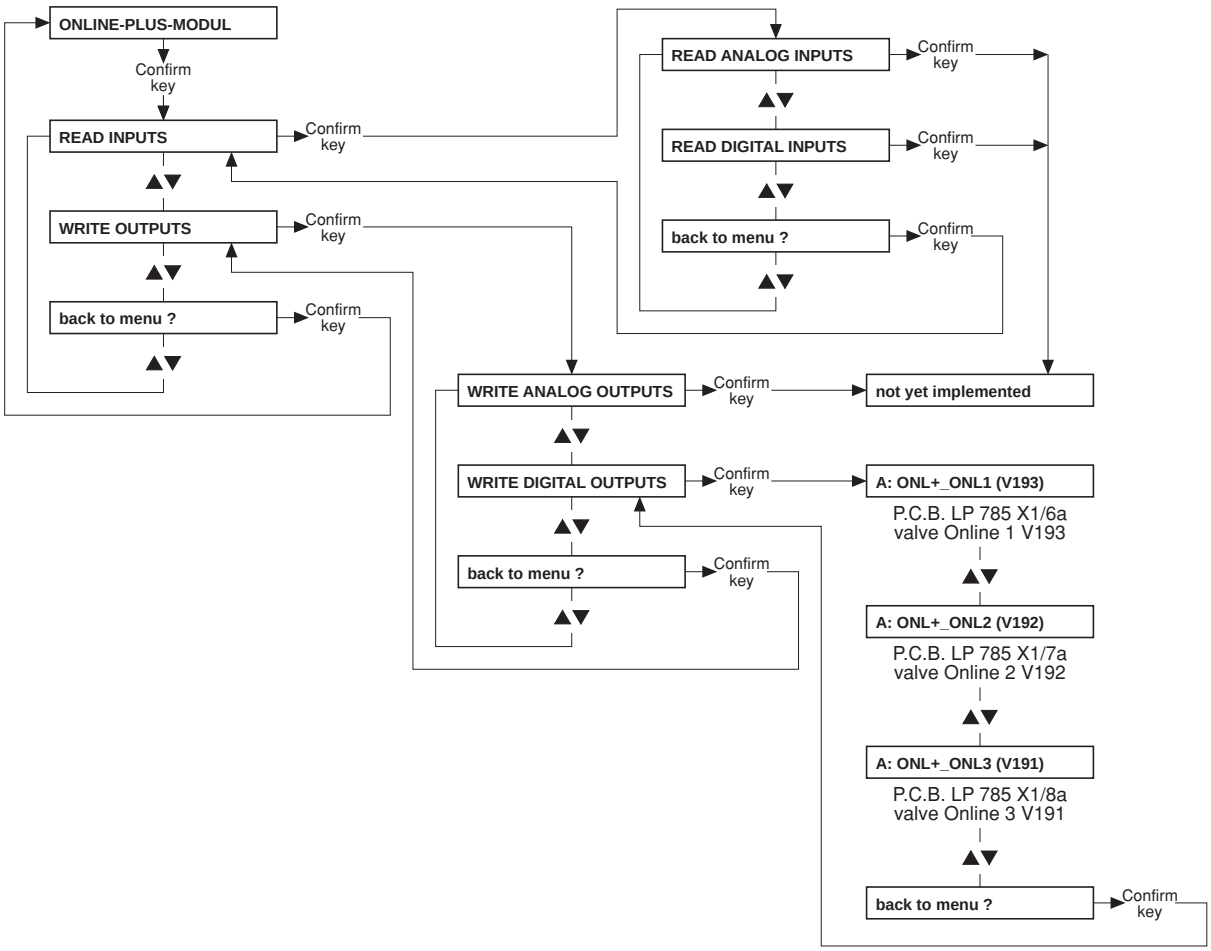

5.13 HPU

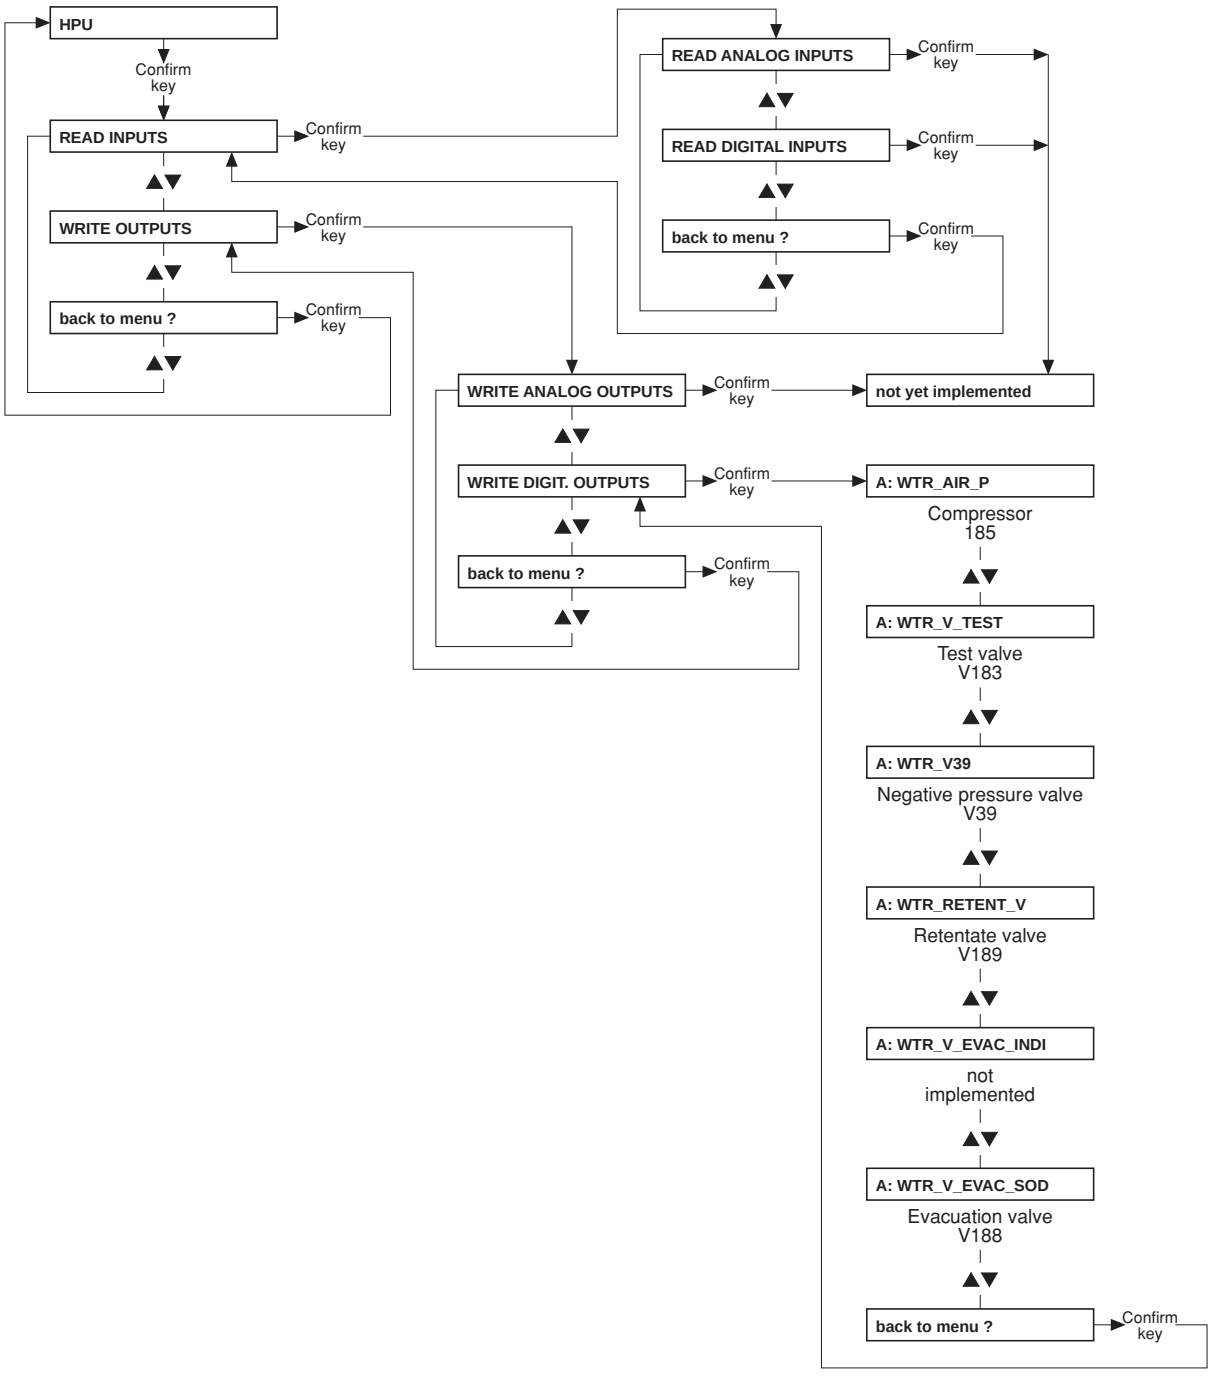
HPU
Confirm key
READ INPUTS
Confirm key
WRITE OUTPUTS
Confirm key
back to menu ?
Confirm key
READ ANALOG INPUTS
Confirm key
READ DIGITAL INPUTS
Confirm key
back to menu ?
Confirm key
WRITE ANALOG OUTPUTS
Confirm key
not yet implemented
WRITE DIGIT. OUTPUTS
Confirm key
A: WTR_AIR_P
Compressor 185
back to menu ?
Confirm key
A: WTR_V_TEST
Test valve V183
A: WTR_V39
Negative pressure valve V39
A: WTR_RETENT_V
Retentate valve V189
A: WTR_V_EVAC_INDI
not implemented
A: WTR_V_EVAC_SOD
Evacuation valve V188
back to menu ?
Confirm key

Table of contents
6 Setup menu

Section		Page
6.1	**Overview Setup menu settings**	6-3
6.2	**Overview**	6-7
6.3	**Main menu 4008 E/B**	6-9
6.4	**Main menu 4008 H/S**	6-37

6.1 Overview Setup menu settings

Menu item	Submenu	Default value	Value range	Resolution
SET ALARM/WARN TIME	**Set ART-AL DELAYTIME**	5 sec	0 – 5 sec	1 sec
	Set VEN-AL DELAYTIME	5 sec	0 – 5 sec	1 sec
	Set FLOW-OFF W-TIME	30 min	30 – 60 min	15 min
	Set UF-WARNING-TIME	10 min	10/30 min	20 min
	Set MUTE-TIME	1 min	1 – 2 min	1 min

Menu item	Submenu	Default value	Value range	Resolution
SETUP CLEANING PGM				
CLEANING Times	**Rinsing TIME**	15 min	5 – 30 min	1 min
	Hotrinse TIME	15 min	15 – 30 min	1 min
	Disinfection TIME	10 min	10 – 20 min	1 min
	Rinsing Free TIME	CPU1: DIP switch array 1, SW8 set to OFF (Test flow 800 ml/min)		
		3 min	3 – 10 min	1 min
		for CDS:		
		5 min	5 – 10 min	1 min
		CPU1: DIP switch array 1, SW8 set to ON (Test flow 500 ml/min)		
		4 min	4 – 10 min	1 min
		for CDS:		
		6 min	6 – 10 min	1 min
	Hot-Disinf TIME	10 min	10 – 20 min	1 min
	Mandatory Rinse TIME	CPU1: DIP switch array 1, SW8 set to OFF (Test flow 800 ml/min)		
		15 min	15 – 30 min	1 min
		for ON-LINE-HDF:		
		20 min	20 – 30 min	1 min
		for ONLINE*plus*™:		
		17 min	17 – 30 min	1 min
		CPU1: DIP switch array 1, SW8 set to ON (Test flow 500 ml/min)		
		15 min	15 – 30 min	1 min
		for ON-LINE-HDF:		
		20 min	20 – 30 min	1 min
		for ONLINE*plus*™:		
		20 min	20 – 30 min	1 min
	CITRO-Mandat-Ri-Time	CPU1: DIP switch array 1, SW8 set to OFF (Test flow 800 ml/min)		
		10 min	10 – 25 min	1 min
		for ON-LINE-HDF:		
		20 min	20 – 25 min	1 min
		for ONLINE*plus*™:		
		17 min	17 – 25 min	1 min
		CPU1: DIP switch array 1, SW8 set to ON (Test flow 500 ml/min)		
		10 min	10 – 25 min	1 min
		for ON-LINE-HDF:		
		20 min	20 – 25 min	1 min
		for ONLINE*plus*™:		
		20 min	20 – 25 min	1 min
	INTEGRATED-HR Time	15 min	15 – 40 min	1 min

Continued on the next page

Menu item	Submenu	Default value	Selectable options
SETUP CLEANING PGM (Continued)			
Pgm COMBINATION only for 4008 E/B	**RINSE Pgm**	**PGM 1: –R–**	**PGM 1: –R–** **PGM 2: –R– endless**
	HOTRINSE Program	**PGM 1: –F–HR–C–**	**PGM 1: –F–HR–C–** **PGM 2: –F–HR–** **PGM 3: –IHR–** **PGM 4: –IHR–C–**
	DISINFECTION Pgm	**PGM 2: –F–HDIS–M–**	**PGM 1: –F–D–M–** **PGM 2: –F–HDIS–M–** **PGM 3: –F–D–M–HR–** **PGM 4: –F–HDIS–M–HR–**
DEFAULT Cleaning Pgm only for 4008 E/B		**PGM 1: –R–**	**PGM 1: –R–** **PGM 2: –R– endless** **PGM 1: –F–HR–C–** **PGM 2: –F–HR–** **PGM 3: –IHR–** **PGM 4: –IHR–C–** **PGM 1: –F–D–M–** **PGM 2: –F–HDIS–M–** **PGM 3: –F–D–M–HR–** **PGM 4: –F–HDIS–M–HR–**

Menu item	Submenu	Default value	Selectable options	
SETUP DILUTION	**canister**	**canister 1+34**	**canister 1+34** **1+35.83 (NaCl 20)** **1+35.83 (NaCl 26)** **1+35.83 (Belgium)** **canister 1+44 C** **canister 1+44 ACF** **VARIABLE SETTING**	
	CDS	**CDS 1+34**	**CDS 1+34** **CDS 1+44 C** **CDS 1+44 ACF**	
		Default value	**Value range**	**Resolution**
	VARIABLE SETTING	–	0.800 – 2.500	0.001
		–	30.000 – 45.000	0.001
		–	25 – 45	1
		–	25 – 80	1

Menu item	Submenu	Default value	Selectable options
HDF-DILUTION only for ON-LINE-HDF (option)		**HDF–PRE–dilution**	**HDF–PRE–dilution** **HDF–POST–dilution**

Menu item	Submenu	Default value	Value range	Resolution
SET CONDUCT. LIMIT	**Cd Limit: 12.8 mS/cm**	12.8 mS/cm	12.8 – 14.0 mS/cm	0.1 mS/cm

Menu item	Submenu	Default value	Selectable options
INFO SOUND (C-PGM)		**Info-Sound: ON**	**Info-Sound: ON** **Info-Sound: OFF**

Menu item	Submenu	Default value	Value range	Resolution
SET DIAL PARAMETERS				
SET Flow Parameter	**Flow[ml/min]: 500**	500 ml/min	300 / 500 / 800 ml/min or value set in Dial	
SET Temp. Parameter	**Temp.[°C]: 37.0**	37 °C	35 – 39 °C or value set in Dial	0.5 °C
SET Na/Bic Parameter	**Base Na+ 135mmol**	135 mmol	125 – 150 mmol or value set in Dial	1 mmol
	Prescr. Na+ 135mmol	135 mmol	125 – 150 mmol (±13 mmol around the basic value)	1 mmol
	Bicarbonate ±0mmol	0 mmol	–8 to +8 mmol or value set in Dial	1 mmol
	Limit Na/Base: 13 mmol only for 4008 H/S	13 mmol	0 – 13 mmol however prescribed Na^+, Base Na^+	1 mmol

Menu item	Submenu	Default value	Selectable options
DIALYSIS TIME only for 4008 E/B		**Effect. dialysis time**	**Effect. dialysis time** **UF time**

Menu item	Submenu	Default value	Selectable options
CALC.CUMUL.BLOOD-VOL		**during seq DIAL: YES**	**during seq DIAL: YES** **during seq DIAL: NO**

Menu item	Submenu	Default value	Selectable options
HAEMOGLOBIN UNIT only for BVM (option) and 4008		**g/dl**	**g/dl** **mmol/l**

Menu item	Submenu	Default value	Selectable options
OCM SETTINGS only for OCM (option) and 4008 H/S	**OCM MEASUREMENT**	**OCM Measurement: OFF**	**OCM Measurement: OFF** **OCM Measurement: ON**

Submenu	Default value	Value range	Resolution
OCM MEASURE DEL.TIME	4008 H with advanced hydraulics: 15 sec	1 – 70 sec	1 sec
	4008 H with ONLINE*plus*™: 65 sec	1 – 70 sec	1 sec
	4008 S with advanced hydraulics: 18 sec	1 – 70 sec	1 sec
	4008 S with ONLINE*plus*™: 67 sec	1 – 70 sec	1 sec
OCM KT/V WARNLEVEL	85 %	0 – 99 %	1 %

Menu item	Submenu	Default value	Selectable options
AUTOM. SN-START		**autom. SN: OFF**	**autom. SN: OFF** **autom. SN: ON**

Menu item	Submenu	Default value	Selectable options
ACTIV. MONIT_NTC109		**MONIT_NTC109: YES**	**MONIT_NTC109: YES** **MONIT_NTC109: NO**

Menu item	Submenu	Default value	Selectable options
ACTIV. STD UF-DATA		**std UF-DATA: NO**	**std UF-DATA: NO** **std UF-DATA: YES**

Menu item	Submenu	Default value	Value range	Resolution
SET STD. PRIME-TIME	**Prime-Time = 2min**	2 min	1 – 5 min	1 min

Menu item	Submenu	Default value	Selectable options
SOUND I/O-SWITCH		**I/O-Warnsound: ON**	**I/O-Warnsound: ON** **I/O-Warnsound: OFF**

Menu item	Submenu	Default value	Selectable options
SET KEY-CLICK only for 4008 H/S		**key-click: ON**	**key-click: ON** **key-click: OFF**

Menu item	Submenu	Default value	Selectable options
BPR/UFR-WARNING		**BPR/UFR-Warning: ON**	**BPR/UFR-Warning: ON** **BPR/UFR-Warning: OFF**

Menu item	Submenu	Default value	Value range	Resolution
SET RINSE-VOLUME	**RINSE-VOL: 1000 ml**	1000 ml	0 – 5000 ml	100 ml

Menu item	Submenu	Default value	Selectable options
T1-TEST AUTOSTART		**T1-T. Autostart: OFF**	**T1-T. Autostart: OFF** **T1-T. Autostart: ON**

Menu item	Submenu	Default value	Value range	Resolution
ONLINE plus SETTINGS only for ONLINE*plus*™ (option)				
ONLINE plus HD	**SET UF-Volume F/R**	0 ml	0 – 1000 ml	100 ml
	SET Rinsing Volume	1000 ml	0 – 5000 ml	100 ml
ONLINE plus HDF	**SET UF-Volume F/R**	500 ml	0 – 1000 ml	100 ml
	SET Rinsing Volume	1000 ml	0 – 5000 ml	100 ml
	SET Substit.-Volume	12 l	0 – 210 l	1 l
ONLINE plus HF	**SET UF-Volume F/R**	1000 ml	0 – 5000 ml	100 ml
	SET Rinsing Volume	1000 ml	0 – 5000 ml	100 ml
	SET Substit.-Volume	20 l	0 – 210 l	1 l
ONLINE plus MISC.	**SET Reinf.-Volume**	240 ml	90 – 480 ml	30 ml

Menu item	Submenu	Default value	Selectable options
SET CENTRAL-DELIVERY		**NO central-delivery**	**NO central-delivery** **central Bic** **central Acid** **central Acid + Bic** **centr acetate-supply**

Menu item	Submenu	Default value	Selectable options
AutoOFF after AutoON		**OFF**	**OFF** **ON**

Menu item	Submenu	Default value	Selectable options
Init. CAMUS-baudrate		**2400 baud**	**2400 baud** **9600 baud**

Menu item	Adjustment
STORE DEFAULT VALUES	**Press OVERRIDE** only for 4008 E/B **Press ALARMTONE MUTE** only for 4008 H/S

6.2 Overview

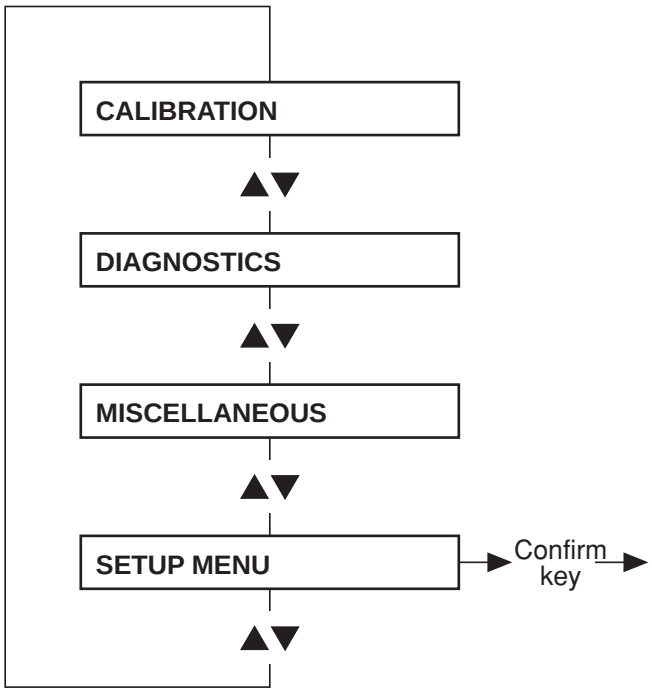
CALIBRATION
DIAGNOSTICS
MISCELLANEOUS
SETUP MENU
Confirm key

6.3 Main menu 4008 E/B

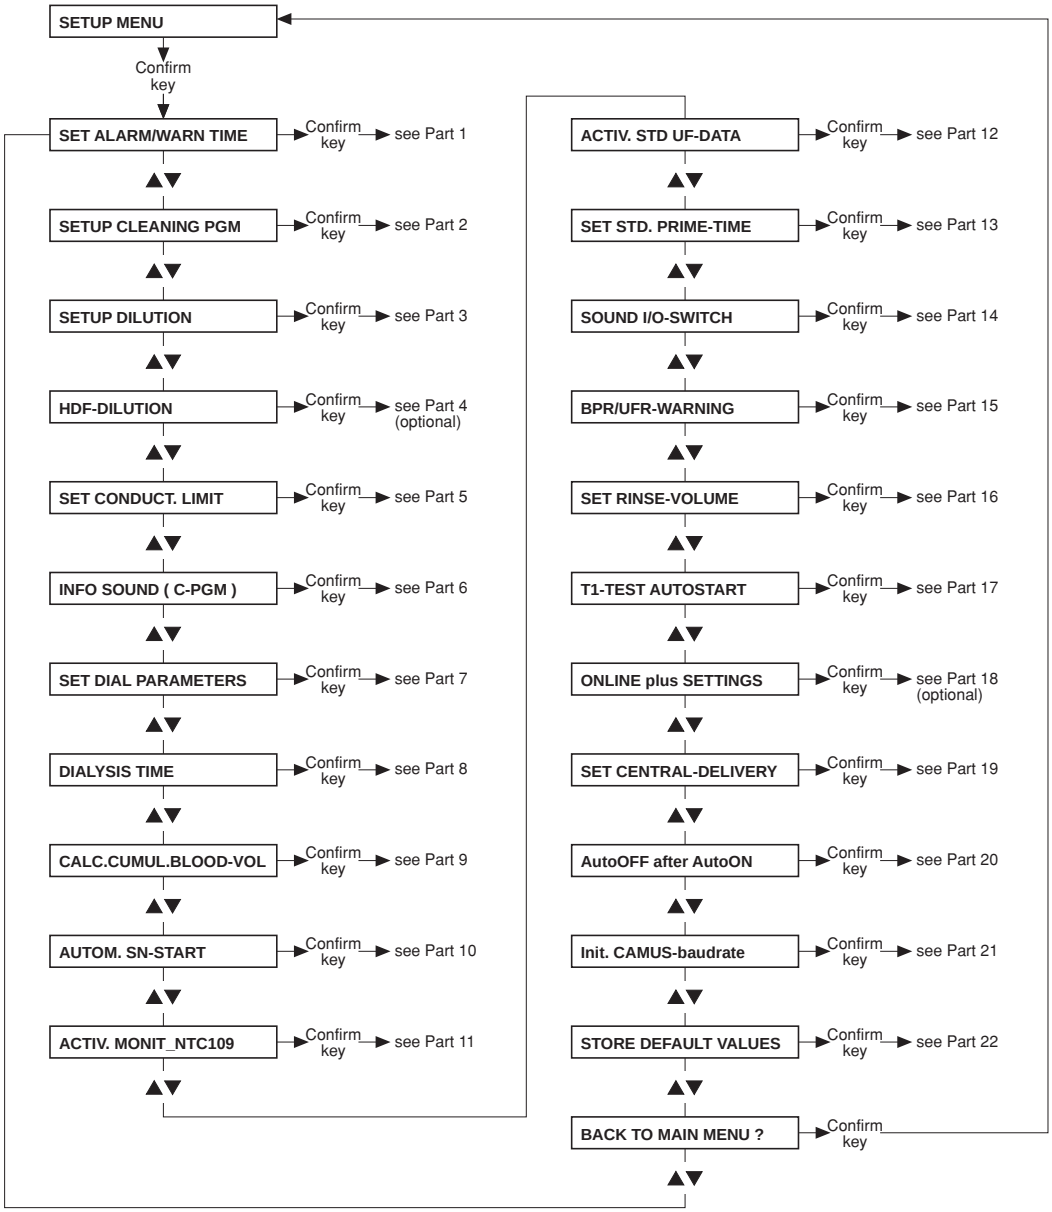

- **Part 1: Setting the alarm and warning time**

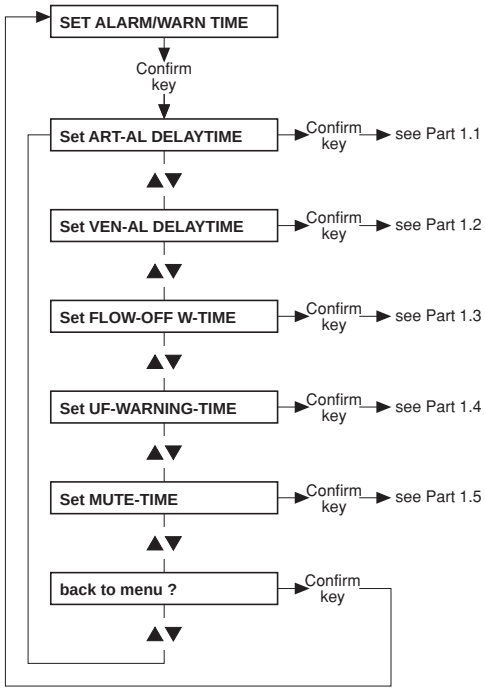

- **Part 1.1: Setting the delay time of the arterial alarm**

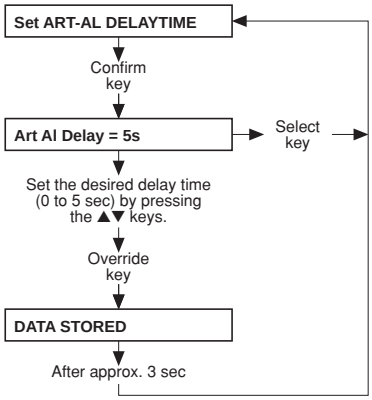
Set ART-AL DELAYTIME
Confirm key
Art Al Delay = 5s
Select key
Set the desired delay time (0 to 5 sec) by pressing the ▲▼ keys.
Override key
DATA STORED
After approx. 3 sec

- **Part 1.2: Setting the delay time of the venous alarm**

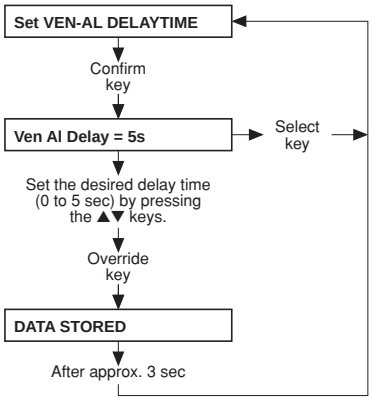
Set VEN-AL DELAYTIME
Confirm key
Ven Al Delay = 5s
Select key
Set the desired delay time (0 to 5 sec) by pressing the ▲▼ keys.
Override key
DATA STORED
After approx. 3 sec

- **Part 1.3: Setting the flow-off warning time**

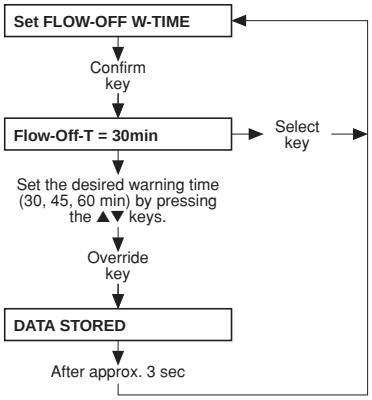
Set FLOW-OFF W-TIME
Confirm key
Flow-Off-T = 30min
Select key
Set the desired warning time (30, 45, 60 min) by pressing the ▲▼ keys.
Override key
DATA STORED
After approx. 3 sec

- **Part 1.4: Setting the UF warning time**

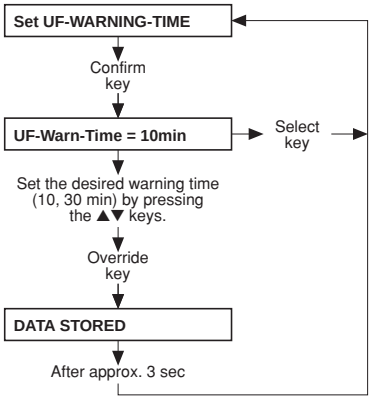

- **Part 1.5: Setting the mute time**

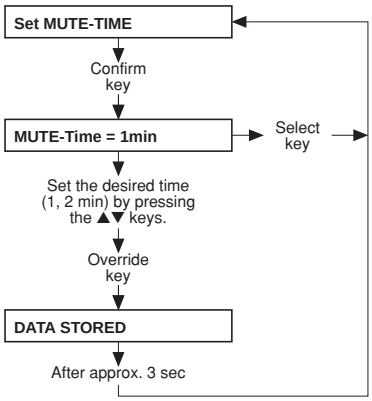

- **Part 2: Setting up the cleaning program**

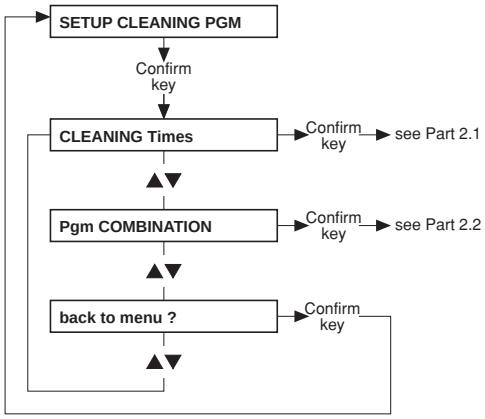

- **Part 2.1: Cleaning times**

Note
The default values and the adjustable range for the cleaning times are not indicated, as they depend on the particular system options.

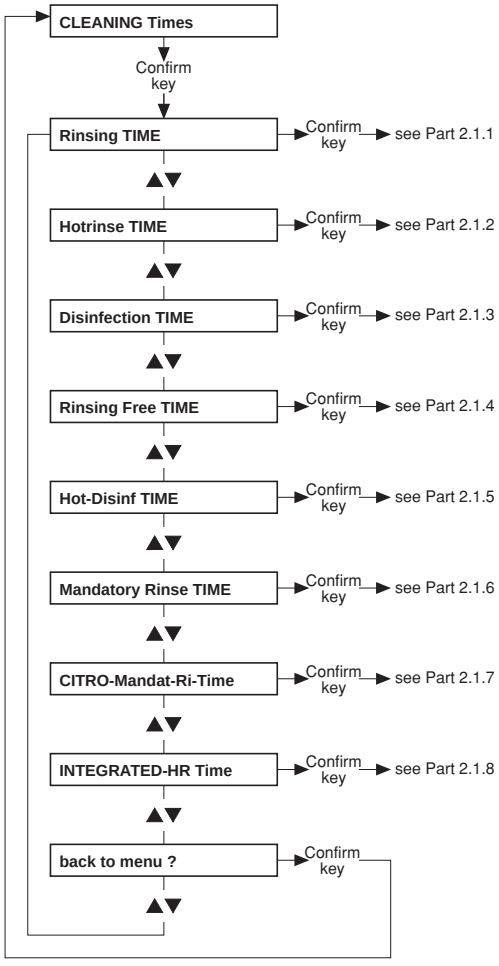

- **Part 2.1.1: Rinsing time**

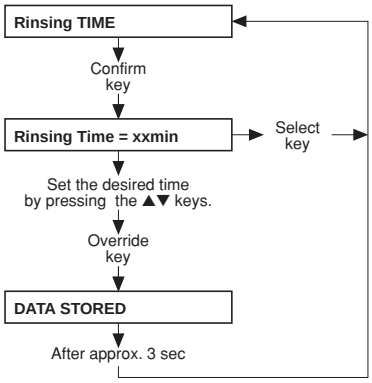

- **Part 2.1.2: Hot rinsing time**

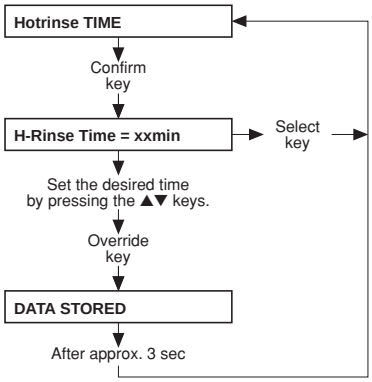

- **Part 2.1.3: Disinfection time**

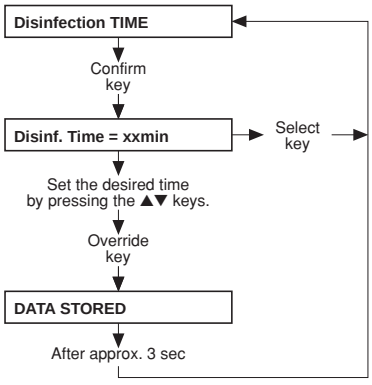

- **Part 2.1.4: Rinsing free time**

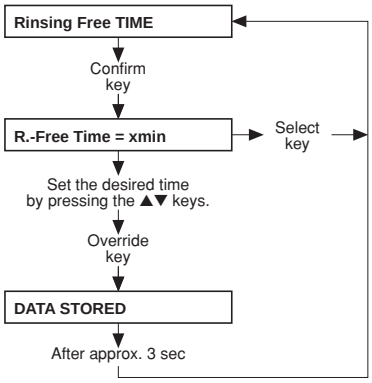

- **Part 2.1.5: Hot disinfection time**

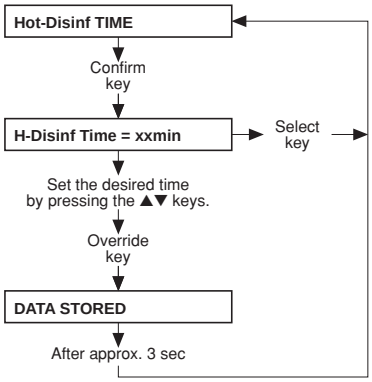

- **Part 2.1.6: Mandatory rinse time**

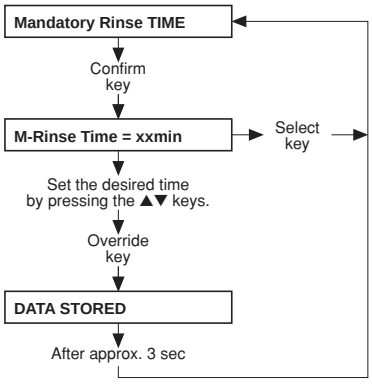

- **Part 2.1.7: Citro mandatory rinse time**

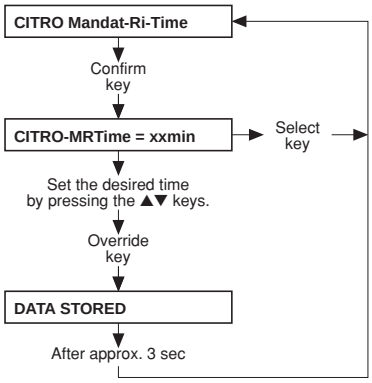

- **Part 2.1.8: Integrated hot rinse time**

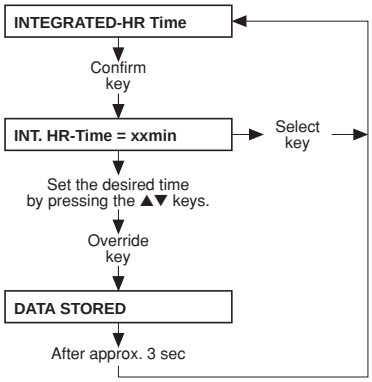

- **Part 2.2: Cleaning program combination**

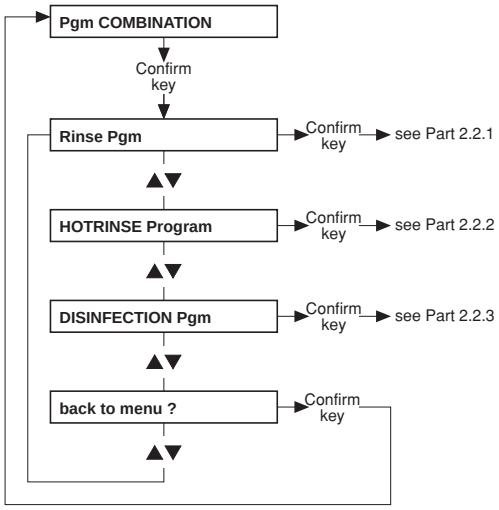

- **Part 2.2.1: Rinse program**

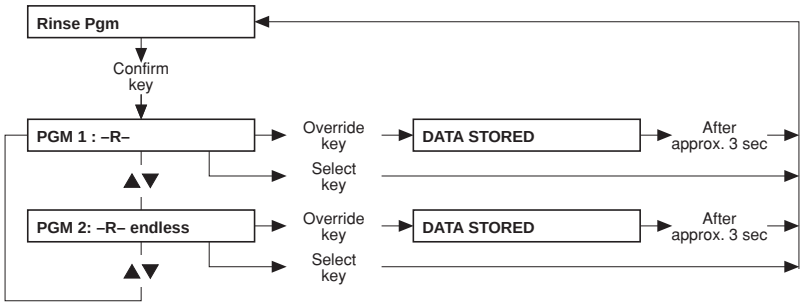

- **Part 2.2.2: Hot rinse program**

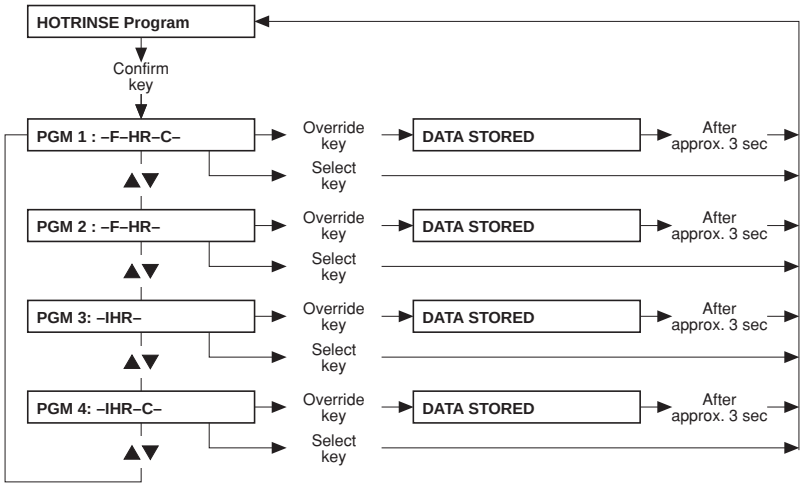

- **Part 2.2.3: Disinfection program**

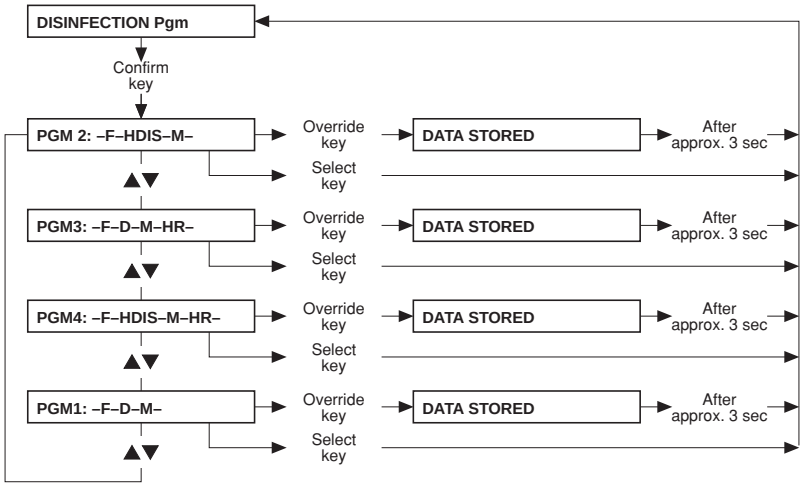

- **Part 3: Mixing ratio with „NO central-delivery“, „central Bic“ (setting ➜ Part 19)**

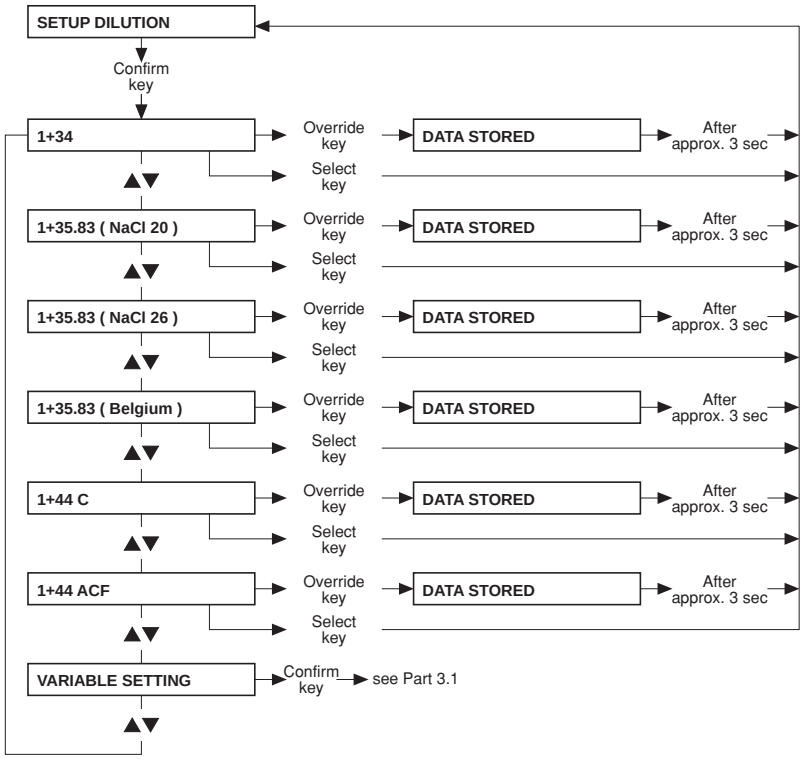

- **Part 3: Mixing ratio with „central Acid“, „central Acid + Bic“ (setting ➜ Part 19)**

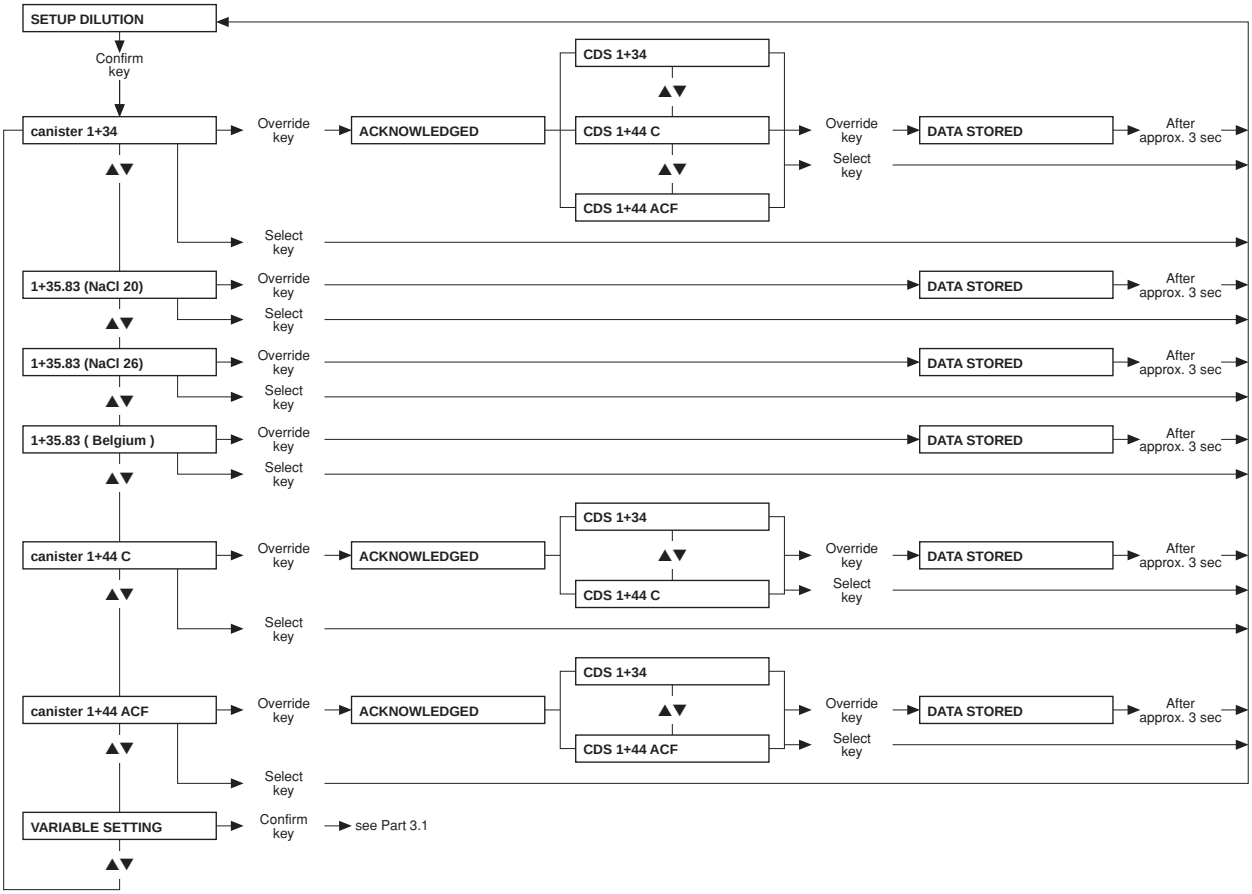

- **Part 3: Mixing ratio with „centr acetate-supply“ (setting ➜ Part 19)**

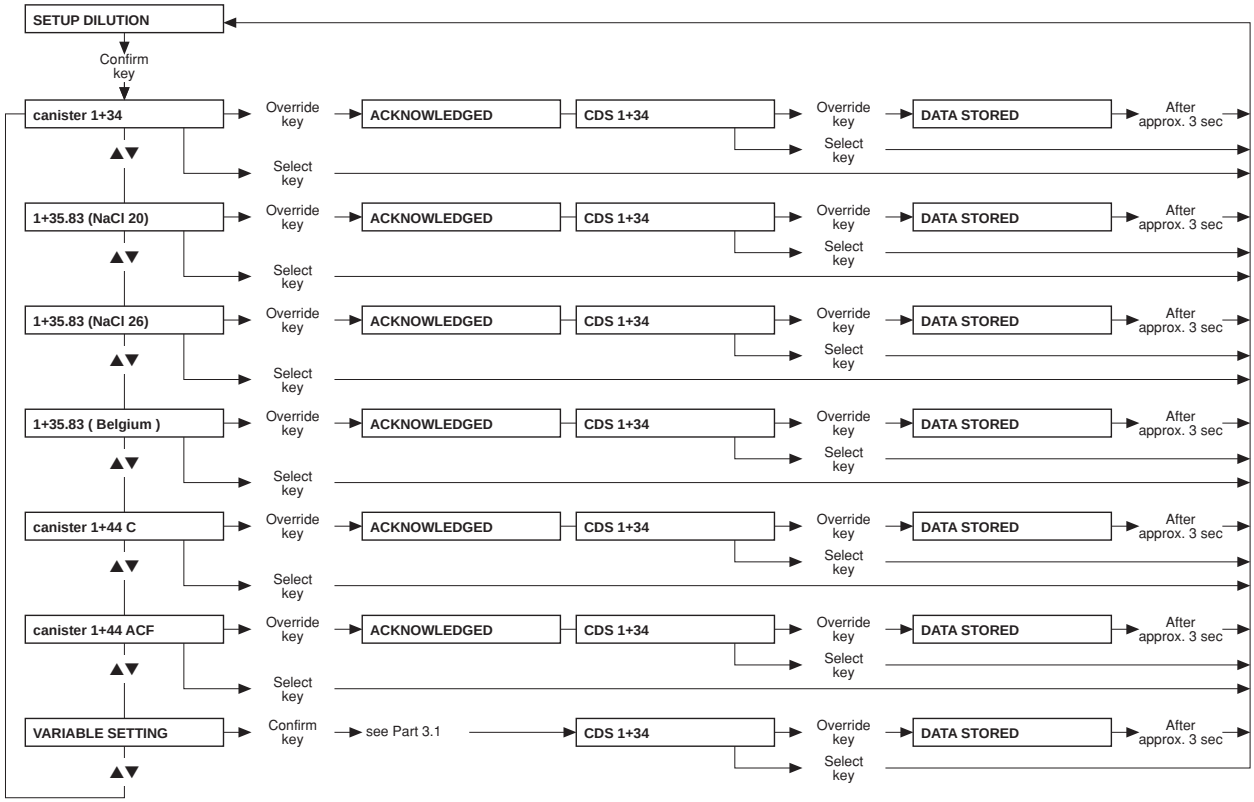

- **Part 3.1: Programmable mixing ratio (dilution)**

Caution
The operator or technician is informed about his duty of care to enter the component parameters and settings correctly or to check them and to set the CD alarm window to the expected conductivity value.
When using the programmable mixing ratio (dilution), make sure to use the right concentrate.
Using a bi*b*ag® in combination with the programmable mixing ratio (dilution) is not allowed.
Only enter authorized, programmable mixing ratios (dilutions).

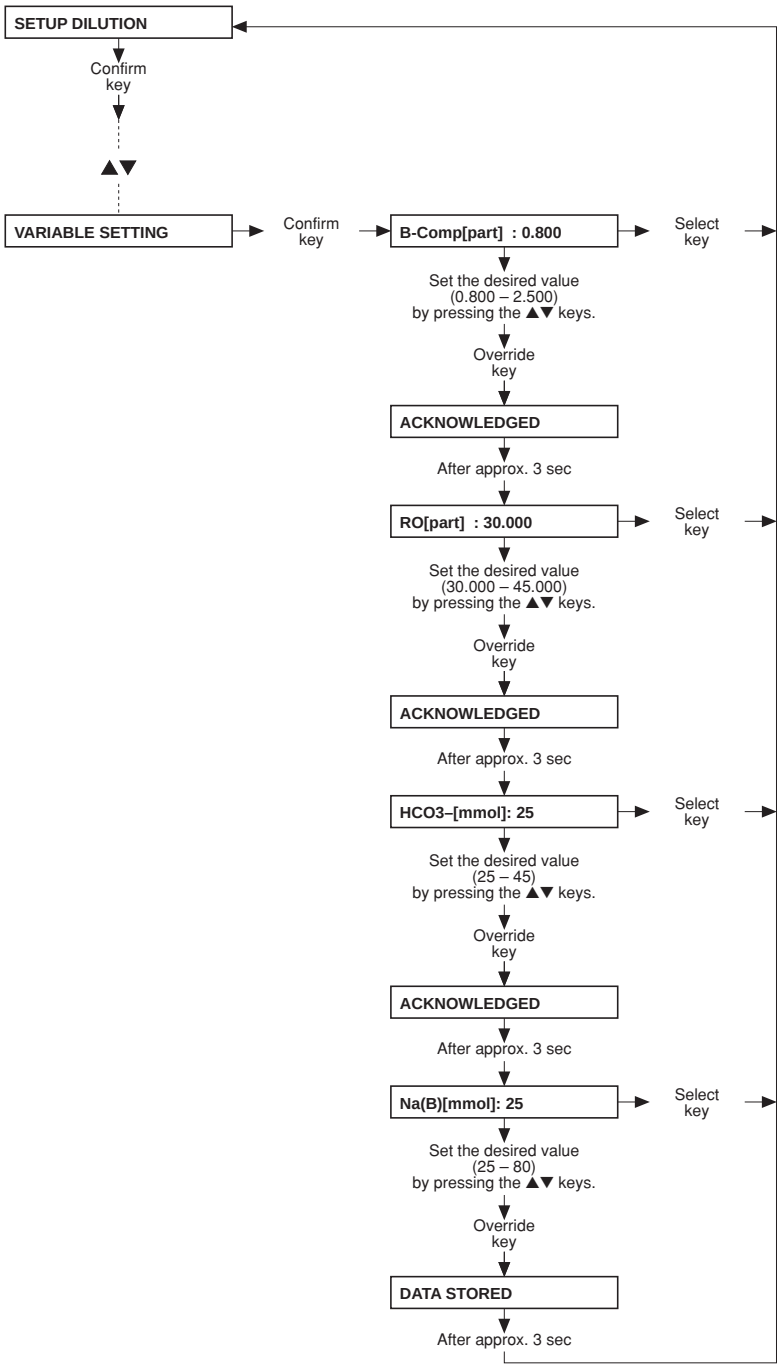

- **Part 4: Setting the HDF dilution – only for ON-LINE-HDF (option)**

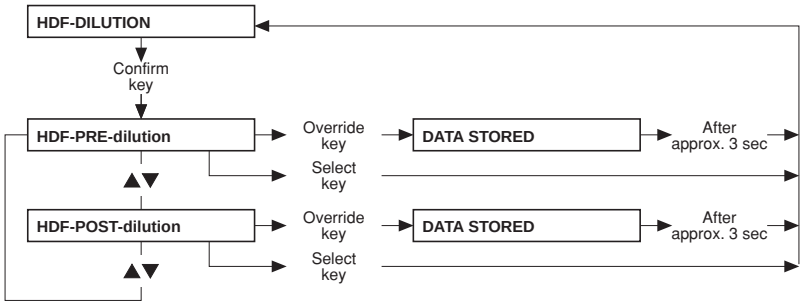

- **Part 5: Setting the conductivity limit**

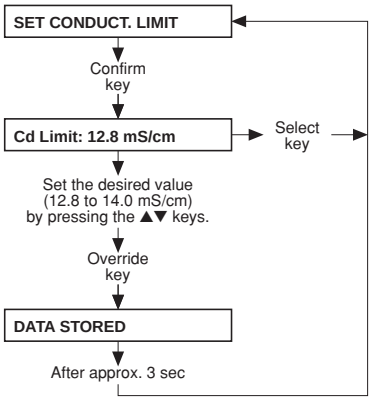
SET CONDUCT. LIMIT
Confirm key
Cd Limit: 12.8 mS/cm
Select key
Set the desired value (12.8 to 14.0 mS/cm) by pressing the ▲▼ keys.
Override key
DATA STORED
After approx. 3 sec

- **Part 6: Infosound cleaning program**

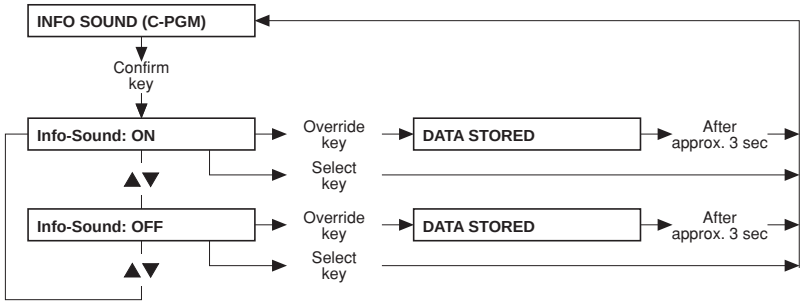

- **Part 7: Setting the dialysis parameters**

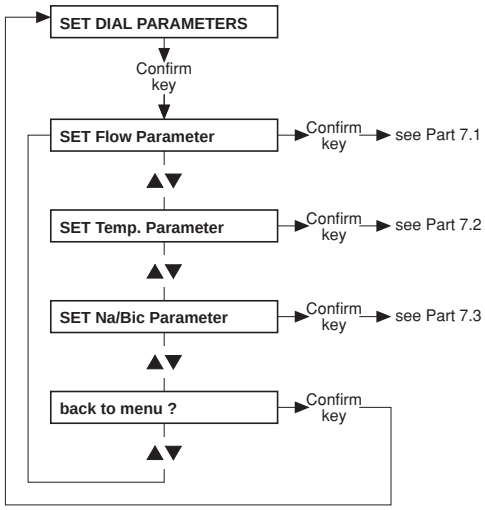

- **Part 7.1: Setting the dialysate flow**

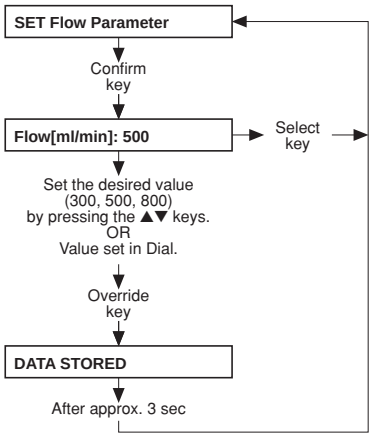
SET Flow Parameter
Confirm key
Flow[ml/min]: 500
Select key
Set the desired value (300, 500, 800) by pressing the ▲▼ keys. OR Value set in Dial.
Override key
DATA STORED
After approx. 3 sec

- **Part 7.2: Setting the dialysate temperature**

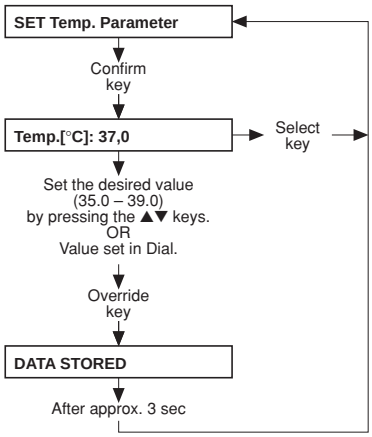
SET Temp. Parameter
Confirm key
Temp.[°C]: 37,0
Select key
Set the desired value (35.0 – 39.0) by pressing the ▲▼ keys. OR Value set in Dial.
Override key
DATA STORED
After approx. 3 sec

- **Part 7.3: Setting the Na/Bic**

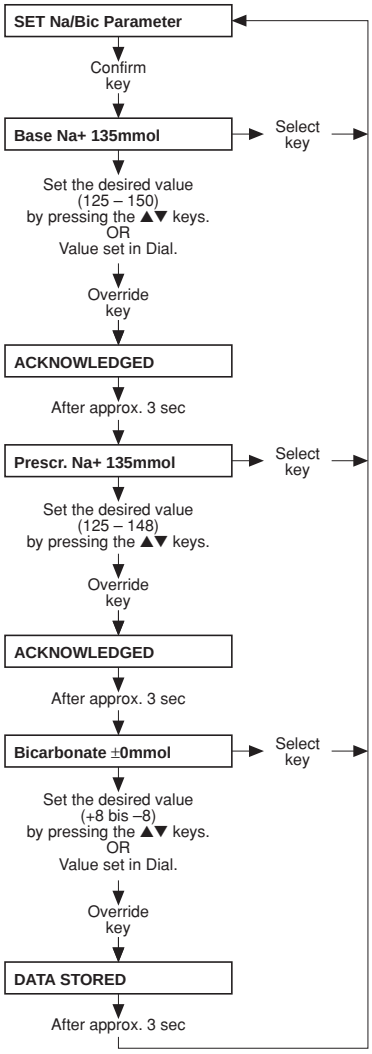
SET Na/Bic Parameter
Confirm key
Base Na+ 135mmol
Select key
Set the desired value (125 – 150) by pressing the ▲▼ keys. OR Value set in Dial.
Override key
ACKNOWLEDGED
After approx. 3 sec
Prescr. Na+ 135mmol
Select key
Set the desired value (125 – 148) by pressing the ▲▼ keys.
Override key
ACKNOWLEDGED
After approx. 3 sec
Bicarbonate ±0mmol
Select key
Set the desired value (+8 bis –8) by pressing the ▲▼ keys. OR Value set in Dial.
Override key
DATA STORED
After approx. 3 sec

- **Part 8: Dialysis time**

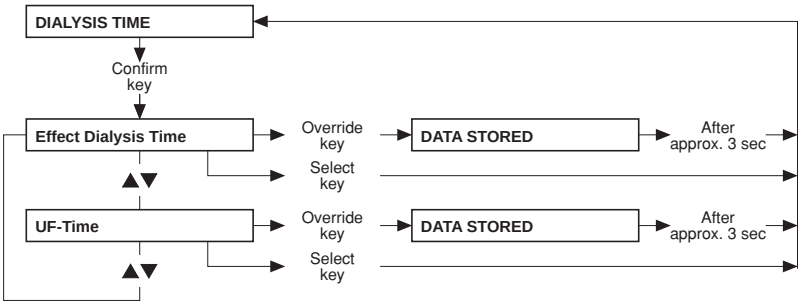

- **Part 9: Cumulated blood volume**

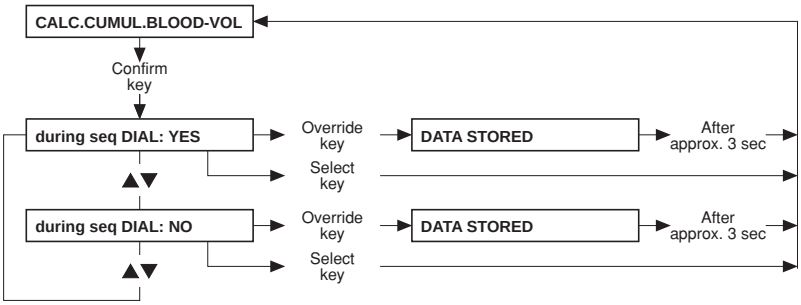

- **Part 10: Automatic Single-Needle start**

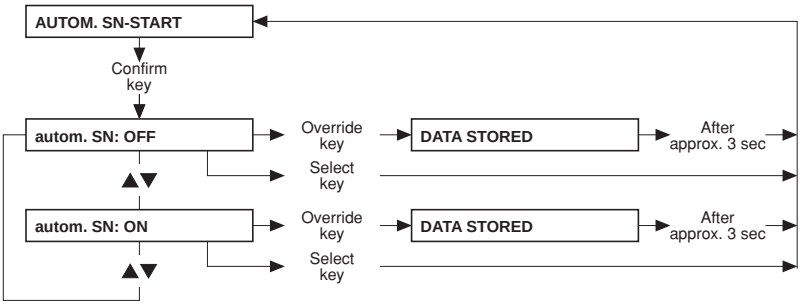

- **Part 11: Activation of Monit_NTC 109**

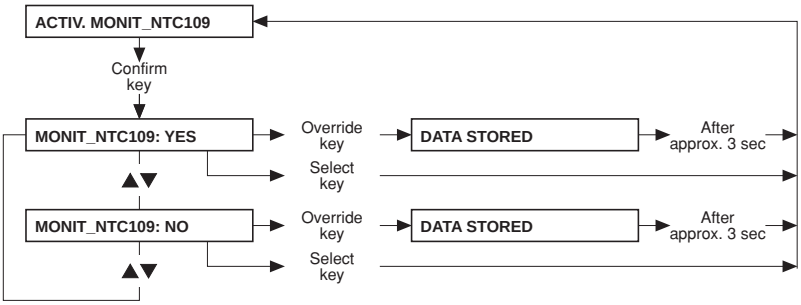

- **Part 12: Activation of standard UF data**

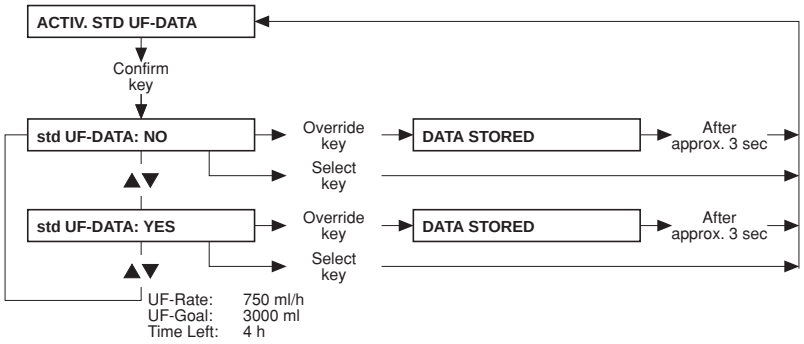

- **Part 13: Setting the priming time**

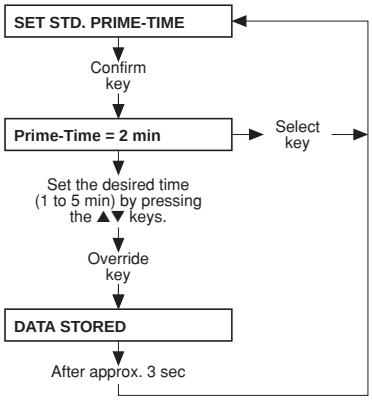
SET STD. PRIME-TIME
Confirm key
Prime-Time = 2 min
Select key
Set the desired time (1 to 5 min) by pressing the ▲▼ keys.
Override key
DATA STORED
After approx. 3 sec

- **Part 14: Warning sound I/O key**

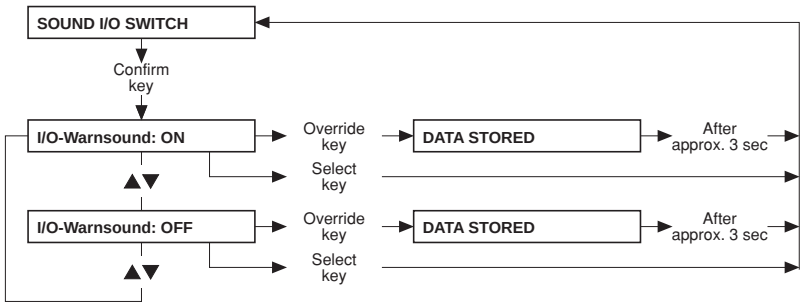

- **Part 15: Setting the BPR/UFR warning**

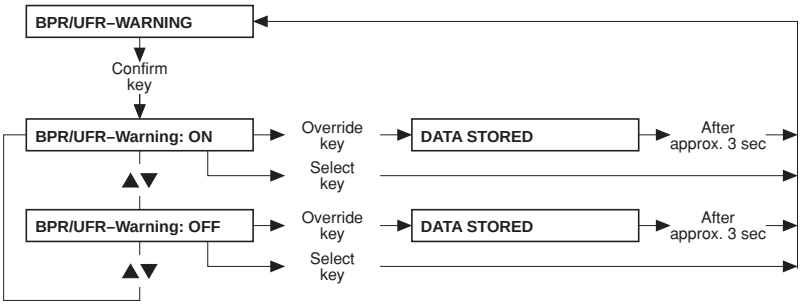

- **Part 16: Setting the rinse volume**

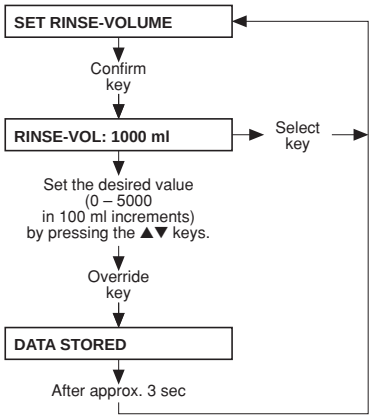
SET RINSE-VOLUME
Confirm key
RINSE-VOL: 1000 ml
Select key
Set the desired value (0 – 5000 in 100 ml increments) by pressing the ▲▼ keys.
Override key
DATA STORED
After approx. 3 sec

- **Part 17: T1 test autostart**

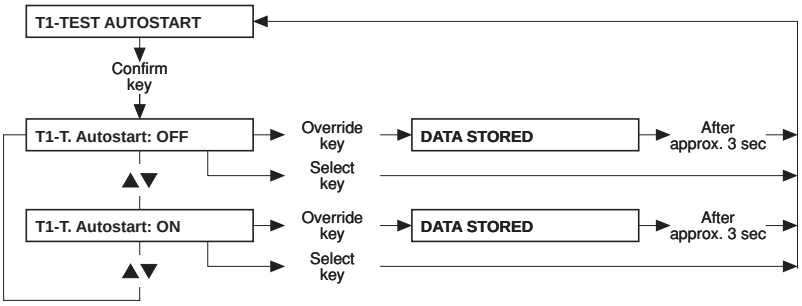

- **Part 18: ONLINE*plus*™ settings – only for ONLINE*plus*™ (option)**

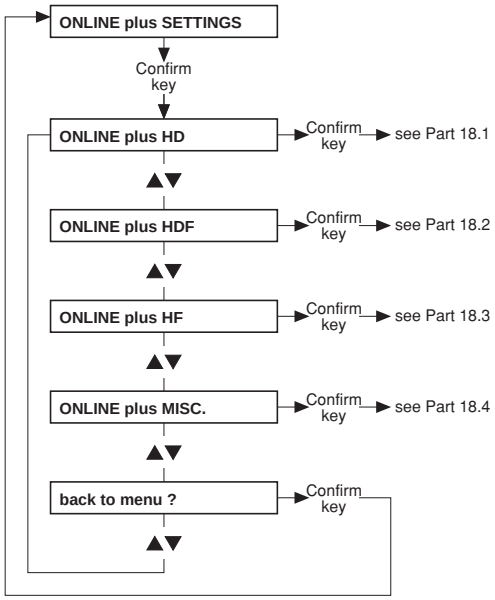

- **Part 18.1: ONLINE*plus*™ HD**

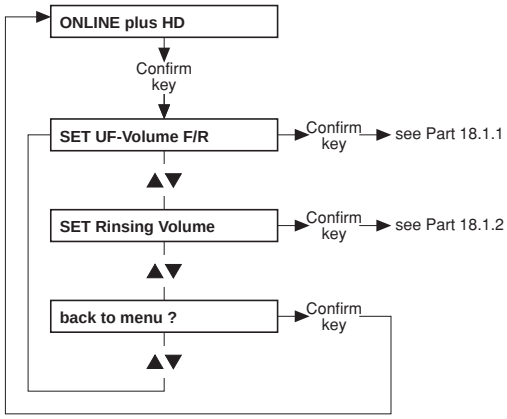

- **Part 18.1.1: Setting the UF volume (filling/rinsing)**

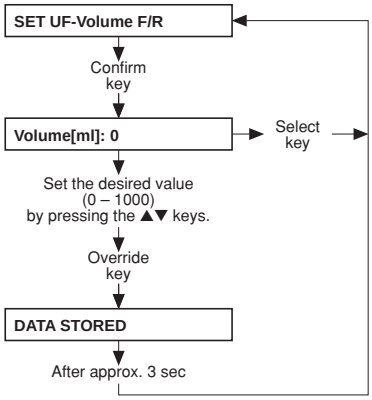

- **Part 18.1.2: Setting the rinse volume**

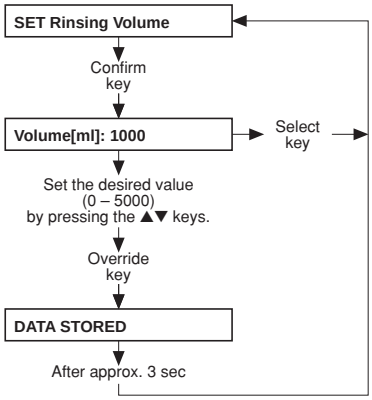

- **Part 18.2: ONLINE*plus*™ HDF**

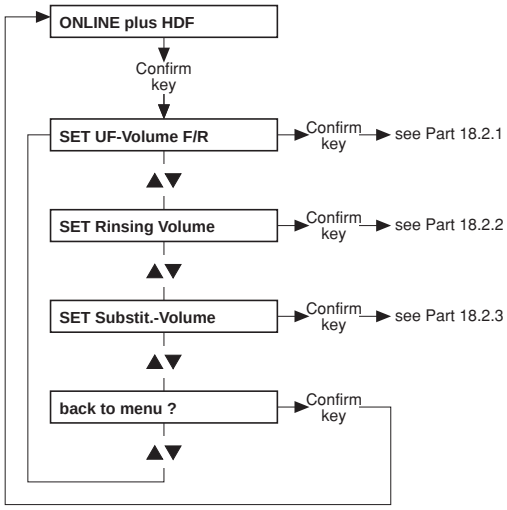

- **Part 18.2.1: Setting the UF volume (filling/rinsing)**

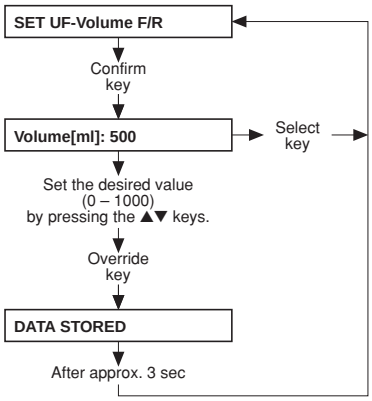

- **Part 18.2.2: Setting the rinse volume**

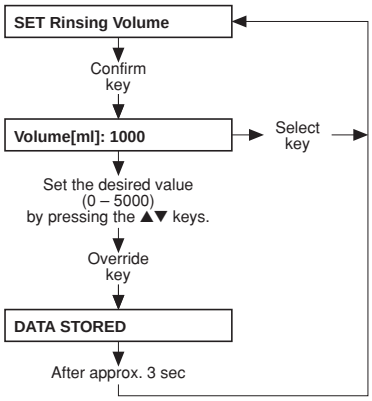

- **Part 18.2.3: Setting the substituate volume**

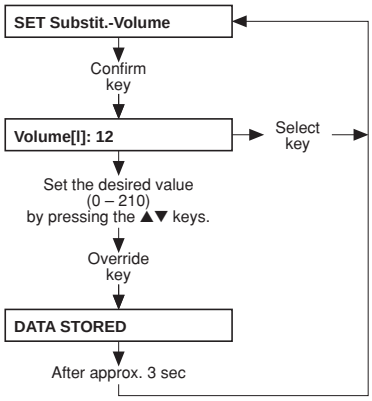

- **Part 18.3: ONLINE*plus*™ HF**

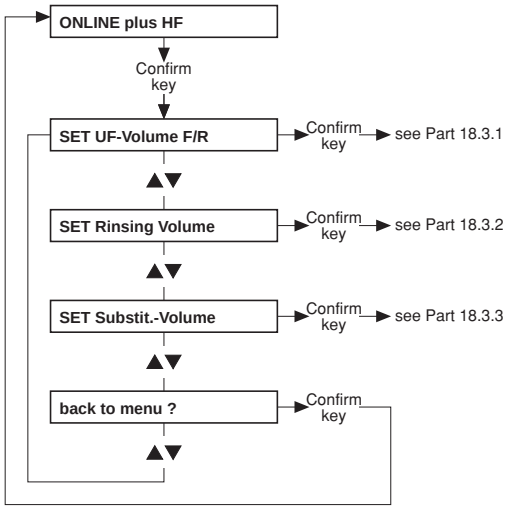

- **Part 18.3.1: Setting the UF volume (filling/rinsing)**

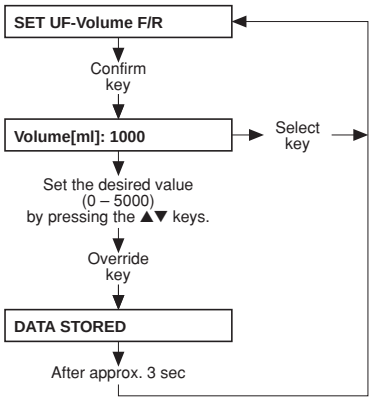

- **Part 18.3.2: Setting the rinse volume**

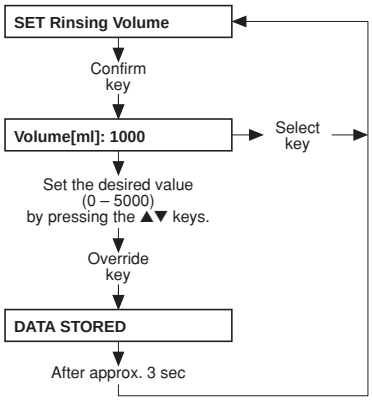

- **Part 18.3.3: Setting the substituate volume**

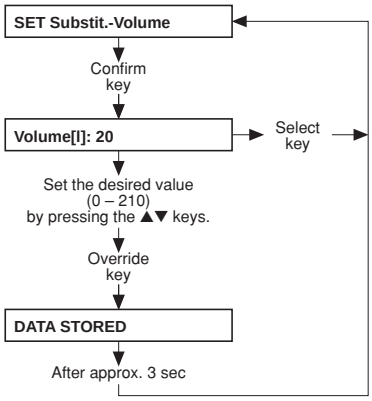

- **Part 18.4: ONLINE*plus*™ miscellaneous**

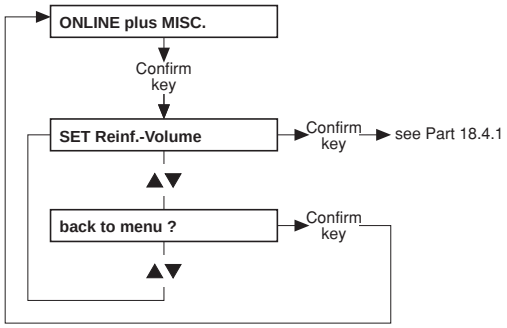

- **Part 18.4.1: Setting the reinfusion volume**

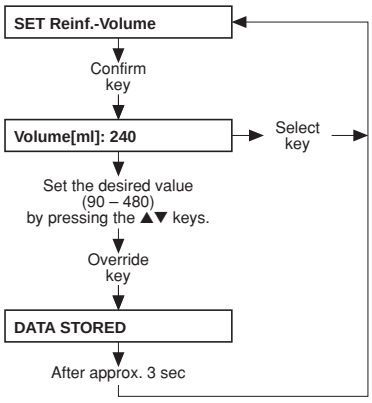

- **Part 19: Setting the parameters for central delivery system**

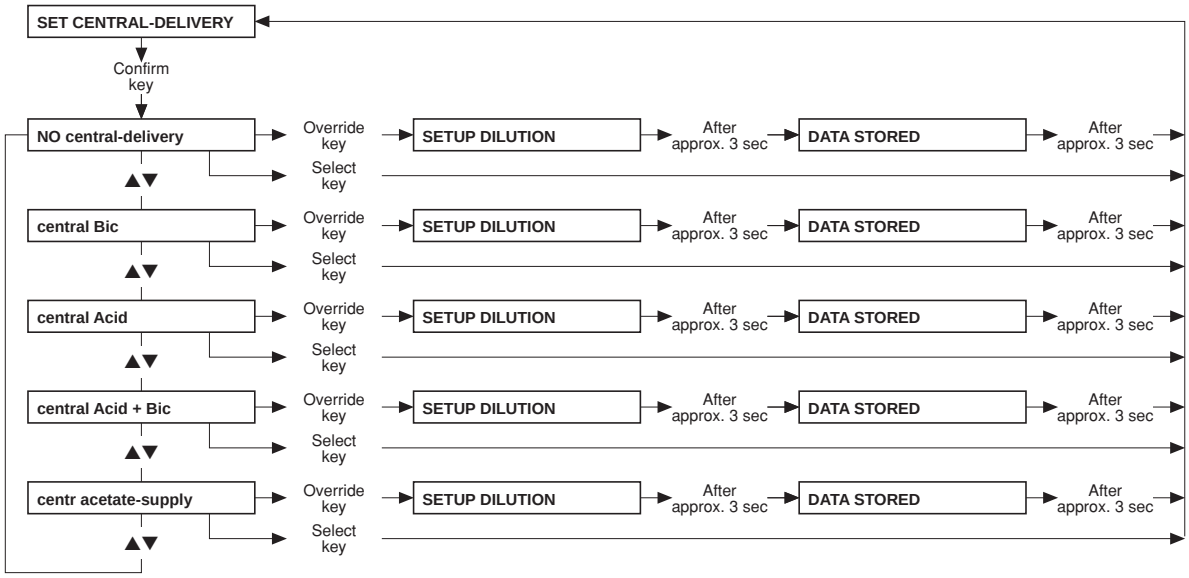

- **Part 20: AutoOFF after AutoON**

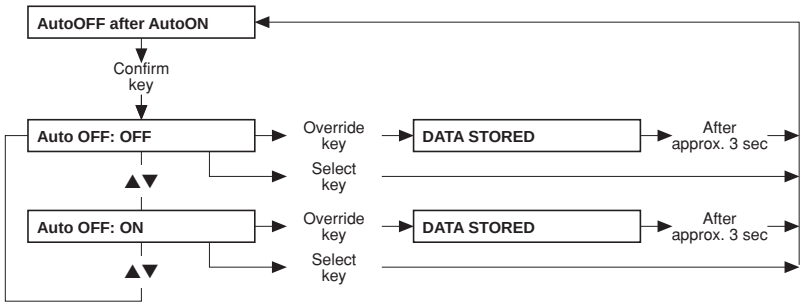

- **Part 21: CAMUS-baudrate**

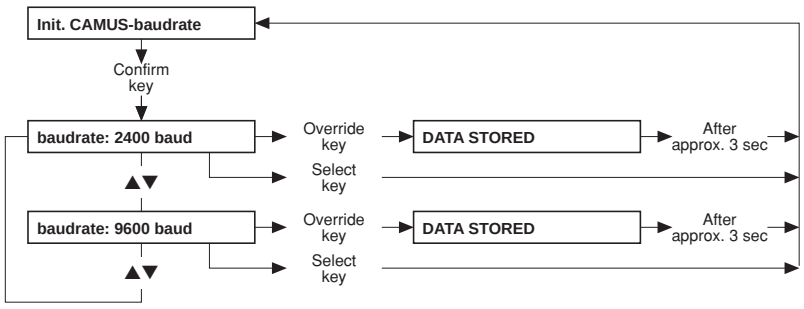

- **Part 22: Storing the default values**

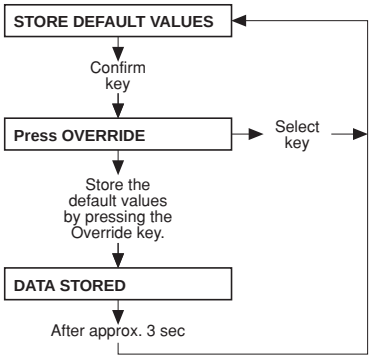

6.4 Main menu 4008 H/S

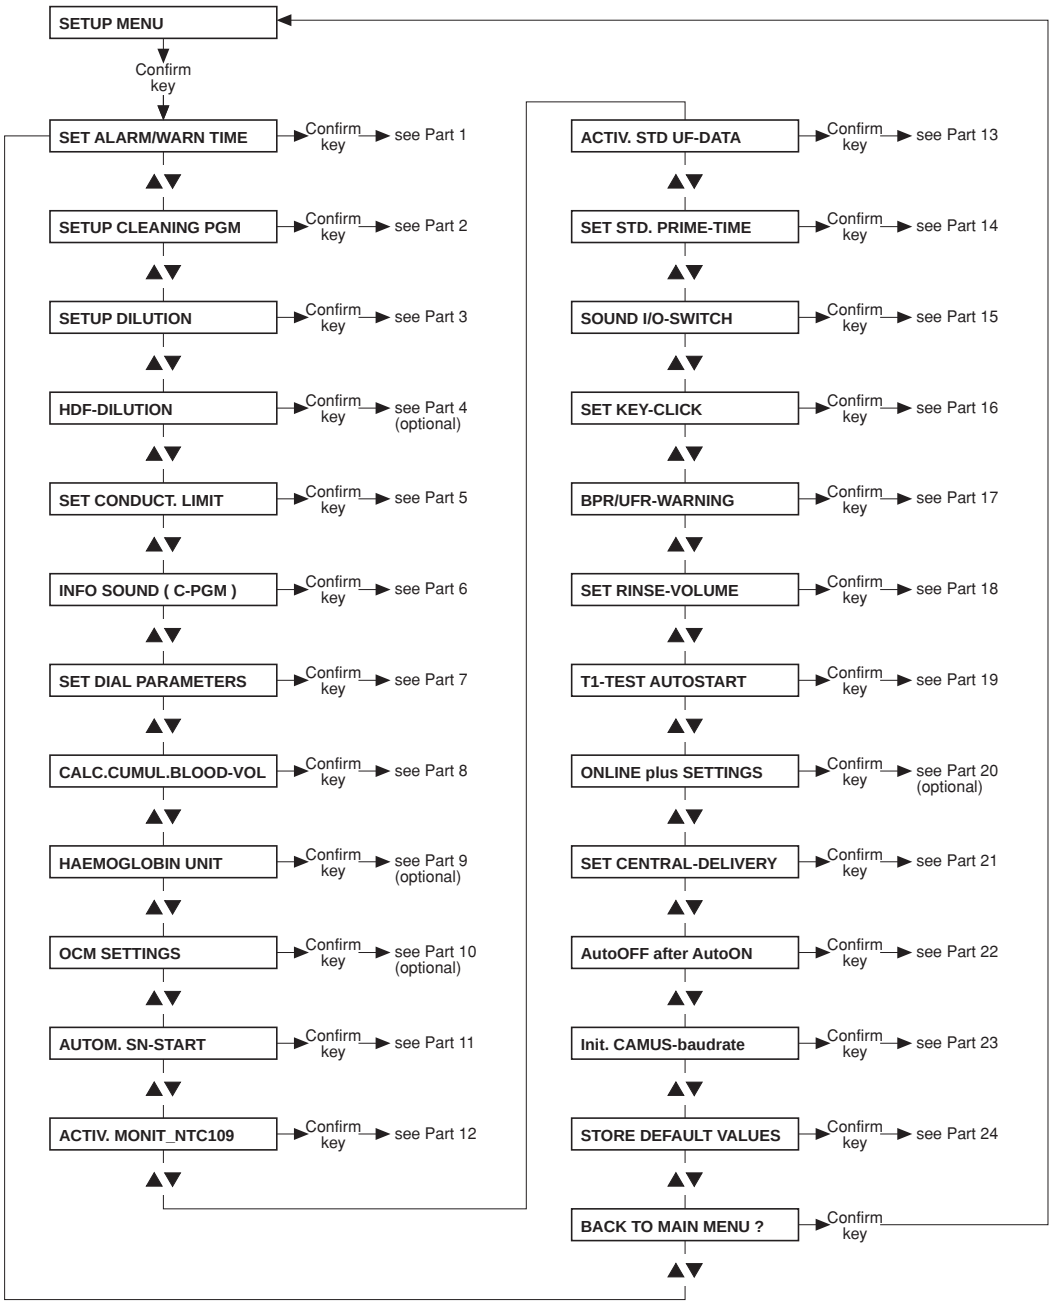

- **Part 1: Setting the alarm and warning time**

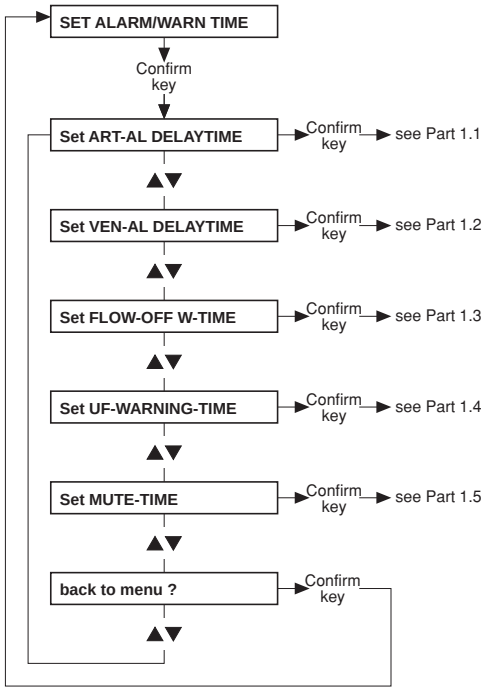

- **Part 1.1: Setting the delay time of the arterial alarm**

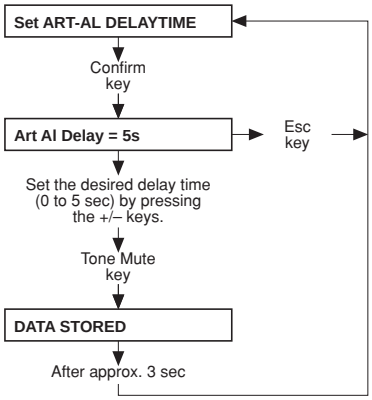
Set ART-AL DELAYTIME
Confirm key
Art Al Delay = 5s
Esc key
Set the desired delay time (0 to 5 sec) by pressing the +/– keys.
Tone Mute key
DATA STORED
After approx. 3 sec

- **Part 1.2: Setting the delay time of the venous alarm**

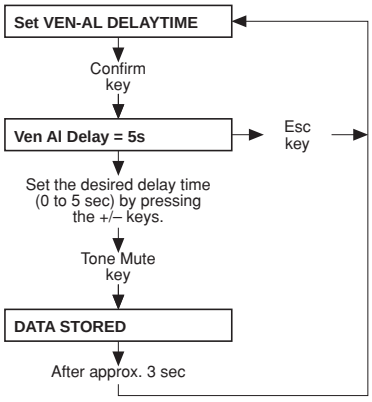
Set VEN-AL DELAYTIME
Confirm key
Ven Al Delay = 5s
Esc key
Set the desired delay time (0 to 5 sec) by pressing the +/– keys.
Tone Mute key
DATA STORED
After approx. 3 sec

- **Part 1.3: Setting the flow-off warning time**

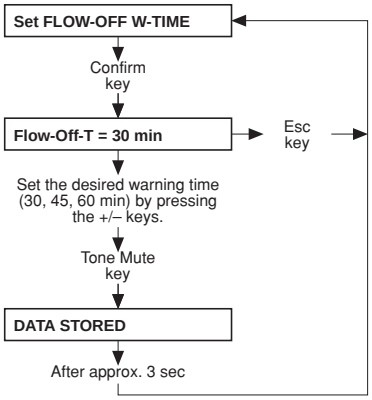
Set FLOW-OFF W-TIME
Confirm key
Flow-Off-T = 30 min
Esc key
Set the desired warning time (30, 45, 60 min) by pressing the +/– keys.
Tone Mute key
DATA STORED
After approx. 3 sec

- **Part 1.4: Setting the UF warning time**

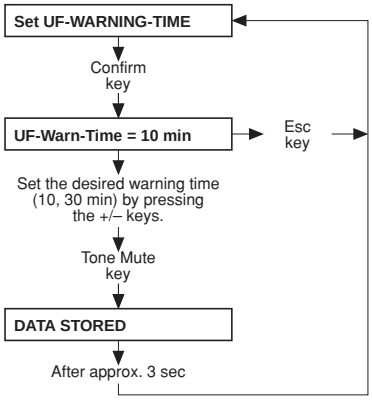
Set UF-WARNING-TIME
Confirm key
UF-Warn-Time = 10 min
Esc key
Set the desired warning time (10, 30 min) by pressing the +/– keys.
Tone Mute key
DATA STORED
After approx. 3 sec

- **Part 1.5: Setting the mute time**

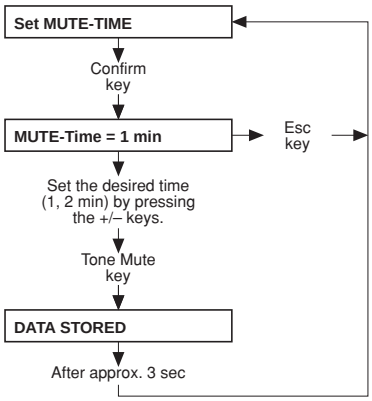

- **Part 2: Setting up the cleaning program**

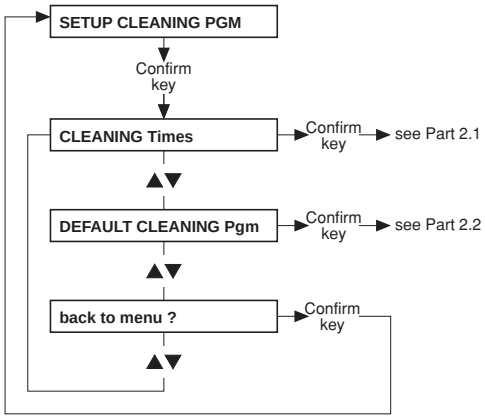

- **Part 2.1: Cleaning times**

Note
The default values and the adjustable range for the cleaning times are not indicated, as they depend on the particular system options.

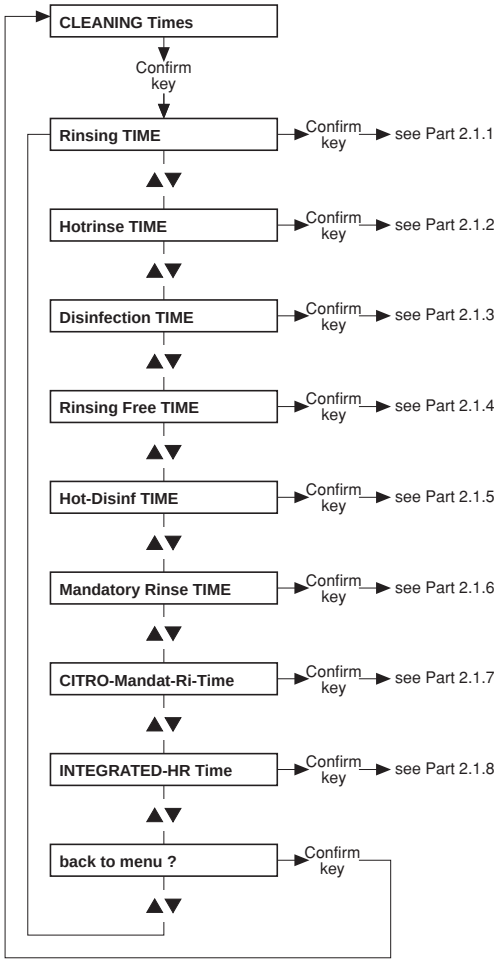

- **Part 2.1.1: Rinsing time**

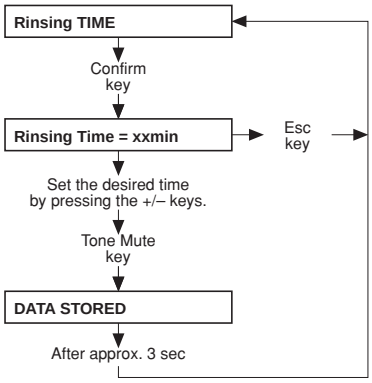

- **Part 2.1.2: Hot rinsing time**

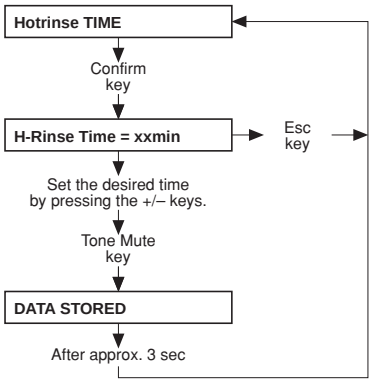

- **Part 2.1.3: Disinfection time**

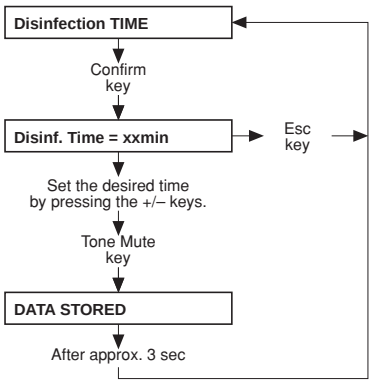

- **Part 2.1.4: Rinsing free time**

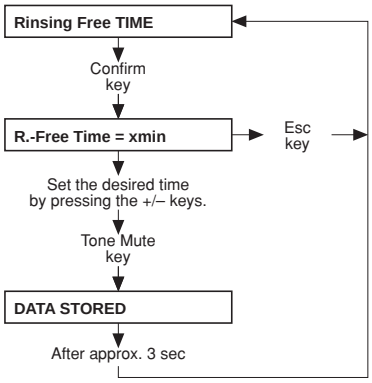

- **Part 2.1.5: Hot disinfection time**

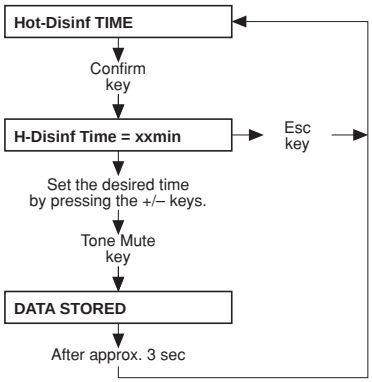

- **Part 2.1.6: Mandatory rinse time**

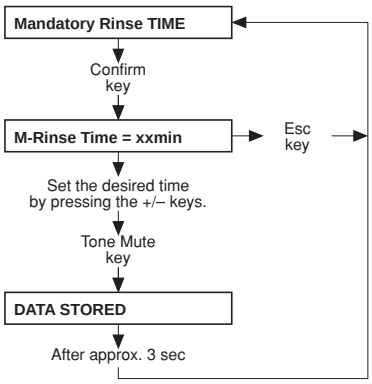

- **Part 2.1.7: Citro mandatory rinse time**

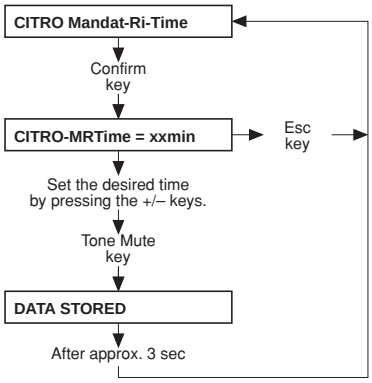

- **Part 2.1.8: Integrated hot rinsing time**

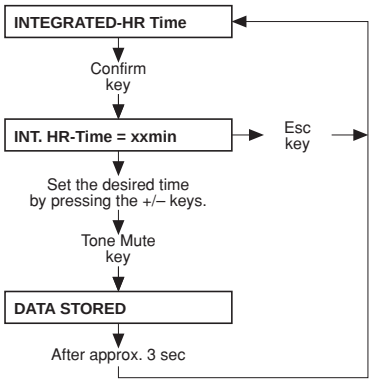

- **Part 2.2: Setting the default cleaning program**

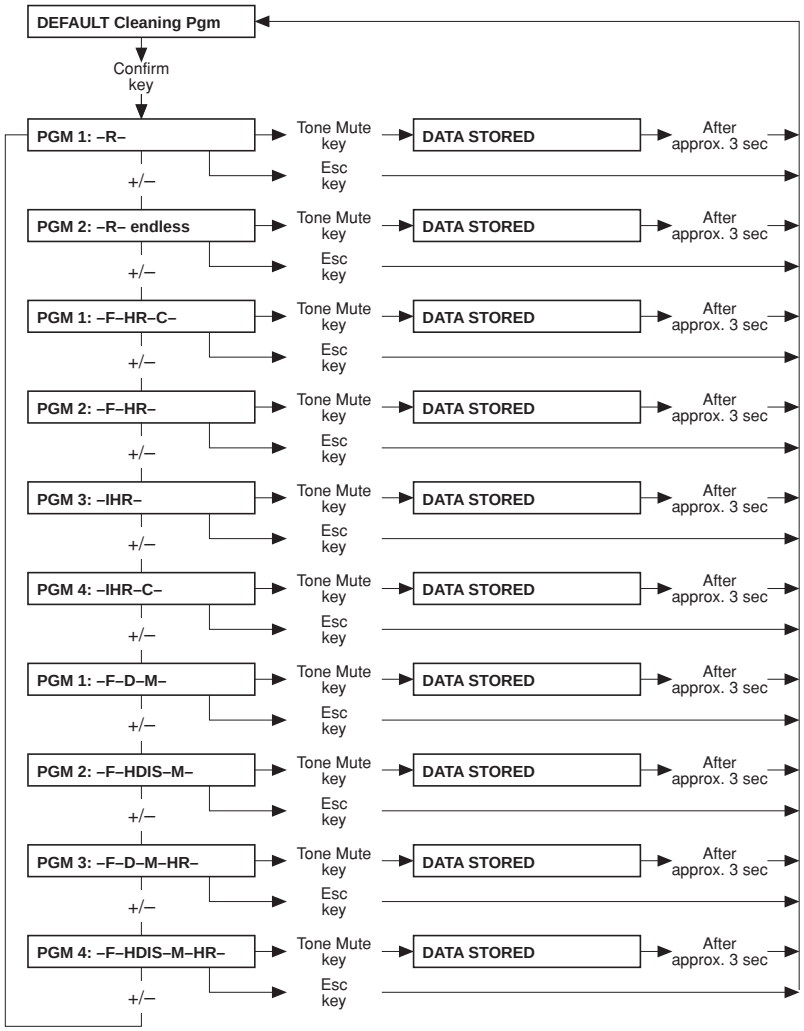

- **Part 3: Mixing ratio with „NO central-delivery“, „central Bic“ (setting ➜ Part 21)**

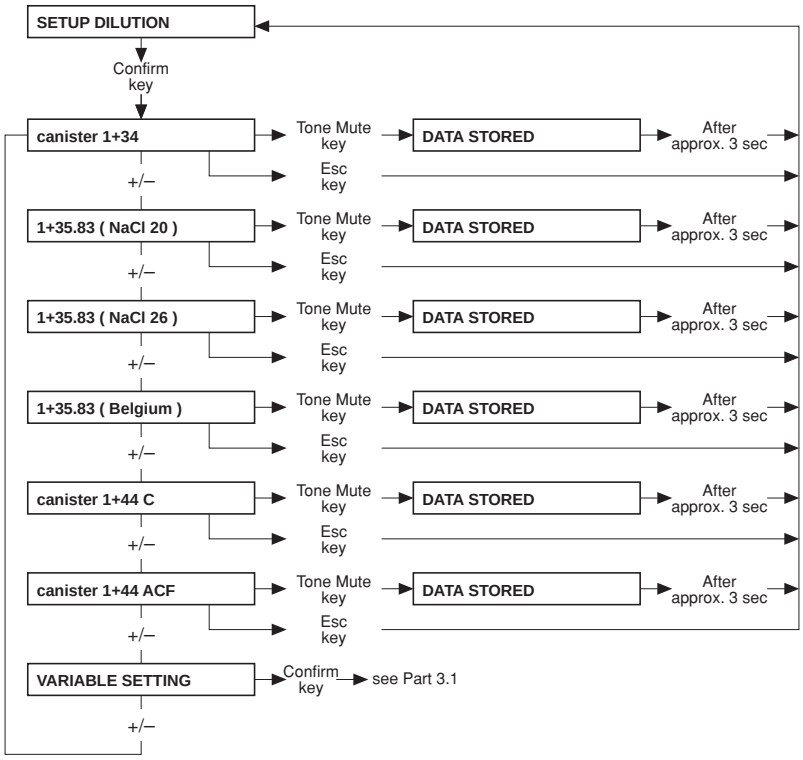

- **Part 3: Mixing ratio with „central Acid“, „central Acid + Bic“ (setting ➜ Part 21)**

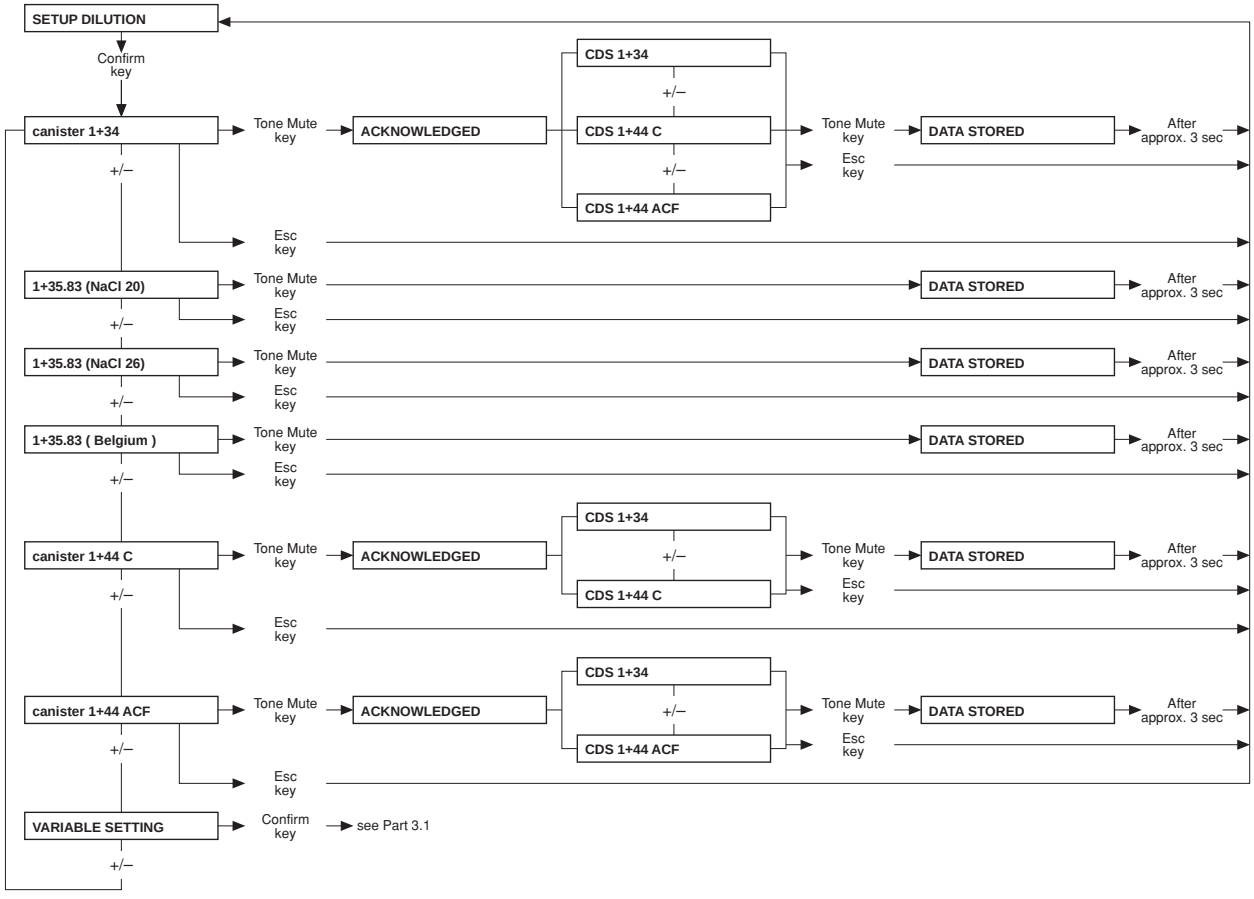

- **Part 3: Mixing ratio with „centr acetate-supply“ (setting ➜ Part 21)**

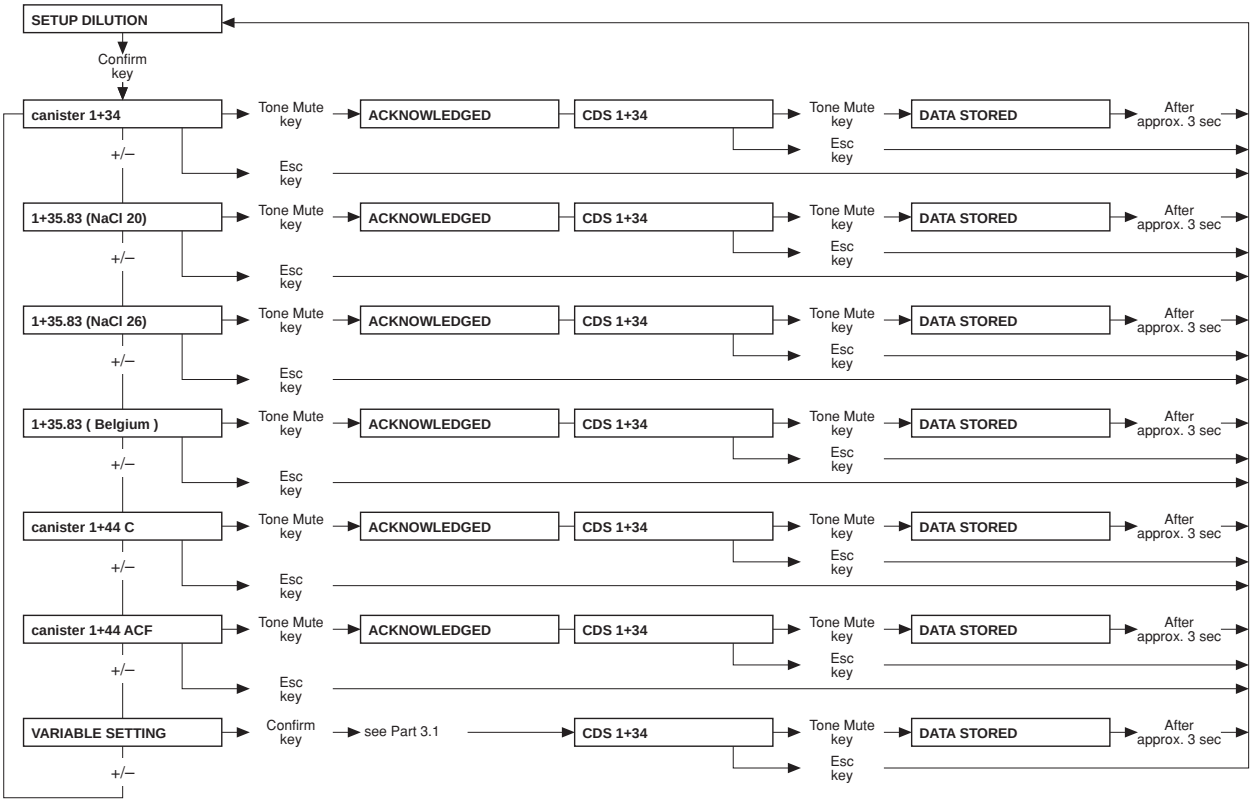

- **Part 3.1: Programmable mixing ratio (dilution)**

Caution
The operator or technician is informed about his duty of care to enter the component parameters and settings correctly or to check them and to set the CD alarm window to the expected conductivity value.
When using the programmable mixing ratio (dilution), make sure to use the right concentrate.
Using a bi*b*ag® in combination with the programmable mixing ratio (dilution) is not allowed.
Only enter authorized, programmable mixing ratios (dilutions).

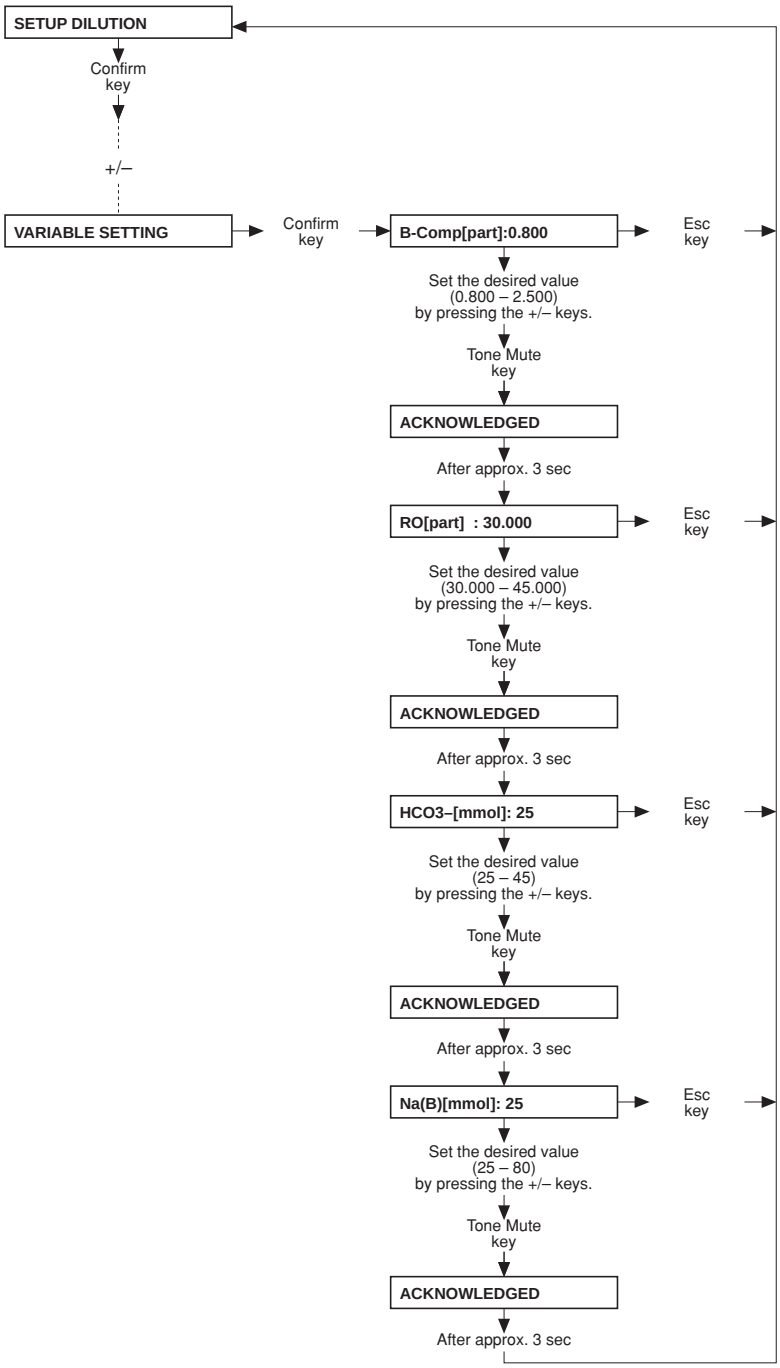

- **Part 4: Setting the HDF dilution – only for ON-LINE-HDF (option)**

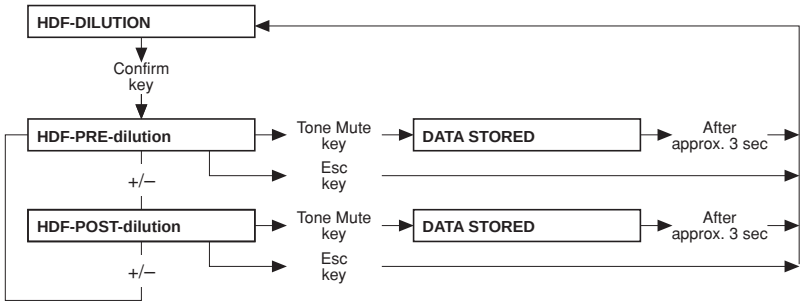

- **Part 5: Setting the conductivity limit**

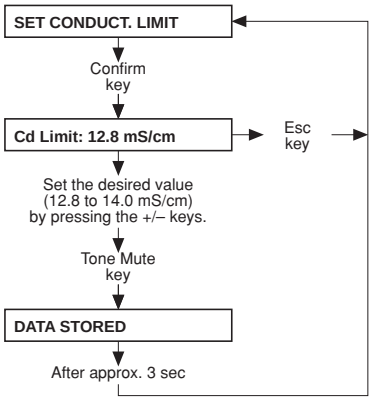
SET CONDUCT. LIMIT
Confirm key
Cd Limit: 12.8 mS/cm
Esc key
Set the desired value (12.8 to 14.0 mS/cm) by pressing the +/– keys.
Tone Mute key
DATA STORED
After approx. 3 sec

- **Part 6: Infosound cleaning program**

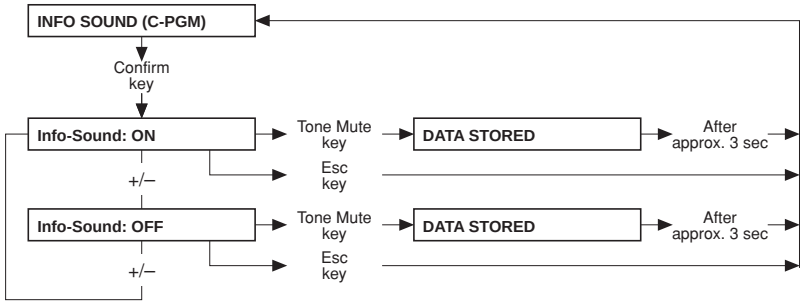

- **Part 7: Setting the dialysis parameters**

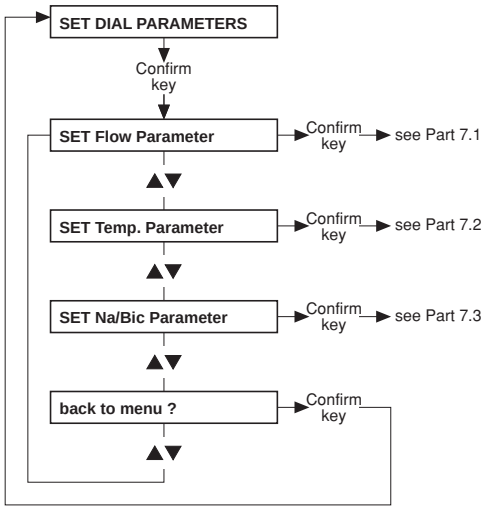

- **Part 7.1: Setting the dialysate flow**

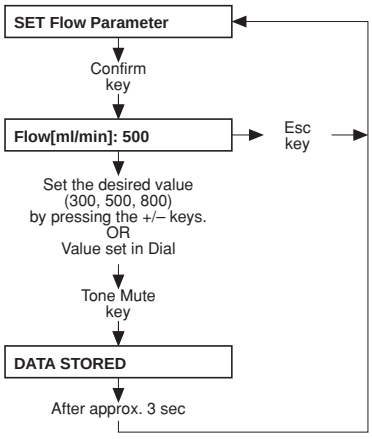
SET Flow Parameter
Confirm key
Flow[ml/min]: 500
Esc key
Set the desired value (300, 500, 800) by pressing the +/– keys. OR Value set in Dial
Tone Mute key
DATA STORED
After approx. 3 sec

- **Part 7.2: Setting the dialysate temperature**

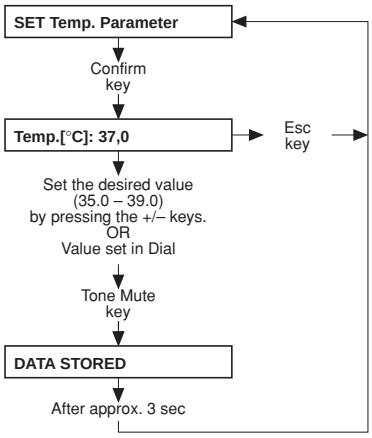
SET Temp. Parameter
Confirm key
Temp.[°C]: 37,0
Esc key
Set the desired value (35.0 – 39.0) by pressing the +/– keys. OR Value set in Dial
Tone Mute key
DATA STORED
After approx. 3 sec

- **Part 7.3: Setting the Na/Bic**

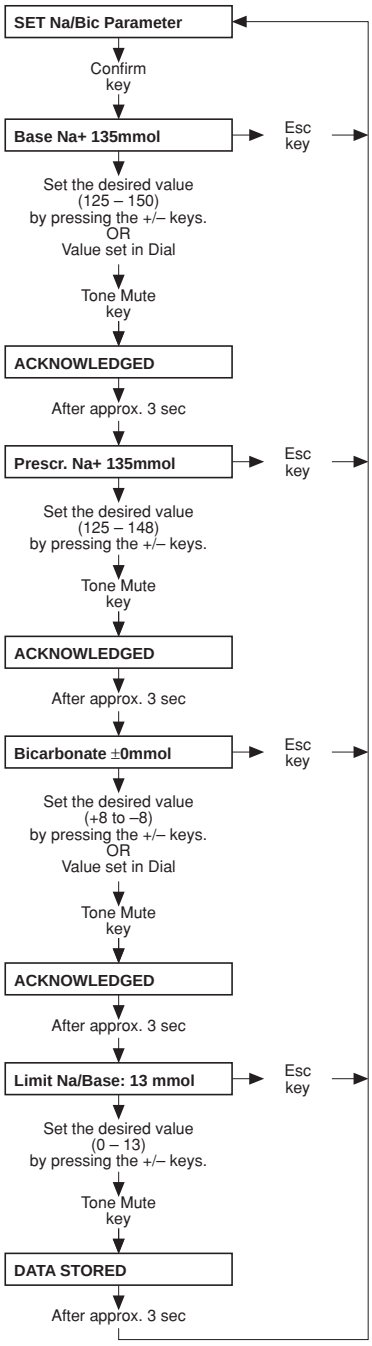
SET Na/Bic Parameter
Confirm key
Base Na+ 135mmol
Esc key
Set the desired value (125 – 150) by pressing the +/– keys. OR Value set in Dial
Tone Mute key
ACKNOWLEDGED
After approx. 3 sec
Prescr. Na+ 135mmol
Esc key
Set the desired value (125 – 148) by pressing the +/– keys.
Tone Mute key
ACKNOWLEDGED
After approx. 3 sec
Bicarbonate ±0mmol
Esc key
Set the desired value (+8 to –8) by pressing the +/– keys. OR Value set in Dial
Tone Mute key
ACKNOWLEDGED
After approx. 3 sec
Limit Na/Base: 13 mmol
Esc key
Set the desired value (0 – 13) by pressing the +/– keys.
Tone Mute key
DATA STORED
After approx. 3 sec

- **Part 8: Cumulated blood volume**

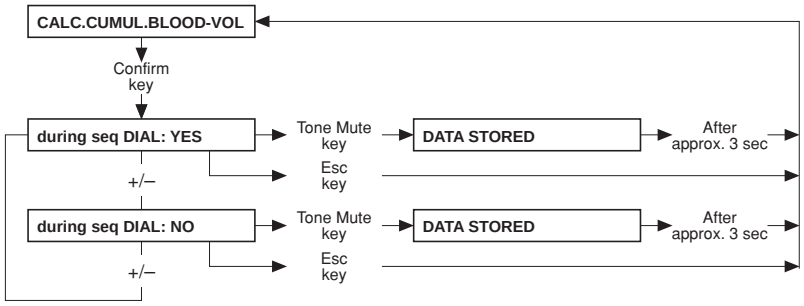

- **Part 9: Haemoglobin unit – only for BVM (option)**

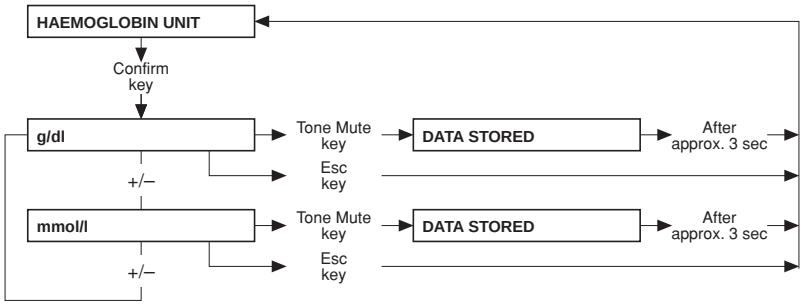

- **Part 10: OCM settings – only for OCM (option)**

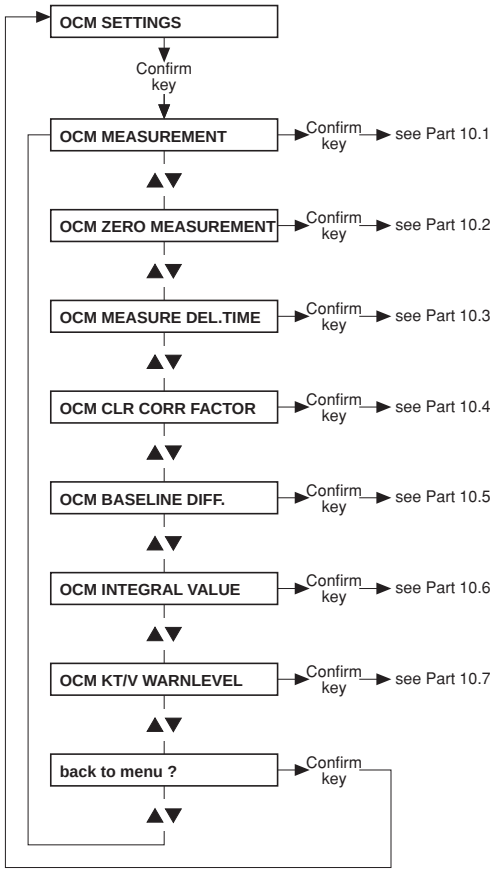

- **Part 10.1: Activating the OCM measurement**

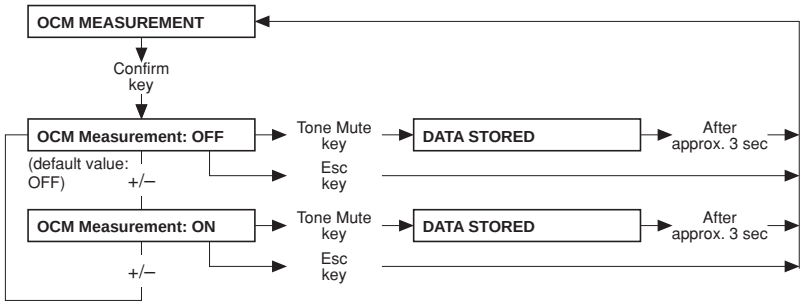

- **Part 10.2: Activating the OCM zero measurement**

Note
If the OCM zero measurement is set to “OFF”, the OCM option is deactivated. If the OCM option is reactivated (“ON”), an OCM pulse calibration must be performed.

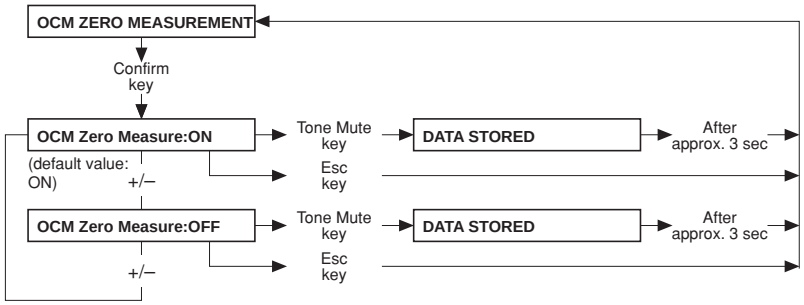

- **Part 10.3: Setting the OCM measurement delay time**

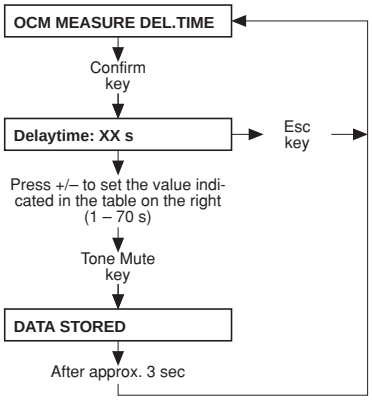
OCM MEASURE DEL.TIME
Confirm key
Delaytime: XX s
Esc key
Press +/– to set the value indicated in the table on the right (1 – 70 s)
Tone Mute key
DATA STORED
After approx. 3 sec

System	Time
4008 H with advanced hydraulics	15 Sec
4008 H with ONLINE*plus*™	65 Sec
4008 S with advanced hydraulics	18 Sec
4008 S with ONLINE*plus*™	67 Sec

- **Part 10.4: Setting the OCM correction factor**

Note
Do not change the default value.

Note
The 4008 H/S offers the theoretical possibility of defining a correction value for all clearance measurements. The intention is to be able to adapt the system to to the latest state of technology resulting from the on-going scientific discussion. According to the current standard of knowledge, this correction value has to be set to “1” (factory setting) for Fresenius polysulfone membranes. The indicated accuracy specifications are valid only for Fresenius polysulfone membrane combined with this correction value setting of “1”.

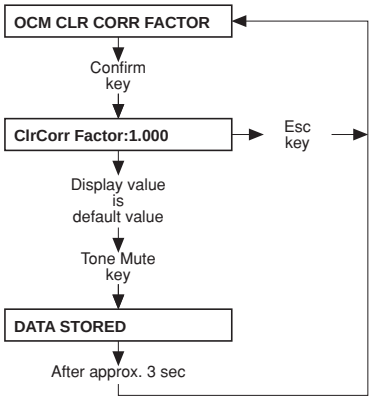

- **Part 10.5: Setting the OCM baseline difference**

Note
Do not change the default value.

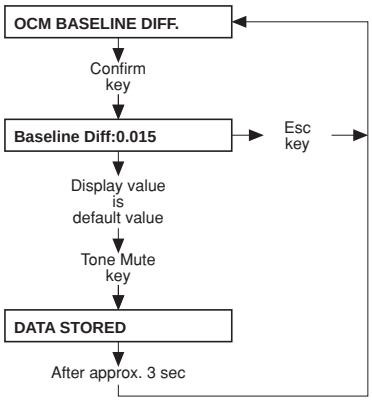

- **Part 10.6: Setting the OCM integral value**

Note
Do not change the default value.

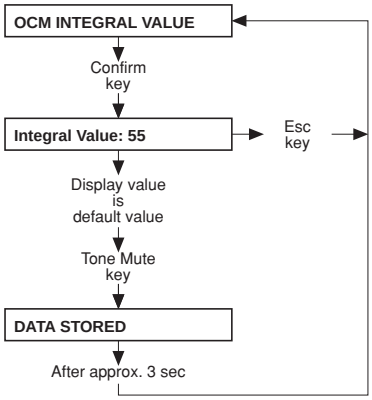

- **Part 10.7: Setting the OCM Kt/V warning level**

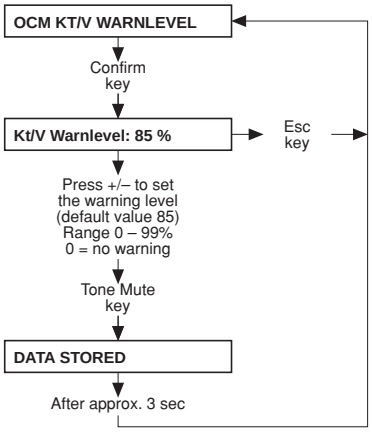
OCM KT/V WARNLEVEL
Confirm key
Kt/V Warnlevel: 85 %
Esc key
Press +/– to set the warning level (default value 85) Range 0 – 99% 0 = no warning
Tone Mute key
DATA STORED
After approx. 3 sec

- **Part 11: Automatic Single-Needle start**

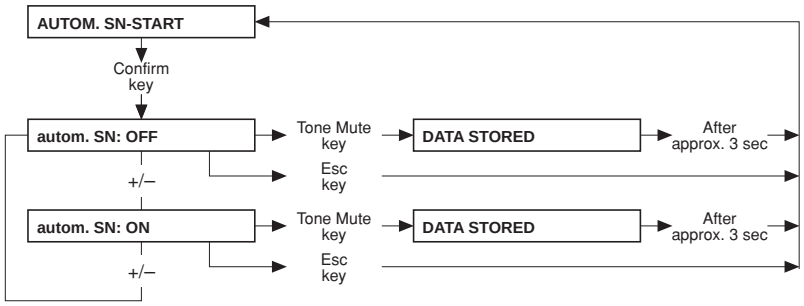

- **Part 12: Activation of Monit_NTC 109**

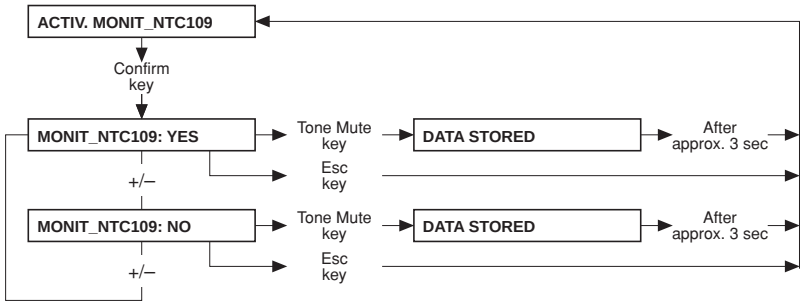

- **Part 13: Activation of standard UF data**

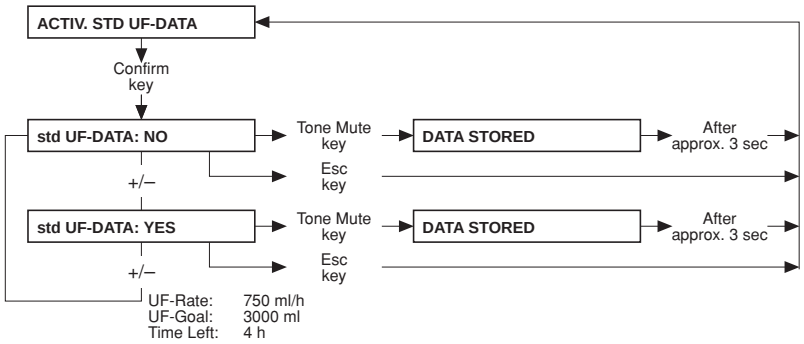

- **Part 14: Setting the priming time**

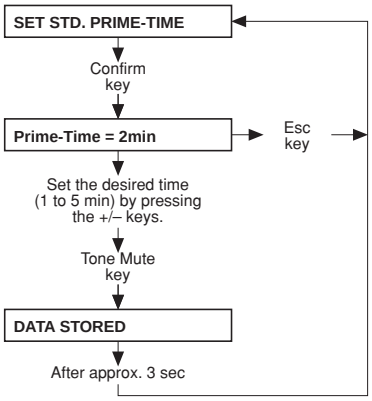
SET STD. PRIME-TIME
Confirm key
Prime-Time = 2min
Esc key
Set the desired time (1 to 5 min) by pressing the +/– keys.
Tone Mute key
DATA STORED
After approx. 3 sec

- **Part 15: Warning sound I/O key**

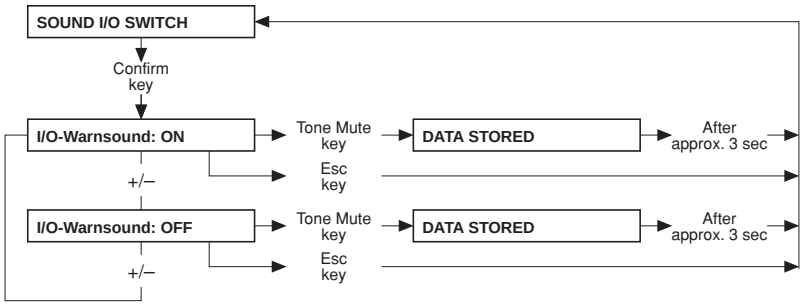

- **Part 16: Setting the key-click**

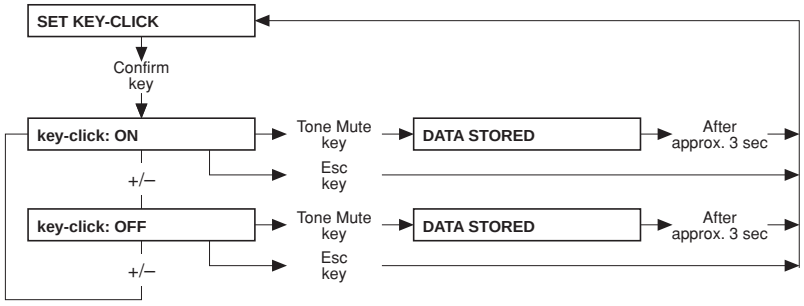

- **Part 17: Setting the BPR/UFR warning**

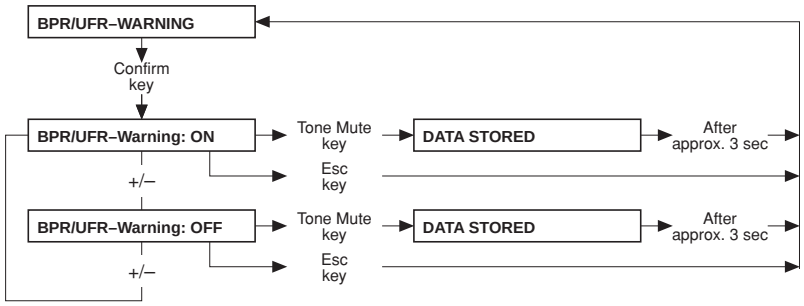

- **Part 18: Setting the rinse volume**

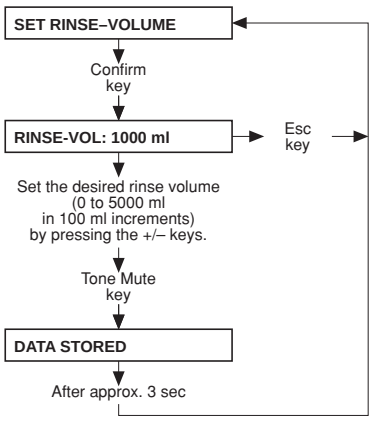
SET RINSE–VOLUME
Confirm key
RINSE-VOL: 1000 ml
Esc key
Set the desired rinse volume (0 to 5000 ml in 100 ml increments) by pressing the +/– keys.
Tone Mute key
DATA STORED
After approx. 3 sec

- **Part 19: T1-Test Autostart**

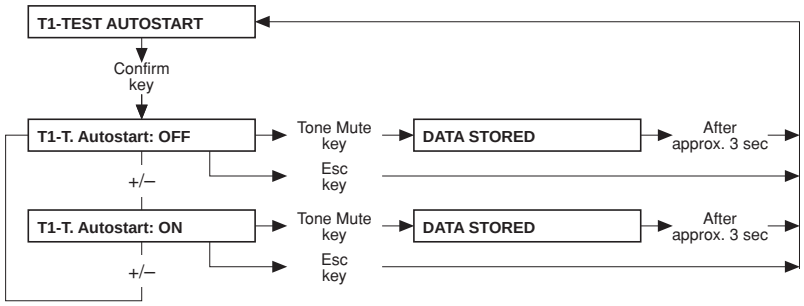

- **Part 20: ONLINE*plus*™ settings – only for ONLINE*plus*™ (option)**

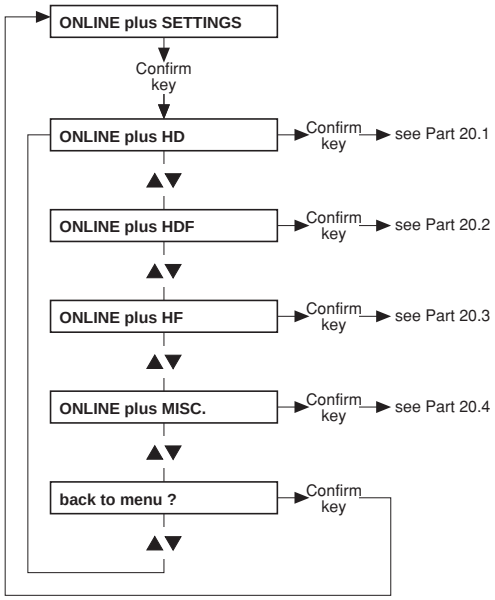

- **Part 20.1: ONLINE*plus*™ HD**

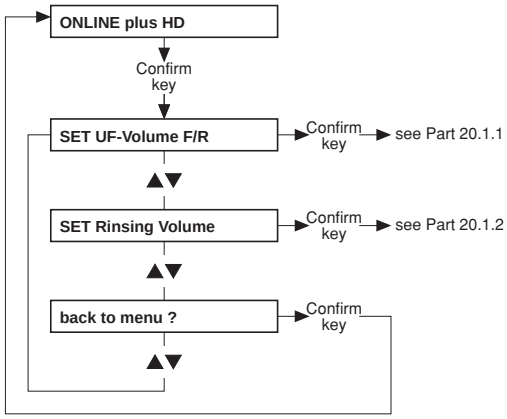

- **Part 20.1.1: Setting the UF volume (filling/rinsing)**

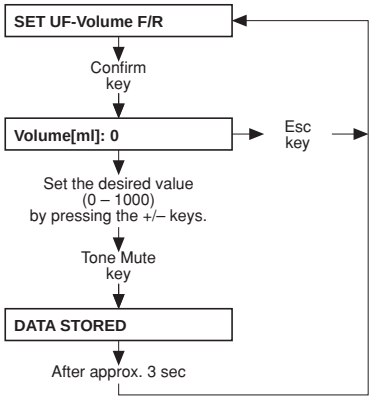

- **Part 20.1.2: Setting the rinse volume**

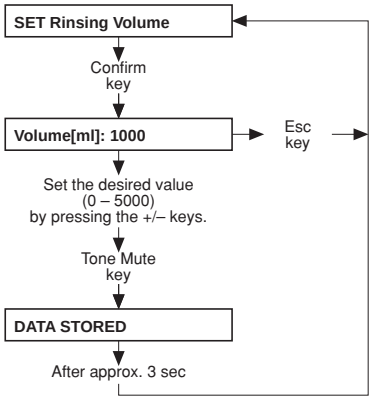

- **Part 20.2: ONLINE*plus*™ HDF**

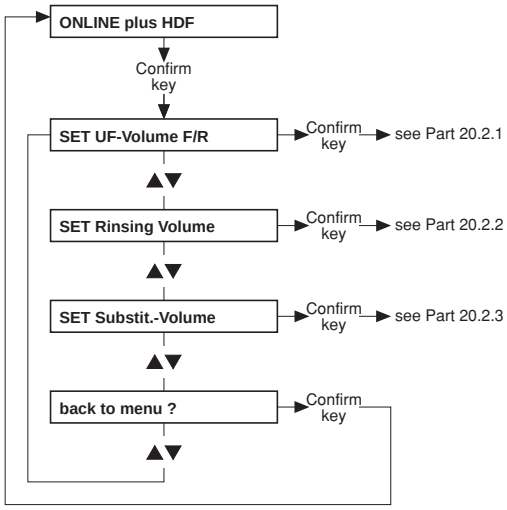

- **Part 20.2.1: Setting the UF volume (filling/rinsing)**

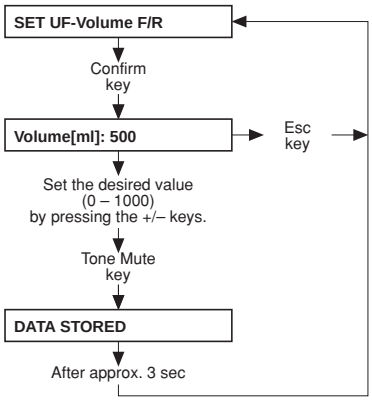

- **Part 20.2.2: Setting the rinse volume**

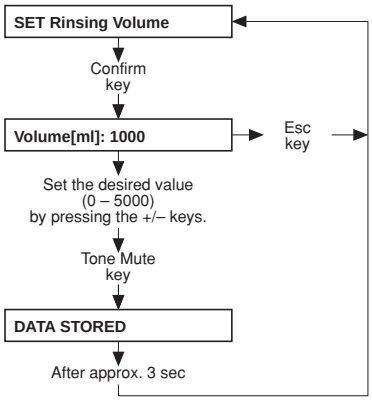

- **Part 20.2.3: Setting the substituate volume**

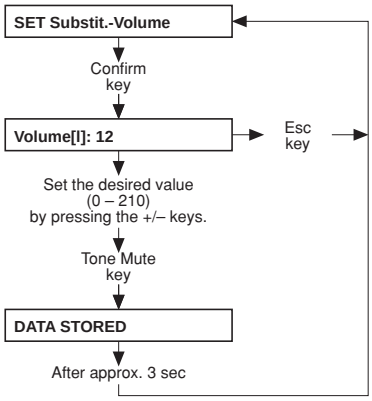

- **Part 20.3: ONLINE*plus*™ HF**

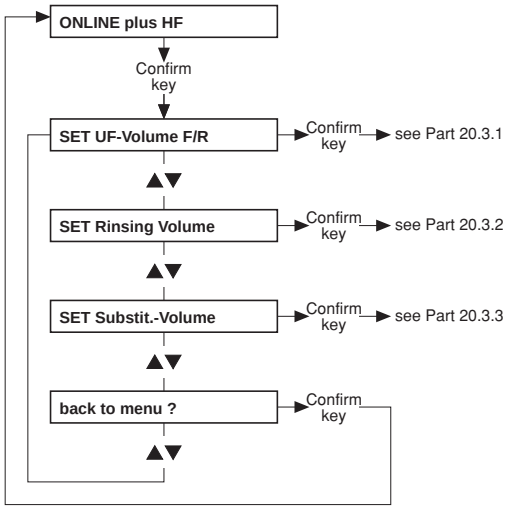

- **Part 20.3.1: Setting the UF volume (filling/rinsing)**

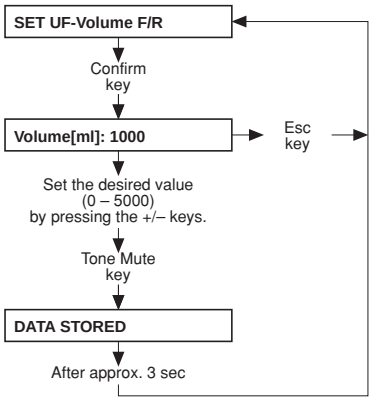

- **Part 20.3.2: Setting the rinse volume**

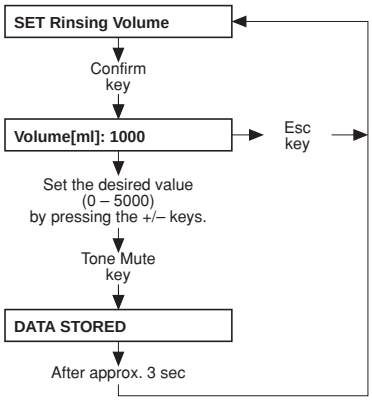

- **Part 20.3.3: Setting the substituate volume**

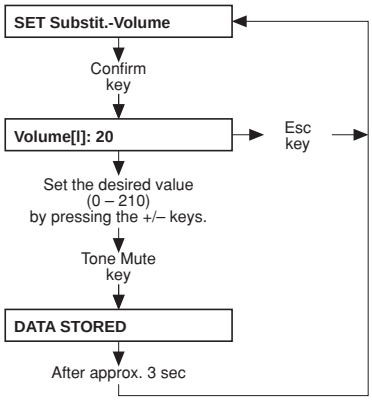

- **Part 20.4: ONLINE*plus*™ miscellaneous**

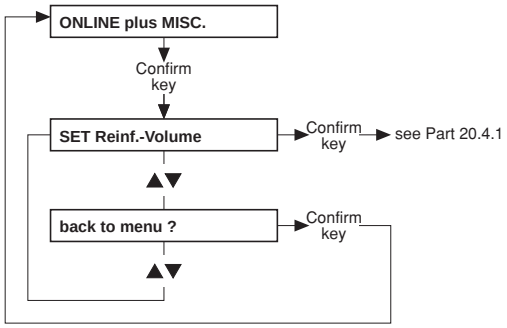

- **Part 20.4.1: Setting the reinfusion volume**

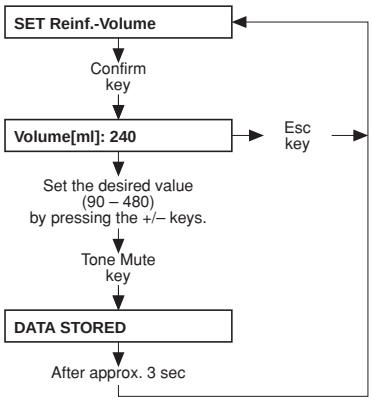

- **Part 21: Setting the parameters for central delivery system**

Note
Central delivery is not available for the 3mix option.

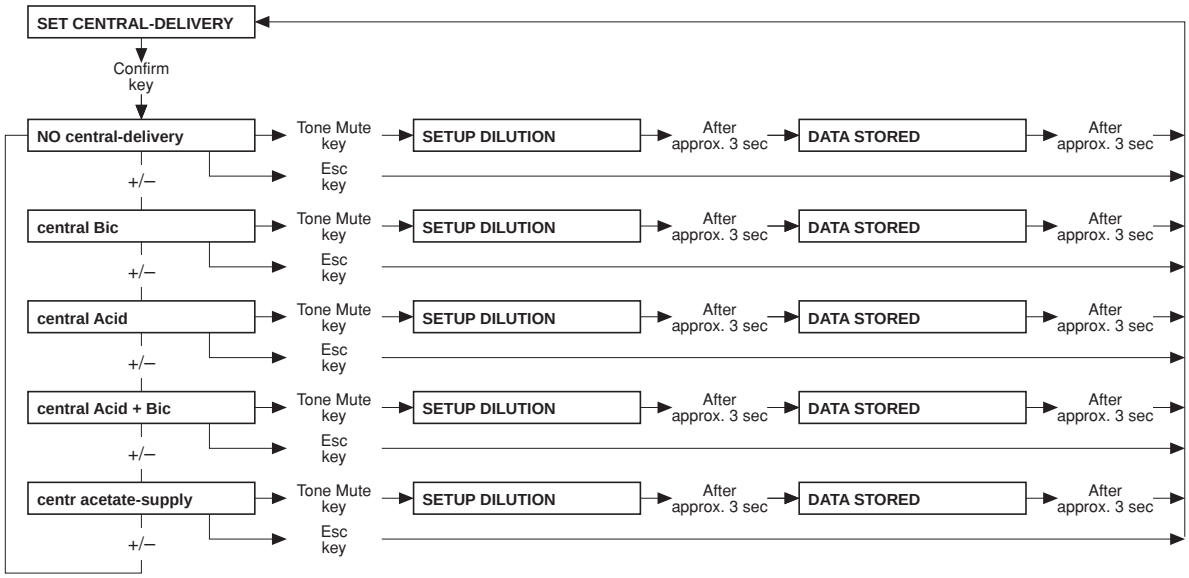

- **Part 22: AutoOFF after AutoON**

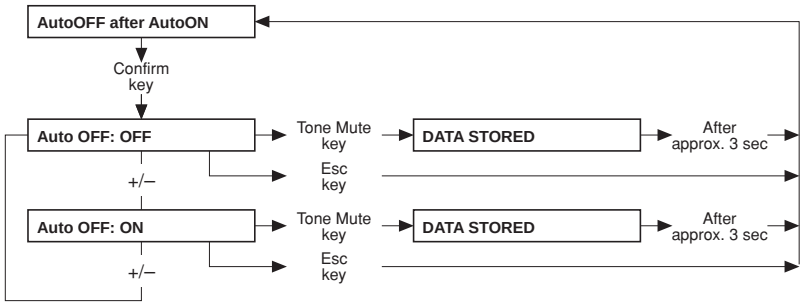

- **Part 23: CAMUS-baudrate**

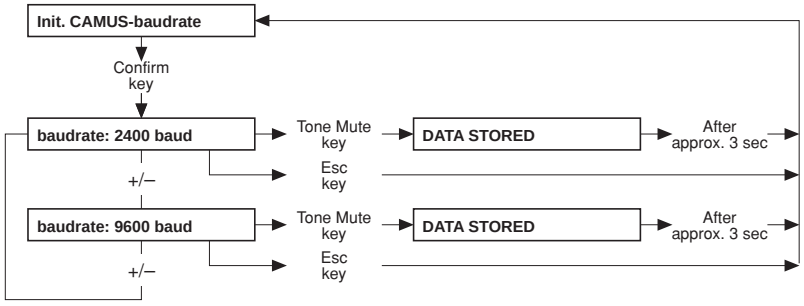

- **Part 24: Storing the default values**

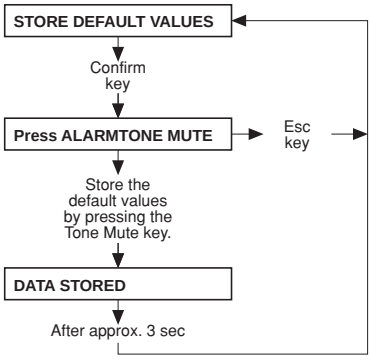

7 Miscellaneous

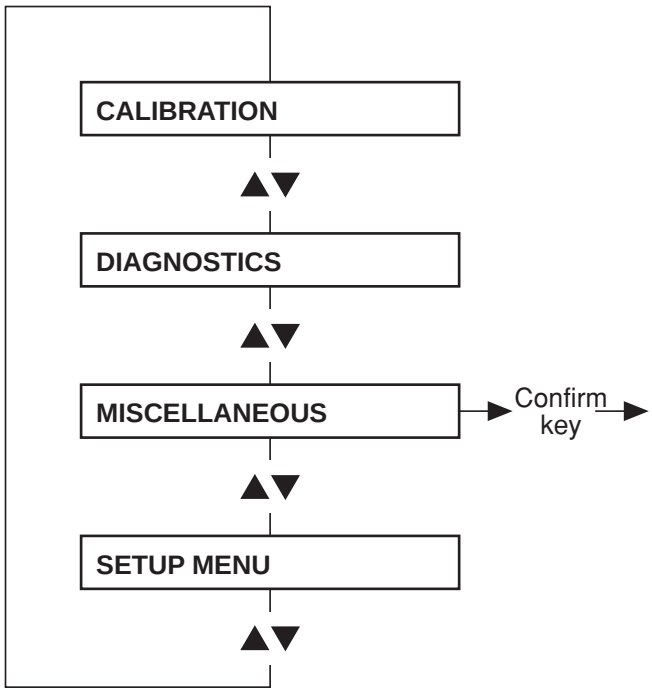

- **Main menu**

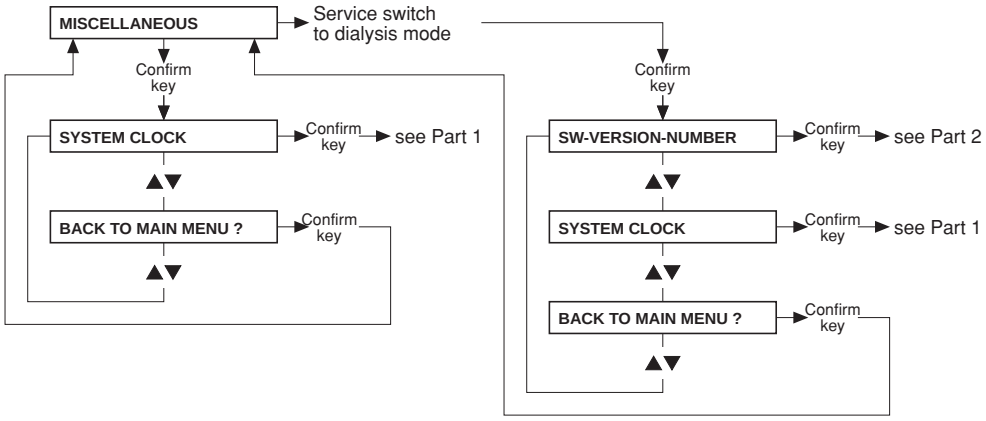

- **Part 1**

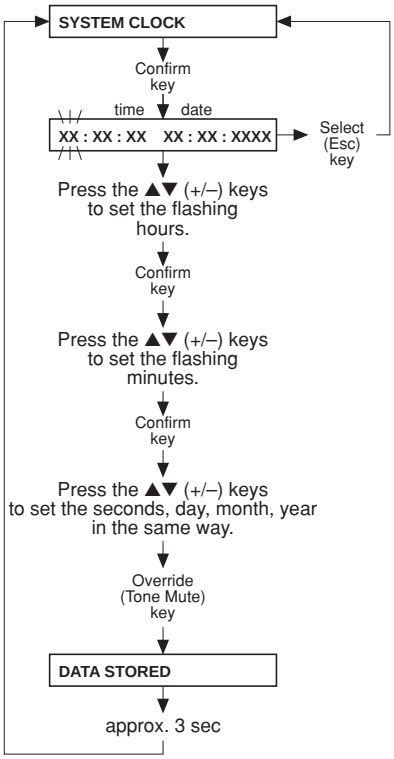
SYSTEM CLOCK
Confirm key
time
date
XX : XX : XX XX : XX : XXXX
Select (Esc) key
Press the ▲▼ (+/–) keys to set the flashing hours.
Confirm key
Press the ▲▼ (+/–) keys to set the flashing minutes.
Confirm key
Press the ▲▼ (+/–) keys to set the seconds, day, month, year in the same way.
Override (Tone Mute) key
DATA STORED
approx. 3 sec

- **Part 2**

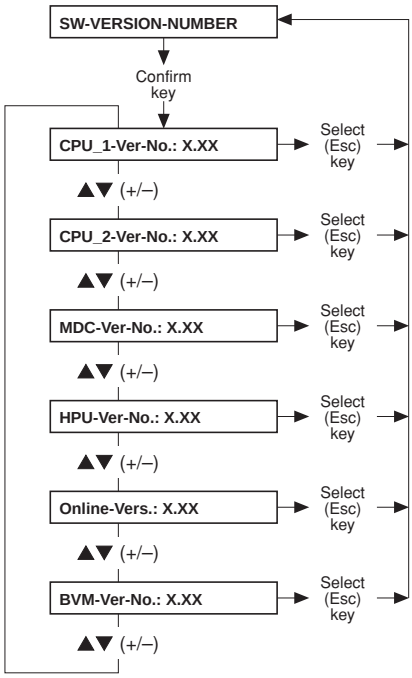
SW-VERSION-NUMBER
Confirm key
CPU_1-Ver-No.: X.XX
Select (Esc) key
▲▼ (+/–)
CPU_2-Ver-No.: X.XX
Select (Esc) key
▲▼ (+/–)
MDC-Ver-No.: X.XX
Select (Esc) key
▲▼ (+/–)
HPU-Ver-No.: X.XX
Select (Esc) key
▲▼ (+/–)
Online-Vers.: X.XX
Select (Esc) key
▲▼ (+/–)
BVM-Ver-No.: X.XX
Select (Esc) key
▲▼ (+/–)

Table of contents
8 Circuit diagrams and circuit descriptions

Section		Page
8.1	**Block diagram 4008**	8-3
8.2	**Block diagram of voltage supply**	8-4
8.3	**Block diagram of screen 4008 H/S**	8-5
8.4	**Connection layout diagram**	8-6
8.4.1	Connection diagram CAN communication	8-7
8.4.2	Hydraulics processor block diagram	8-8
8.5	**P.C.B. LP 450-2 Level detector control (LD)**	8-9
8.6	**P.C.B. LP 493 Blood leak detector**	8-11
8.7	**P.C.B. LP 624 Control board (BP)**	8-12
8.8	**P.C.B. LP 630 Motherboard**	8-13
8.9	**P.C.B. LP 631 CPU 1**	8-14
8.10	**P.C.B. LP 632 CPU 2**	8-16
8.11	**P.C.B. LP 633 Input board**	8-18
8.12	**P.C.B. LP 634 Output board**	8-20
8.13	**P.C.B. LP 635 Display board**	8-22
8.14	**P.C.B. LP 636 External connectors**	8-24
8.15	**P.C.B. LP 950 Control board (HEP)**	8-25
8.16	**P.C.B. LP 644-4 Display board (HEP)**	8-26
8.17	**P.C.B. LP 645 Position sensor membrane pump**	8-27
8.18	**P.C.B. LP 649-2 Display board (4008 B/S)**	8-28
8.19	**P.C.B. LP 742 Interference filter**	8-30
8.20	**P.C.B. LP 748 Display board (BP)**	8-31
8.21	**P.C.B. LP 763 Multi interface board (COMMCO III)**	8-32
8.22	**P.C.B. LP 922 Display board (4008 S)**	8-33
8.23	**P.C.B. LP 923 Traffic light (4008 H/S)**	8-34
8.24	**P.C.B. LP 924 Display board (4008 H)**	8-35
8.25	**P.C.B. LP 941 Hydraulics processor**	8-36

Section		Page
8.26	**Heater board (power supply unit 4008)**	8-37
8.27	**Power board (power supply unit 4008)**	8-38

8.1 Block diagram 4008

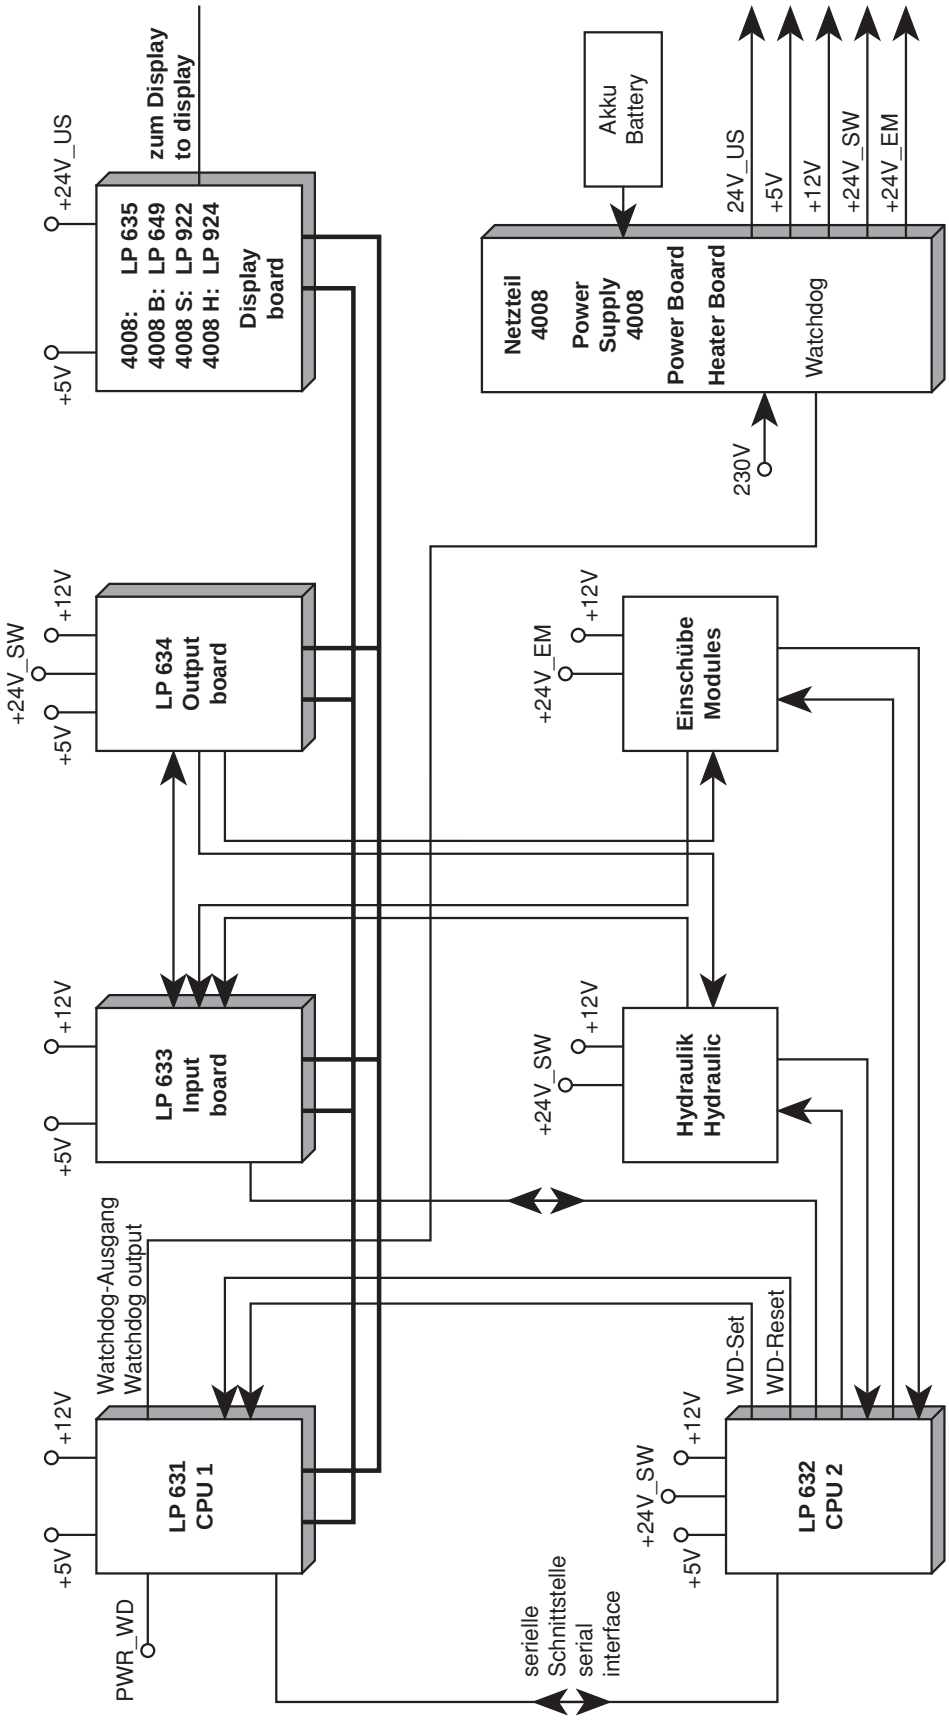

8.2 Block diagram of voltage supply

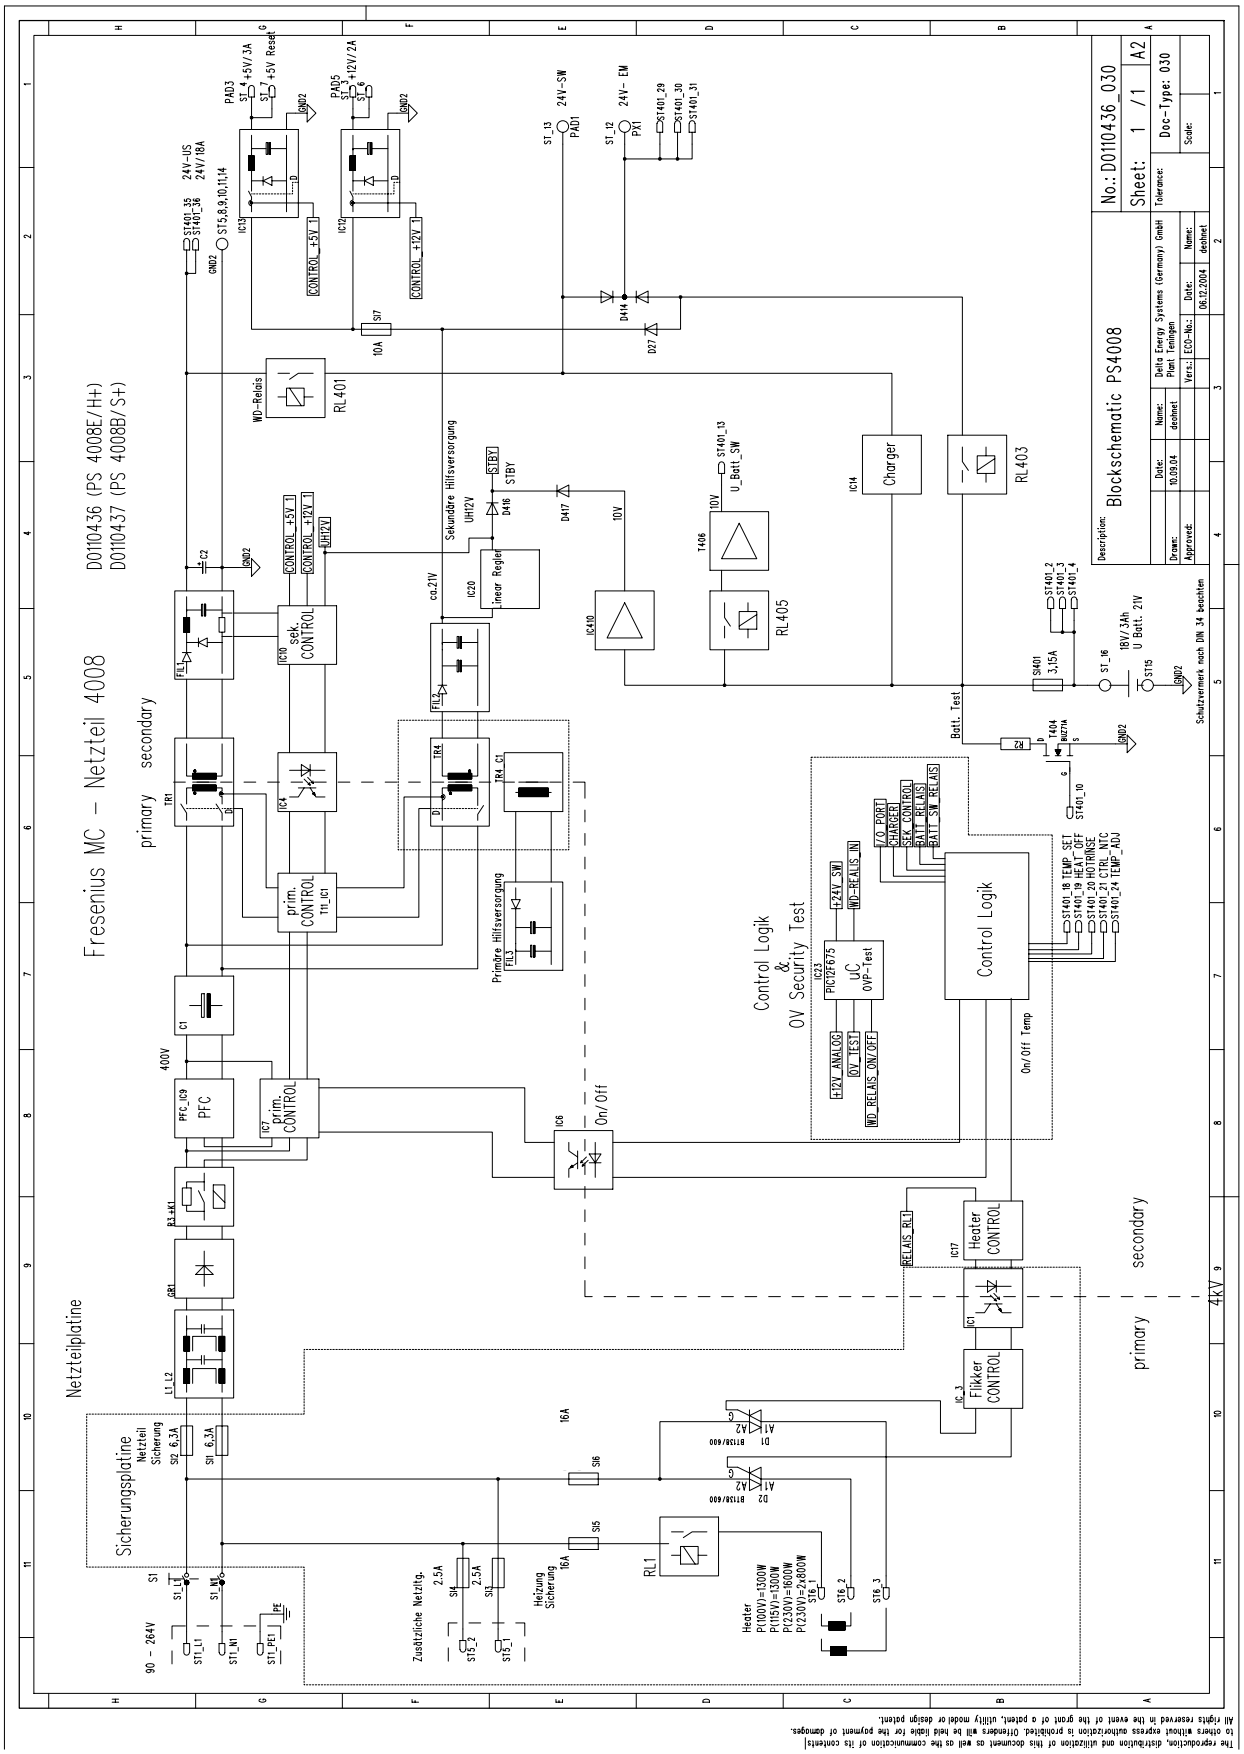

8.3 Block diagram of screen 4008 H/S

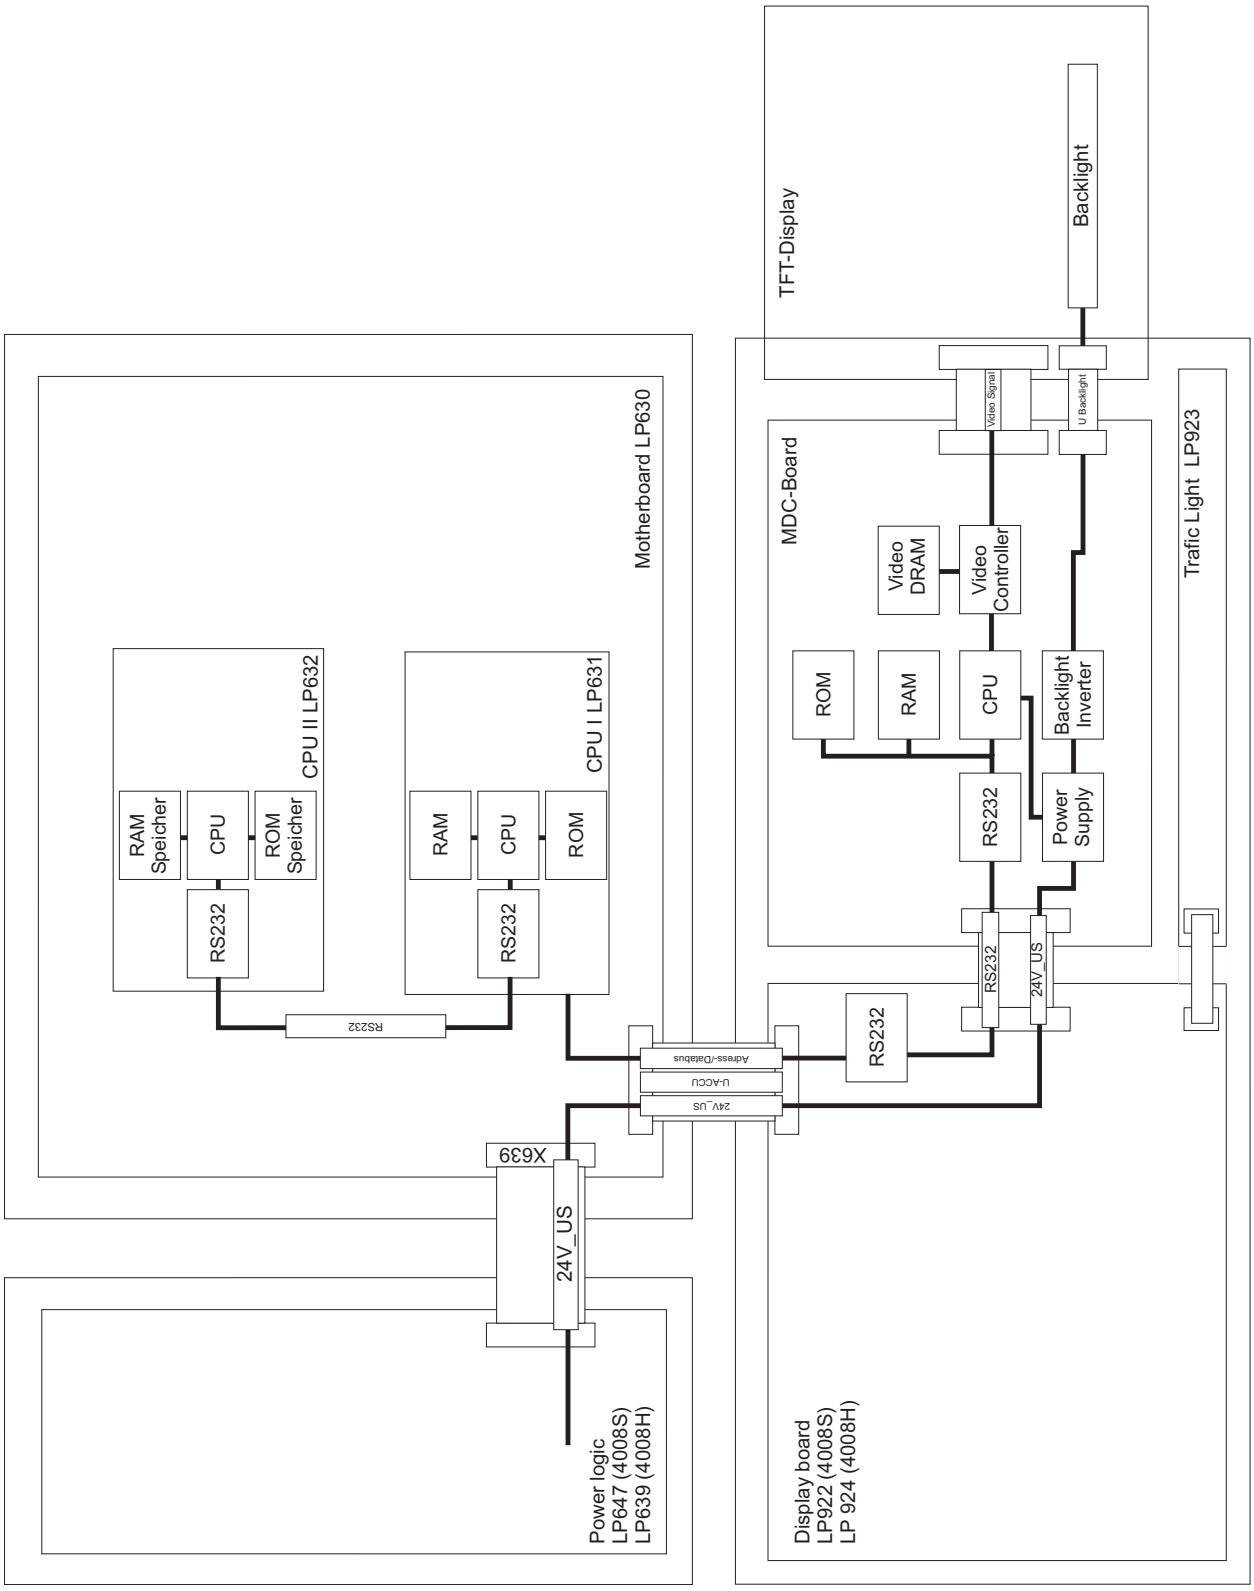

8.4 Connection layout diagram

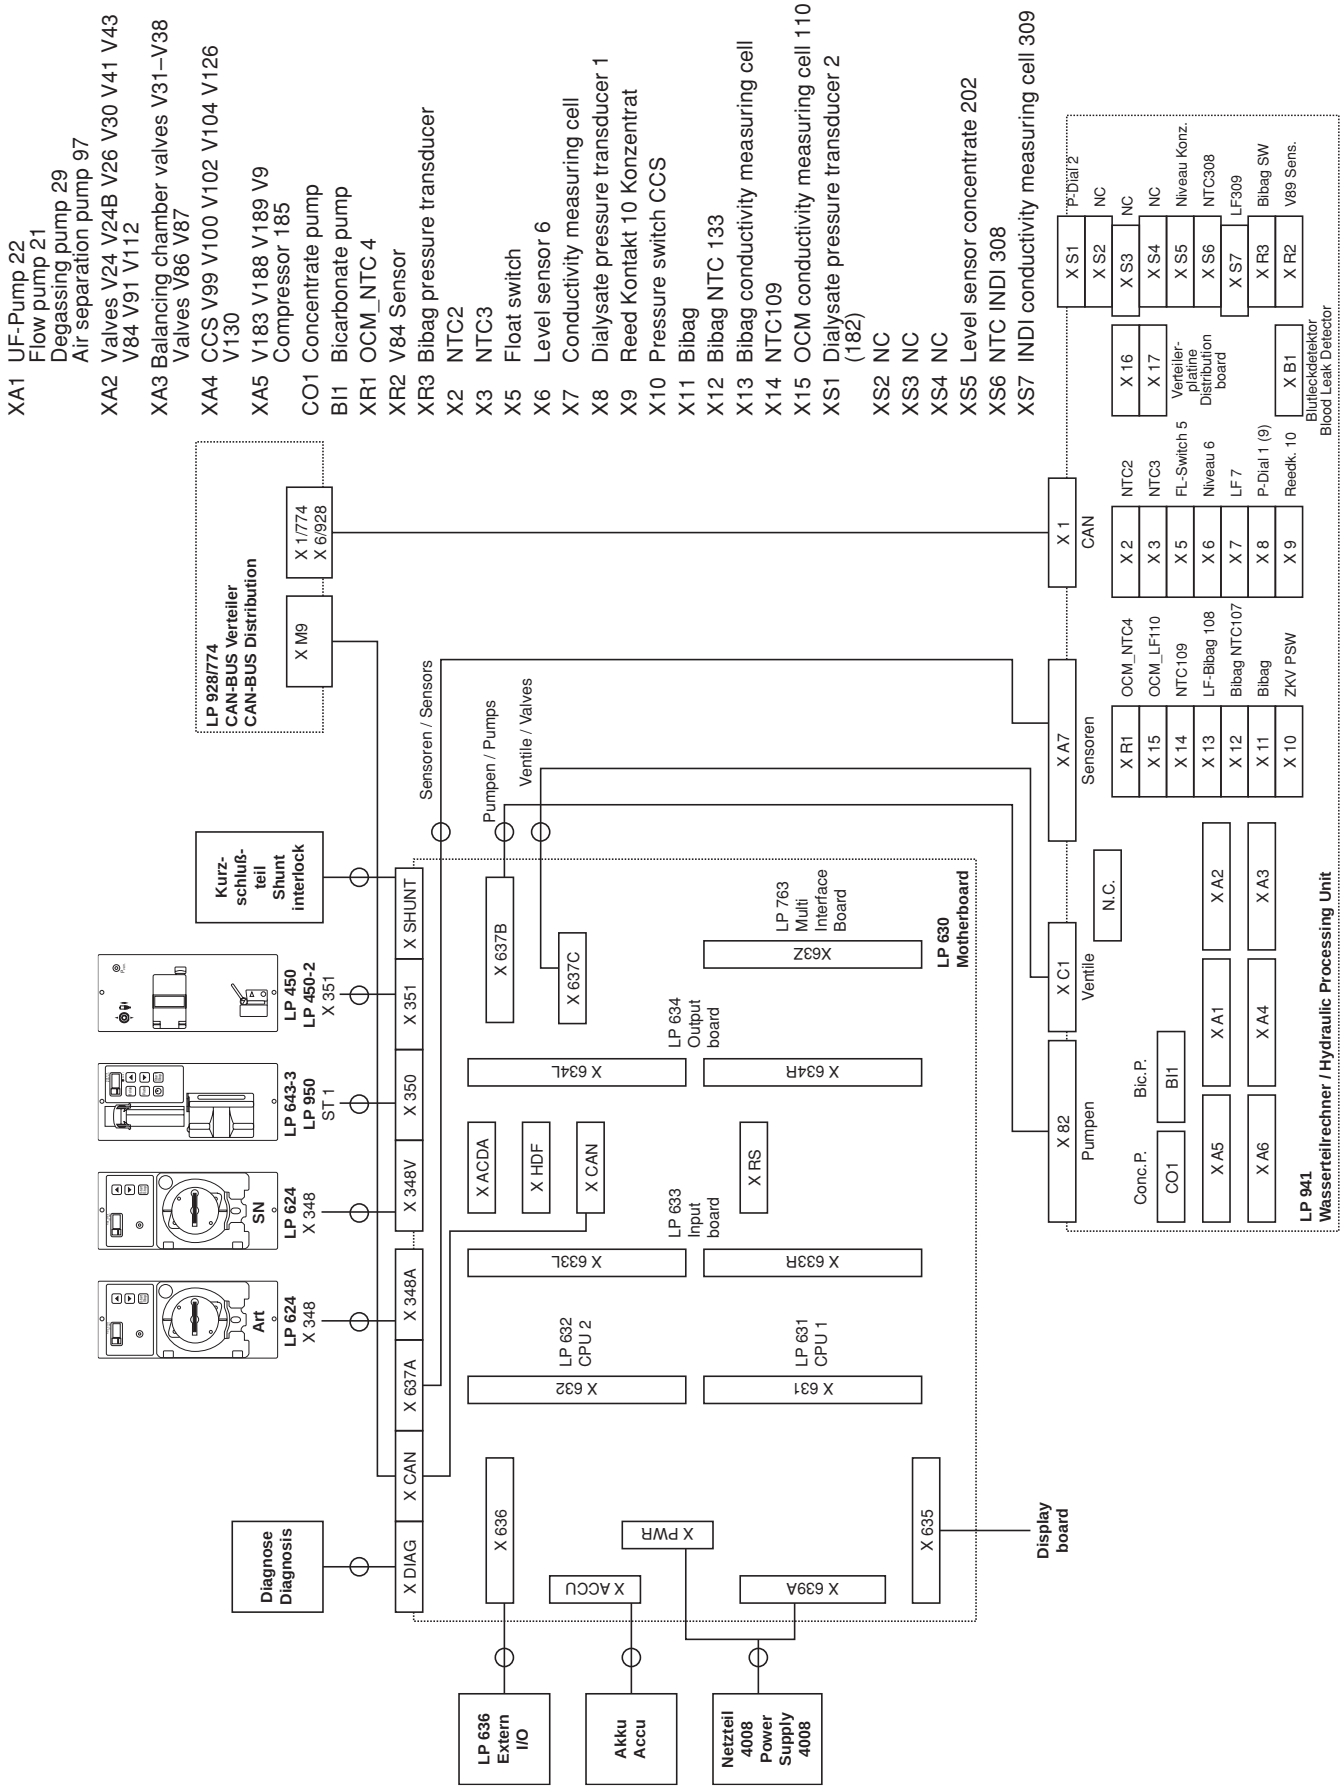

8.4.1 Connection diagram CAN communication

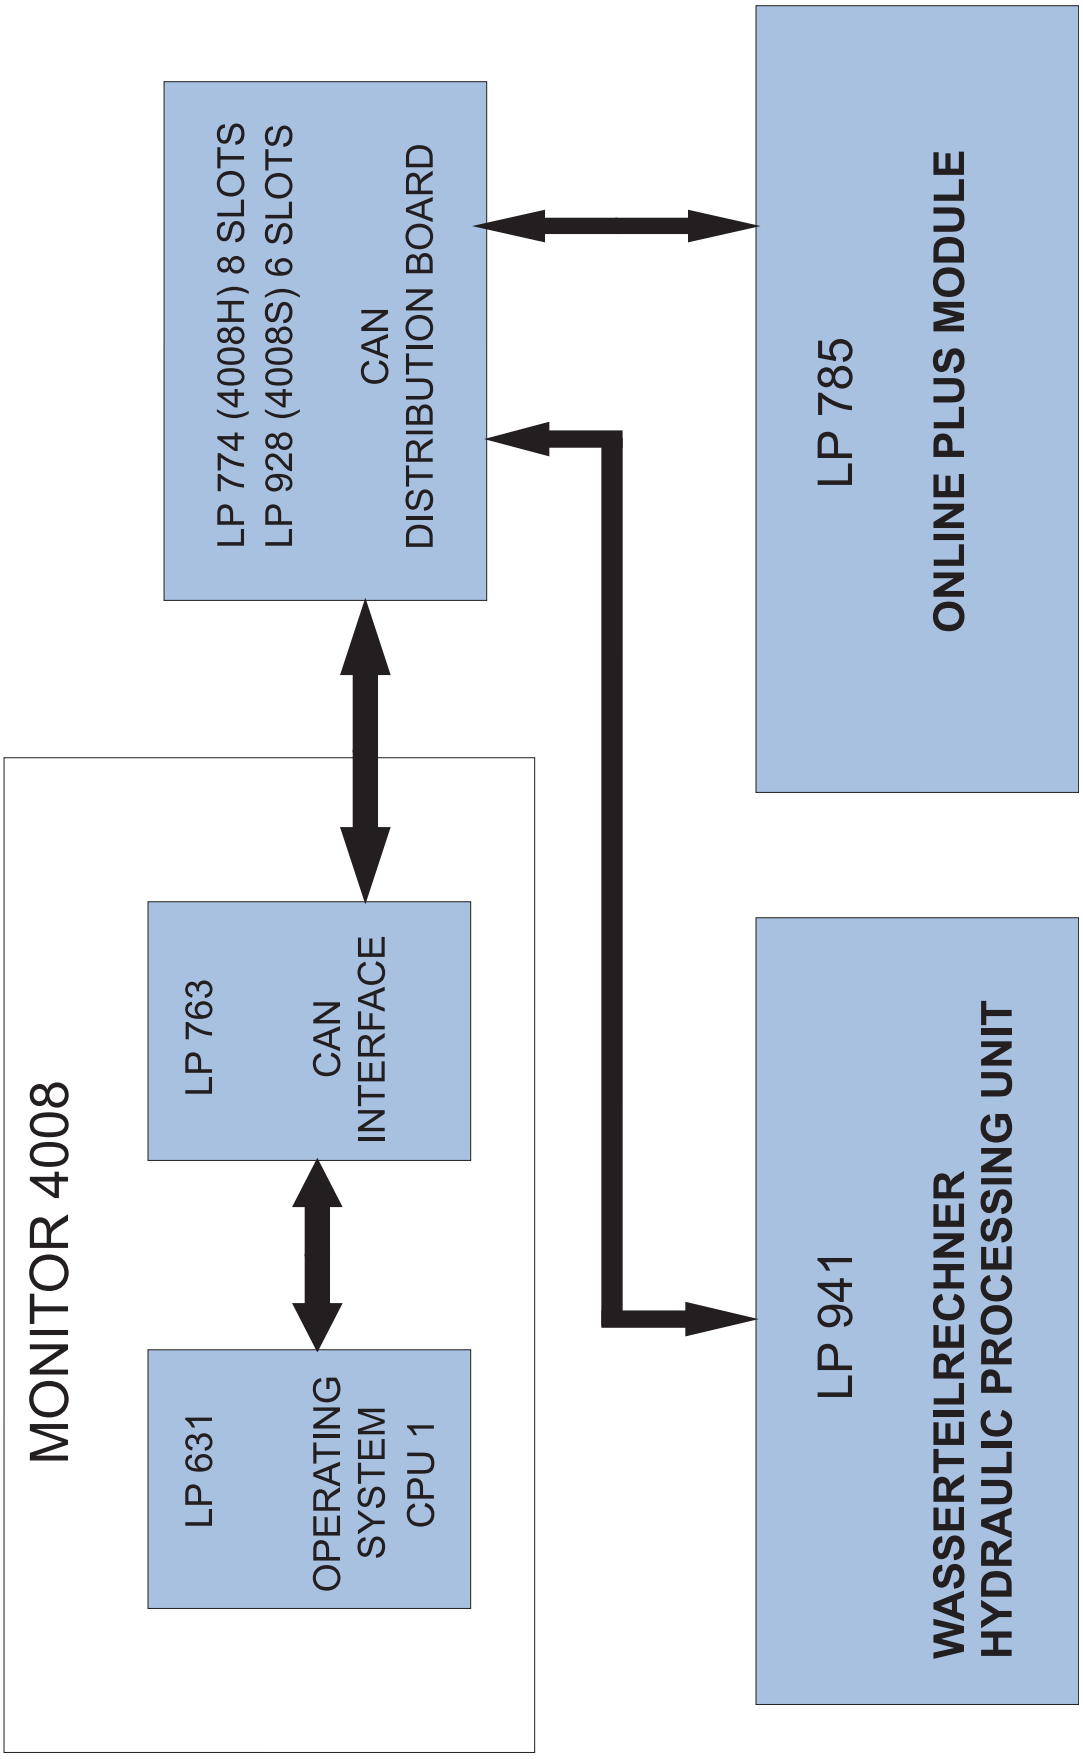

8.4.2 Hydraulics processor block diagram

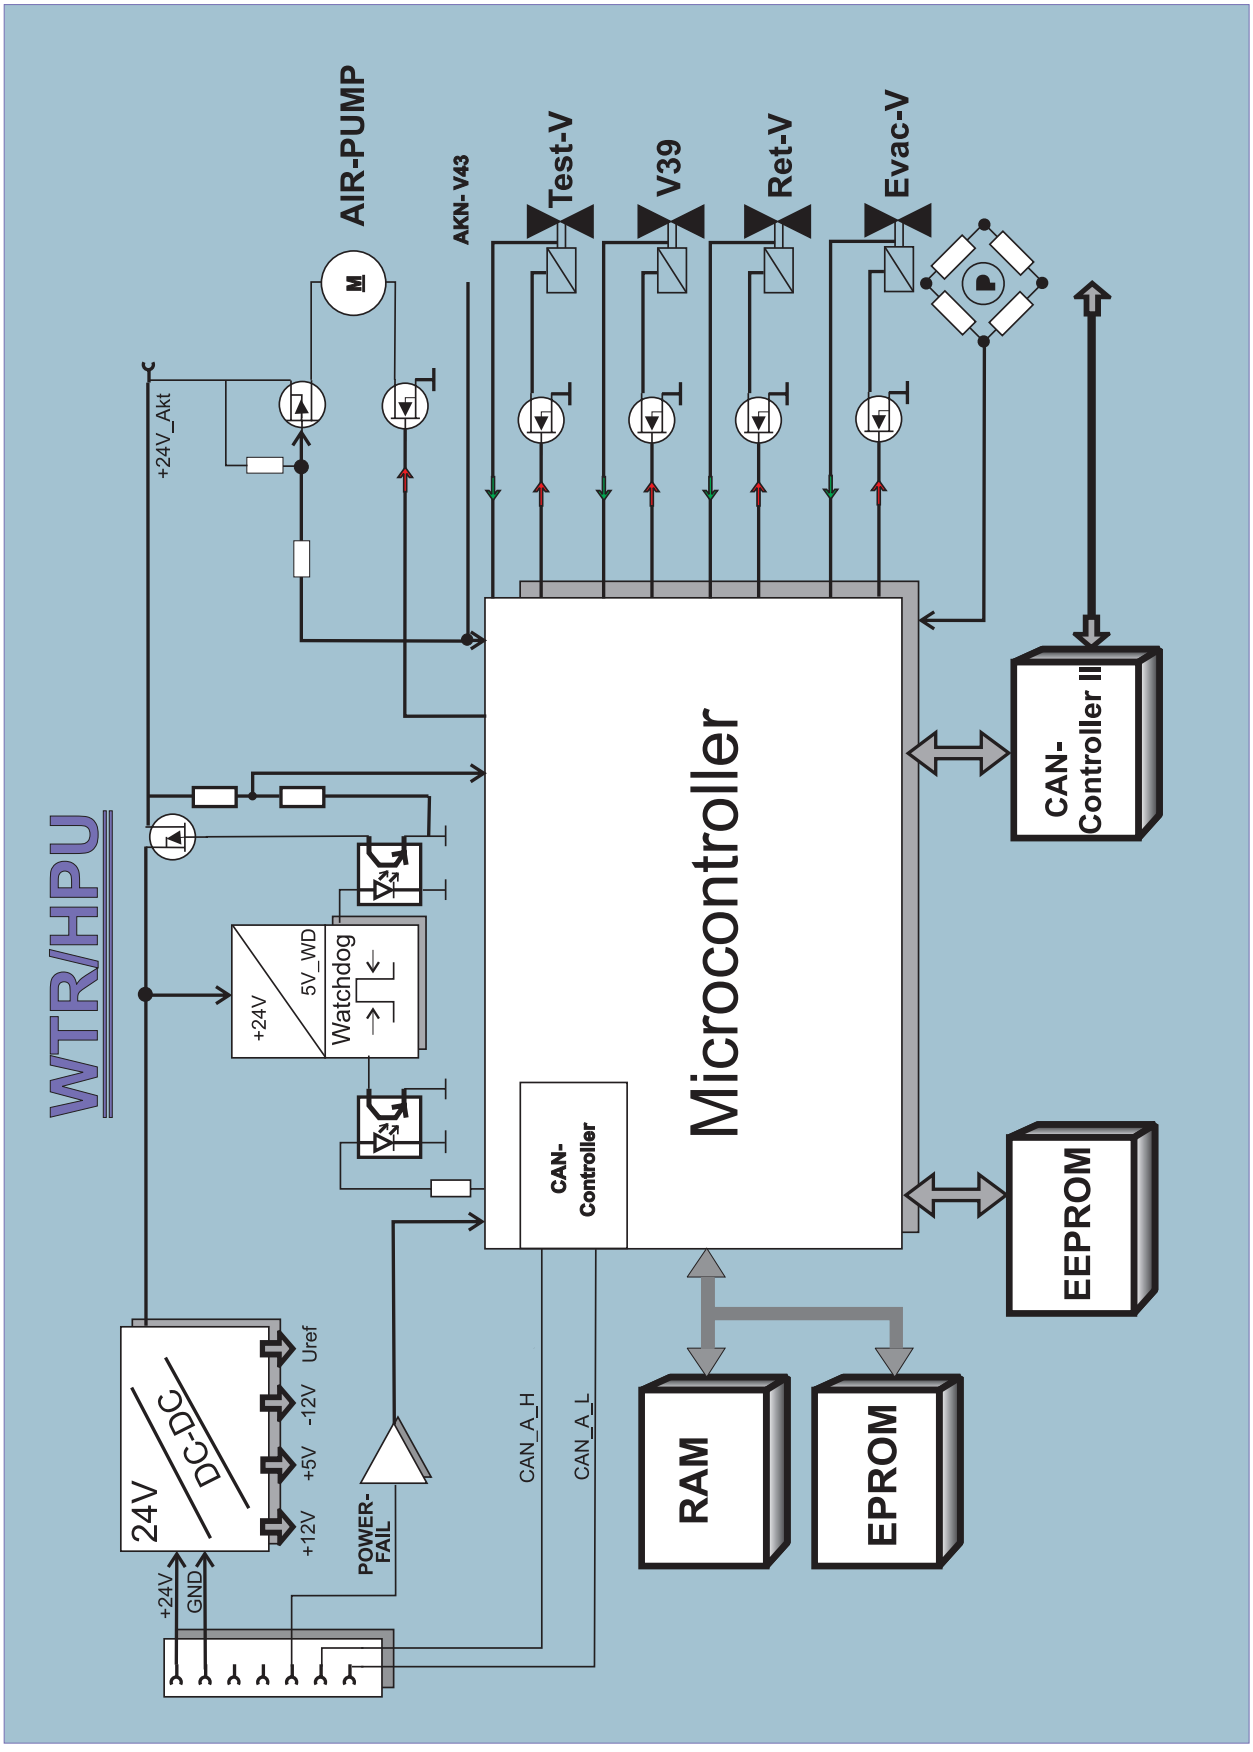

8.5 P.C.B. LP 450-2 Level detector control (LD)

Fig.: Signal plan P.C.B. LP 450-2

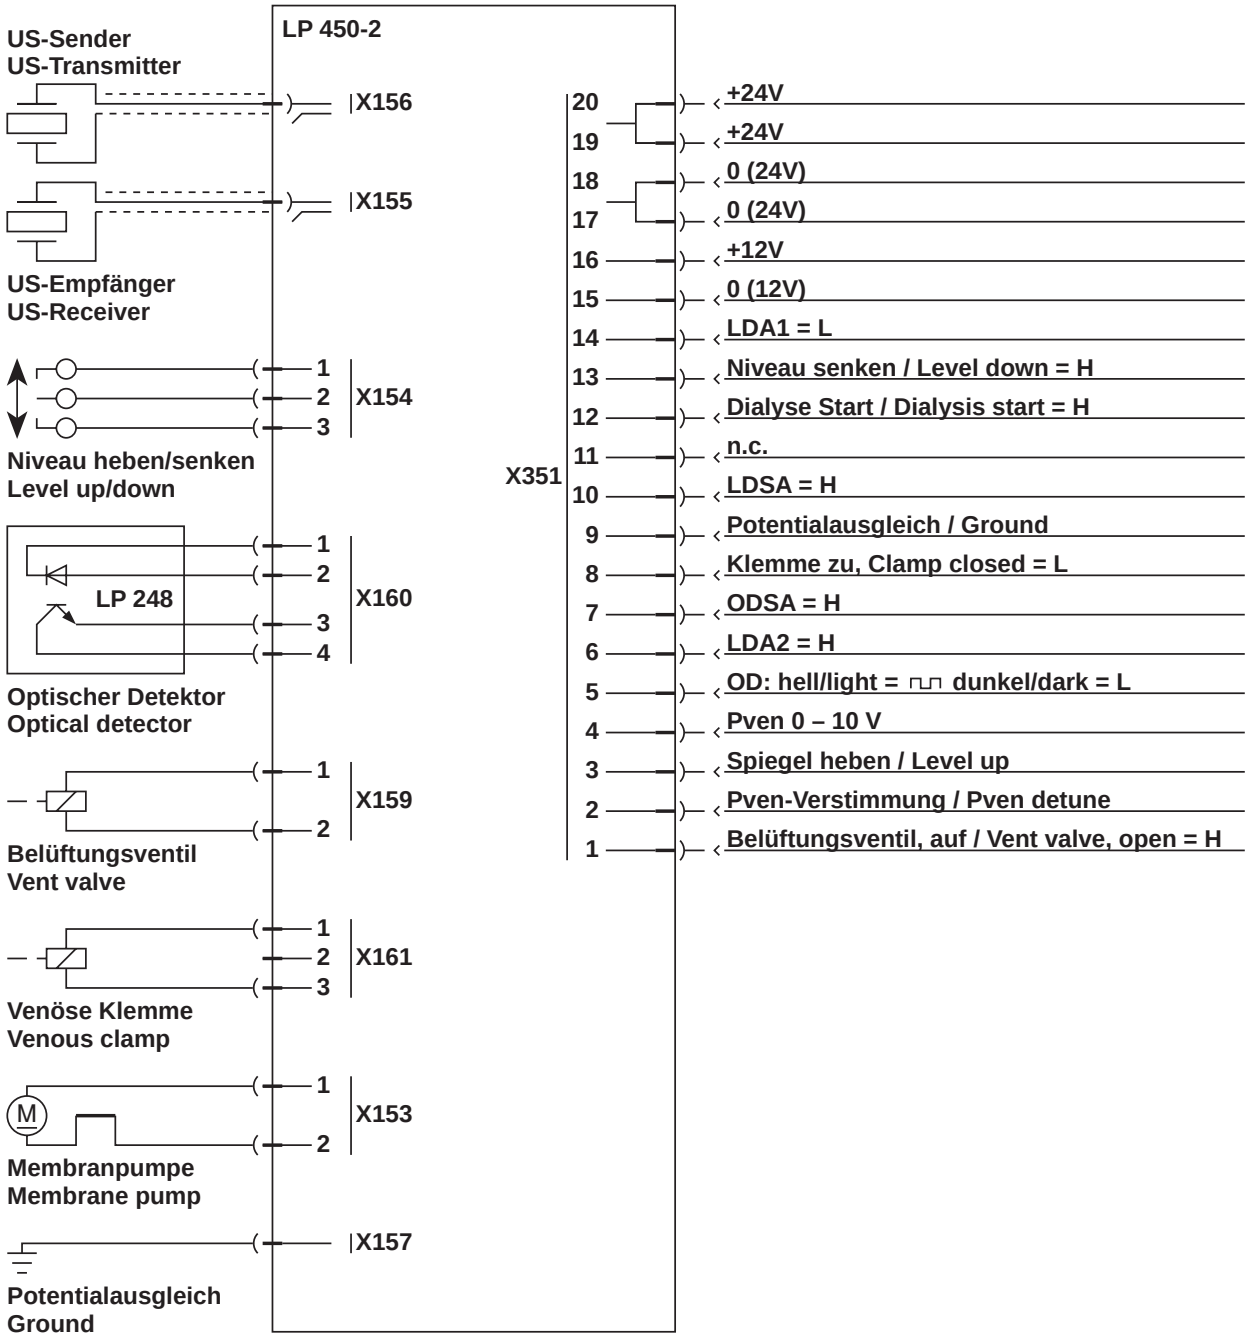

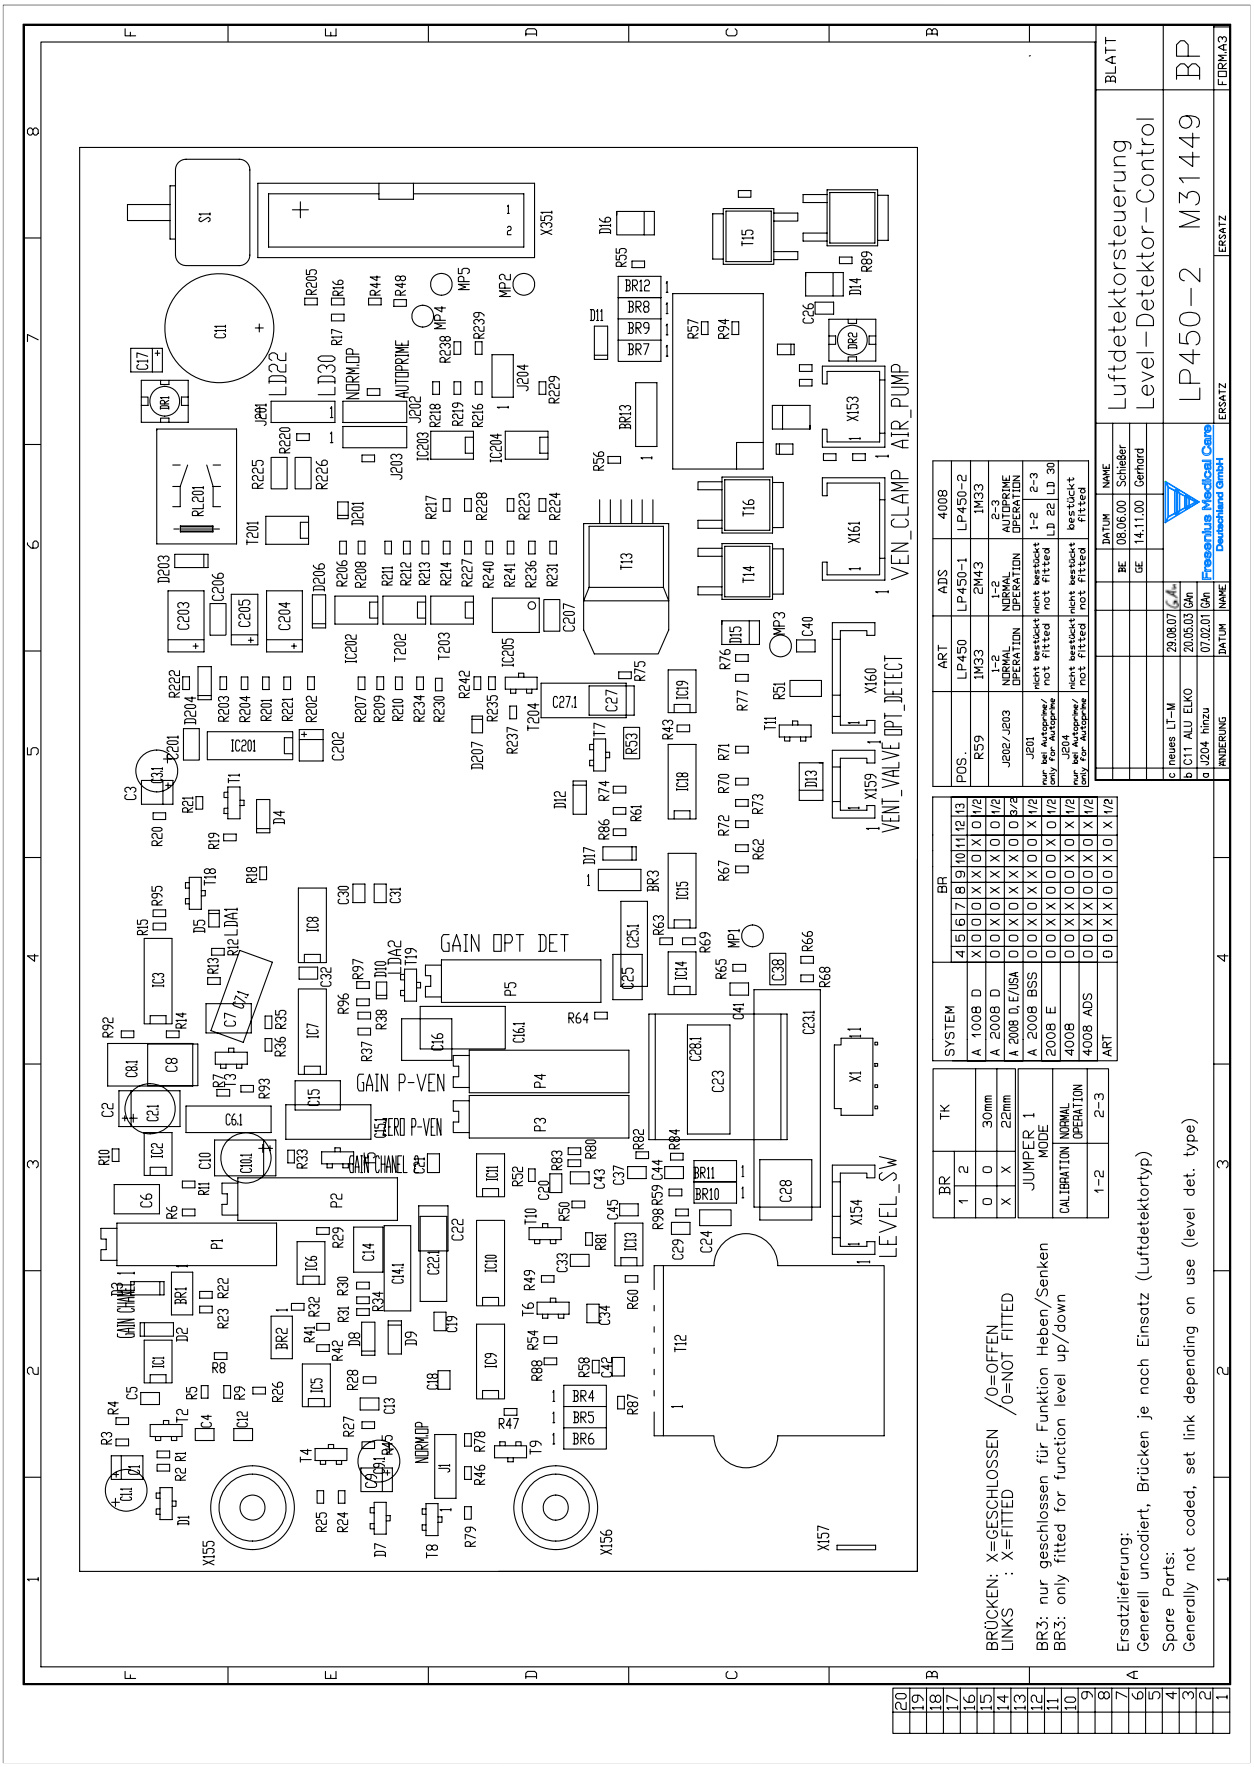
Luftdetektorsteuerung
Level-Detektor-Control
LP450-2 M31449 BP
Fresenius Medical Care
Deutschland GmbH
GAIN OPT DET
GAIN P-VEN
ZERO P-VEN
GAIN CHANNEL 1
GAIN CHANNEL 2
VEN_CLAMP
AIR_PUMP
VENT_VALVE OPT_DETECT
LEVEL_SW
LD22
LD30
NORM.DIP
AUTOPRIME
BRÜCKEN: X=GESCHLOSSEN /0=OFFEN
LINKS : X=FITTED /0=NOT FITTED
BR3: nur geschlossen für Funktion Heben/Senken
BR3: only fitted for function level up/down
Ersatzlieferung:
Generell uncodiert, Brücken je nach Einsatz (Luftdetektortyp)
Spare Parts:
Generally not coded, set link depending on use (level det. type)

8.6 P.C.B. LP 493 Blood leak detector

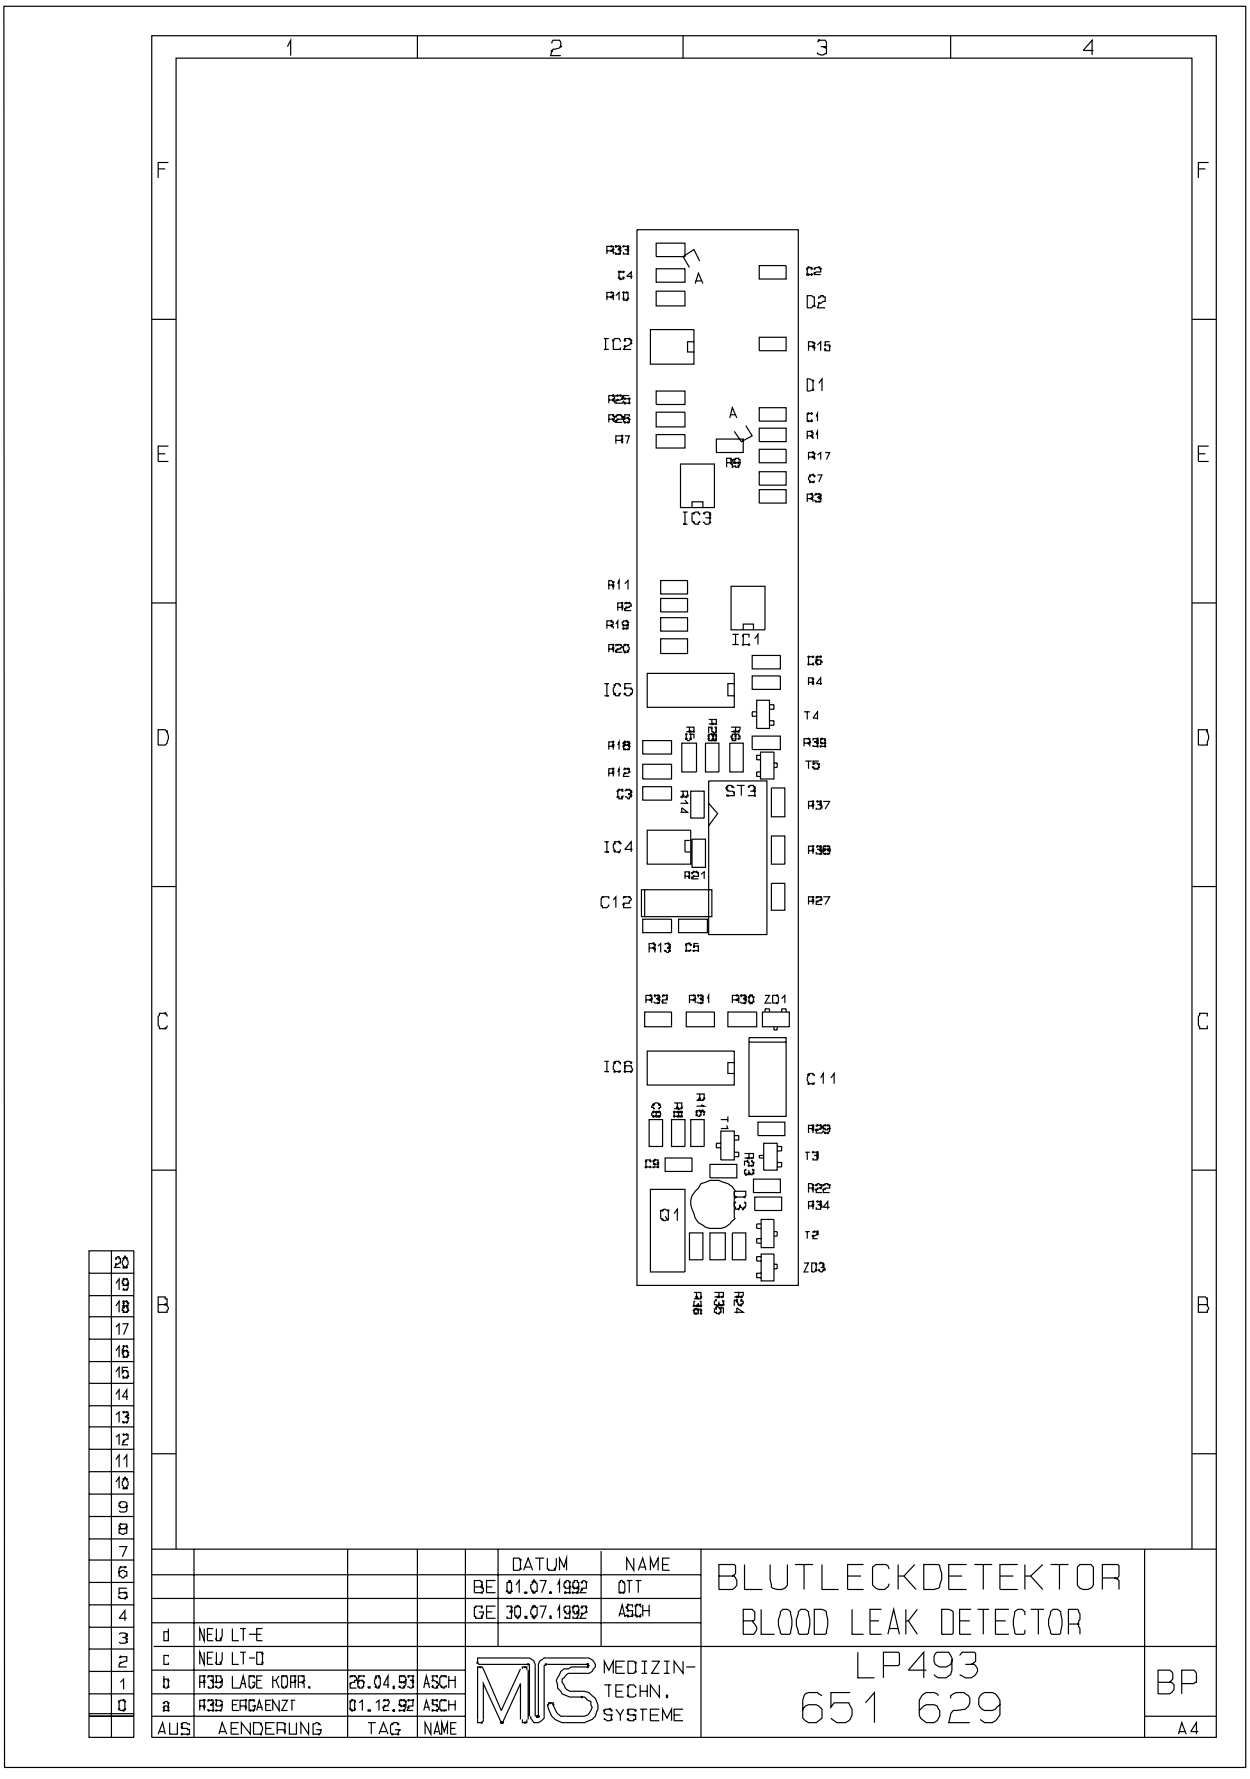

8.7 P.C.B. LP 624 Control board (BP)

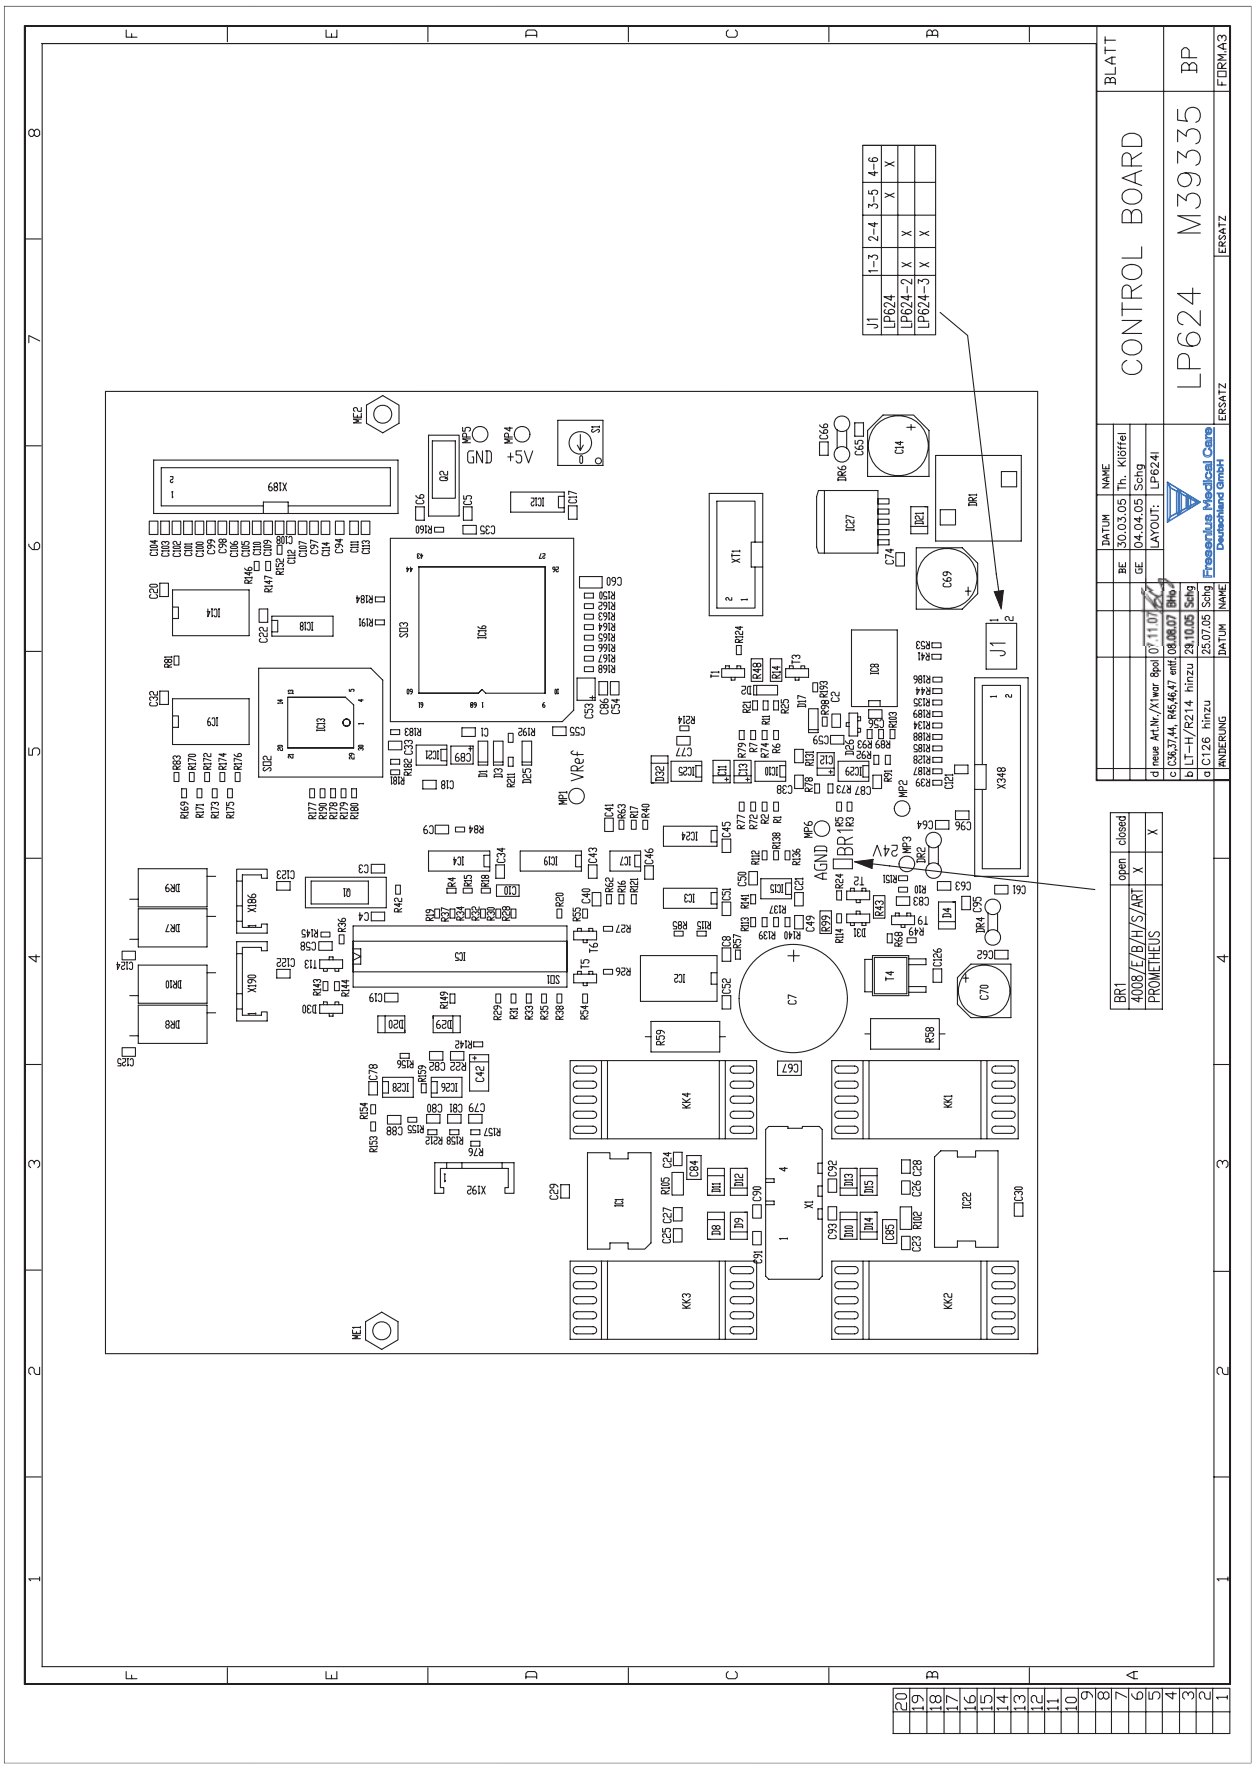

8.8 P.C.B. LP 630 Motherboard

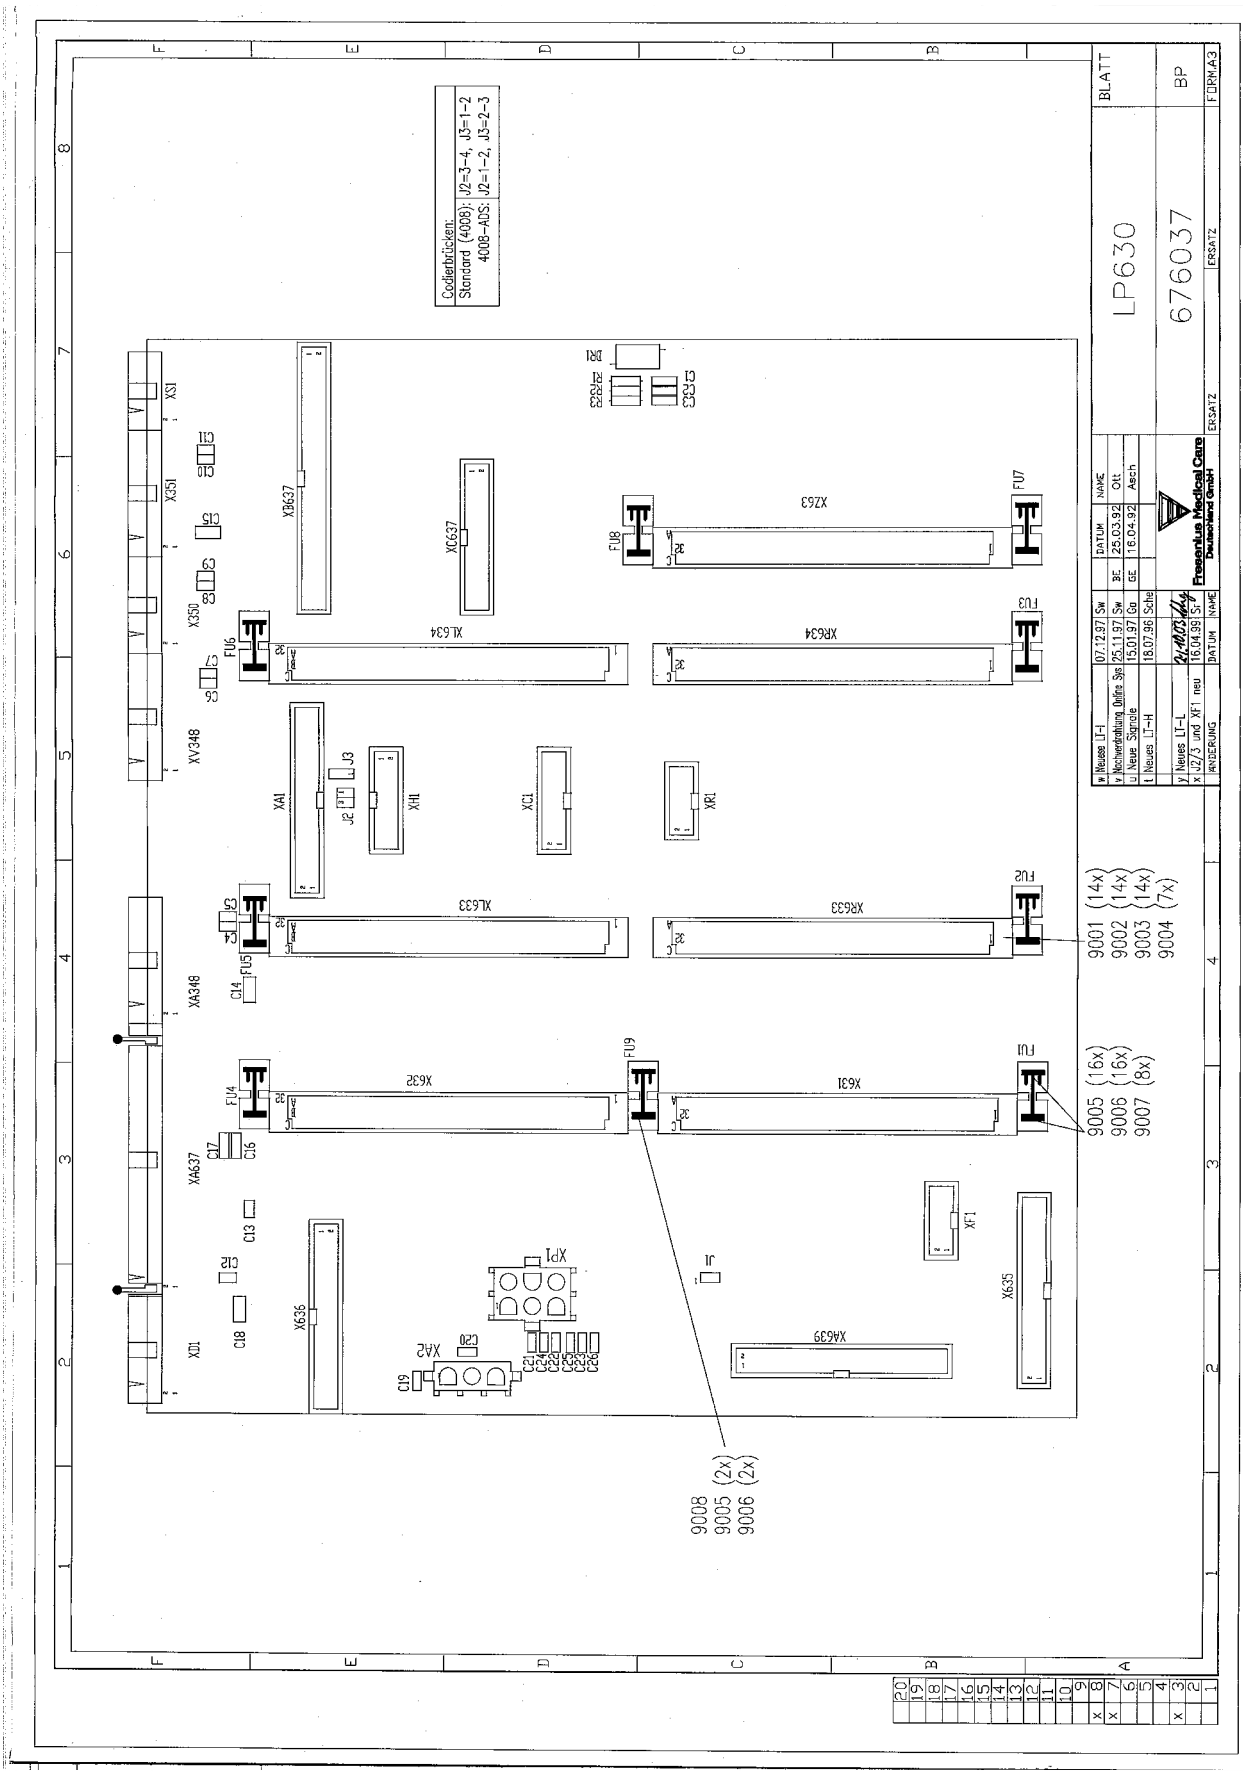

8.9 P.C.B. LP 631 CPU 1

Fig.: Block diagram P.C.B. LP 631 CPU 1

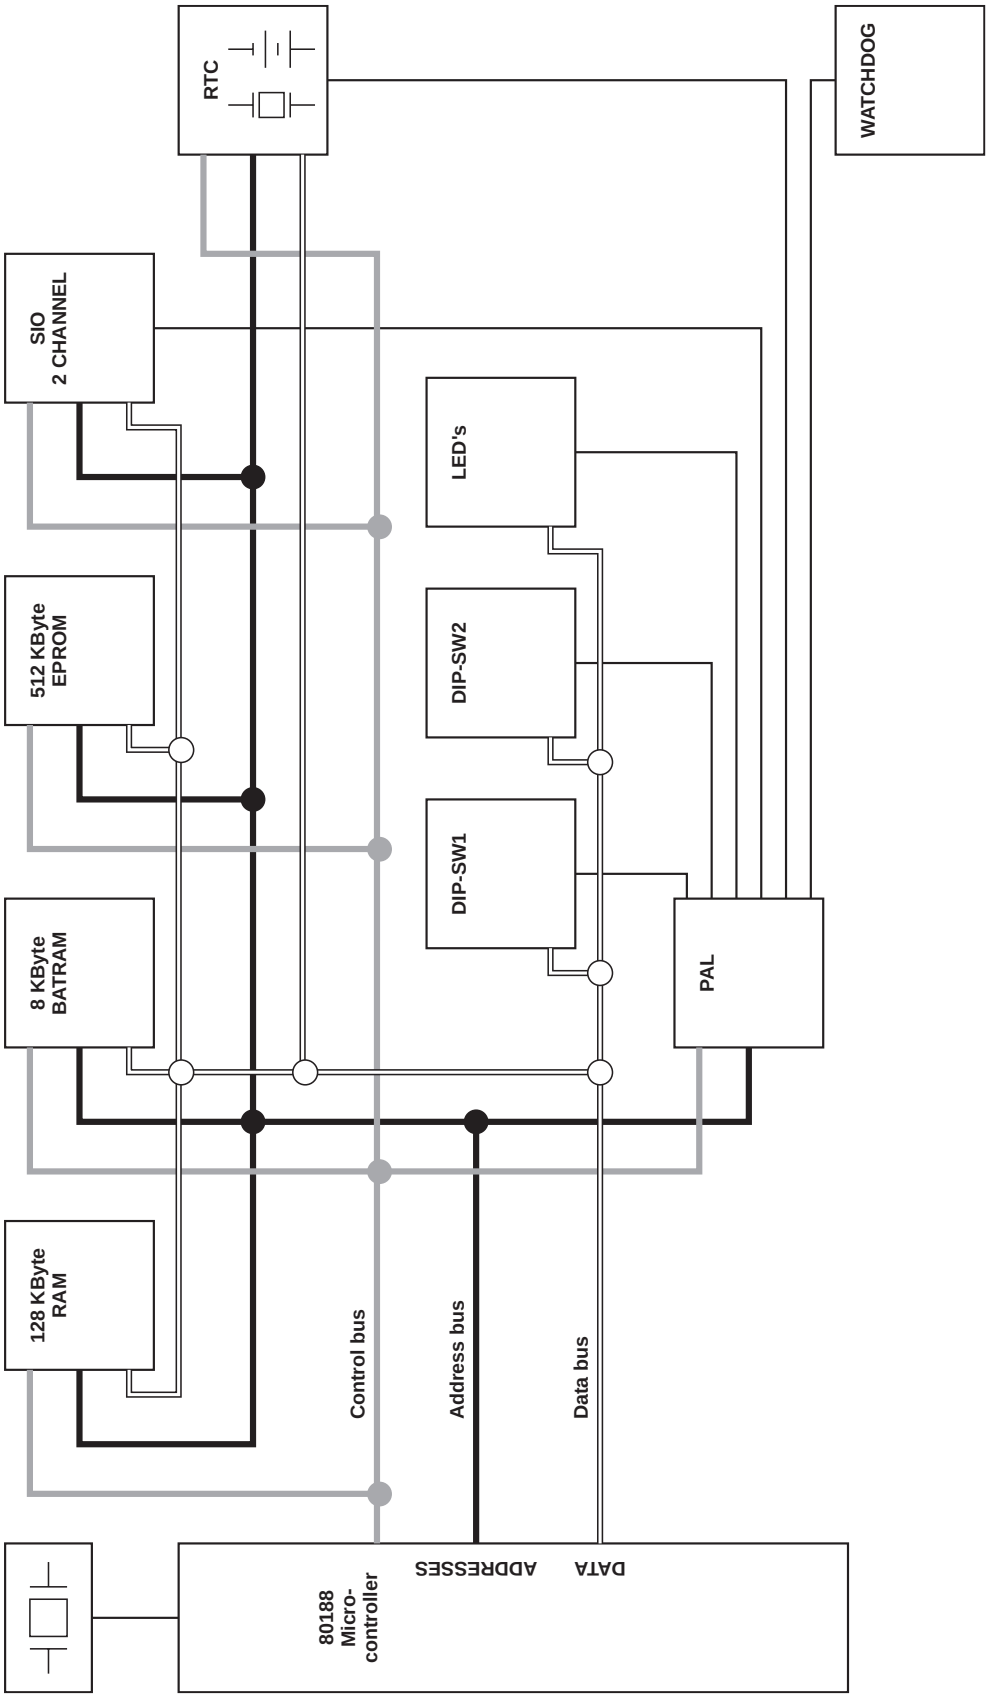

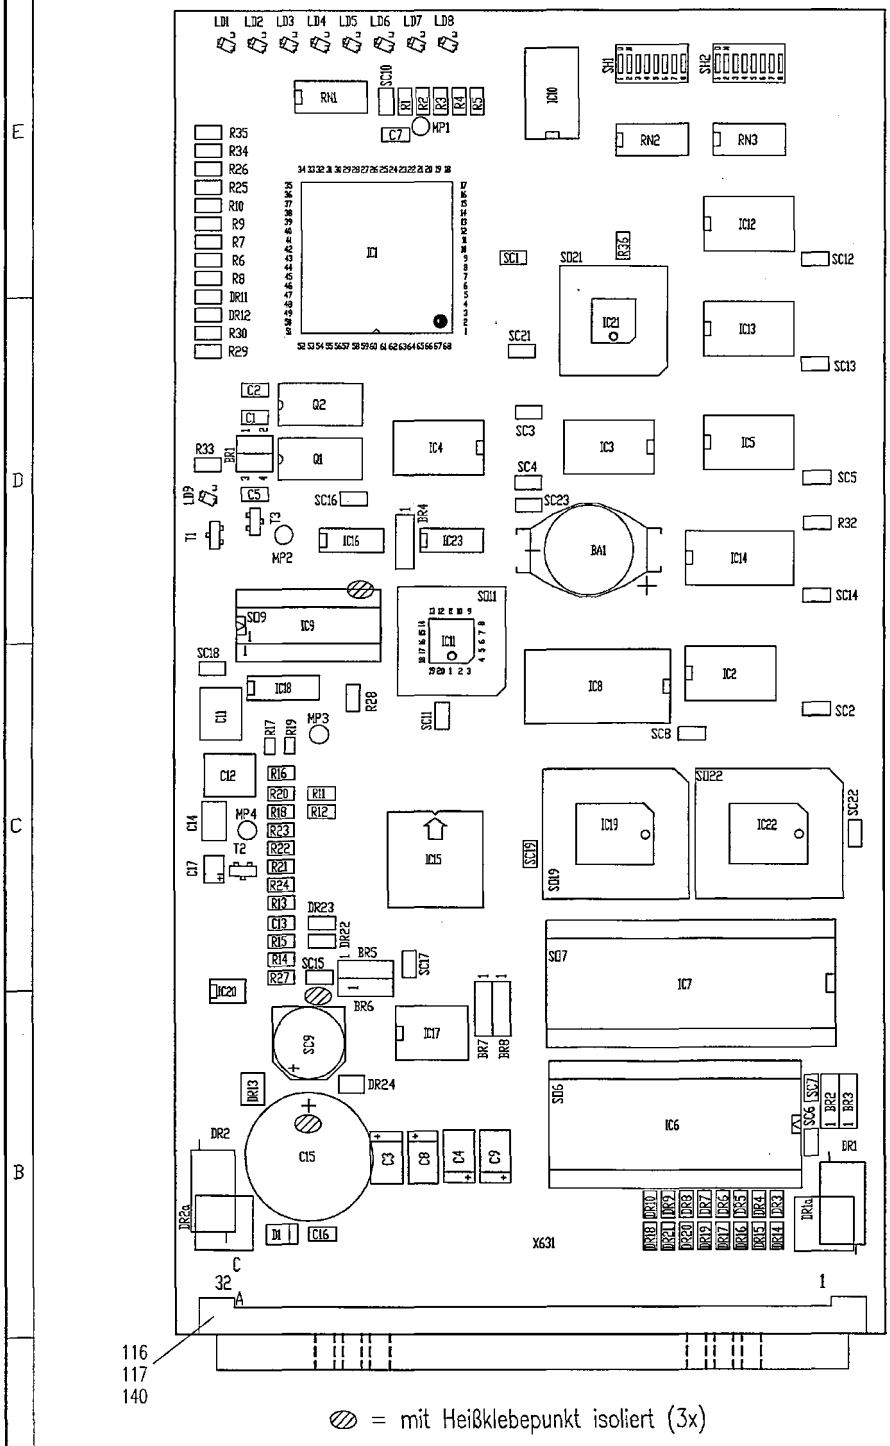

	20
	19
	18
	17
	16
	15
	14
	13
	12
	11
	10
	9
	8
	7
	6
	5
	4
	3
	2
	1

g	LED's geändert	18.02.03	Su	1999	DATUM	NAME
f	Doppelkopf	14.01.03	Slu	BE	26.07.99	Ott
e	Sockel für IC1/IC15 entf.	12.11.02	Slu	GE	26.07.99	Scheuring
d	DR3-10/14-21w. Ferrit	29.01.01	Sw		Layout:	LP631L
c	LT L Nachverdr. indeg	06.11.00	Slu			
b	IC18 an PWR-WD	19.07.00	Schg			
a	BR5-8 hinzu	28.02.00	SW			
	ÄENDERUNG	DATUM	NAME			

Fresenius Medical Care
Deutschland GmbH

CPU - 1

BLATT

ERSATZ	ERSATZ	
LP631 M30739	LP631-2 M64484	BP

FORM.A4

8.10 P.C.B. LP 632 CPU 2

Fig.: Block diagram P.C.B. LP 632 CPU 2

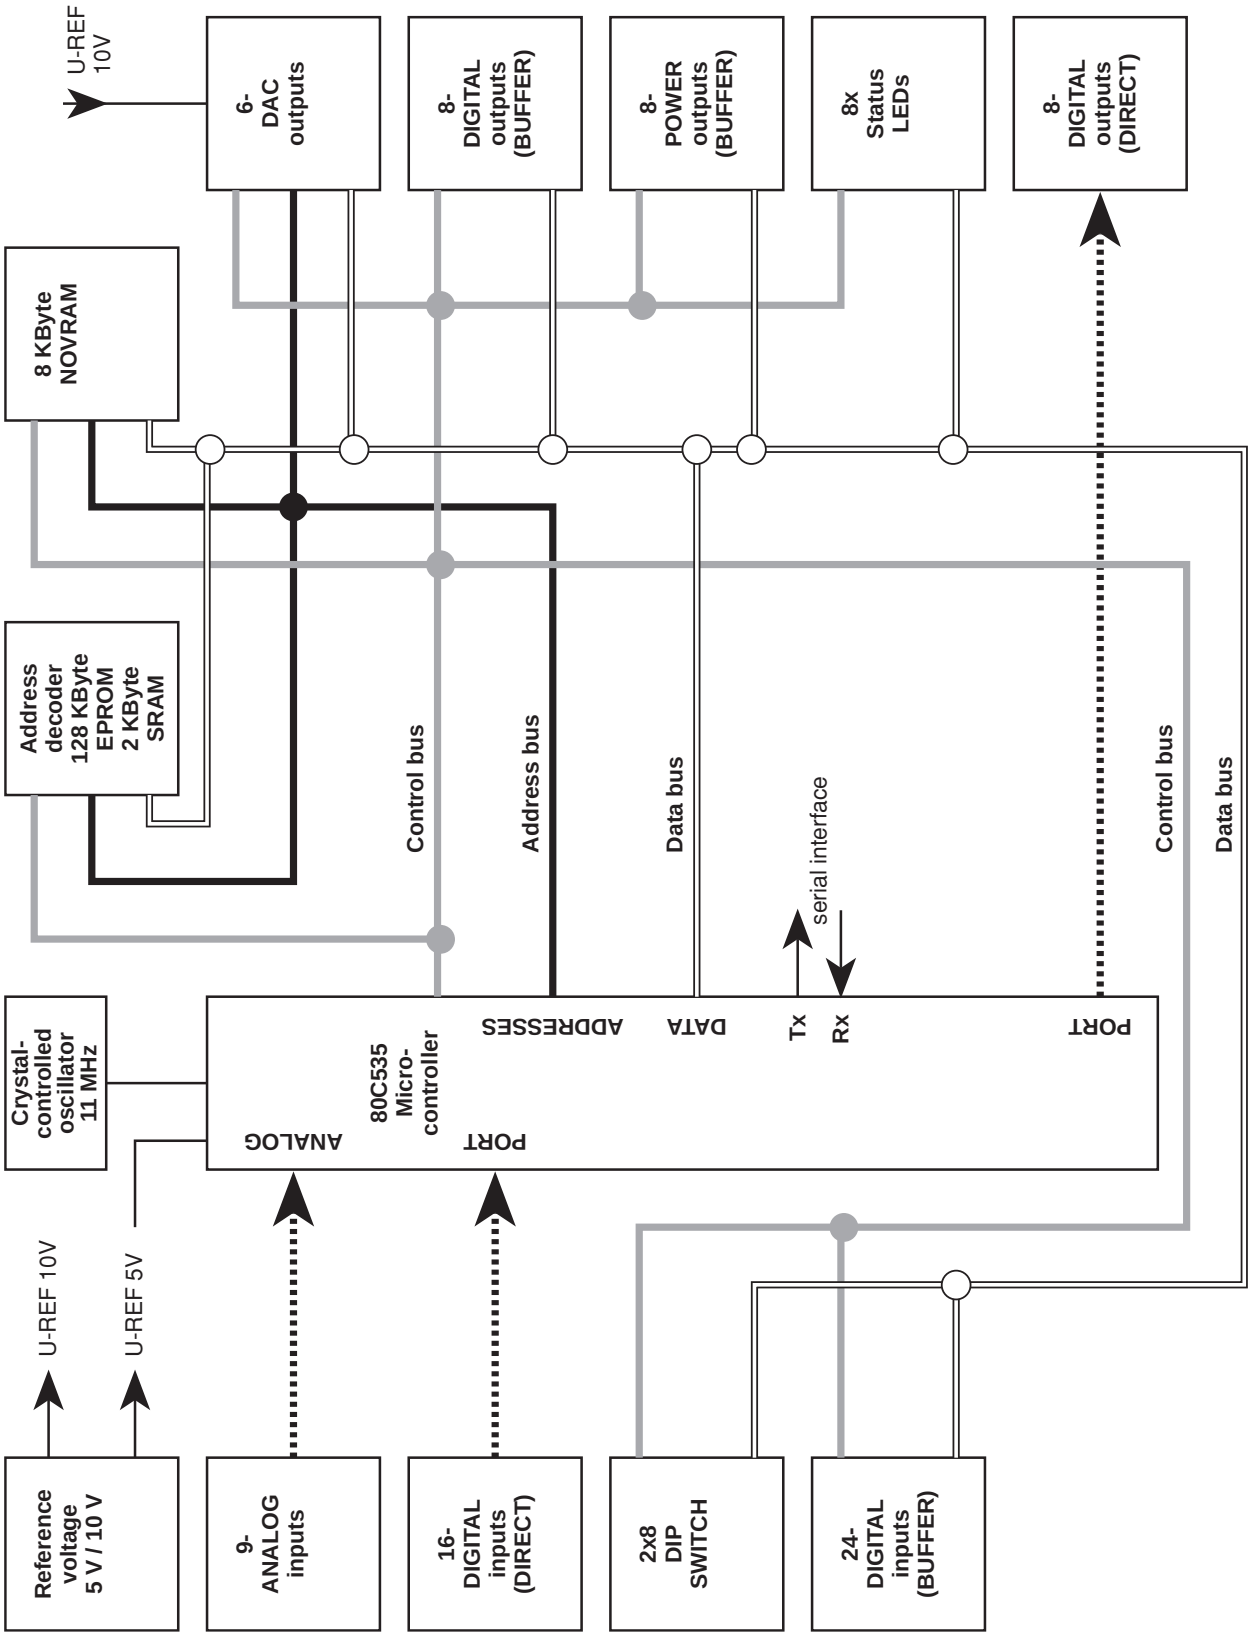

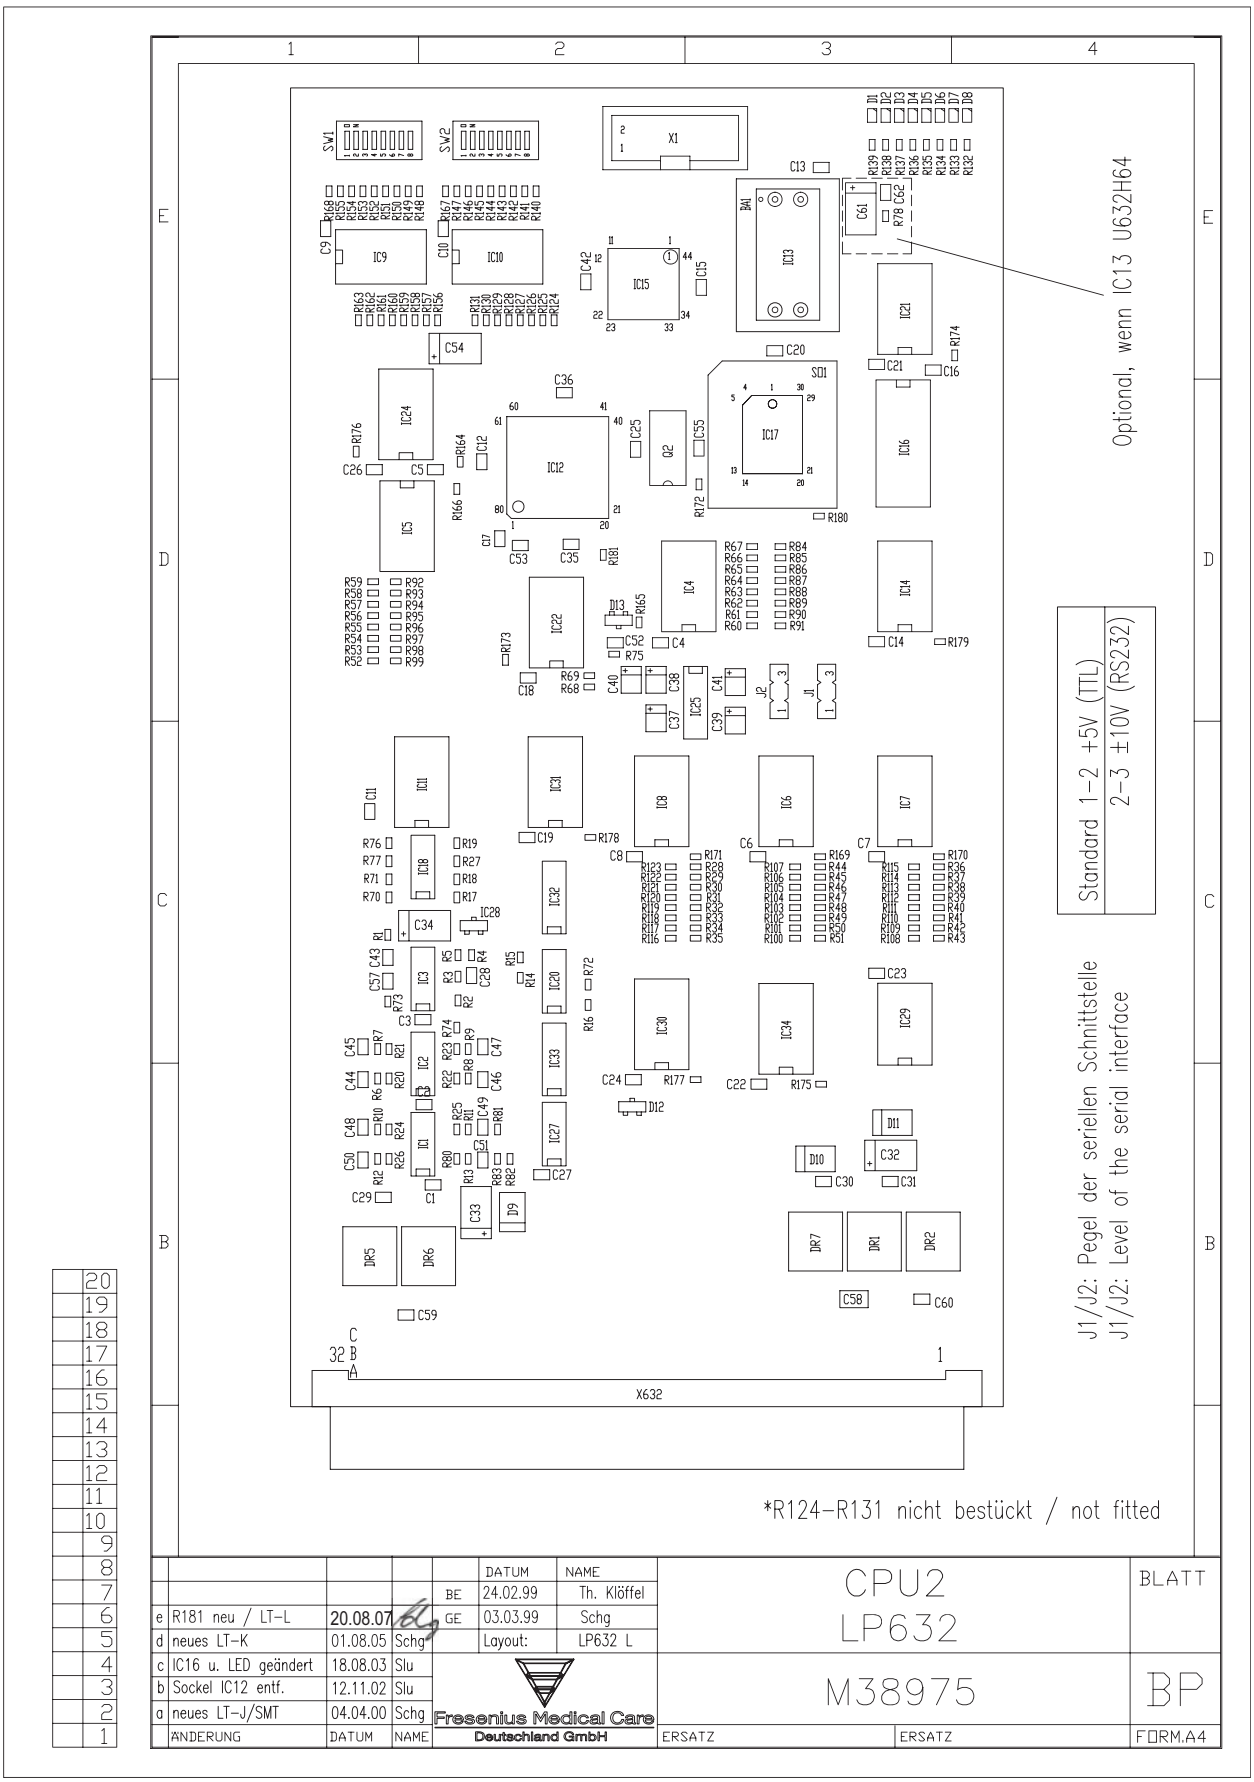
Optional, wenn IC13 U632H64
Standard 1-2 +5V (TTL)
2-3 ±10V (RS232)
J1/J2: Pegel der seriellen Schnittstelle
J1/J2: Level of the serial interface
X632
*R124-R131 nicht bestückt / not fitted

	ÄNDERUNG	DATUM	NAME
e	R181 neu / LT-L	20.08.07	Bg
d	neues LT-K	01.08.05	Schg
c	IC16 u. LED geändert	18.08.03	Slu
b	Sockel IC12 entf.	12.11.02	Slu
a	neues LT-J/SMT	04.04.00	Schg

	DATUM	NAME
BE	24.02.99	Th. Klöffel
GE	03.03.99	Schg
Layout:		LP632 L

Fresenius Medical Care Deutschland GmbH

CPU2
LP632
M38975

BLATT
BP

ERSATZ | ERSATZ | FORM.A4

8.11 P.C.B. LP 633 Input board

Fig.: Block diagram P.C.B. LP 633

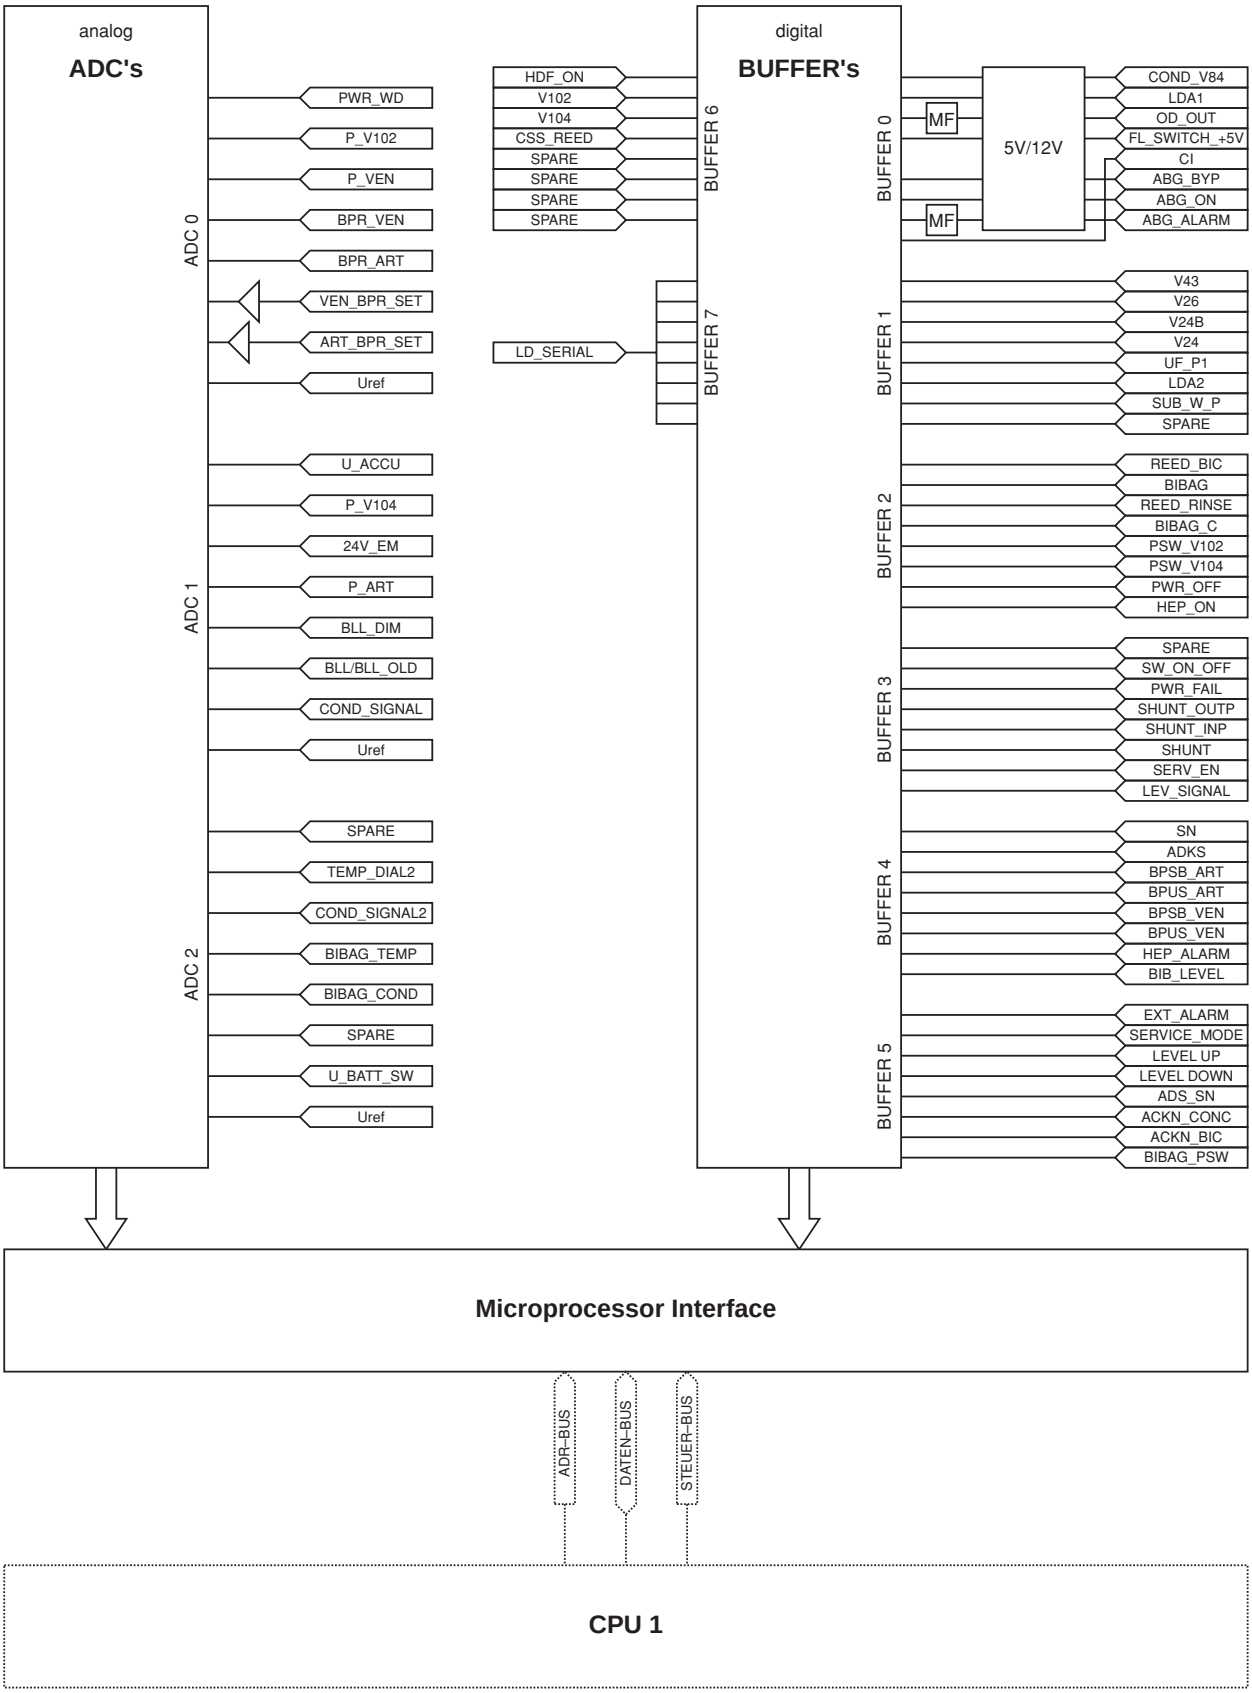

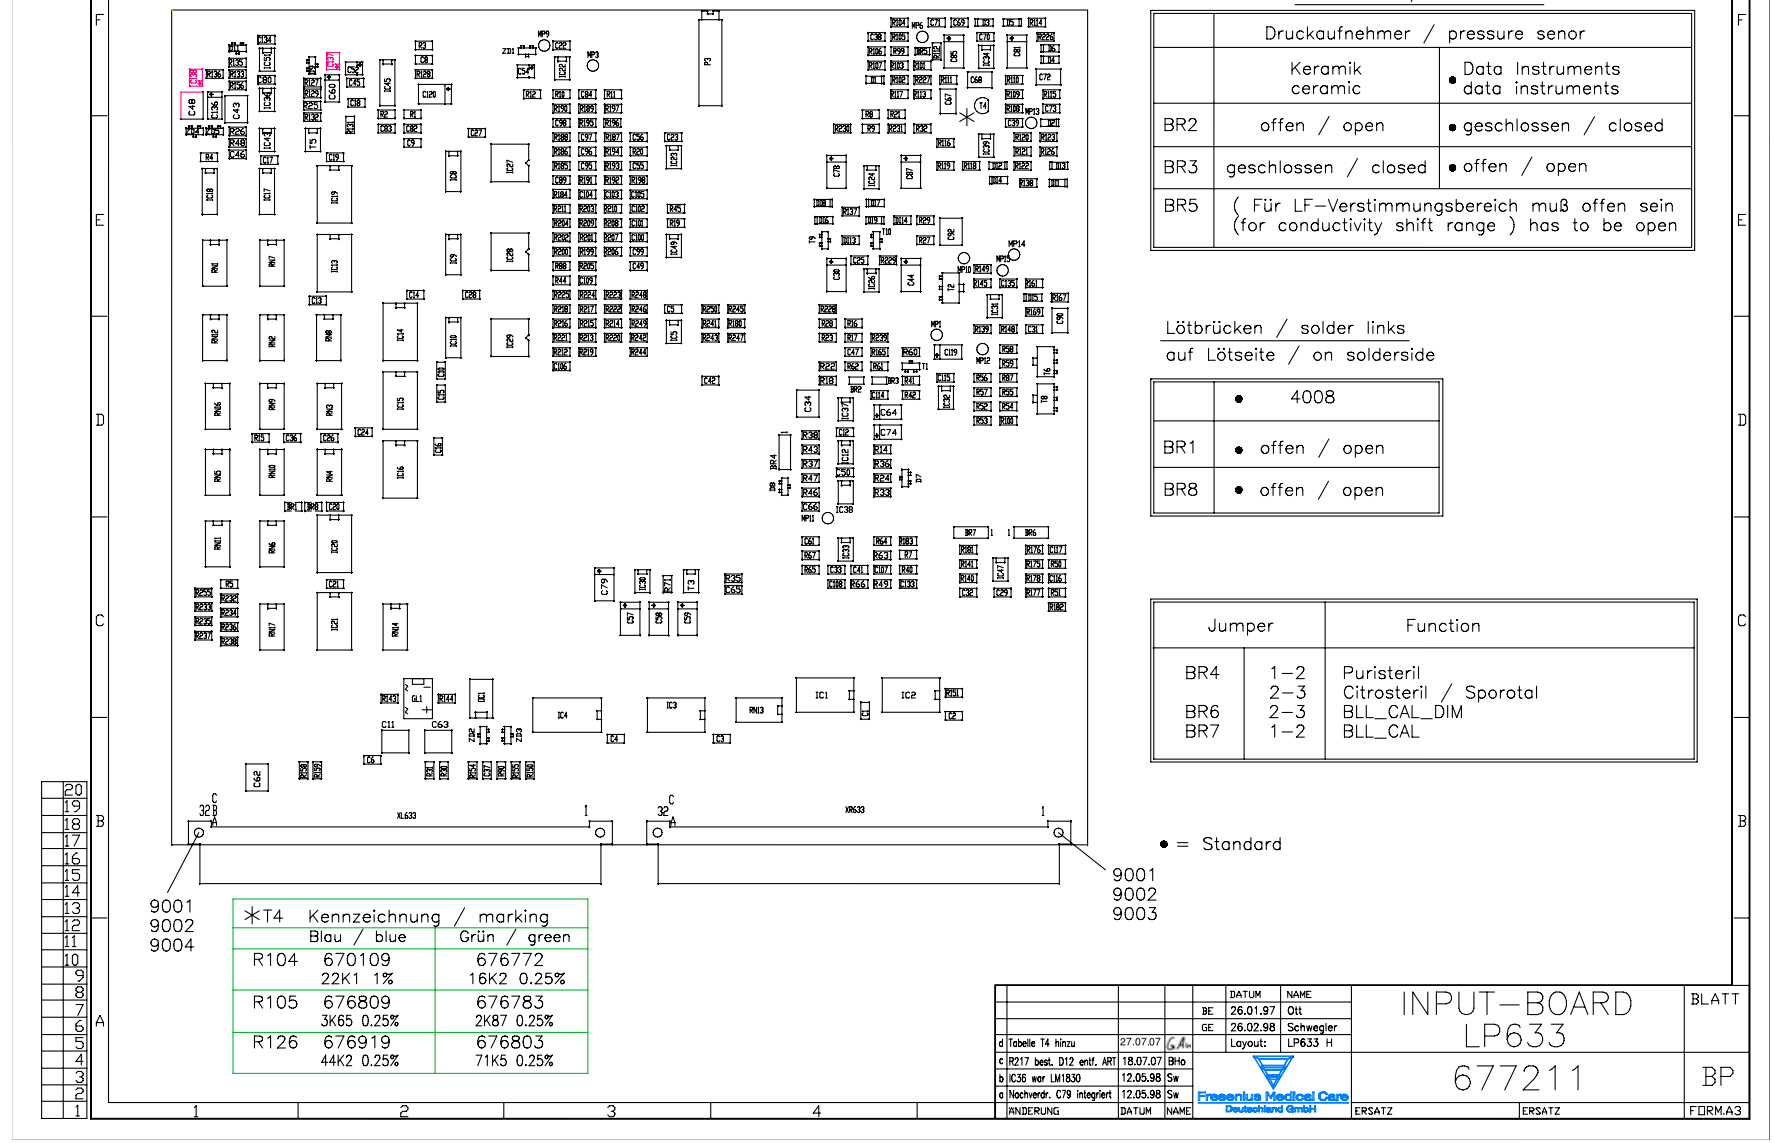

Lötbrücken / solder links

	Druckaufnehmer / pressure senor	
	Keramik ceramic	• Data Instruments data instruments
BR2	offen / open	• geschlossen / closed
BR3	geschlossen / closed	• offen / open
BR5	(Für LF-Verstimmungsbereich muß offen sein (for conductivity shift range) has to be open	

Lötbrücken / solder links
auf Lötseite / on solderside

	• 4008
BR1	• offen / open
BR8	• offen / open

Jumper		Function
BR4	1–2	Puristeril
	2–3	Citrosteril / Sporotal
BR6	2–3	BLL_CAL_DIM
BR7	1–2	BLL_CAL

• = Standard

9001
9002
9004

9001
9002
9003

✳T4 Kennzeichnung / marking	Blau / blue	Grün / green
R104	670109 22K1 1%	676772 16K2 0.25%
R105	676809 3K65 0.25%	676783 2K87 0.25%
R126	676919 44K2 0.25%	676803 71K5 0.25%

				DATUM	NAME
			BE	26.01.97	Ott
			GE	26.02.98	Schwegler
d	Tabelle T4 hinzu	27.07.07		Layout:	LP633 H
c	R217 best. D12 entf. ART	18.07.07	BHo		
b	IC36 war LM1830	12.05.98	Sw		
a	Nachverdr. C79 integriert	12.05.98	Sw		
	ÄNDERUNG	DATUM	NAME		

Fresenius Medical Care Deutschland GmbH

INPUT-BOARD LP633

677211

BLATT BP

ERSATZ ERSATZ FORM.A3

8.12 P.C.B. LP 634 Output board

Fig.: Block diagram P.C.B. LP 634 Output board

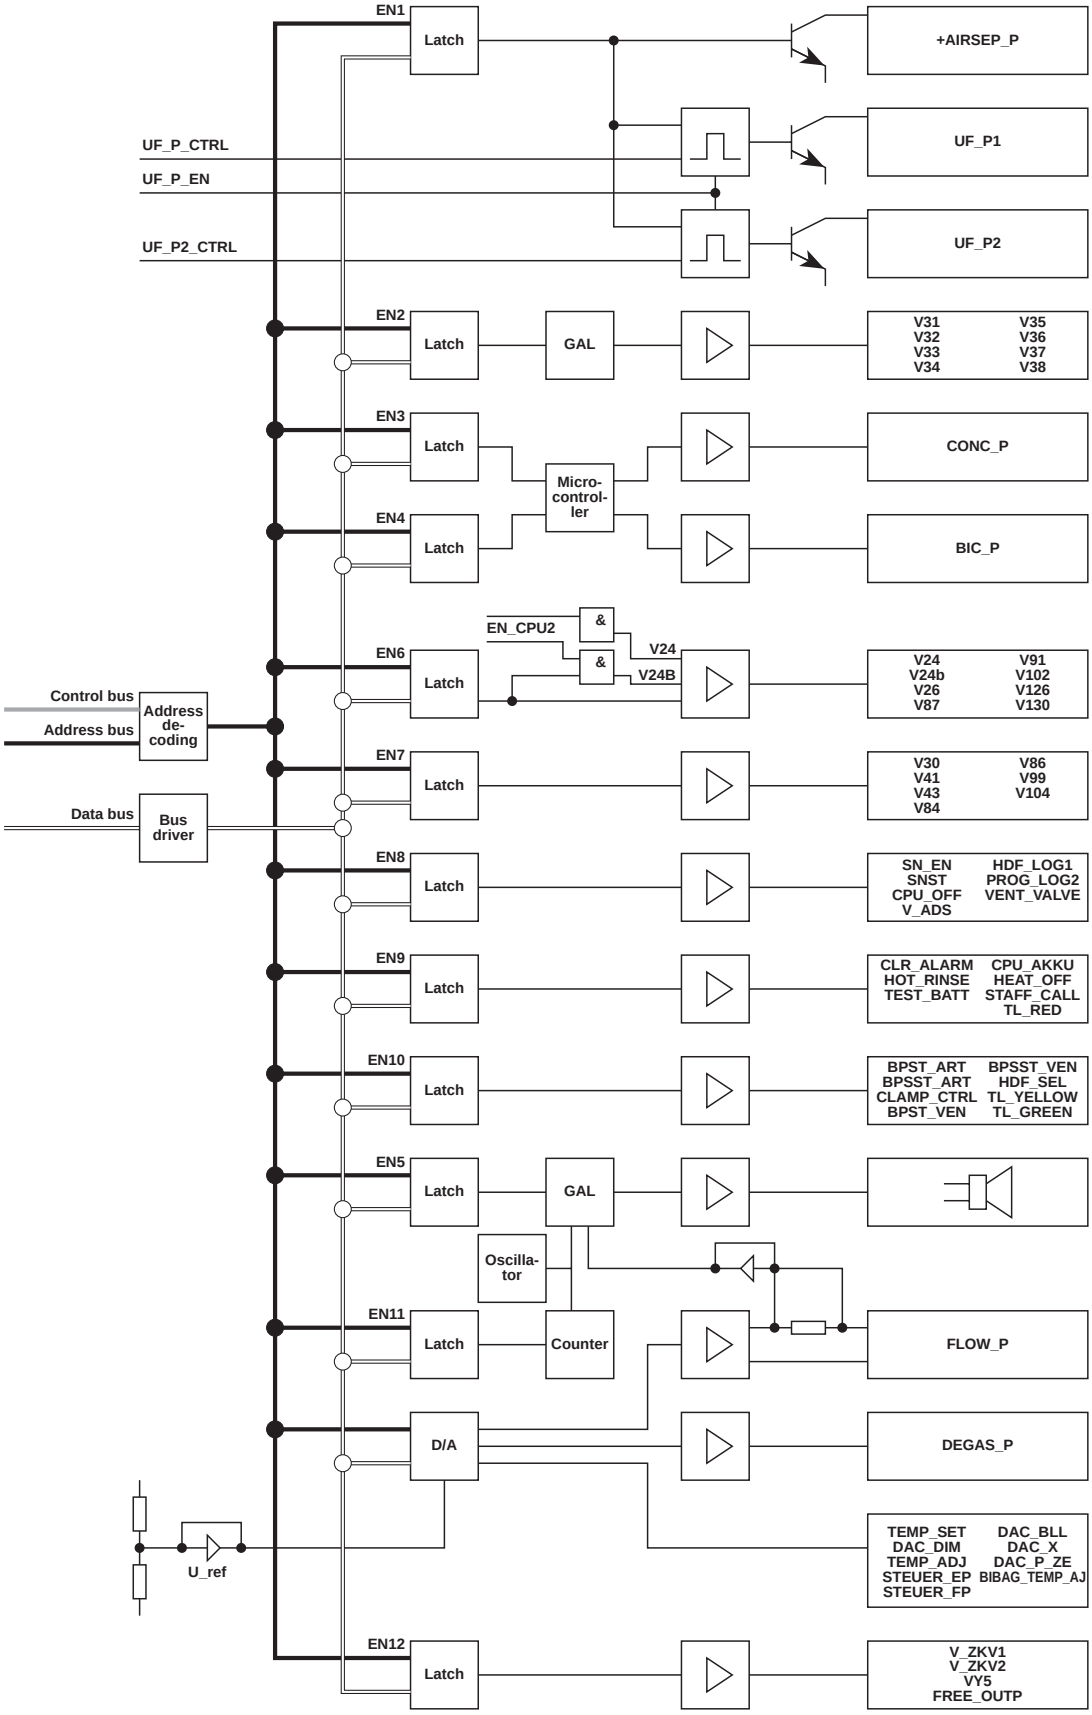

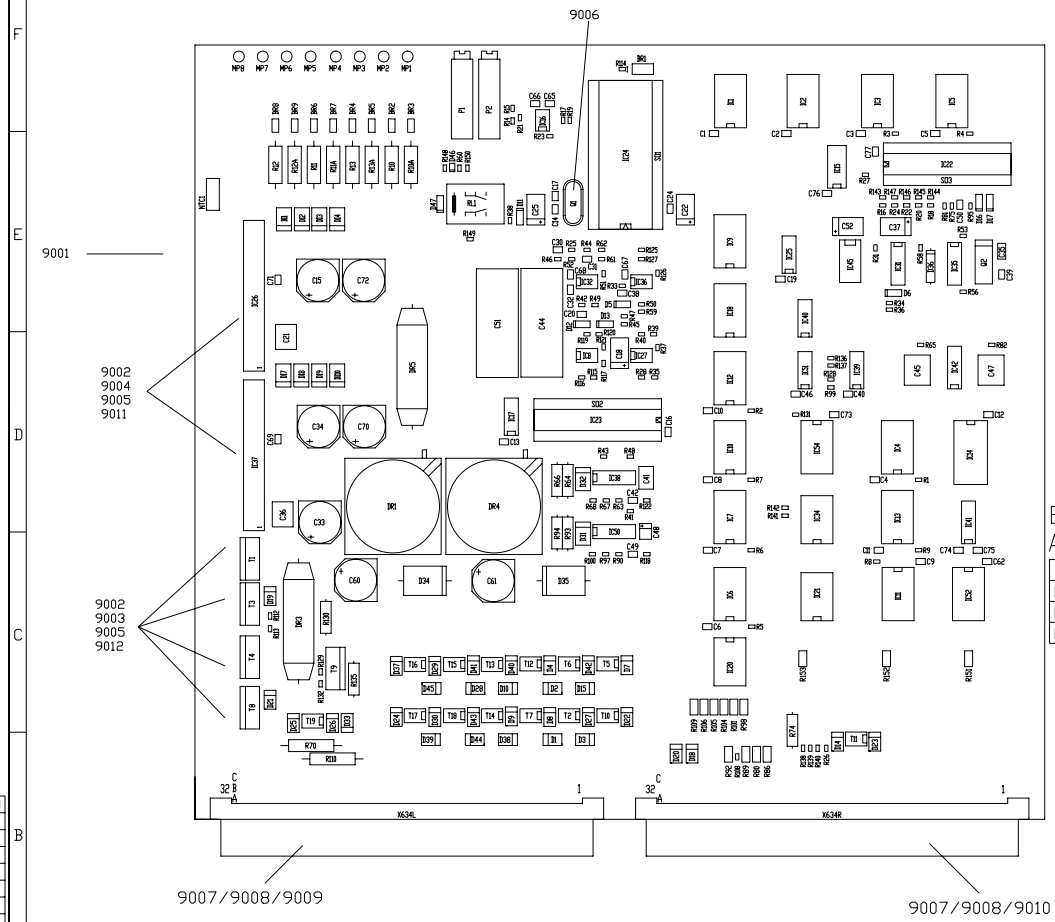

X = Brücke geschlossen
X = bridge closed

MOTOR		CONC				BIC			
	BR	2	3	4	5	6	7	8	9
LP634/LP634-3	C5833-9212 or C6431-9212		X		X		X		X
LP634/LP634-3	Standard C7080-9212K	X		X		X		X	
LP634-1		nicht benutzt / not used							

BESTÜCKUNGSVARIANTEN
ASSEMBLY VARIANTS

	C30	R26	IC23	IC24	D14	D25	D37	P1	R60	R149	R150	P2	R148	D46	D47	RL1
LP634		X	X	X	X	X	X	X	X	X	X					
LP634-1								X	X	X	X					
LP634-3		X	X	X	X	X	X	X	X			X	X	X	X	X

BR1	geschlossen / closed	ohne BIC. / without BIC.
	offen / open	mit BIC. / with BIC.

				1999	DATUM	NAME	OUTPUT-BOARD
				BE	16.09.99	Ott	
				GE	16.09.99	Scheuring	
				Layout	LP634L		
c	Umstellung LT-L	21.11.06	Lang	Fresenius Medical Care Deutschland GmbH			LP634 M30541 / LP634-1 M31140 / LP634-3 M33519
b	634-1 D14,25,37 entf.	11.01.06	Schg				
a	IC53 ers. CTL_AP hinzu	01.02.00	Schg				
	ÄNDERUNG	DATUM	NAME				ERSATZ / ERSATZ

BLATT: BP
FORM.A3

8.13 P.C.B. LP 635 Display board

Fig.: Block diagram P.C.B. LP 635 Display board

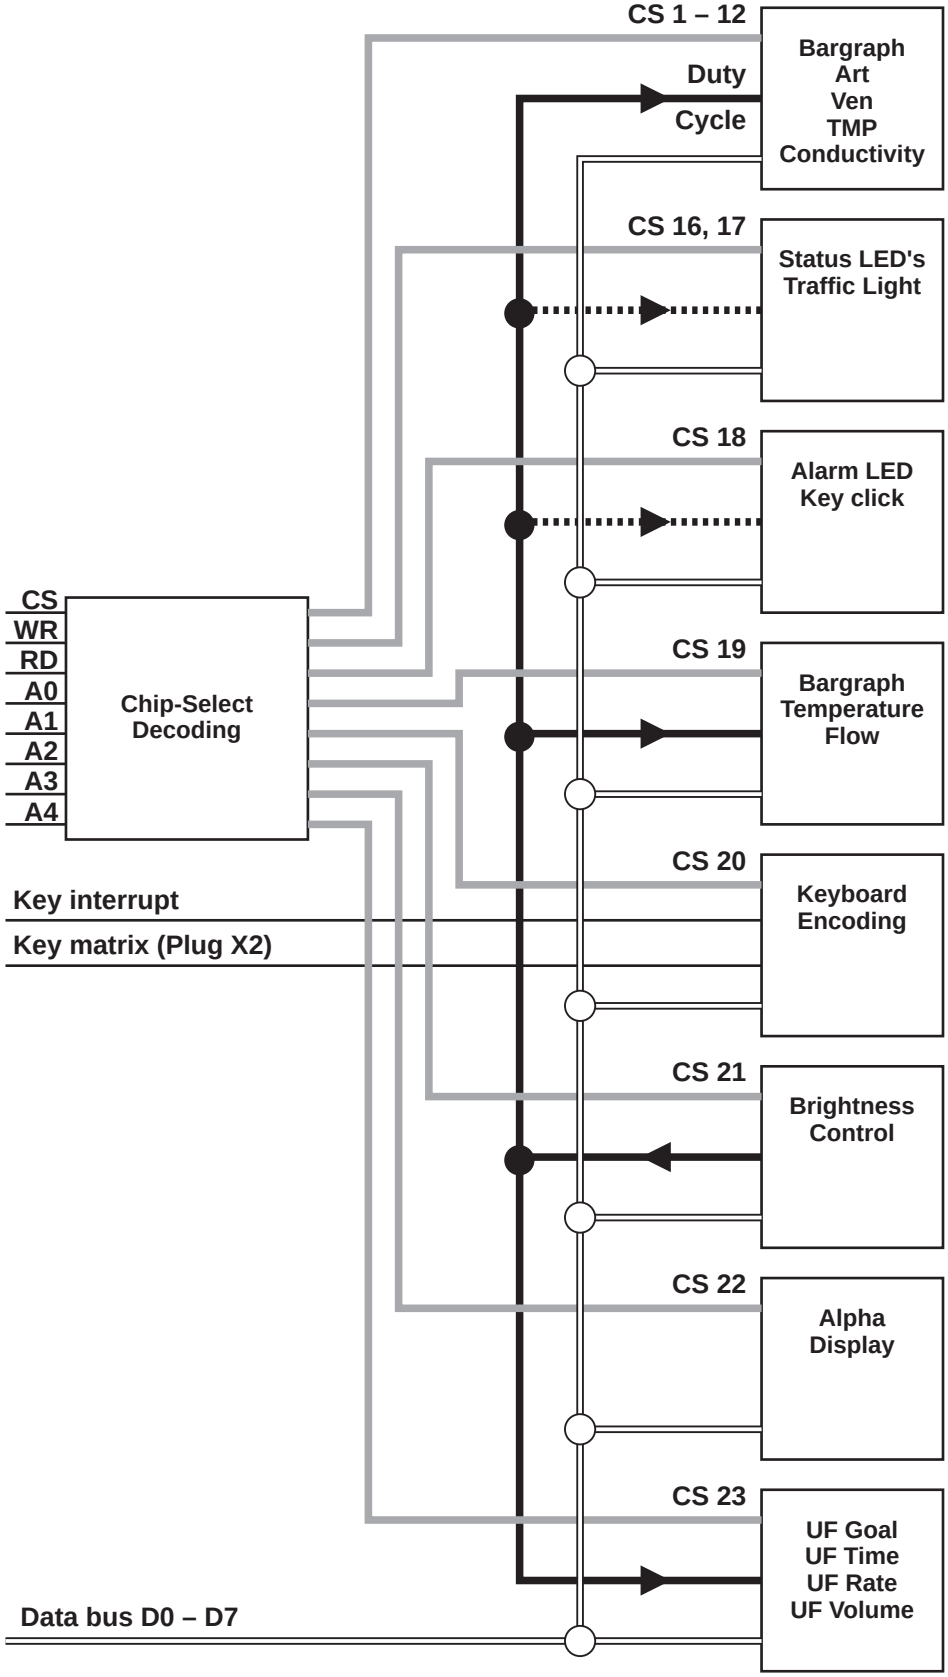

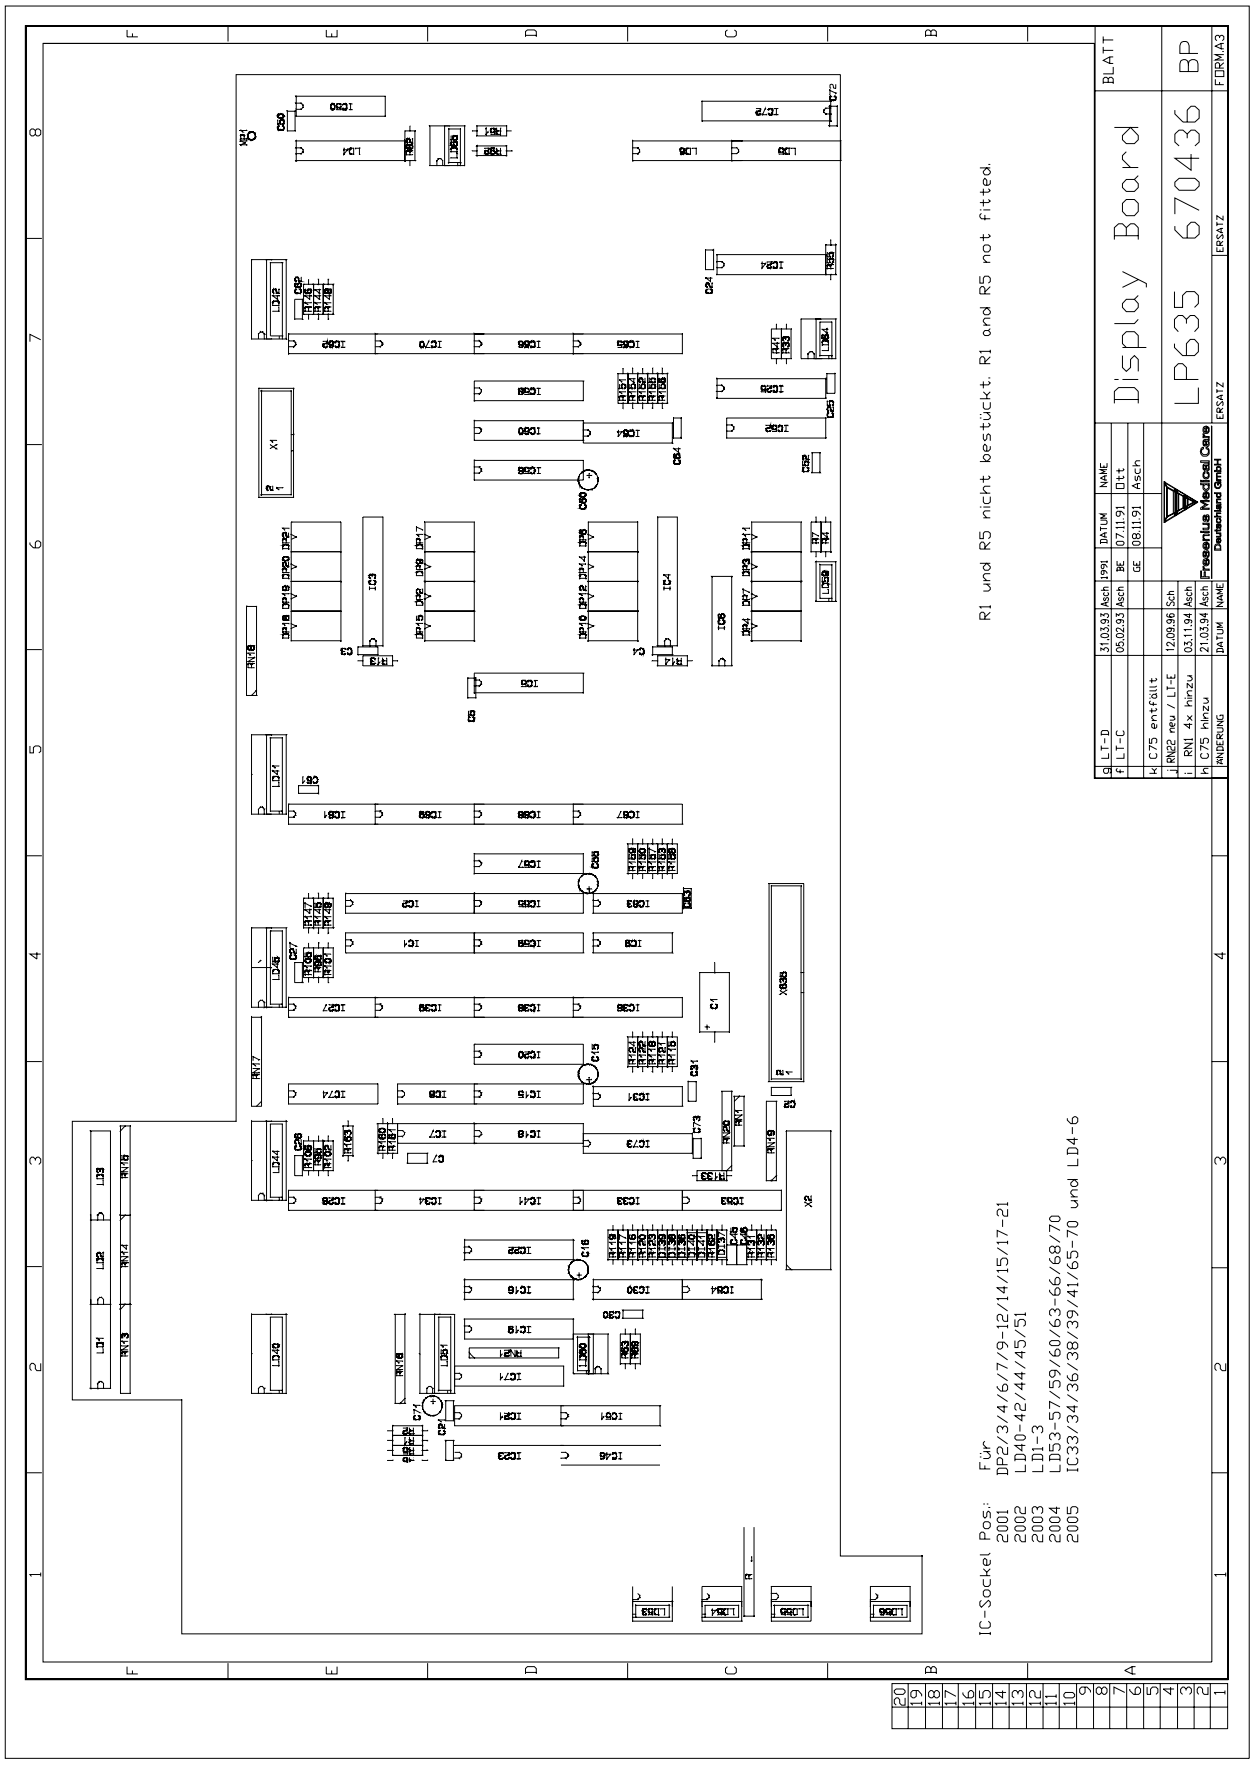
R1 und R5 nicht bestückt. R1 and R5 not fitted.
IC-Sockel Pos.: Für
2001 DP2/3/4/6/7/9-12/14/15/17-21
2002 LD40-42/44/45/51
2003 LDI-3
2004 LD53-57/59/60/63-66/68/70
2005 IC33/34/36/38/39/41/65-70 und LD4-6
Display Board
LP635 670436 BP
Fresenius Medical Care Deutschland GmbH
BLATT
FORM.A3
ERSATZ
NAME
DATUM
G LT-D 31.03.93 Asch
F LT-C 05.02.93 Asch
E C75 entfällt
D RN2 neu / LT-E 12.09.96 Sch
C RN1 4x hinzu 03.11.94 Asch
B C75 hinzu 21.03.94 Asch
ÄNDERUNG DATUM NAME

8.14 P.C.B. LP 636 External connectors

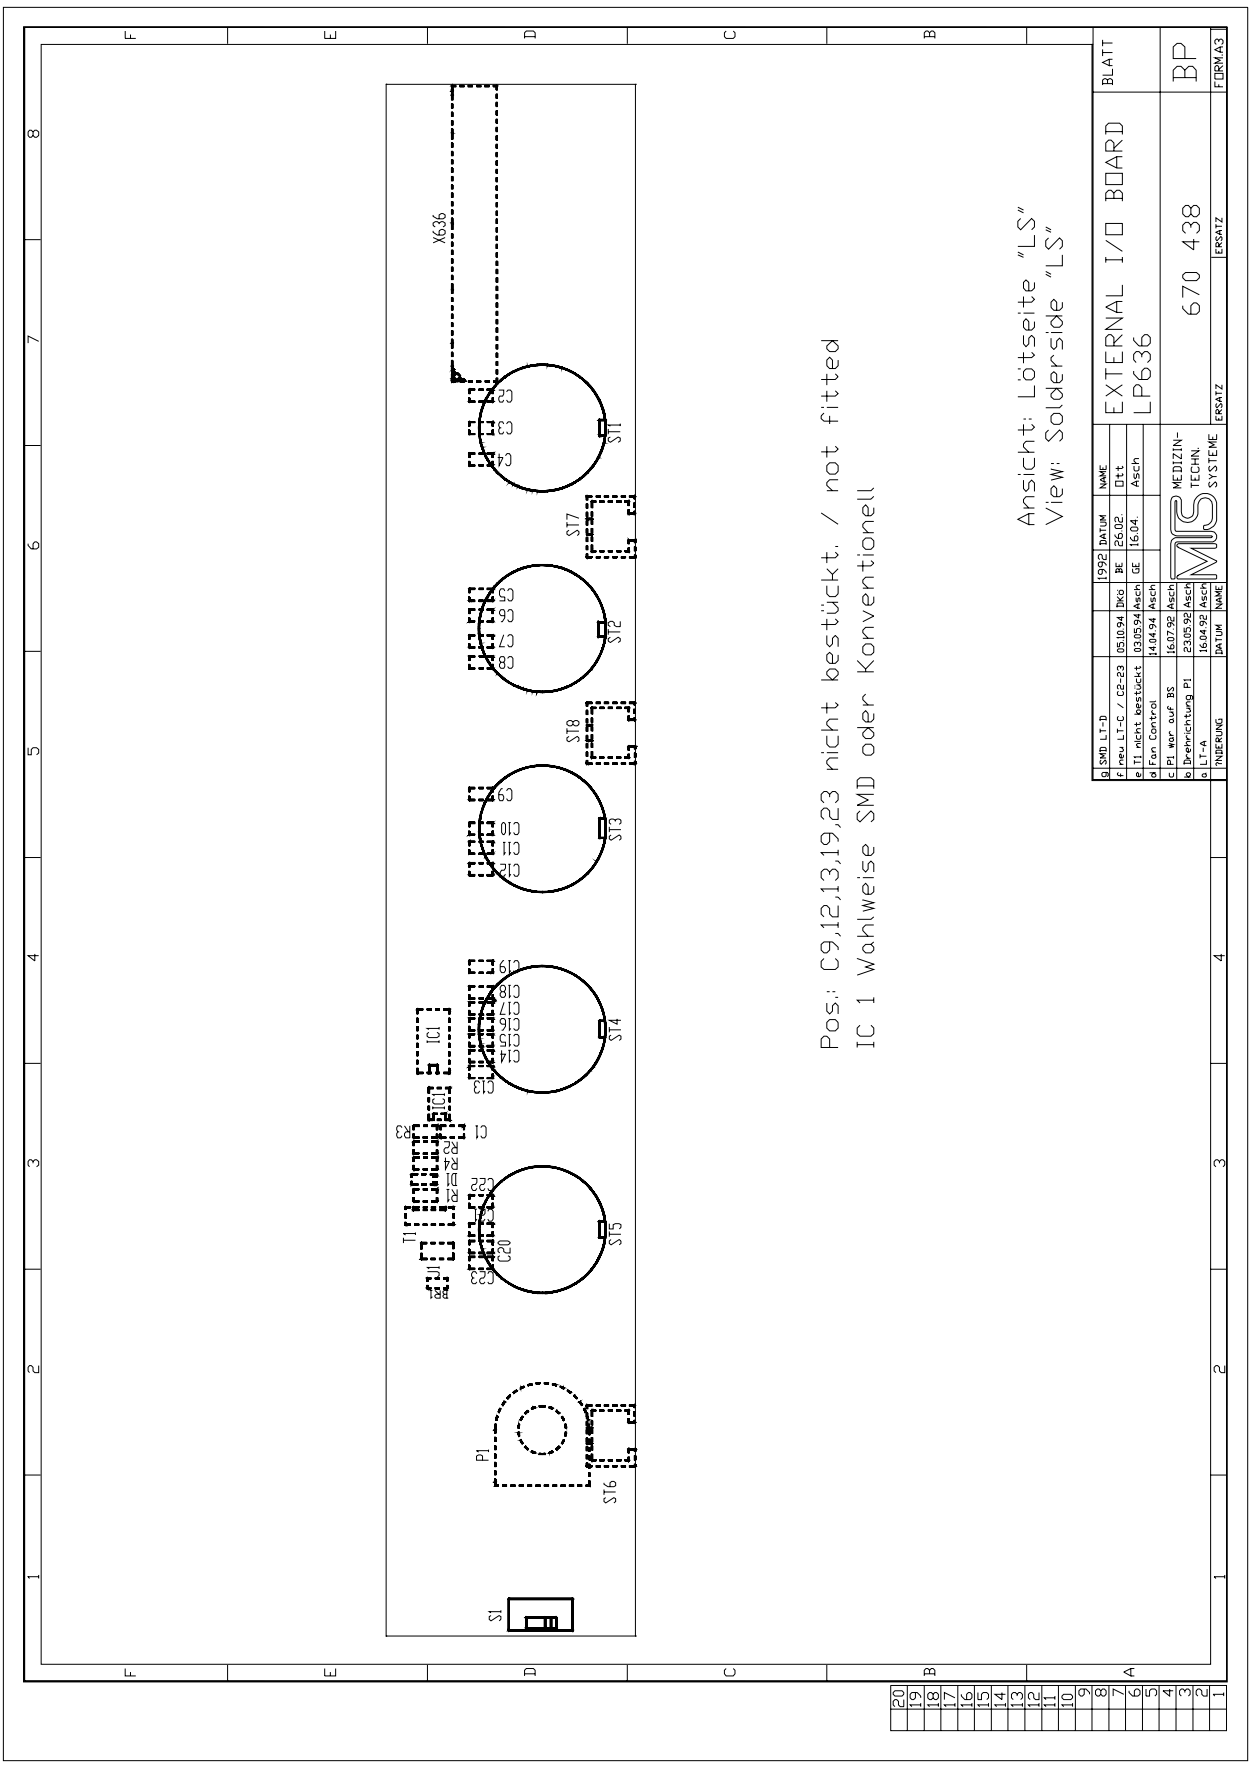

8.15 P.C.B. LP 950 Control board (HEP)

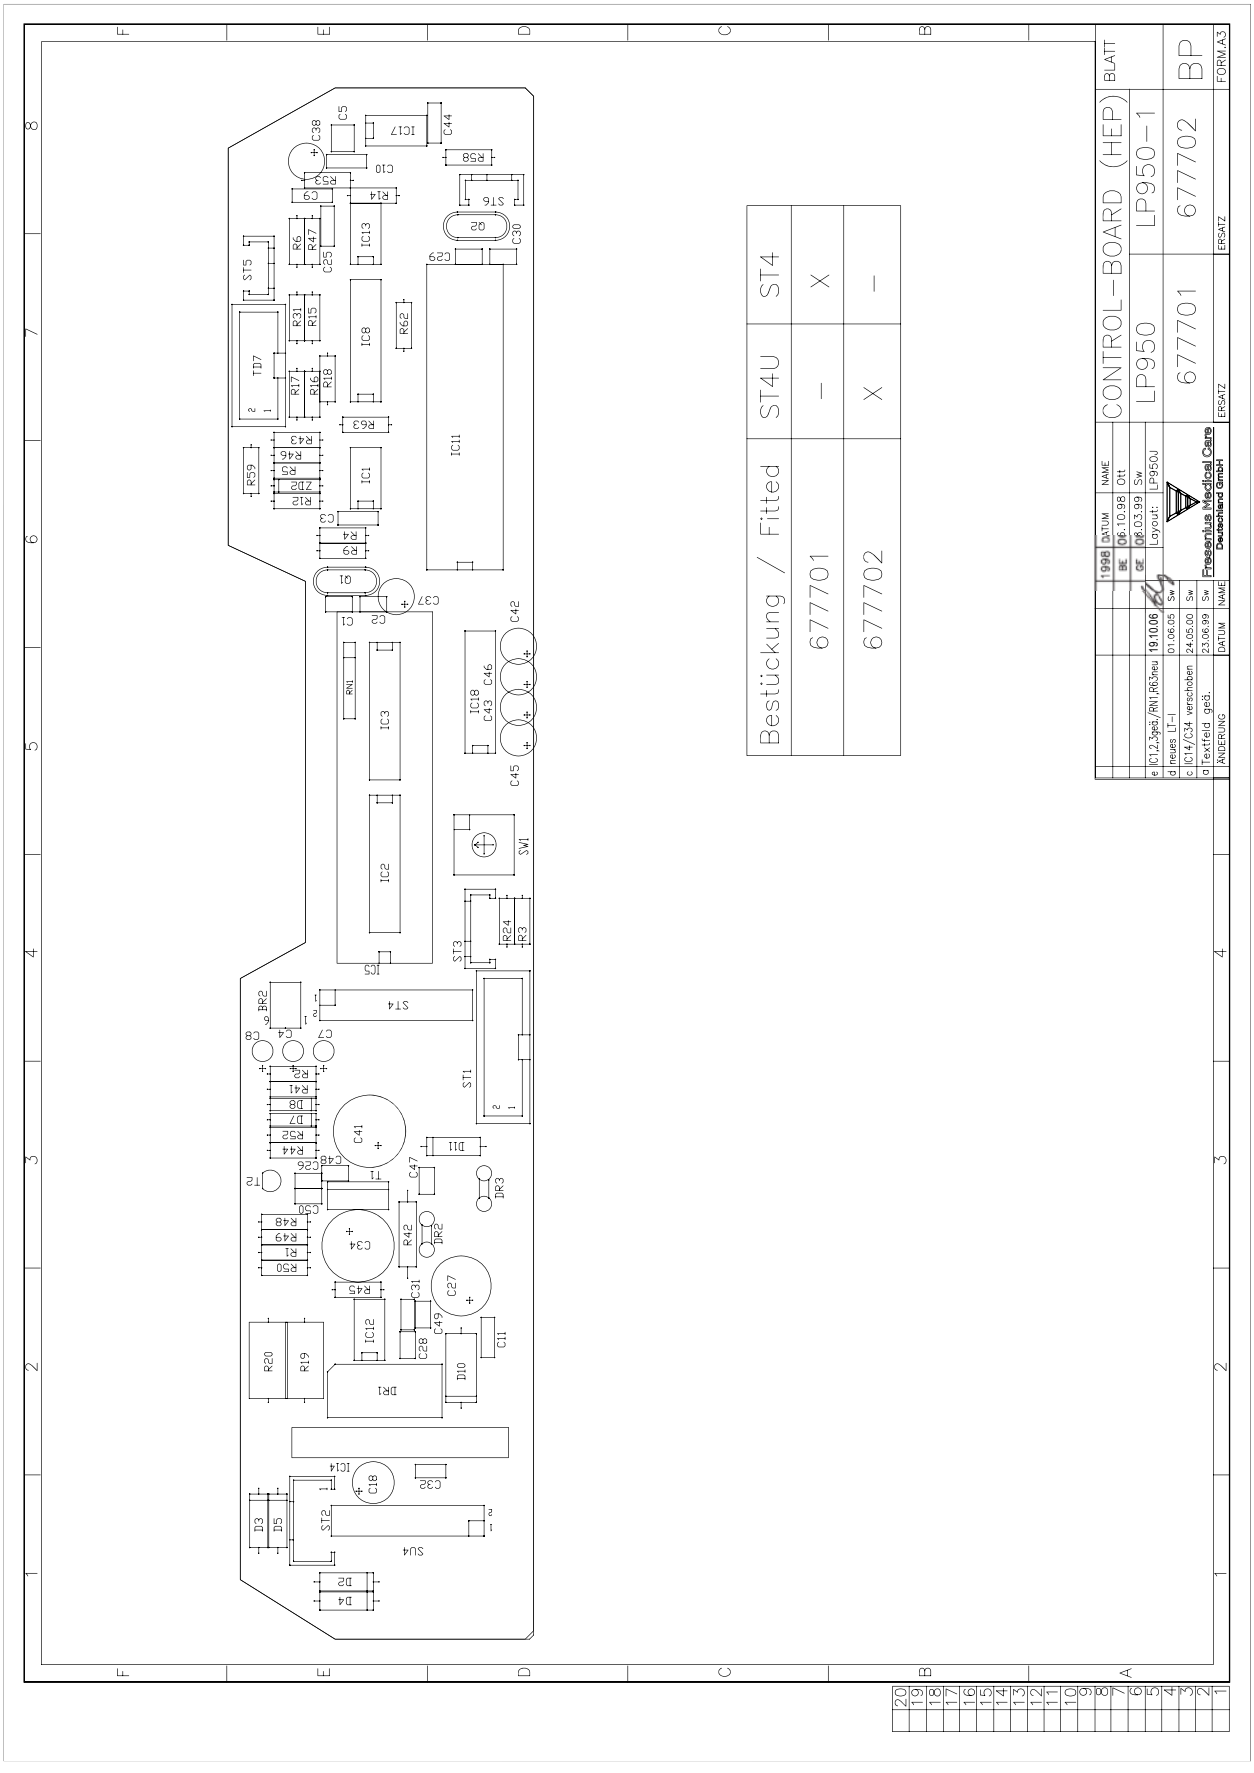

8.16 P.C.B. LP 644-4 Display board (HEP)

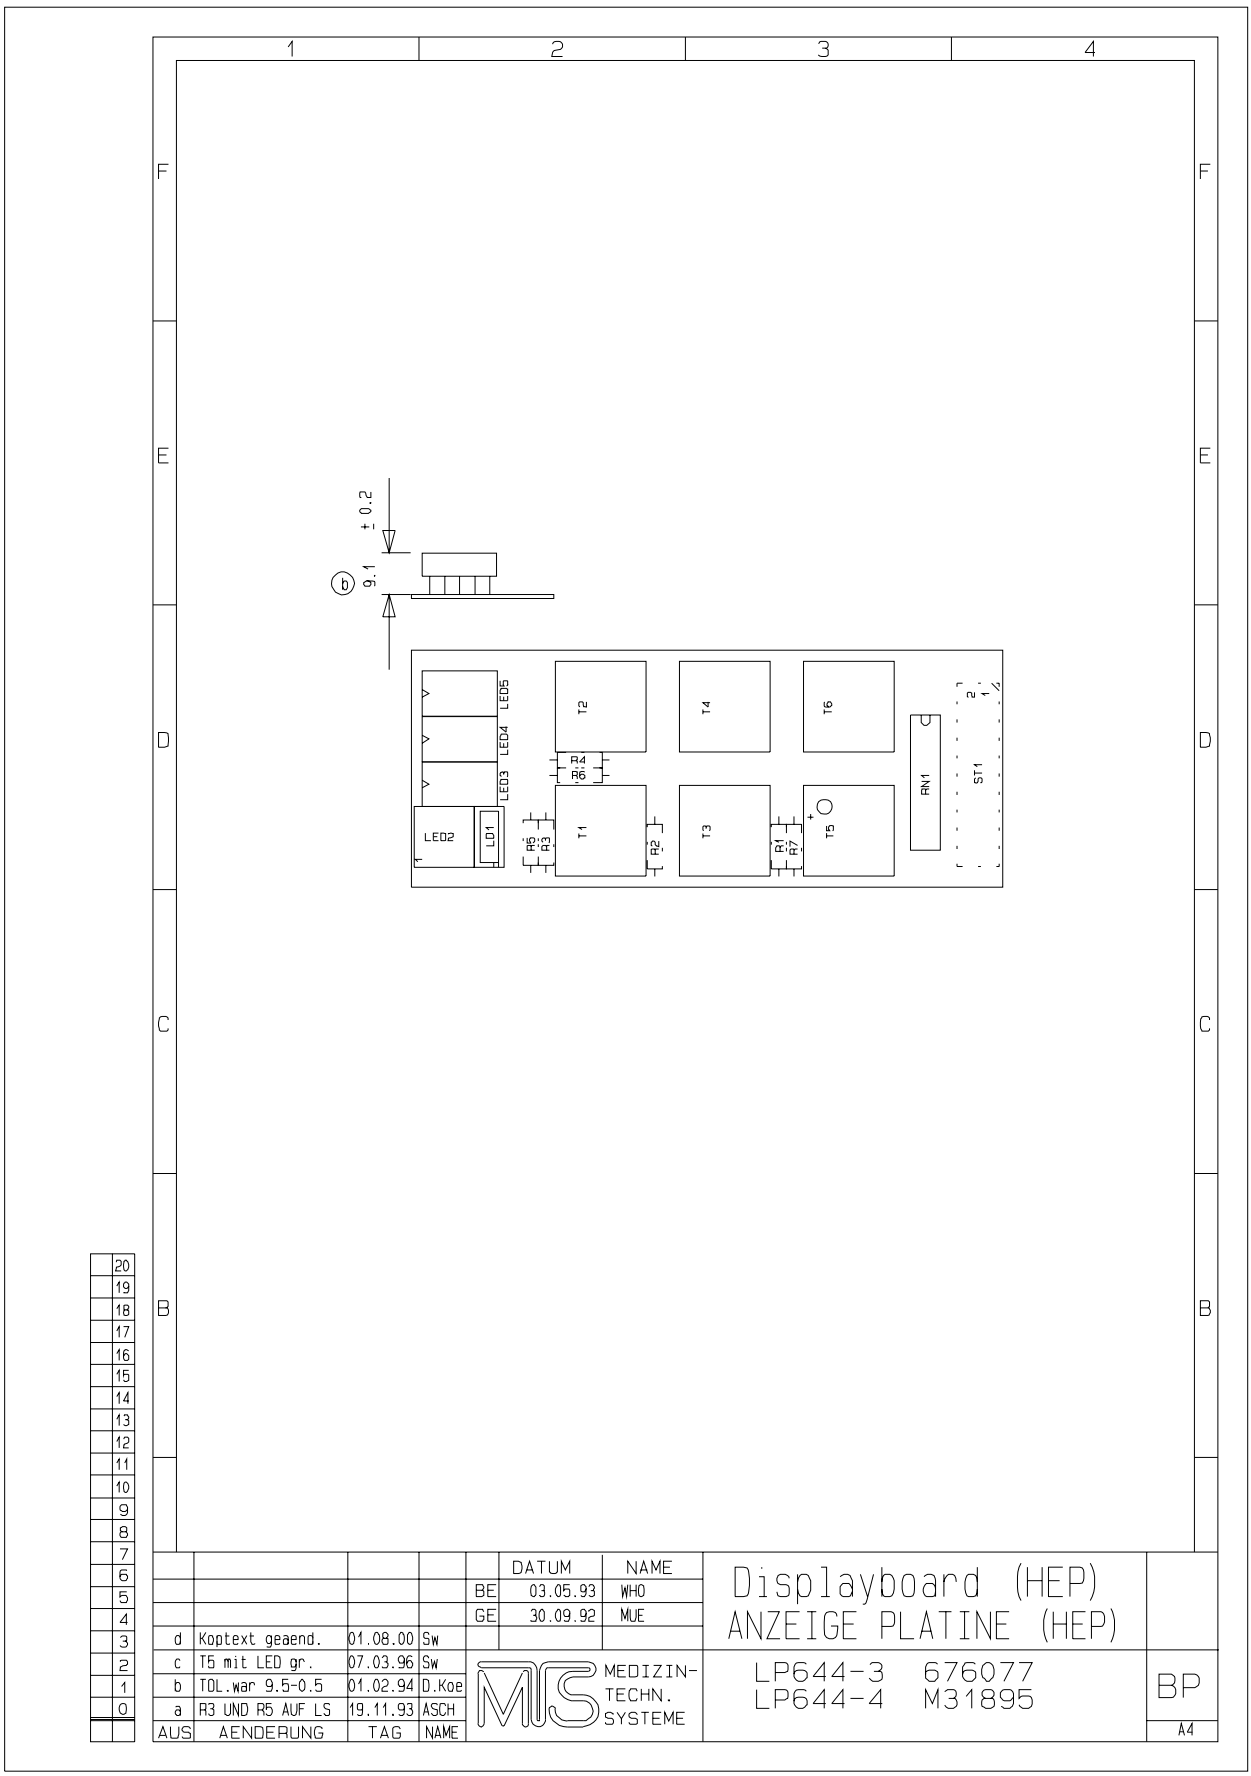

8.17 P.C.B. LP 645 Position sensor membrane pump

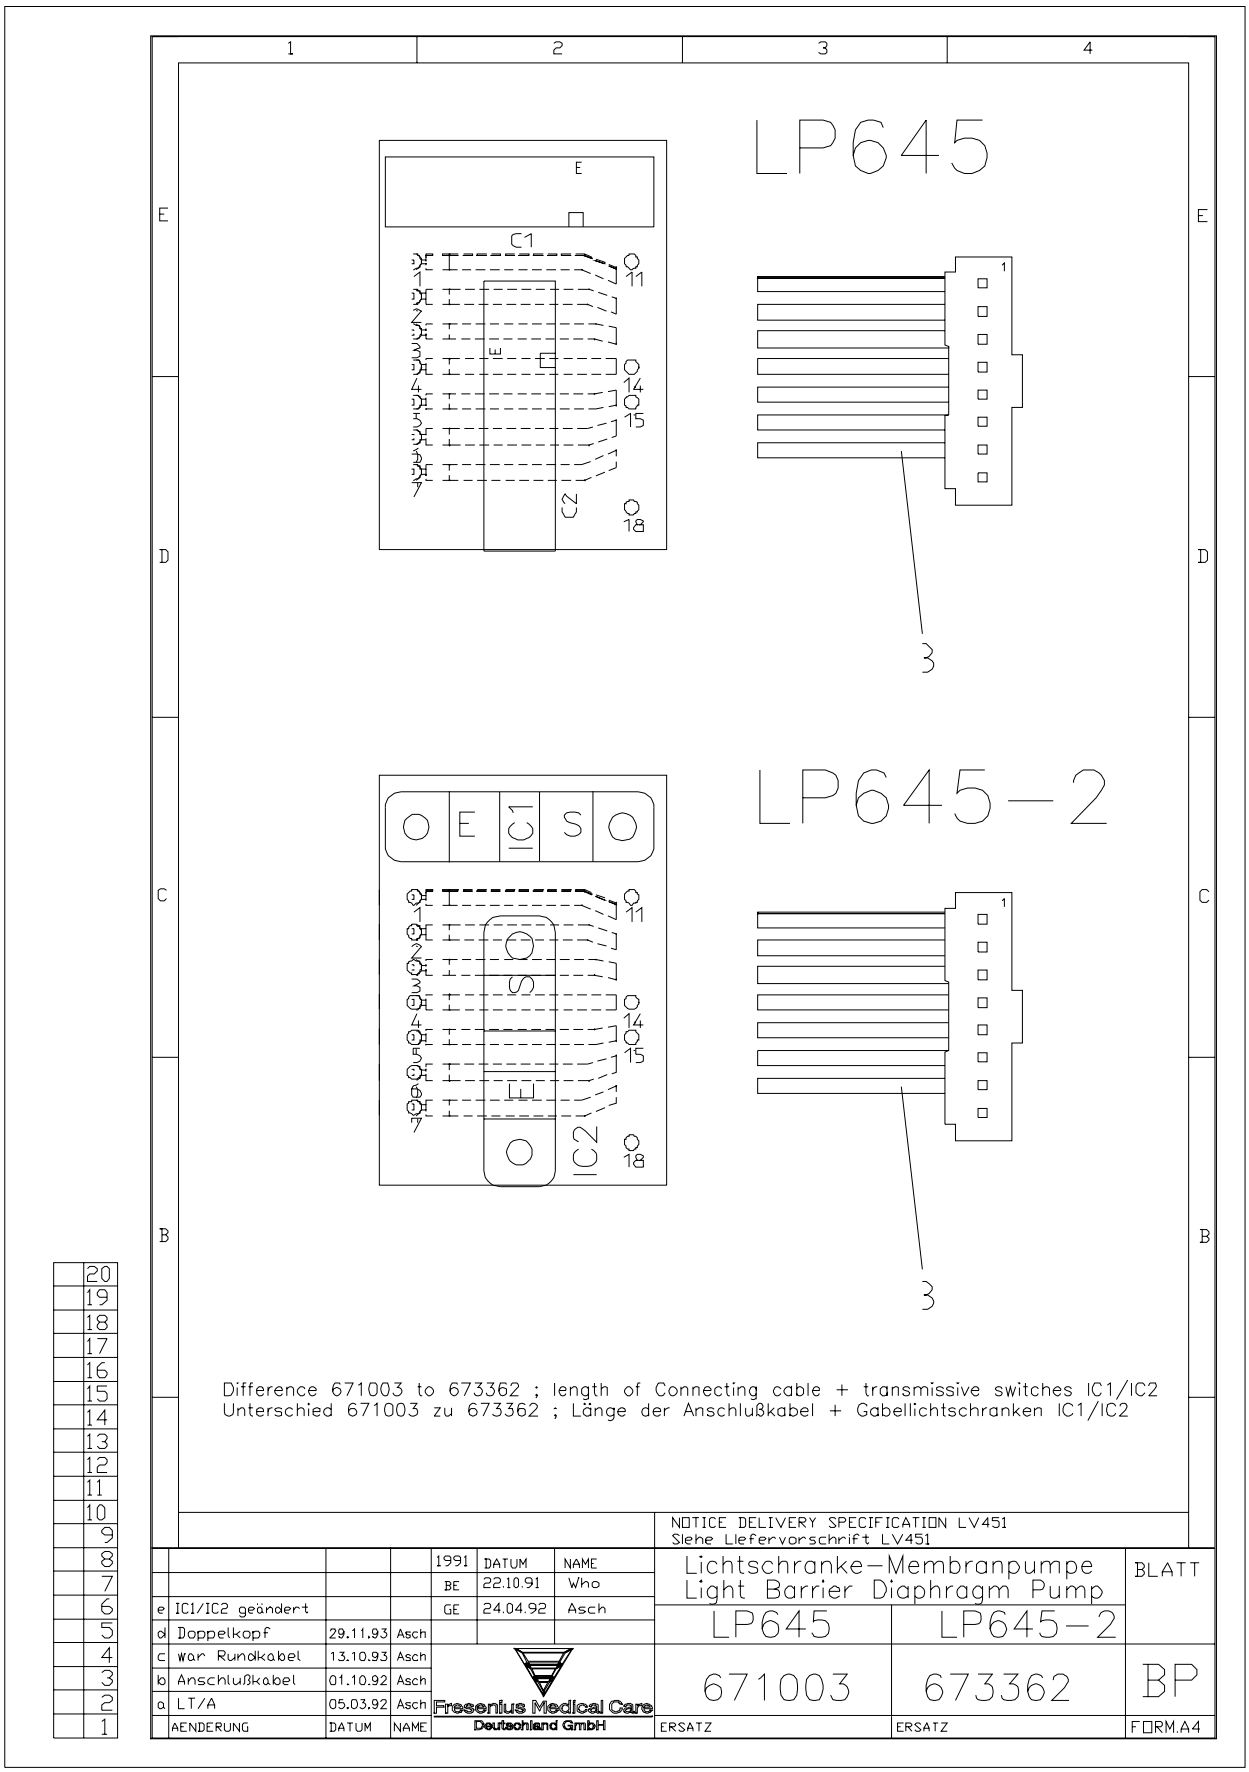

8.18 P.C.B. LP 649-2 Display board (4008 B/S)

Fig.: Block diagram P.C.B. LP 649-2 Display board

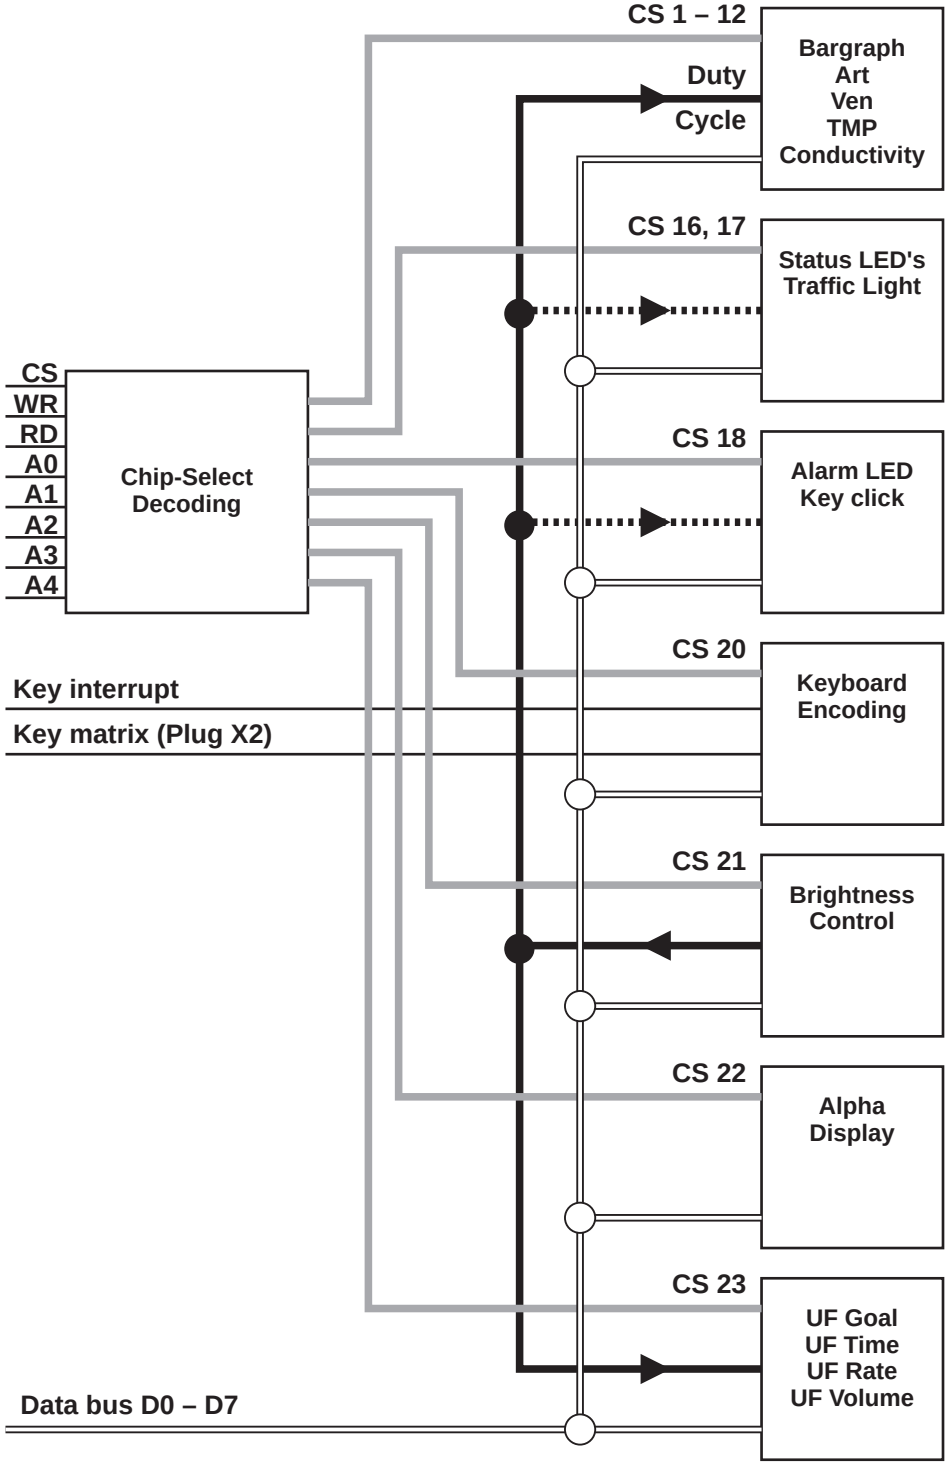

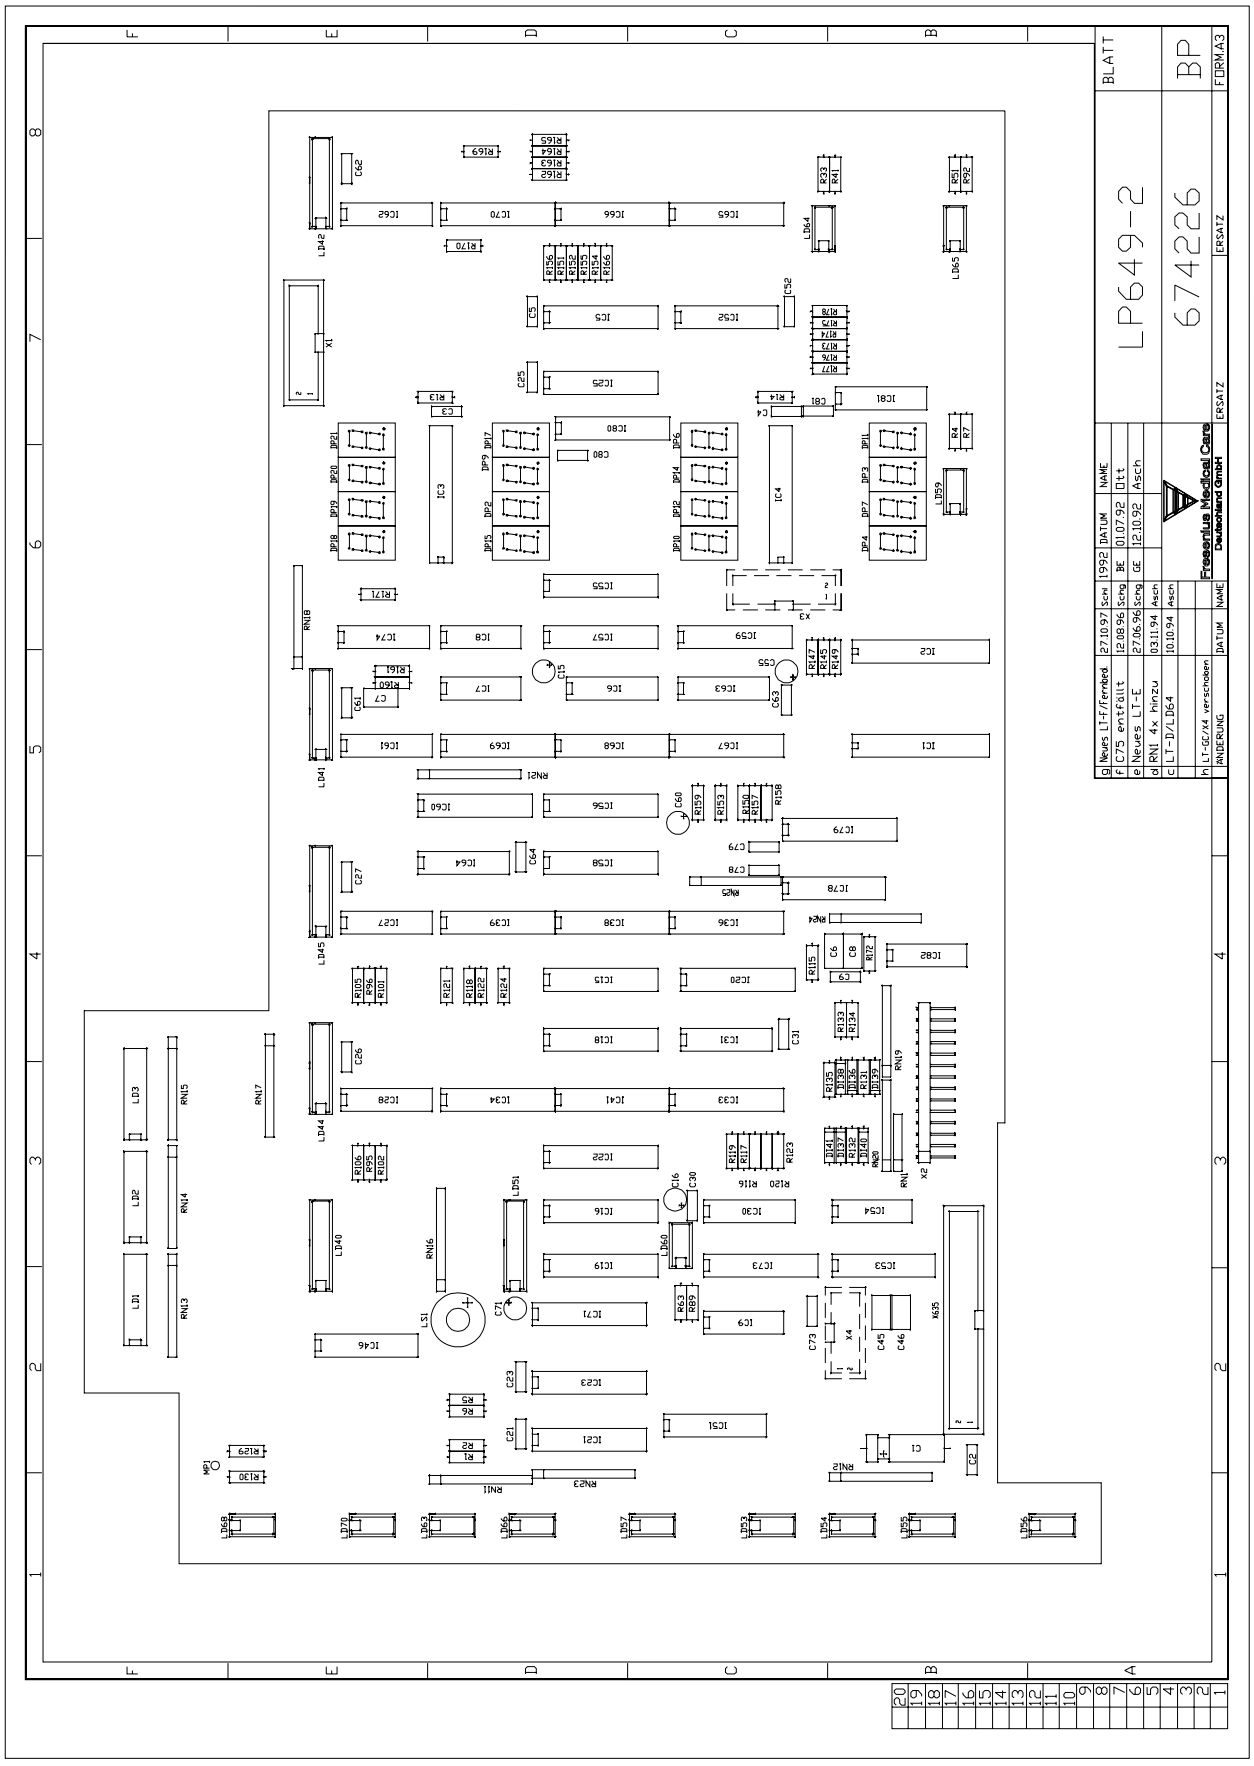
BLATT
LP649-2
674226
BP
FORM.A3
ERSATZ
Fresenius Medical Care
Deutschland GmbH
NAME
DATUM
ÄNDERUNG
g Neues LT-F/Fembed 27.10.97 Sch
f IC75 entfällt 12.08.96 Schg
e Neues LT-E 27.06.96 Schg
d RN1 4x hinzu 03.11.94 Asch
c LT-D/LD64 10.10.94 Asch
h LT-GC/X4 verschoben
1992 BE GE
01.07.92 Dtt
12.10.92 Asch

8.19 P.C.B. LP 742 Interference filter

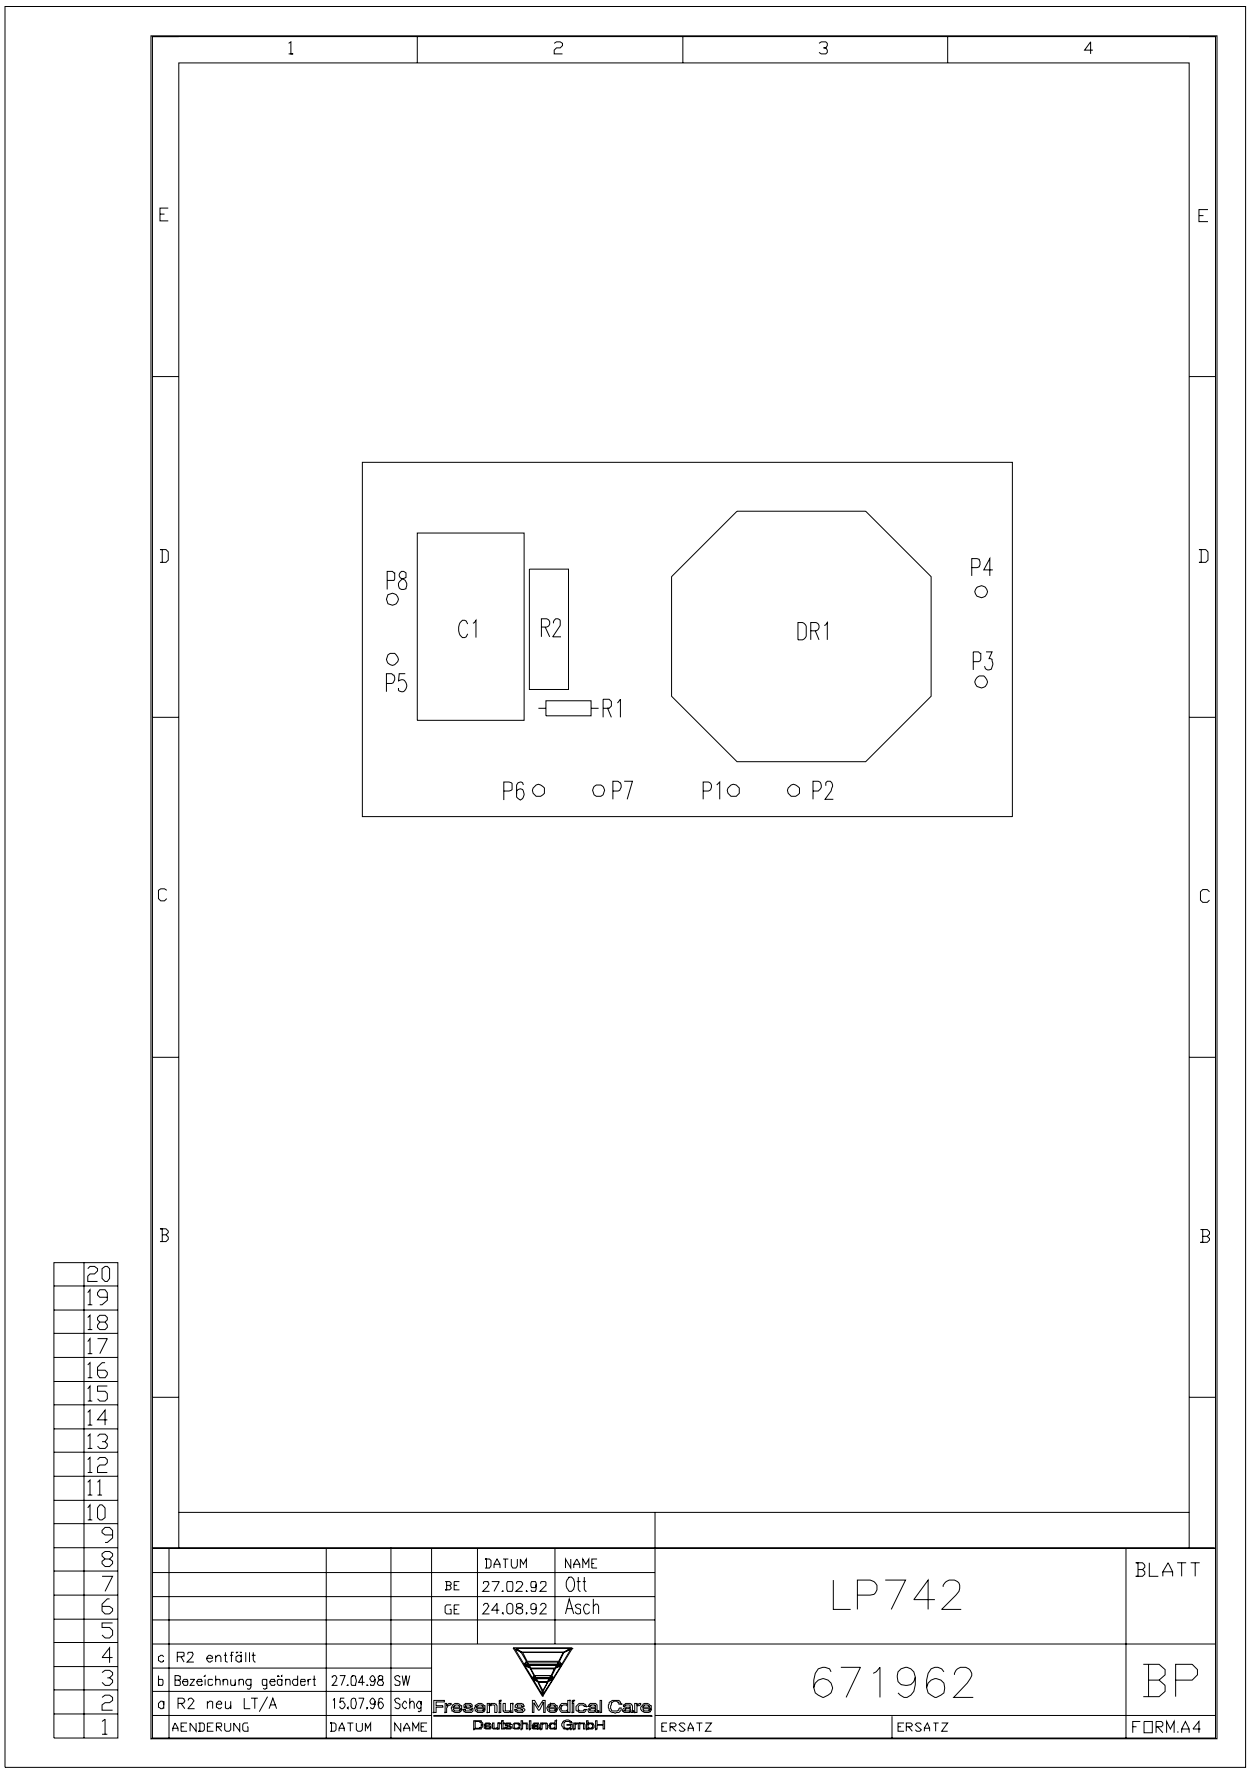

8.20 P.C.B. LP 748 Display board (BP)

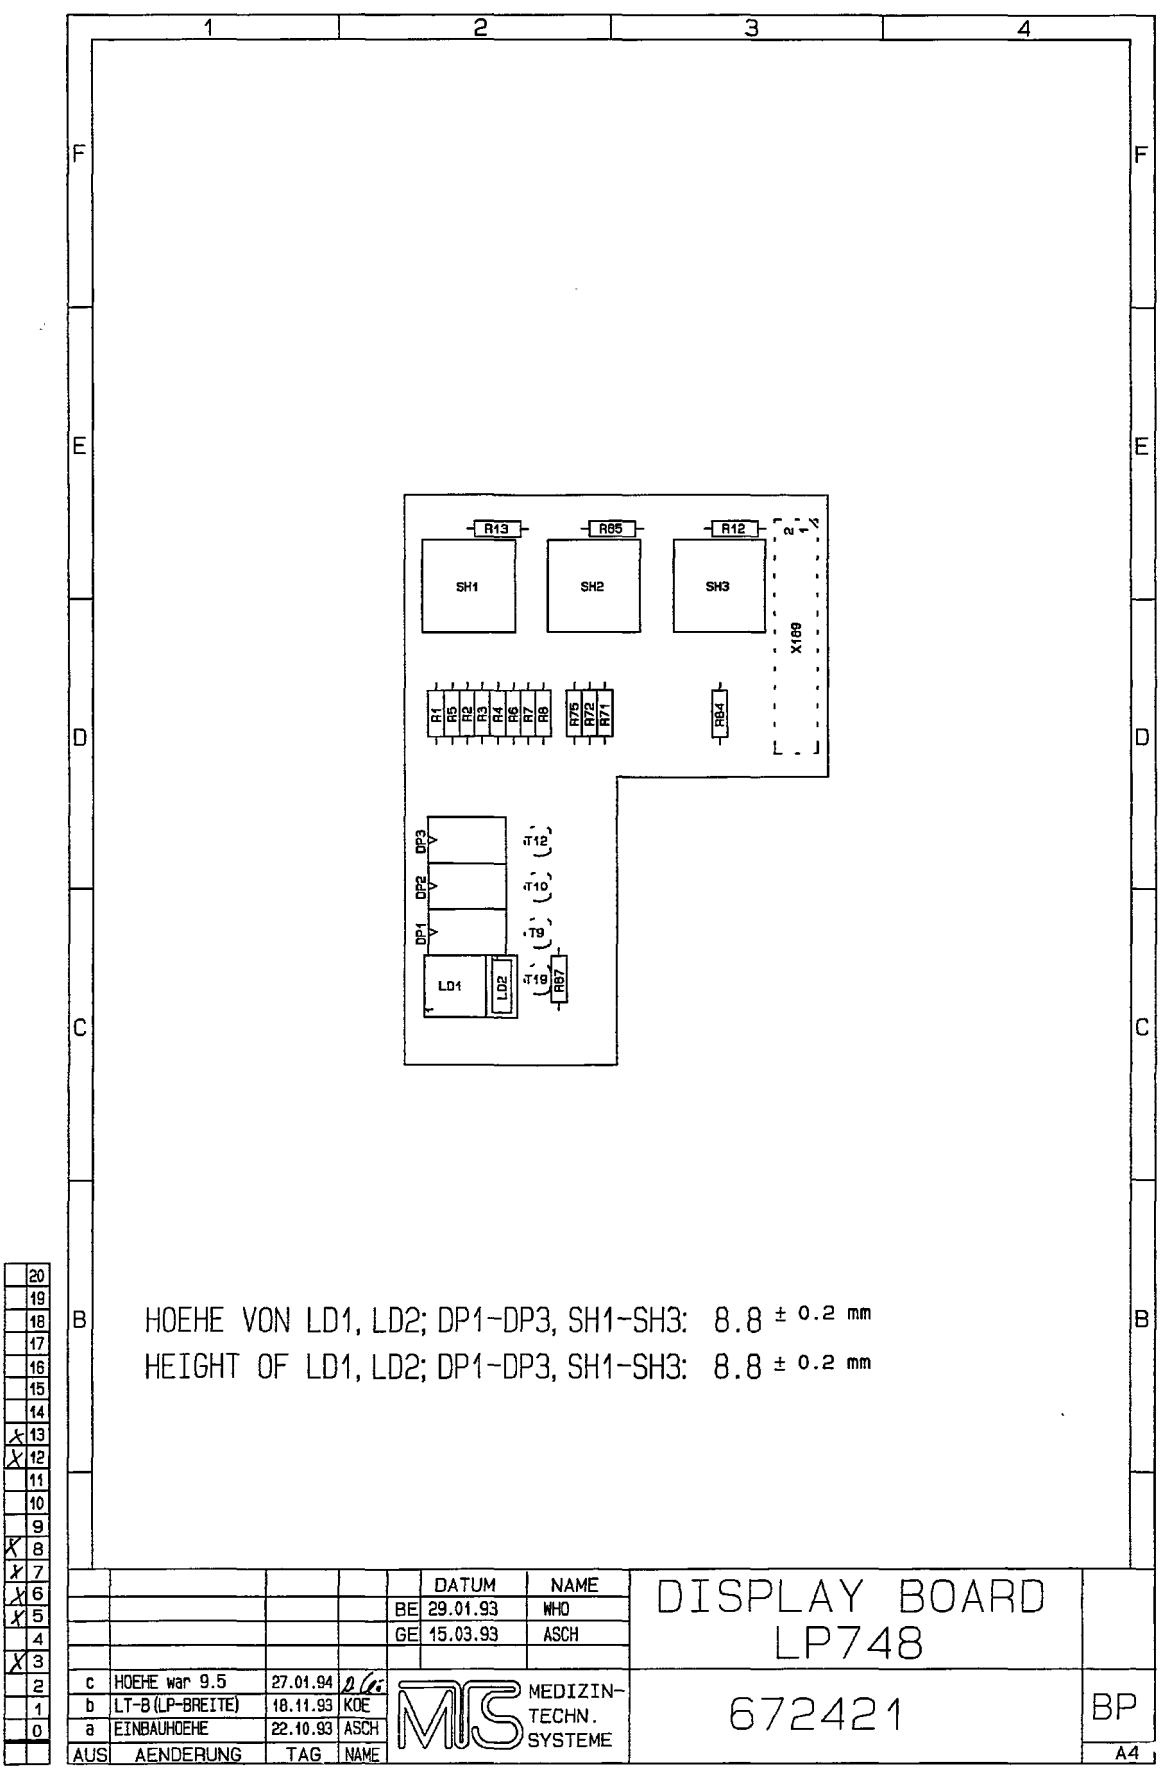

8.21 P.C.B. LP 763 Multi interface board (COMMCO III)

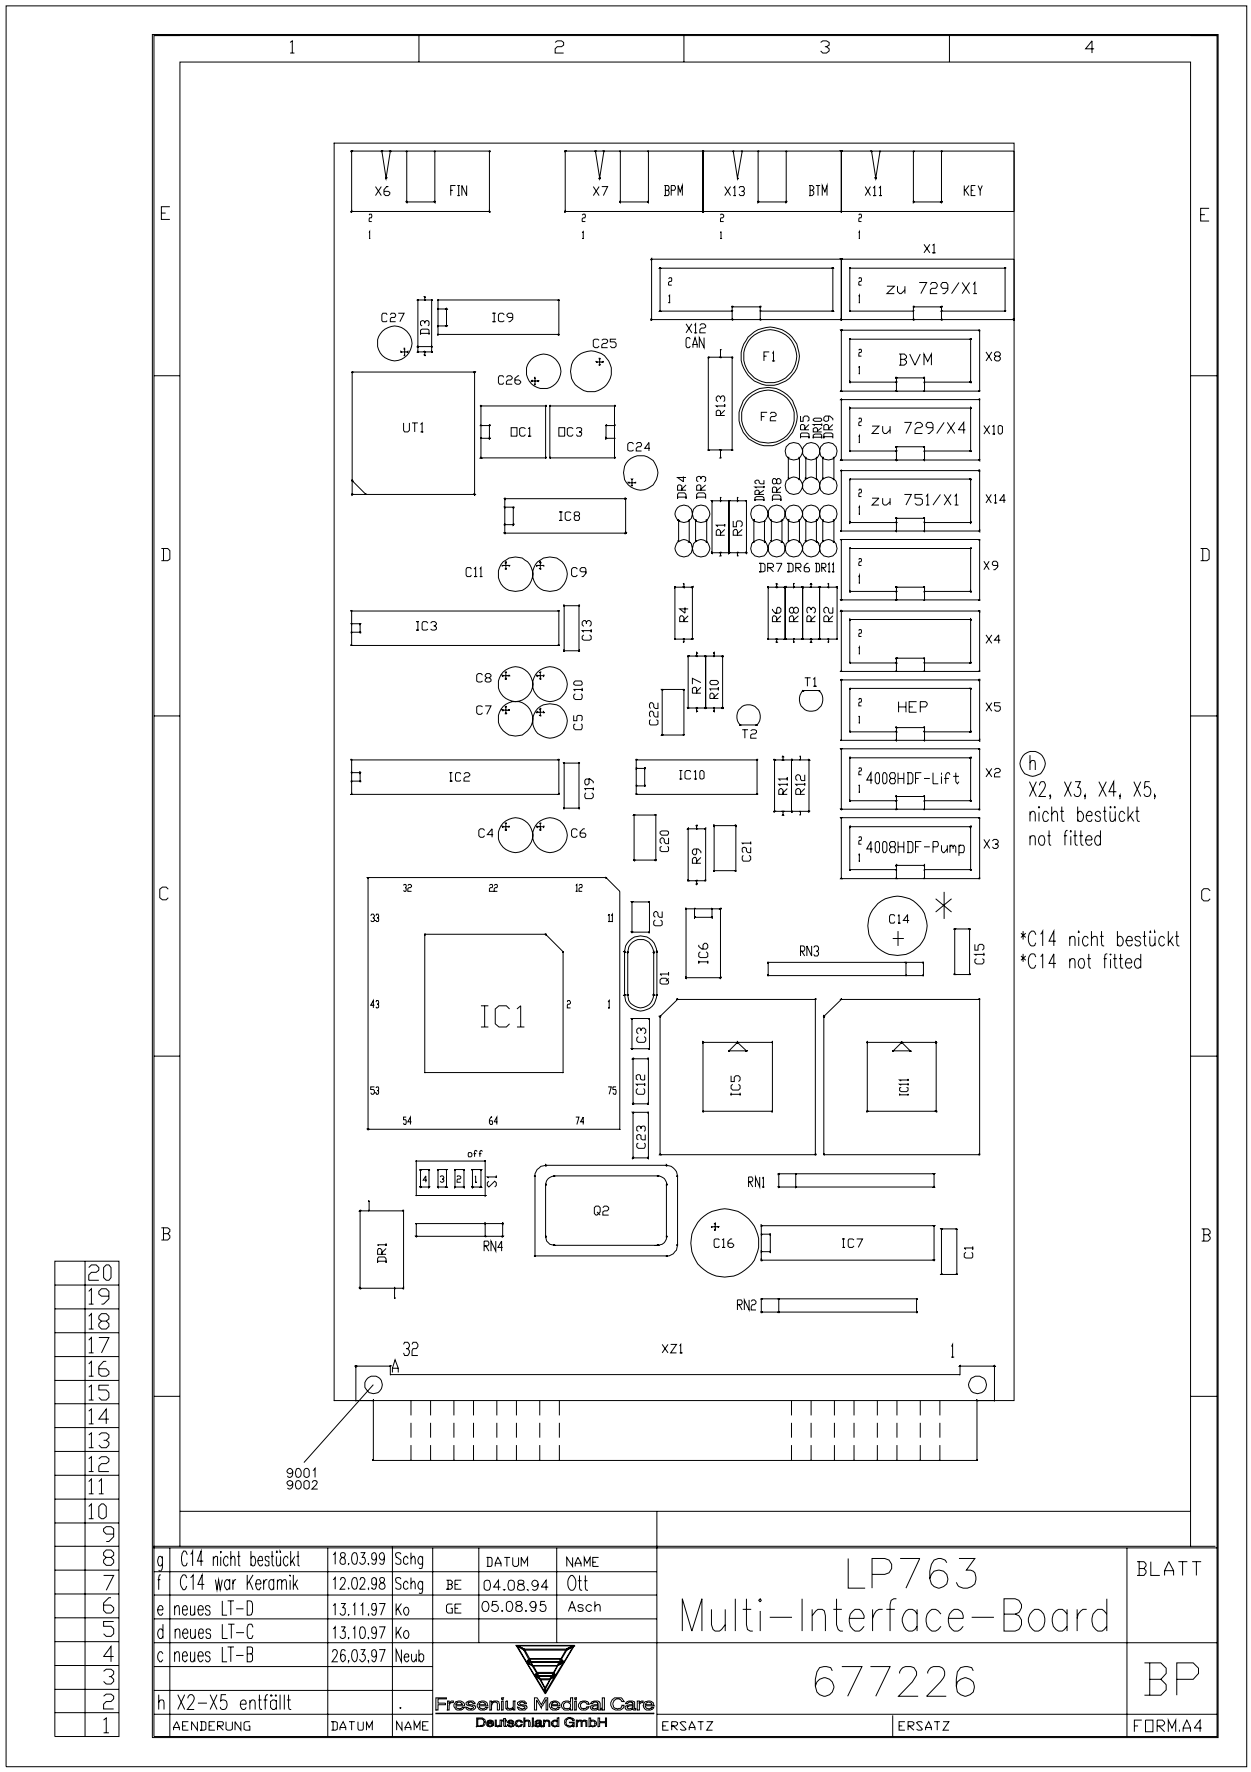

g	C14 nicht bestückt	18.03.99	Schg		DATUM	NAME
f	C14 war Keramik	12.02.98	Schg	BE	04.08.94	Ott
e	neues LT-D	13.11.97	Ko	GE	05.08.95	Asch
d	neues LT-C	13.10.97	Ko			
c	neues LT-B	26.03.97	Neub			
h	X2-X5 entfällt		.			
	AENDERUNG	DATUM	NAME			

Fresenius Medical Care Deutschland GmbH

LP763
Multi-Interface-Board

BLATT

677226

BP

ERSATZ | ERSATZ | FORM.A4

8.22 P.C.B. LP 922 Display board (4008 S)

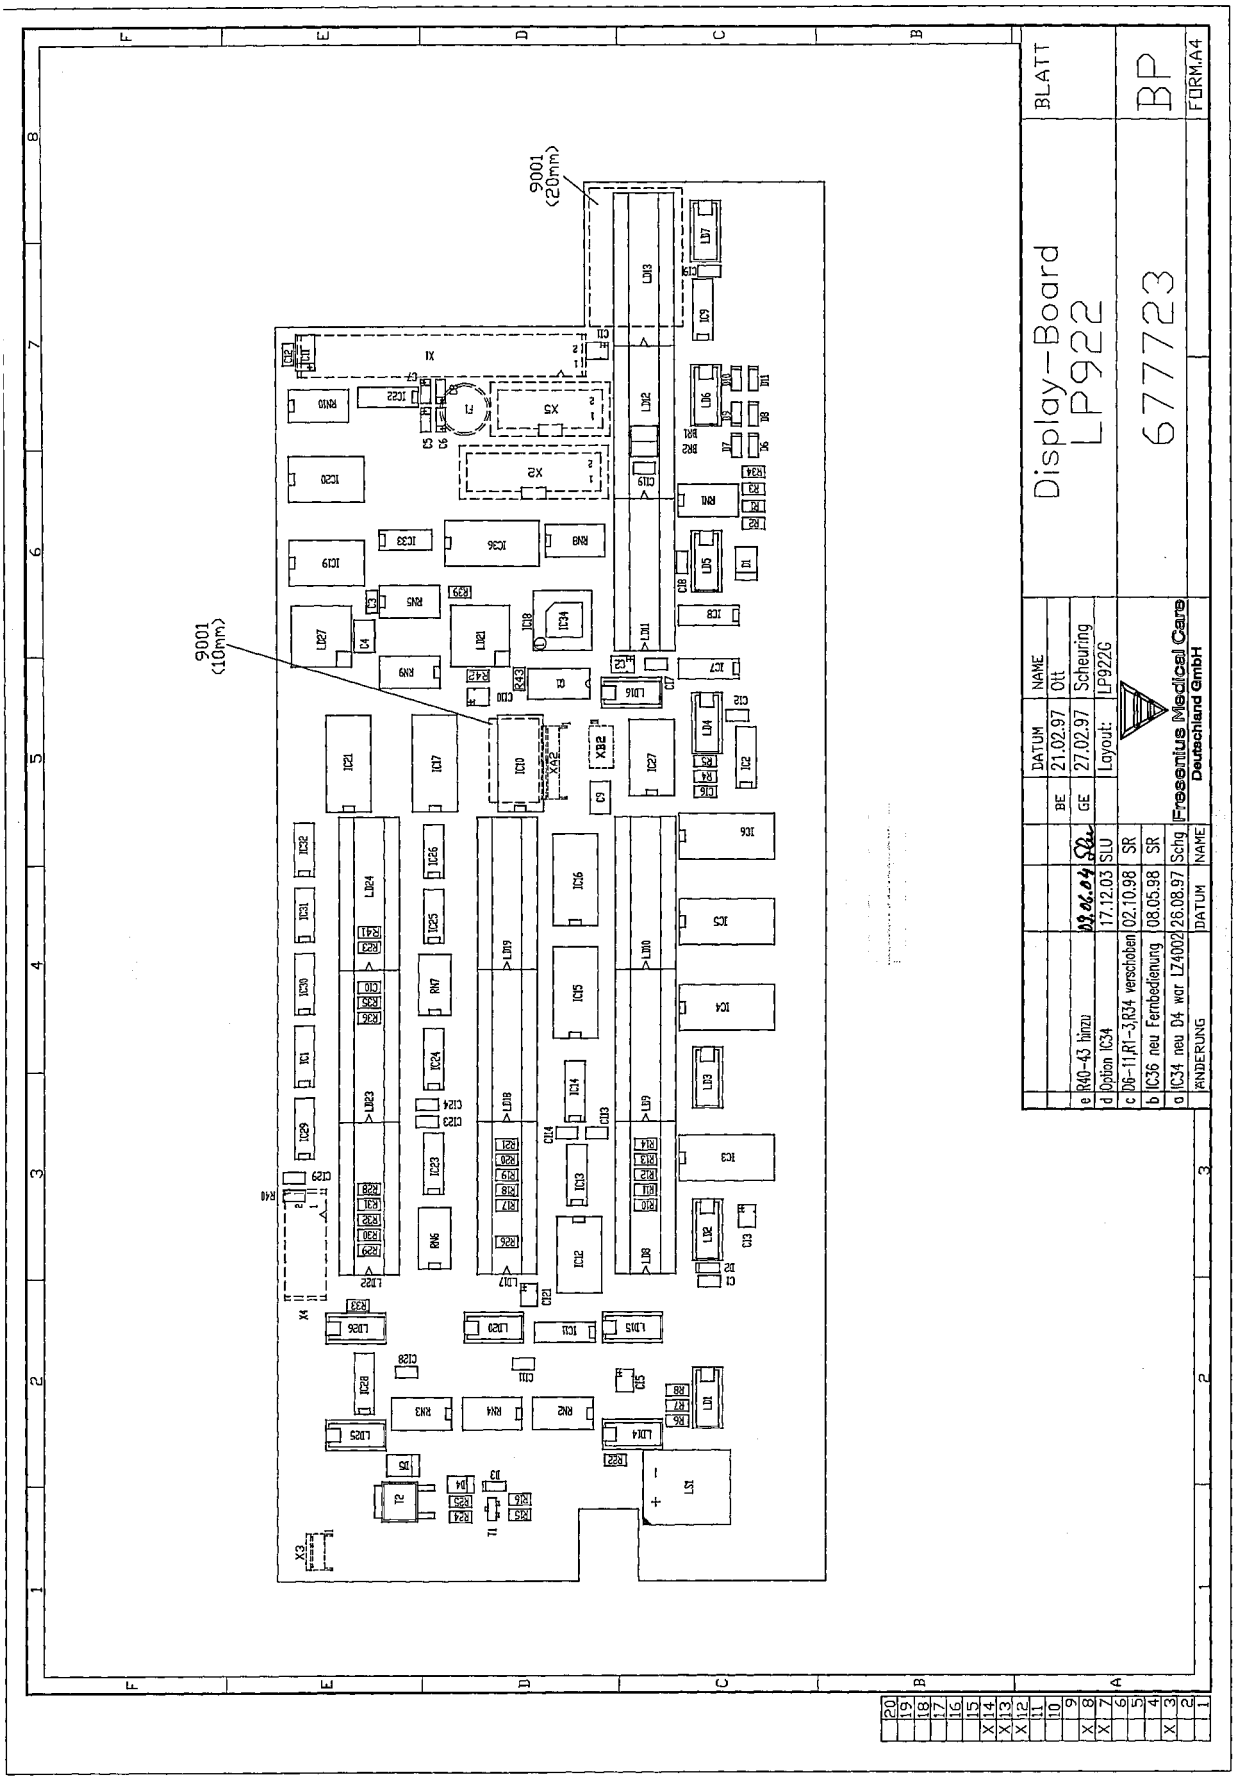

8.23 P.C.B. LP 923 Traffic light (4008 H/S)

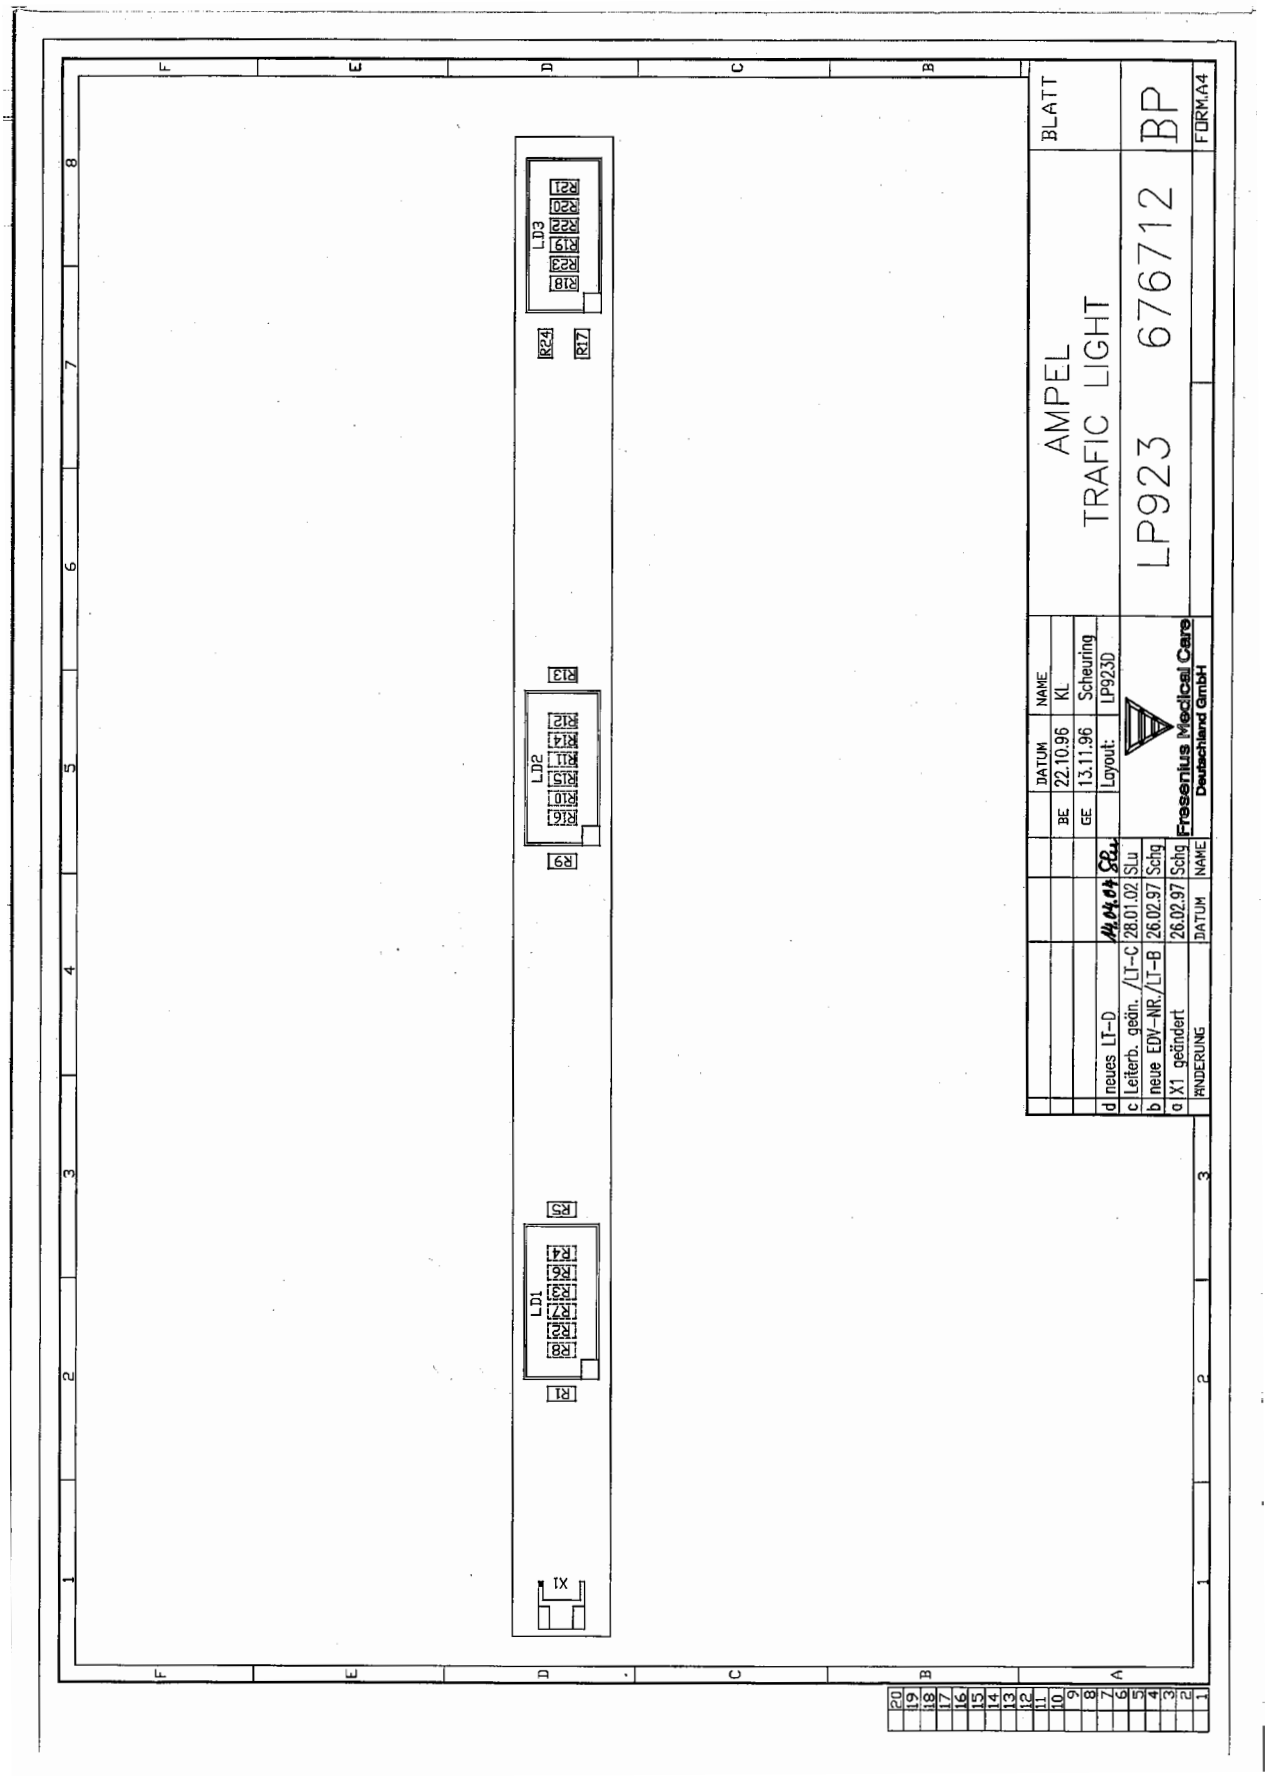

8.24 P.C.B. LP 924 Display board (4008 H)

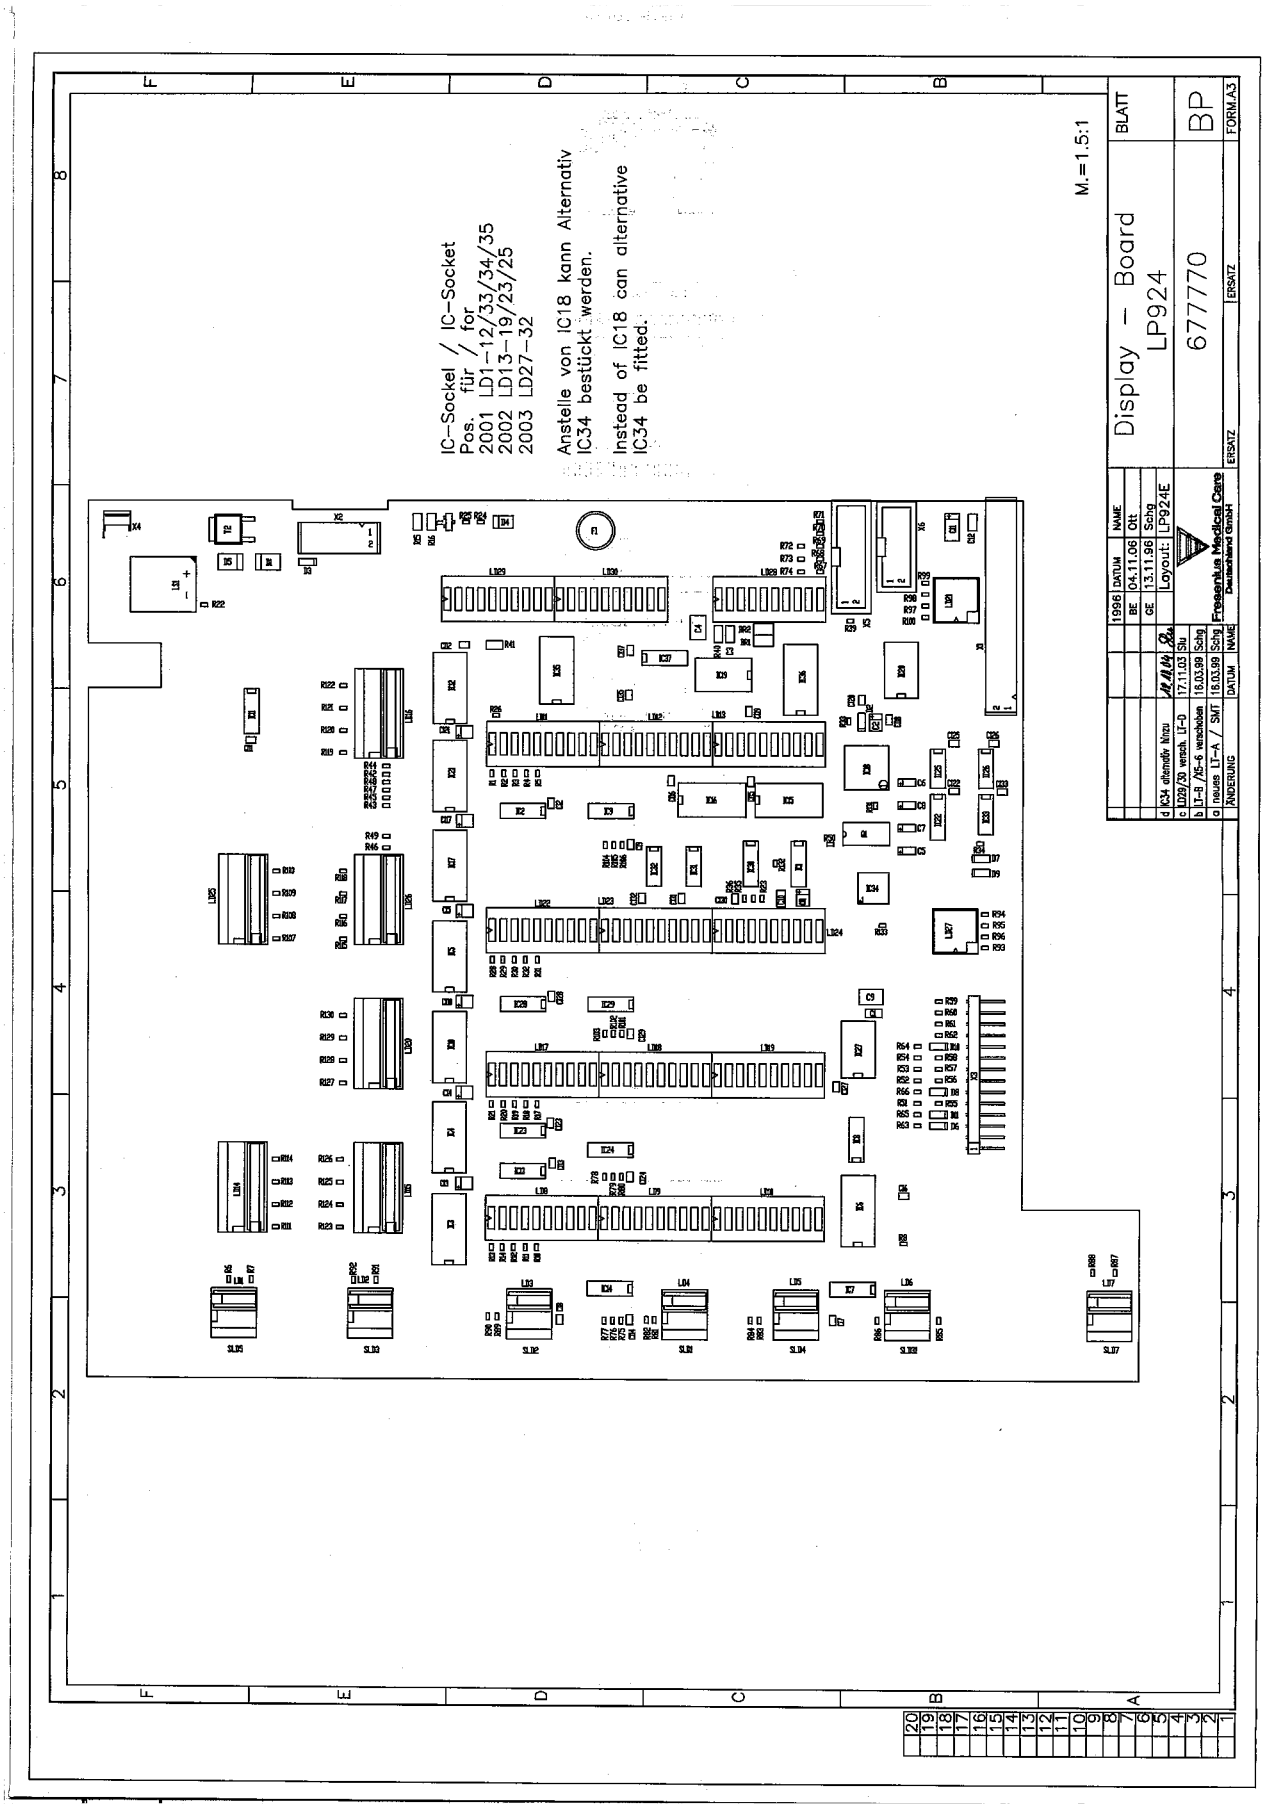

8.25 P.C.B. LP 941 Hydraulics processor

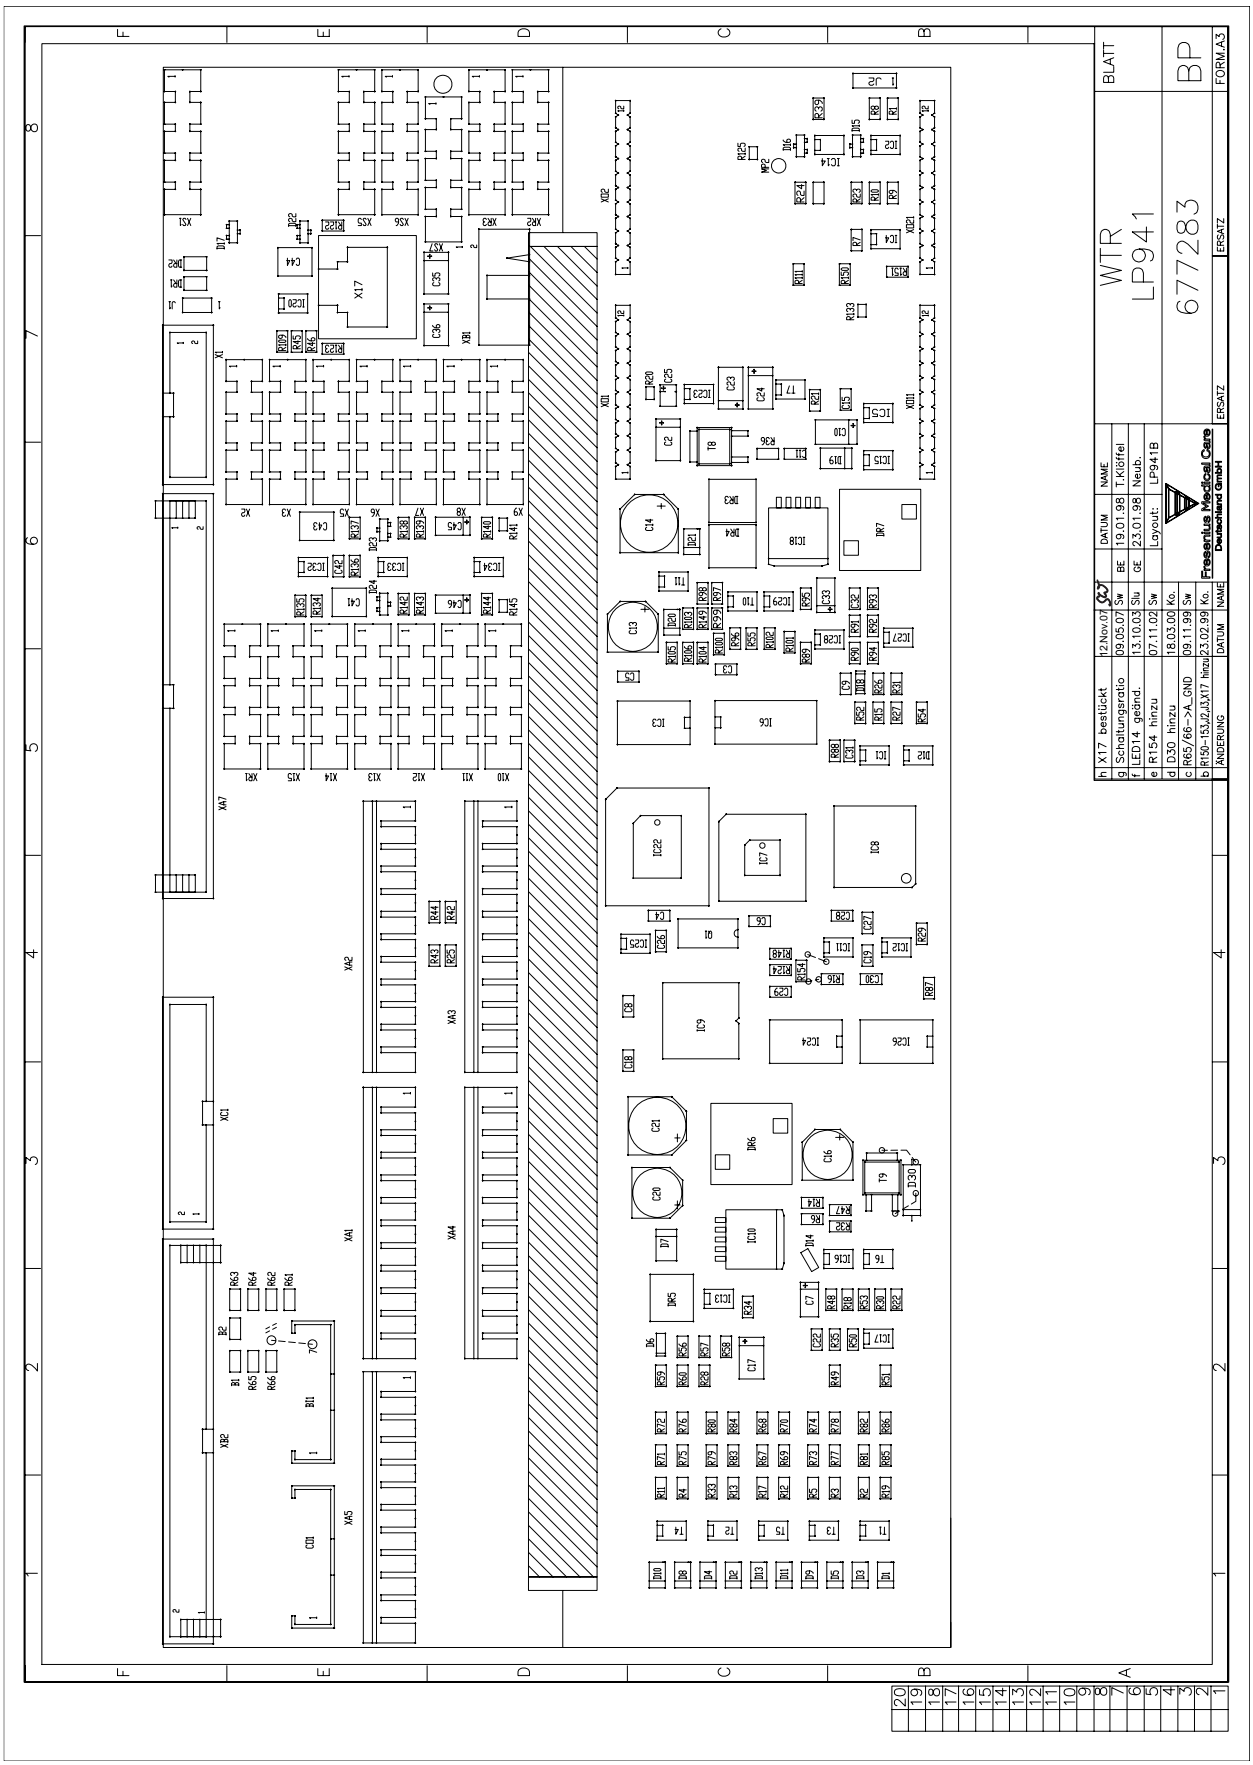

8.26 Heater board (power supply unit 4008)

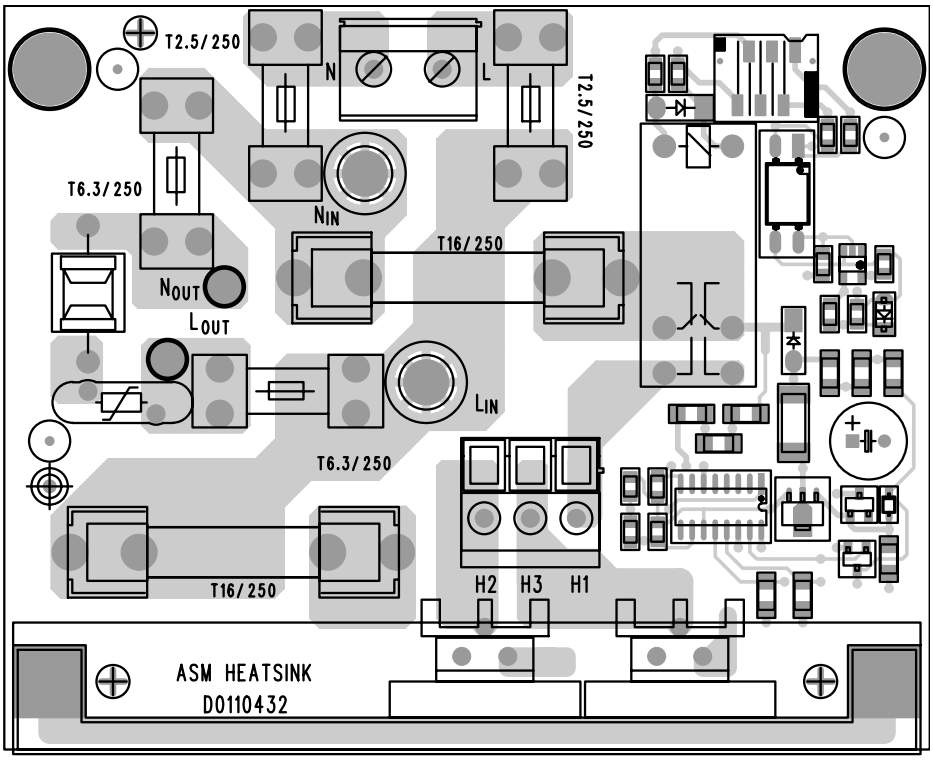

8.27 Power board (power supply unit 4008)

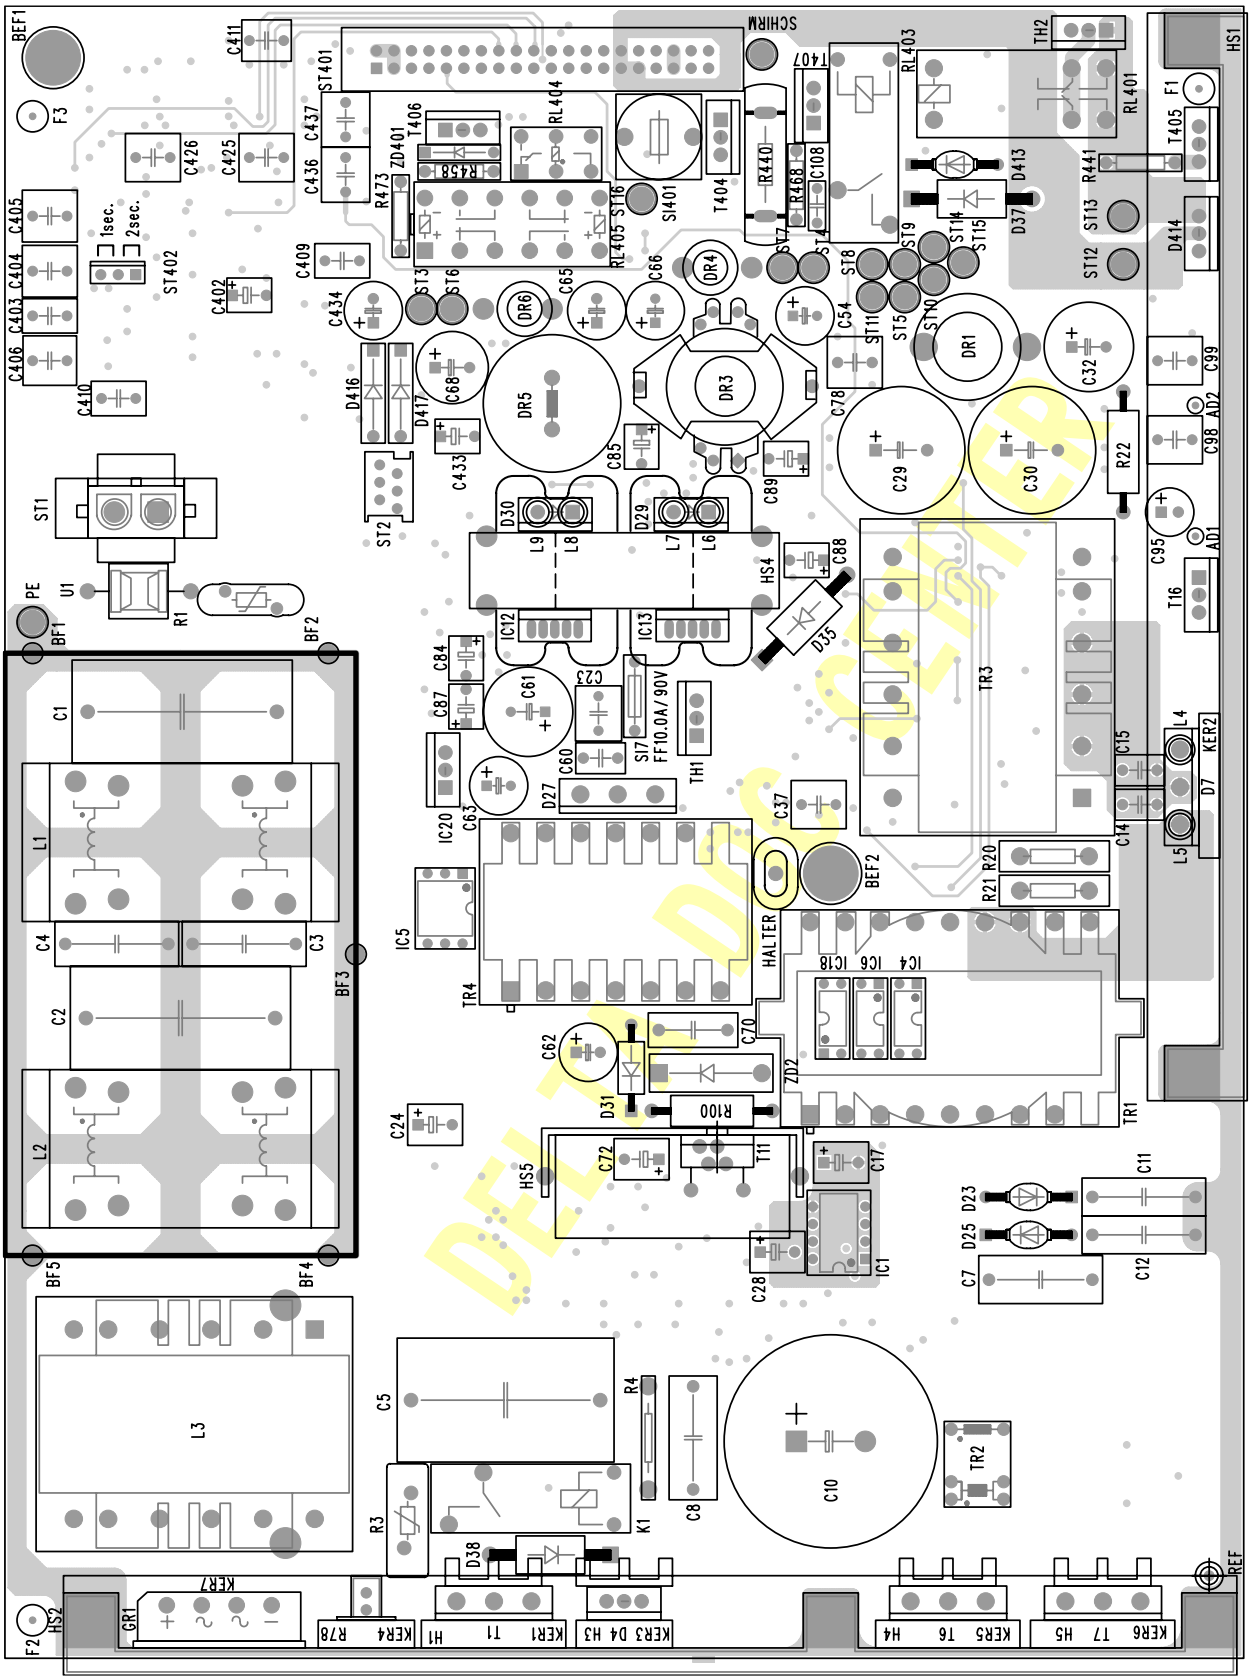

DELTA DRG CLEAR